


Instructions for the Clutch

There are main parts to the Clutch; the clamp, the Stick rest (with thumb screw for attachment), and the 'safety net' band.

The Clamp can be attached to desks, tables, the front of amps, and onto bars of around 1" diameter. There is a thumb nut for locking in place once adjusted. This may need to be moved closer to the gap when positioning the main screw, and then moved to the bottom of the clamp and tightened after positioning.



The Stick rest can be attached to either of the two embedded nuts on the clamp. After inserting the diamond-shaped pegs on the rest into the holes on the clamp, fix in place with the thumb screw. There is a washer and a retainer washer to keep the thumb screw tight.

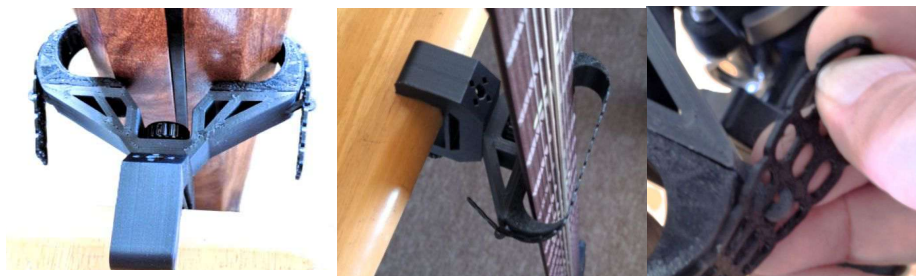

Once leaned against the rest, the "waves" on each side of the rest help to hold the Stick in place. There is a gap in the middle of the rest surface so that Railboards can lean flat against the rest. The Clutch will hold most Sticks, including the NS Stick, when the "safety net" band is secured. To attach the band, pull the end of the band away from you (towards the clamp) to stretch it a little so one of the side hooks can insert into a loop to secure it.