Apple TV Quick Start

Getting Started

Each room has two remotes on the wall holder next to the TV. Use the **Apple remote** (purple tag) for everything in this guide.



Roku Remote Controls

1. **Home**: Opens the Roku home screen
2. **Arrows and OK:** Move around and select
3. **Back**: Goes back one screen.
4. **Volume**: Controls the TV volume.
5. **Power**: Controls the TV.



Switch the TV to the Apple TV

The TV normally shows the room's default input (for example, ScreenCloud). Use this to get to the Roku.

1. Grab the Roku remote from the wall holder and press **Home**. The Roku home screen should appear.
2. If the TV doesn't switch, use the TV remote instead: press Input (or Source) and select the Roku's HDMI input.


Share Your Screen via AirPlay

Compatible Devices: iPhone, iPad, or Mac

1. Connect your device to the main TRD network
   - **Wi-Fi Name:** TRD
   - **Wi-Fi Password:** letsgoplaces
2. Check the label on the back of the remote for your room name (for example, Baker 1FL Breakroom).




3. On your device, open **Control Center** and tap **Screen Mirroring** (⧉ icon)
4. Select the Roku for your room.

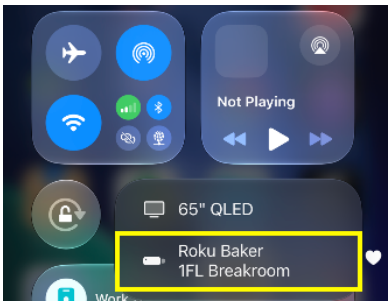


5. Then enter the code shown on the TV.



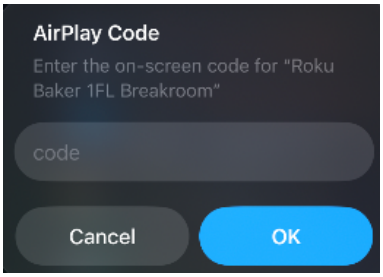


6. To stop, open **Screen Mirroring** again and tap **Stop Mirroring**.

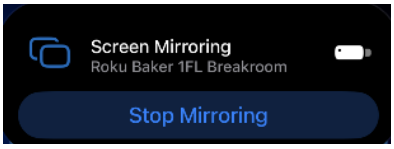

When You're Done: Return the TV to Its Original Input


Always switch the TV back before you leave so it's ready for the next person.

1. Press the **Home** button on the Roku remote.
2. Select the room's original input tile (for example, ScreenCloud or PC)

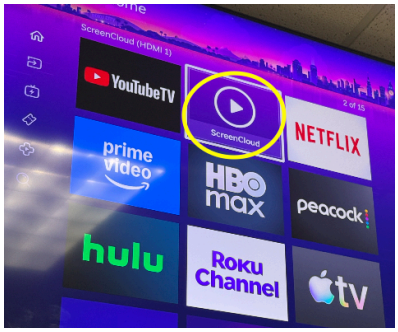

3. TV should switch to selected input.



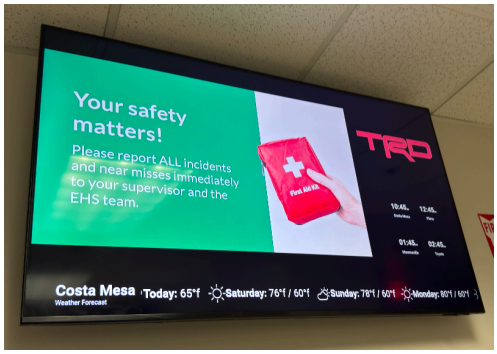

4. Put the remotes back on the wall holder.

Note: Please do not turn the TV OFF. Leave it on and set it to its original input.

Apps on the Roku

Coming soon.

Troubleshooting

- **Roku not showing up for screen sharing?** Make sure you're on the main TRD network.
- **Remote not working?** Point it at the TV and check the batteries.
- **Still stuck?** Contact TRD.Infrastructure.Team@internal.toyota.com