

RISC-V External Debug Security Specification

Version 0.7.7, 2026-10-20: Updated Release Candidate for ARC Review

Table of Contents

Preamble 1
Copyright and license information 3
Contributors 5
1. Introduction 7
1.1. Control Hierarchy 7
1.1.1. External Debug Security Control 8
1.1.2. Trace Security Control 9
1.2. Terminology 10
2. External Debug Security Threat Model 11
3. Secure Debug and Secure Trace (ISA Extensions) 13
3.1. External Debug Security Extensions 13
3.1.1. External Debug Security Control States and CSRs 13
3.1.2. Debug Operations 15
3.1.3. Debug Access Privilege 15
3.1.4. Allowed Resume Privilege Modes 15
3.1.5. M-mode External Debug Security Extension (Smmedbgsec) 16
3.1.6. S/HS-mode External Debug Security Extension (Smsedbgsec) 17
`sdcsr` and `sdpc` 18
Debug Access Privilege for Memory in Smsedbgsec 19
3.1.7. VS-mode External Debug Security Extension (Smvsedbgsec) 19
`sdcsr` and `sdpc` in VS-mode 20
Debug Access Privilege for Memory in Smvsedbgsec 20
3.1.8. U-mode and VU-mode External Debug Security Extension (Smuedbgsec) 21
U-mode External Debug Control 21
VU-mode External Debug Control 21
`udcsr` and `udpc` 22
3.1.9. Trigger `DMODE` Management 22
Owner Accesses 23
Management Accesses 23
Context Switch Procedure 24
3.2. Trace Security Extensions 25
3.2.1. Trace Security Control States 25
3.2.2. M-mode Trace Security Extension (Smmetrcsec) 26
3.2.3. S/HS-mode Trace Security Extension (Smsetrcsec) 26
3.2.4. VS-mode Trace Security Extension (Smvsetrcsec) 26
3.2.5. U-mode and VU-mode Trace Security Extension (Smuetrcsec) 26
4. Smtdeleg and Sstcfg (ISA Extensions) 29
4.1. Sstcfg Scope 29
4.2. Supervisor and Virtual Supervisor Trigger Access 29
4.2.1. Trigger Selection 30
4.2.2. Virtualization 30
4.3. Supervisor Trigger State Access Modifications 31
4.3.1. Type Delegation Constraints 31

4.3.2. DMODE Interaction ... 32
4.3.3. HS-mode Management of VS/VU Trigger Context ... 32
4.4. Supervisor and Virtual Supervisor Trigger State Access Control ... 33
4.5. Access to `tcontrol` ... 34
4.6. Debugger Access from S/HS-mode and VS-mode ... 34
4.7. Trigger Allocation ... 34
4.8. Dependencies ... 35
4.9. Summary of New State ... 35
5. Sucsrind (ISA Extension) ... **37**
5.1. User-level CSRs ... 37
5.2. Virtualization ... 38
5.3. Access Control by the State-Enable CSRs ... 38
5.4. Dependencies ... 38
5.5. Summary of New State ... 39
6. Sutcfg (ISA Extension) ... **41**
6.1. User Trigger Access ... 41
6.1.1. Trigger Selection ... 41
6.1.2. Virtualization ... 42
6.2. User Trigger State Access Modifications ... 42
6.2.1. Type Delegation Constraints ... 42
6.2.2. DMODE Interaction ... 43
6.3. User Trigger State Access Control ... 43
6.4. Access to `tcontrol` ... 44
6.5. Debugger Access from U-mode and VU-mode ... 45
6.6. Trigger Allocation ... 45
6.7. Dependencies ... 45
6.8. Summary of New State ... 46
7. Debug Module Security (non-ISA) Extension ... **47**
7.1. External Debug Security Extensions Discovery ... 47
7.2. Halt ... 47
7.3. Reset ... 47
7.4. Keepalive ... 47
7.5. Abstract Commands ... 48
7.5.1. Relaxed Permission Check `relaxedpriv` ... 48
7.5.2. Address Translation AAMVIRTUAL ... 48
7.5.3. Quick Access ... 48
7.6. System Bus Access ... 48
7.7. Security Fault Error Reporting ... 48
7.8. Platform Debug Security Enable ... 49
7.9. Authorization Handoff ... 49
7.10. Update of Debug Module Registers ... 50
Appendix A: Valid Extension Combinations ... **51**
A.1. External Debug Security Extension Combinations ... 51
A.2. Trace Security Extension Combinations ... 51
Appendix B: Software Debug/Trace Security Policy Management ... **53**

B.1. M-mode Management 53
B.2. S/HS-mode Management 53
B.3. VS-mode Management 54
B.4. U-mode and VU-mode Management 54
Appendix C: Execution-Based Implementation with Sdsec **55**
Bibliography **57**

Preamble



This document is in the Development state

Expect potential changes. This draft specification is likely to evolve before it is accepted as a standard. Implementations based on this draft may not conform to the future standard.

Copyright and license information

This specification is licensed under the Creative Commons Attribution 4.0 International License (CC-BY 4.0). The full license text is available at creativecommons.org/licenses/by/4.0/.

Copyright 2023-2024 by RISC-V International.

Contributors

This RISC-V specification has been contributed to directly or indirectly by (in alphabetical order): Allen Baum, Aote Jin (editor), Beeman Strong, Erik Kraft, Gokhan Kaplayan, Greg Favor, Iain Robertson, Joe Xie (editor), Paul Donahue, Ravi Sahita, Robert Chyla, Thomas Roecker, Tim Newsome, Ved Shanbhogue, Vicky Goode

Chapter 1. Introduction

Debugging and tracing are essential for developers to identify and rectify software and hardware issues, optimize performance, and ensure robust system functionality. The debugging and tracing extensions in the RISC-V ecosystem play a pivotal role in enabling these capabilities, allowing developers to monitor and control the execution of programs during the development, testing, and production phases. However, the current RISC-V Debug specification grants the external debugger the highest privilege in the system, regardless of the privilege level at which the target system is running, and tracing is also allowed in all privilege modes. This leads to privilege escalation and information leakage issues when multiple actors are present.

This specification defines Debug Module Security Extension (non-ISA extension) and Secure Debug and Secure Trace ISA extensions (collectively referred to as Sdsec) to address the above security issues in the current *The RISC-V Debug Specification* [1] and trace specifications [2] [3]. It also defines the distinct ISA extensions Smtdeleg, Sstcfg, Sucsrind, and Sutcfg. Smtdeleg and Sstcfg provide S/HS-mode and VS-mode access to Sdtrig trigger state, and Sutcfg provides U-mode and VU-mode access using Sucsrind.

At a high level, the Debug Module Security Extension provides a platform-level control state, `pdbgsecen`, to enable or bypass the debug security constraints. The Secure Debug and Secure Trace ISA extensions provide per-hart debug and trace control states, including platform-controlled `mdbgen` and `mtrcen` states for M-mode and lower-privilege control states in `mdtcfg`. Together, these control states determine whether external debug or trace is allowed at the hart's current privilege mode. `pdbgsecen` does not control trace. Implementation of either ISA family is optional even when the corresponding external debug or trace facility is present.

A summary of the changes introduced by *The RISC-V External Debug Security Specification* follows.

- **Per-Hart Debug Control:** Introduce per-hart states to control whether external debug is allowed for each privilege mode.
- **Per-Hart Trace Control:** Introduce per-hart states to control whether tracing is allowed for each privilege mode.
- **Platform debug security enable:** Add a platform state to enable the security constraints or bypass them for backward compatibility.
- **Debug Mode entry:** An external debugger can only halt the hart and enter Debug Mode when external debug is allowed in the current privilege mode.
- **Memory Access:** Memory access from a hart's point of view, using the Program Buffer or an Abstract Command, must be checked by the hart's memory protection mechanisms as if the hart is running at debug access privilege level; memory access from the Debug Module using System Bus Access (SBA) must be checked by a system memory protection mechanism, such as IOPMP or RISC-V Worlds.
- **Register Access:** Register access using the Program Buffer or an Abstract Command works as if the hart is running at debug access privilege level instead of the M-mode privilege level. The debug CSRs (`dcsr` and `dpc`) are shadowed in lower privilege modes.
- **Trigger Delegation:** Smtdeleg and Sstcfg provide S/HS-mode and VS-mode access to Sdtrig triggers, and Sutcfg provides U-mode and VU-mode access, when Debug Mode has less than M-mode privilege.

1.1. Control Hierarchy

Operationally, `pdbgsecen` selects between backward-compatible debug behavior and the debug security constraints defined by this specification. When those constraints are enabled, each hart evaluates its debug control states for its current privilege mode. Debug operations are permitted only when the corresponding debug control state allows access at that mode; otherwise the request is rejected or remains pending. Trace

output is independent of `pdbgsecen` and is enabled only for modes allowed by the trace control states.

1.1.1. External Debug Security Control

The debug security policy for a hart is enforced through a hierarchical control model using the platform-controlled `mdbgen` state for M-mode and optional lower-privilege control states (`SEDBGEN`, `VSEDBGEN`, `UEDBGEN`, `VUEDBGEN`) in the `mdtcfg` CSR. The `mdbgen` state can be implemented as an input signal to the hart and managed through platform-specific mechanisms such as Debug Module registers, a Root of Trust (RoT) handshake, or lifecycle fuses. The `pdbgsecen` platform control state enables the debug security policy at the platform level; when `pdbgsecen` is 0, the platform provides unrestricted debug access for all privilege modes.

The debug security control logic validates all debug requests and triggers whose `ACTION`=1 against the hart's current privilege level and the configured debug security control states. The validation procedure involves two steps: (1) checking `pdbgsecen` to determine whether the debug security policy is enabled and (2) checking the hierarchical control states to determine whether external debug is allowed at the hart's current privilege level. Debug requests that fail validation are either dropped or kept pending until the hart transitions to a debug-allowed privilege mode. External Debug Security Extensions defines the detailed behavior.

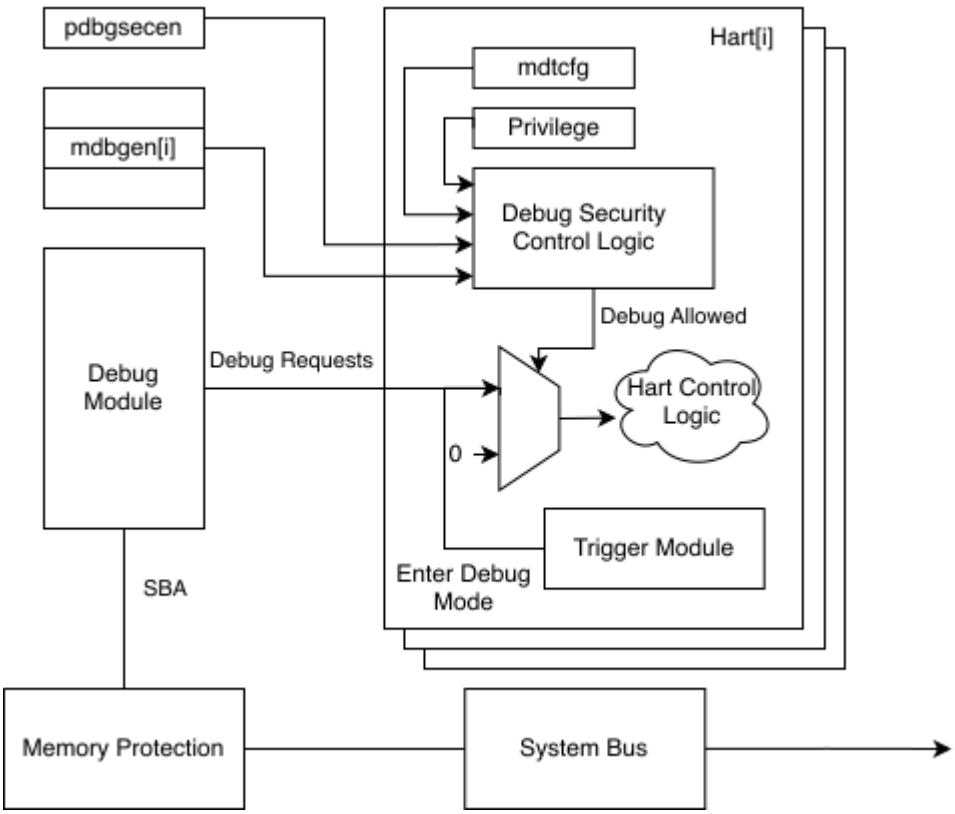


Figure 1. The debug security control for one hart

The hierarchical control applies as follows for a single hart:

- When `pdbgsecen`=0, external debug is allowed for all privilege modes.
- When `pdbgsecen`=1 and `mdbgen`=1, external debug is allowed for all privilege modes.
- When `pdbgsecen`=1, `mdbgen`=0, and `SEDBGEN`=1 (if implemented), external debug is allowed for S/HS-mode and lower privilege modes.
- When `pdbgsecen`=1, `mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=1 (if implemented), external debug is allowed for VS-mode and VU-mode.

- When `pdbgsecen`=1, `mdbgen`=0, `SEDBGEN`=0, and `UEDBGEN`=1 (if implemented), external debug is allowed for U-mode. `VSEDBGEN` and `VUEDBGEN` do not affect U-mode debug permission.
- When `pdbgsecen`=1, `mdbgen`=0, `SEDBGEN`=0, `VSEDBGEN`=0, and `VUEDBGEN`=1 (if implemented), external debug is allowed for VU-mode. `UEDBGEN` does not affect VU-mode debug permission.
- External debug is disallowed in a privilege mode when none of the control states applicable to that mode allow debug.

The debug security control logic must ensure that debug requests are validated and executed at the same privilege level and with the same debug security control states to prevent time-of-check to time-of-use (TOCTOU) vulnerabilities. Failing to do so may allow debug requests to bypass security controls.



Self-hosted debugging is also commonly used for application-level debugging, providing a pure software-based solution that does not require an external debugger. It is orthogonal to external debugging and is not affected by the debug security controls.

1.1.2. Trace Security Control

The trace security policy for a hart is enforced through a hierarchical control model using the platform-controlled `mtrcen` state for M-mode and optional lower-privilege control states (`SETRCEN`, `VSETRCEN`, `UETRCEN`, `VUETRCEN`) in the `mdtcfg` CSR. The `mtrcen` state can be implemented as an input signal to the hart and managed through platform-specific mechanisms such as a Root of Trust (RoT) handshake or lifecycle fuses. Trace has no privilege mode above M-mode, so this specification does not introduce a platform-level enable analogous to `pdbgsecen`; `pdbgsecen` does not control trace.

The security control logic determines whether trace is allowed based on the hart's current privilege level and the configured trace security control states. The `sec_inhibit` sideband signal to the trace encoder is asserted when trace is not allowed; equivalently, `sec_inhibit` is the inverse of the trace-allowed decision shown in the reference control logic. Trace Security Extensions defines the detailed behavior.

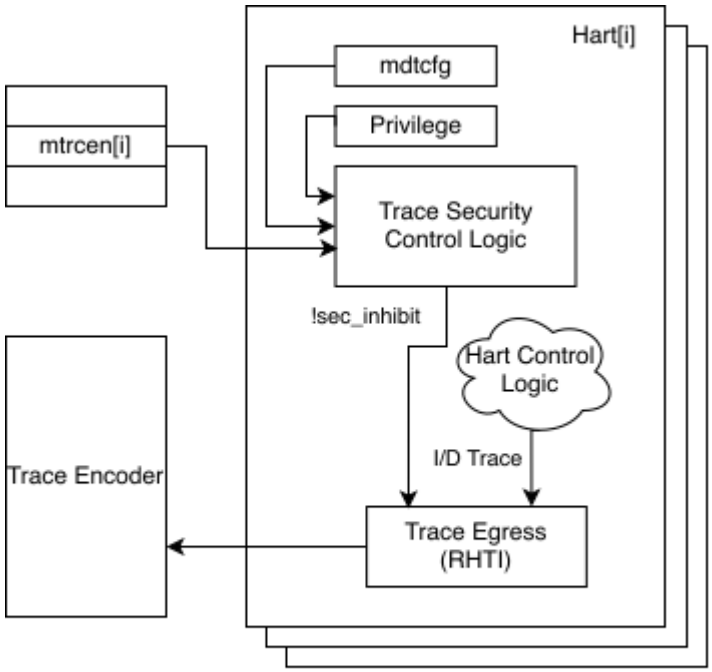


Figure 2. The trace security control for one hart

The hierarchical control applies as follows for a single hart:

- When `mtrcen`=1, trace is allowed for all privilege modes.
- When `mtrcen`=0 and `SETRCEN`=1 (if implemented), trace is allowed for S/HS-mode and lower privilege modes; trace is inhibited for M-mode.
- When `mtrcen`=0, `SETRCEN`=0, and `VSETRCEN`=1 (if implemented), trace is allowed for VS-mode and VU-mode; trace is inhibited for M-mode and S/HS-mode.
- When `mtrcen`=0, `SETRCEN`=0, and `UETRCEN`=1 (if implemented), trace is allowed for U-mode. `VSETRCEN` and `VUETRCEN` do not affect U-mode trace permission.
- When `mtrcen`=0, `SETRCEN`=0, `VSETRCEN`=0, and `VUETRCEN`=1 (if implemented), trace is allowed for VU-mode. `UETRCEN` does not affect VU-mode trace permission.
- When all trace control states are 0, trace is completely inhibited for all privilege modes.

1.2. Terminology

Abstract command	A high-level Debug Module operation used to interact with and control harts
Debug Access Privilege	The privilege level with which an Abstract Command or instruction in the Program Buffer accesses hardware resources
Debug Mode	An additional privilege mode to support off-chip debugging
Hart	A RISC-V hardware thread
IOPMP	Input-Output Physical Memory Protection unit
M-mode	The highest privileged mode in the RISC-V privilege model
PMA	Physical Memory Attributes
PMP	Physical Memory Protection unit
Program buffer	A mechanism that allows the Debug Module to execute arbitrary instructions on a hart
RISC-V Worlds	A system-level isolation mechanism that constrains physical-address access by harts and other bus initiators
Trace encoder	A piece of hardware that takes in instruction execution information from a RISC-V hart and transforms it into trace packets

Chapter 2. External Debug Security Threat Model

Modern SoC development involves several different actors who may not trust each other, resulting in the need to isolate actors' assets during the development and debugging phases. The current RISC-V Debug specification [1] grants external debuggers the highest privilege in the system, regardless of the privilege level at which the target system is running. This leads to privilege escalation issues when multiple actors are present.

For example, the owner of an SoC, who needs to debug their firmware, may be able to use the external debugger to bypass PMP (including PMP lock `pmpcfg`.L=1) and MMU protections, attacking Boot ROM or other SoC creator's assets.

Additionally, the RISC-V privilege architecture supports multiple software entities at different privilege levels that may not trust each other. These entities may be isolated from each other by mechanisms such as PMP/IOPMP or MMU, and may need different debug and trace policies. Since the external debugger is granted the highest privilege in the system, a malicious entity at a lower privilege level could compromise higher privilege software with the external debugger. Similarly, trace output from higher privilege execution could leak sensitive information to entities at lower privilege levels if not properly controlled.

Chapter 3. Secure Debug and Secure Trace (ISA Extensions)

This chapter specifies ISA extensions that add security controls to external debug (Sdext/Sdtrig) [1] and to trace [2] [3]. Sdsec is not an extension of its own; it is the umbrella name for two families of extensions: Secure Debug and Secure Trace.

The Secure Debug family provides hierarchical privilege-based control of external debug. When this family is implemented, the following extensions are defined:

- **Smmedbgsec (Base)**: M-mode external debug control
- **Smsedbgsec (Optional)**: Extends Smmedbgsec to add S/HS-mode external debug control
- **Smvsedbgsec (Optional)**: Adds VS-mode external debug control
- **Smuedbgsec (Optional)**: Adds independent U-mode and VU-mode external debug controls

The Secure Trace family provides hierarchical privilege-based control of trace output. When this family is implemented, the following extensions are defined:

- **Smmetrcsec (Base)**: M-mode trace control
- **Smsetrcsec (Optional)**: Extends Smmetrcsec to add S/HS-mode trace control
- **Smvsetrcsec (Optional)**: Adds VS-mode trace control
- **Smuetrcsec (Optional)**: Adds independent U-mode and VU-mode trace controls

Each family is optional and independent of the other: an implementer may implement the Secure Debug family, the Secure Trace family, or both. Implementing external debug or trace does not by itself require the corresponding family. Implementations may include some or all optional extensions of an implemented family. When an optional extension for a lower privilege mode is implemented, all extensions of the same family for implemented higher privilege modes must also be implemented. The valid combinations are listed in Appendix A. These extensions establish hierarchical controls that can restrict external debug access or trace output to specific privilege levels.

Smtdeleg, Sstcfg, Sucsrind, and Sutcfg are distinct extensions specified in Chapter 4, Chapter 5, and Chapter 6. They are not members of either family. Sstcfg requires Smtdeleg. Sutcfg requires Sucsrind and, when S-mode is implemented, also requires Smtdeleg and Sstcfg. Smtdeleg and Sstcfg provide S/HS-mode and VS-mode access to Sdtrig trigger state for a lower-privilege debugger, and Sutcfg provides U-mode and VU-mode access. Neither Secure Debug nor Secure Trace requires these extensions.

3.1. External Debug Security Extensions

External debug operations can modify system state and expose sensitive information. The following extensions provide hierarchical privilege-based controls to restrict debug access, preventing unauthorized debugging of higher-privilege software.

3.1.1. External Debug Security Control States and CSRs

The following table summarizes the external debug control states and associated CSRs introduced by the Debug Module Security Extension and the Sdsec external debug security extensions. In this specification, *control state* covers platform-level control state, such as `pdbgsecen`, per-hart platform-controlled states, such as `mdbgen`, and CSR fields, such as `mdtcfg.SEDBGEN`.

Table 1. External Debug Control States and CSRs

Extension	External Debug Control State	New CSRs	Scope
Debug Module Security Extension	pdbgsecen	None	Platform/all modes
Smmedbgsec	mdbgen	mdtcfg	M-mode
Smsedbgsec	mdtcfg.SEDBGEN	sdcsr, sdpc	S/HS-mode
Smvsedbgsec	mdtcfg.VSEDBGEN	None	VS-mode
Smuedbgsec	mdtcfg.UEDBGEN, mdtcfg.VUEDBGEN	udcsr, udpc	U-mode and VU-mode, independently

When external debug is allowed for a privilege mode, it is allowed for all lower privilege modes. U-mode and VU-mode are not ordered with respect to each other, so `UEDBGEN` and `VUEDBGEN` control them independently. If an optional debug extension is not implemented, the corresponding control state behaves as read-only 0; for lower-privilege modes, the `mdtcfg` field representing that control state is also read-only 0.


The `mdtcfg` (Machine Debug and Trace Configuration) is a machine-mode read/write CSR (address TBD). It is a single CSR shared by the Secure Debug and Secure Trace families. Debug-related fields (`SEDBGEN`, `VSEDBGEN`, `UEDBGEN`, `VUEDBGEN`) and trace-related fields (`SETRCEN`, `VSETRCEN`, `UETRCEN`, `VUETRCEN`) are independent: an implementation may implement Secure Debug, Secure Trace, or both without coupling the two functions through this CSR.

`mdtcfg` is implemented if Smmedbgsec, Smmetrcsec, or any optional extension in either family is implemented. Fields associated with an unimplemented family or optional extension are read-only zero.

The M-mode external debug and trace enables are the platform-controlled `mdbgen` and `mtrcen` states. They are not fields of `mdtcfg` and are not writable by M-mode software. Writing `mdtcfg` therefore cannot enable or disable M-mode external debug or M-mode trace; M-mode software uses `mdtcfg` only to configure lower-privilege debug and trace enables.

Table 2. Machine Debug and Trace Configuration CSR

Number	Privilege	Width	Name	Description
address TBD	MRW	XLEN	`mdtcfg`	Machine debug and trace configuration

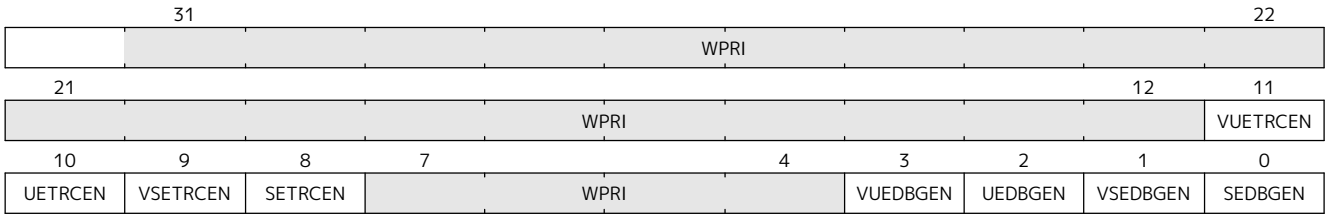

Register 1: `mdtcfg` *register*

The following fields in `mdtcfg` provide external debug control states for privilege modes other than M-mode. The trace control states are described in Section 3.2.

Table 3. Details of external debug control states in `mdtcfg`

Field	Description	Access	Reset
SEDBGEN	S/HS-mode external debug enable. When set to 1, external debug is allowed for S/HS-mode, U-mode, VS-mode, and VU-mode when `mdbgen` is 0. Introduced by Smsedbgsec.	WARL	0

Field	Description	Access	Reset
VSEDBGEN	VS-mode external debug enable. When set to 1, external debug is allowed for VS-mode and VU-mode when `mdbgen`=0 and `SEDBGEN`=0. This field does not control U-mode. Introduced by Smvsedbgsec.	WARL	0
UEDBGEN	U-mode external debug enable. When set to 1, U-mode external debug is allowed when `mdbgen`=0 and `SEDBGEN`=0. `VSEDBGEN` and `VUEDBGEN` do not affect U-mode permission. Introduced by Smuedbgsec.	WARL	0
VUEDBGEN	VU-mode external debug enable. When set to 1, VU-mode external debug is allowed when `mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=0. `UEDBGEN` does not affect VU-mode permission. Introduced by Smuedbgsec.	WARL	0



The bit positions shown above are tentative and have not been officially allocated. The final bit assignments will be determined during the ratification process.

3.1.2. Debug Operations

Chapter 3 of *The RISC-V Debug Specification* [1] outlines all mandatory and optional external debug operations. The operations listed below are affected by the Secure Debug extensions; other operations remain unaffected. In the context of this chapter, **debug operations** refer to those listed below.

Debug operations affected by the Secure Debug extensions:

- Halting the hart to enter Debug Mode
- Executing the Program Buffer
- Serving abstract commands (Access Register, Access Memory)

3.1.3. Debug Access Privilege

The **debug access privilege** is the privilege level used for state accesses performed by the Debug Module or through the Program Buffer, including accesses performed by Abstract Commands and Program Buffer instructions. Register and memory accesses use the privilege level derived in Table 4. Attempts to access state that requires a privilege level above the **debug access privilege** fail and set `abstractcs`.CMDERR to 3.

Table 4. External Debug Configuration and Privilege

mdbgen	SEDBGEN	VSEDBGEN	UEDBGEN	VUEDBGEN	Debugged Context	Debug Access Privilege
1	Don't care	Don't care	Don't care	Don't care	Any supported mode	M-mode
0	1	Don't care	Don't care	Don't care	S/HS-mode, VS-mode, U-mode, or VU-mode	S/HS-mode
0	0	1	Don't care	Don't care	VS-mode or VU-mode	VS-mode
0	0	Don't care	1	Don't care	U-mode	U-mode
0	0	0	Don't care	1	VU-mode	VU-mode

3.1.4. Allowed Resume Privilege Modes

The privilege modes that can be configured in `dcsr`.PRV and `dcsr`.V are determined by the table below. If an unsupported or disallowed value is written, the fields retain legal values.

Table 5. Allowed Resume Privilege Modes

Resume Mode	Required Debug Control State
M-mode	`mdbgen`=1
S/HS-mode	`mdbgen`=1, or `mdbgen`=0 and `SEDBGEN`=1
VS-mode	`mdbgen`=1, or `mdbgen`=0 and either `SEDBGEN`=1 or `VSEDBGEN`=1
U-mode	`mdbgen`=1, or `mdbgen`=0 and either `SEDBGEN`=1 or `UEDBGEN`=1
VU-mode	`mdbgen`=1, or `mdbgen`=0 and at least one of `SEDBGEN`, `VSEDBGEN`, or `VUEDBGEN` is 1

3.1.5. M-mode External Debug Security Extension (Smmedbgsec)

The Smmedbgsec extension is the base extension of the Secure Debug family.



The `mdbgen` state is a per-hart platform-controlled state that controls whether M-mode external debug capabilities are available. It may be delivered to the hart through various methods, such as a new input port, a handshake with the system Root of Trust (RoT), or other methods. The `mdbgen` state for the Root of Trust (RoT) itself should be managed by SoC hardware, likely depending on lifecycle fusing. The implementation can choose to group several harts together and use one signal to drive their `mdbgen` state or assign each hart its own dedicated state. For example, a homogeneous computing system can use a signal to drive all `mdbgen` states to enforce a unified debug policy across all harts.

When `mdbgen` is set to 1, debug is allowed for M-mode and the following rules apply:

- The debug access privilege for the hart is M-mode. Abstract Commands, including Quick Access, and instructions in the Program Buffer operate with M-mode privilege.
- The debug operations are allowed when the hart executes in any privilege mode.
- Privilege-changing instructions (other than EBREAK) executed in the Program Buffer must raise an exception, stopping execution and setting `abstractcs`.CMDERR to 3.
- The allowed resume privilege modes include M-mode and all lower privilege modes.

When `mdbgen` is set to 0 and the hart is running in M-mode, external debug is disallowed for M-mode:

- The hart will not enter Debug Mode:
  - Halt requests will remain pending until external debug is allowed.
  - Triggers with ACTION=1 (enter Debug Mode) will not match or fire.
  - EBREAK cannot enter Debug Mode and always raises a breakpoint exception.
- The external trigger outputs (with ACTION=8/9) will not match or fire.
- Accesses to M-mode accessible CSRs (e.g., `dcsr`, `dpc`, and `dscratch0/1`) will fail and `abstractcs`.CMDERR is set to 3 (exception).
- The configuration in `dcsr` will be ignored as if it were 0.
- When Sdtrig is implemented, M-mode can manage `DMODE`=1 triggers as specified below and in Section 3.1.9.

When `mdbgen`=0 and the hart is not in Debug Mode, M-mode may read the native trigger CSRs, and M-mode accesses to `tdata1`, `tdata2`, and `tdata3` are management accesses in the native view, as specified in Section 3.1.9. When `mdbgen`=1, M-mode accesses to the native trigger CSRs are not management accesses, and the native `DMODE` field is writable only from Debug Mode, as in Sdtrig.



This management access allows M-mode software to save and restore trigger context at lower-privilege software boundaries. Without it, an external debugger could leave `ACTION`=1 triggers that indirectly observe states (such as PC and data addresses) from the debug-disallowed software, potentially leading to information leakage or Denial of Service (DoS).

If the hart is running in a debug-allowed lower privilege mode (e.g., S/HS-mode) when `mdbgen` is 0:

- Single-stepping cannot stop in M-mode.
- Interrupts to M-mode cannot be disabled by setting `dcsr`.STEPIE=0.



When `mdbgen`=0 and `dcsr`.STEP=1, a single-stepped instruction in a debug-allowed privilege mode may transfer control to the M-mode trap handler. The hart will execute the handler in M-mode and re-enter Debug Mode immediately after an MRET instruction returns to the debug-allowed privilege mode (i.e., MRET with `mstatus`.MPP<3). The hart does not re-enter Debug Mode if the MRET instruction returns to a debug-disallowed privilege mode (i.e., MRET with `mstatus`.MPP=3, `mdbgen`=0).



This specification assumes that the debugger ensures `mdbgen` shall never be set to 0 while the hart is in Debug Mode. Setting `mdbgen` to 0 while in Debug Mode could lead to undefined behavior; the hart may lose its debug privileges unexpectedly, potentially causing the debug session to fail or become insecure.

3.1.6. S/HS-mode External Debug Security Extension (Smsedbgsec)

The Smsedbgsec extension is optional and requires Smmedbgsec. When Smtdeleg and Sstcfg are implemented, they provide the Sdtrig trigger access path for an S/HS-mode debugger. Smsedbgsec introduces the `SEDBGEN` field in CSR `mdtcfg` and controls S/HS-mode debuggability when M-mode external debug is disallowed.

The `SEDBGEN` field only takes effect when `mdbgen` is 0.

When `SEDBGEN` is set to 1, S/HS-mode external debug is allowed:

- The debug access privilege for the hart is S/HS-mode. Abstract Commands, including Quick Access, and instructions in the Program Buffer operate with S/HS-mode privilege.
- The debug operations are allowed when the hart executes in S/HS-mode, U-mode, VS-mode, or VU-mode.
- Privilege-changing instructions (other than EBREAK) executed in the Program Buffer must raise an exception, stopping execution and setting `abstractcs`.CMDERR to 3.
- The `sdcsr` and `sdpc` registers (Section 3.1.6.1) are introduced in Smsedbgsec to provide an S/HS-mode debugger with access to `dcsr` and `dpc`.
- When Smtdeleg and Sstcfg are implemented, an S/HS-mode debugger can access Sdtrig trigger state through the Smtdeleg/Sstcfg interface (`siselect`/`sireg*`).
- The **effective debug access privilege** of loads and stores in Debug Mode may be modified as described in Section 3.1.6.2.
- The allowed resume privilege modes include S/HS-mode and all lower privilege modes.

When `SEDBGEN` is set to 0 and the hart is running in S/HS-mode, external debug is disallowed for S/HS-mode:

- The hart will not enter Debug Mode while running in S/HS-mode:
  - Halt requests will remain pending until external debug is allowed.
  - Triggers with ACTION=1 (enter Debug Mode) will not match or fire.
  - EBREAK cannot enter Debug Mode and always raises a breakpoint exception.
- The external trigger outputs (with ACTION=8/9) will not match or fire while in S/HS-mode.
- Accesses to S/HS-mode accessible CSRs (e.g., `sdcsr` and `sdpc`) will fail and `abstractcs`.CMDERR is set to 3 (exception).
- The configuration visible in `sdcsr` will be ignored as if it were 0.

When `SEDBGEN` is set to 0 and the hart is running in a debug-allowed lower privilege mode (e.g., U-mode), the following restrictions apply:

- Single-stepping cannot stop in S/HS-mode.
- Interrupts delegated to S/HS-mode cannot be disabled by setting `dcsr`.STEPIE=0.



When `SEDBGEN`=0 and `sdcsr`.STEP=1, a single-stepped instruction in a debug-allowed privilege mode may transfer control to the S/HS-mode trap handler. The hart will execute the handler in S/HS-mode and re-enter Debug Mode immediately after an SRET instruction returns to the debug-allowed privilege mode (i.e., SRET with `sstatus`.SPP=0). The hart does not re-enter Debug Mode if the SRET instruction returns to a debug-disallowed privilege mode.

`sdcsr` and `sdpc`

When `SEDBGEN` is 1, the `sdcsr` and `sdpc` registers provide S/HS-mode read/write access to the `dcsr` and `dpc` registers, respectively. However, `sdcsr` does not expose access to the `MPRVEN` field; instead, it repurposes the `MPRVEN` bit position as a `DMPRV` field that modifies the **effective debug access privilege** in S/HS-mode. Both registers are accessible only in Debug Mode.


Table 6. CSR addresses for S/HS-mode shadows of Debug Mode CSRs

Number	Name	Description
address TBD	sdcsr	S/HS-mode debug control and status register.
address TBD	sdpc	S/HS-mode debug program counter.

The `sdcsr` register exposes a subset of `dcsr`, formatted as shown in Register 2, while the `sdpc` register provides full access to `dpc`.



Unlike `dcsr` and `dpc`, the `dscratch0/1` registers do not have an S/HS-mode access mechanism, and external debuggers with S/HS-mode privilege cannot use them. In The RISC-V Debug Specification [1], `dscratch*` are optional scratch registers that implementations may use internally; `hartinfo`.NSCRATCH indicates how many are available, and a debugger must not write to these registers unless `hartinfo` explicitly mentions them. Compliant debug flows already work without `dscratch` (for example, Access Register, GPRs, and data registers). Sdsec shadows only the required control state at each privilege level (`dcsr`/`dpc` → `sdcsr`/`sdpc` and, when applicable, `udcsr`/`udpc`); no `sdscratch` registers are defined. In an execution-based implementation, the park loop runs at M-mode and may use existing `dscratch` registers, while Abstract Commands and the Program Buffer run at the debug access privilege.

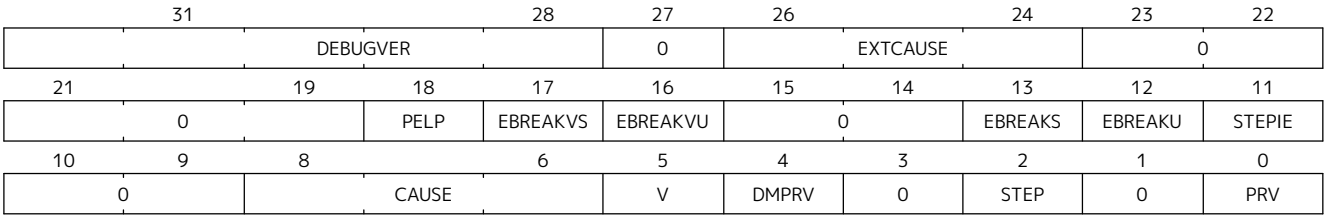

Register 2: S/HS-mode debug control and status register (sdcsr)



The NMIP, MPRVEN, STOPTIME, STOPCOUNT, EBREAKM, and CETRIG fields in `dcsr` *are configurable only by M-mode; they are masked in* `sdcsr`*, while PRV[1] is hardwired to 0 in* `sdcsr`*. The field for MPRVEN is reclaimed by DMPRV in the* `sdcsr` *layout to avoid wasting fields.*

`sdcsr`.PELP aliases `dcsr`.pelp. The field is present only when the Zicfilp extension is implemented; otherwise it is read-only 0. When Zicfilp is implemented, entry to Debug Mode sets this field to the hart's current `ELP` state and sets `ELP` to `NO_LP_EXPECTED`. On resume, if Zicfilp is enabled at the resumed privilege mode, `ELP` is set from this field; otherwise `ELP` is set to `NO_LP_EXPECTED`. The field is then set to `NO_LP_EXPECTED`. This follows *The RISC-V Debug Specification* [1].

Table 7. Details of the `dmprv` *field in* `sdcsr`

Field	Description	Access	Reset
DMPRV	0 (normal): The privilege level in Debug Mode is not modified. 1: In Debug Mode, the privilege level for load and store operations is modified to the effective debug access privilege as described in Section 3.1.6.2 and Section 3.1.7.2.	WARL	0

Debug Access Privilege for Memory in Smsedbgsec

The `sdcsr`.DMPRV field takes effect when `mdbgen` is 0 and is read-only 0 when `mdbgen` is 1. When `SEDBGEN` is 1, `sdcsr`.DMPRV can modify the **effective debug access privilege** used by an S/HS-mode debugger's loads and stores in Debug Mode. When `sdcsr`.DMPRV=0, the **effective debug access privilege** of loads and stores in Debug Mode follows Table 4; when `sdcsr`.DMPRV=1, the **effective debug access privilege** of loads and stores in Debug Mode is represented by `sstatus`.SPP and `hstatus`.SPV (if the hypervisor extension is supported).

The `sdcsr`.DMPRV does not affect the virtual-machine load/store instructions, HLV, HLVX, and HSV.

3.1.7. VS-mode External Debug Security Extension (Smvsedbgsec)

The Smvsedbgsec extension is optional and requires Smsedbgsec. When Smtdeleg and Sstcfg are implemented, a VS-mode debugger can use the same delegated trigger interface with the Sscsrind substitution to `vsiselect`/`vsireg*`. Smvsedbgsec introduces the `VSEDBGEN` field in CSR `mdtcfg` and controls VS-mode debuggability when S/HS-mode external debug is disallowed.

The `VSEDBGEN` field only takes effect when both `mdbgen` is 0 and `SEDBGEN` is 0.

When `VSEDBGEN` is set to 1, VS-mode external debug is allowed:

- The debug access privilege for the hart is VS-mode. Abstract Commands, including Quick Access, and instructions in the Program Buffer operate with VS-mode privilege.
- The debug operations are allowed when the hart executes in VS-mode or VU-mode.

- Privilege-changing instructions (other than EBREAK) executed in the Program Buffer must raise an exception, stopping execution and setting `abstractcs`.CMDERR to 3.
- The `sdcsr` and `sdpc` registers (from Smsedbgsec) provide VS-mode read/write access to `dcsr` and `dpc`, respectively, as specified in Section 3.1.7.1.
- The **effective debug access privilege** of loads and stores in Debug Mode may be modified as described in Section 3.1.7.2.
- The allowed resume privilege modes include VS-mode and VU-mode.

When `VSEDBGEN` is set to 0 and the hart is running in VS-mode, external debug is disallowed for VS-mode:

- The hart will not enter Debug Mode while running in VS-mode:
  - Halt requests will remain pending until external debug is allowed.
  - Triggers with ACTION=1 (enter Debug Mode) will not match or fire.
  - EBREAK cannot enter Debug Mode and always raises a breakpoint exception.
- The external trigger outputs (with ACTION=8/9) will not match or fire while in VS-mode.
- Accesses to VS-mode accessible CSRs (e.g., `sdcsr` and `sdpc`) will fail and `abstractcs`.CMDERR is set to 3 (exception).
- The configuration visible to VS-mode through `sdcsr` will be ignored as if it were 0.

When `VSEDBGEN` is set to 0 and the hart is running in a debug-allowed VU-mode, the following restrictions apply:

- Single-stepping cannot stop in VS-mode.
- Interrupts delegated to VS-mode cannot be disabled by setting `sdcsr`.STEPIE=0.



When `VSEDBGEN`=0 and `sdcsr`.STEP=1, a single-stepped instruction in a debug-allowed VU-mode may transfer control to the VS-mode trap handler. The hart will execute the handler in VS-mode and re-enter Debug Mode immediately after an SRET instruction returns to the debug-allowed VU-mode. The hart does not re-enter Debug Mode if the SRET instruction returns to a debug-disallowed VS-mode.

`sdcsr` and `sdpc` in VS-mode

When `VSEDBGEN` is 1, the `sdcsr` and `sdpc` (Section 3.1.6.1) are accessible with VS-mode privilege, providing access to the `dcsr`. The `sdcsr`.EBREAKS and `sdcsr`.EBREAKU fields are redirected to `dcsr`.EBREAKVS and `dcsr`.EBREAKVU, while writes to `sdcsr`.EBREAKVS, `sdcsr`.EBREAKVU, and `sdcsr`.V are discarded (writes are ignored and reads return 0). Similar to `sdcsr` access when `SEDBGEN` is 1, `sdcsr`.DMPRV modifies the **effective debug access privilege** in VS-mode.



Redirected access to `dcsr`.EBREAKVS and `dcsr`.EBREAKVU unifies the configuration for both S/HS-mode and VS-mode. However, the virtualization mode cannot be changed through `sdcsr`.V by a VS-mode debugger.

Debug Access Privilege for Memory in Smvsedbgsec

The `sdcsr`.DMPRV modifies the **effective debug access privilege** of loads and stores for a VS-mode debugger when `SEDBGEN` is 0 and `VSEDBGEN` is 1.

When `sdcsr`.DMPRV=0, the **effective debug access privilege** of loads and stores in Debug Mode follows Table 4; when `sdcsr`.DMPRV=1, the **effective debug access privilege** of loads and stores in Debug Mode is

represented by `vsstatus`.SPP with the virtualization mode being honored as 1.

3.1.8. U-mode and VU-mode External Debug Security Extension (Smuedbgsec)

The Smuedbgsec extension is optional. It requires Smmedbgsec and, on harts that implement S/HS-mode, Smsedbgsec. When VU-mode control is implemented, Smuedbgsec also requires Smvsedbgsec. Smvsedbgsec is not required when only U-mode control is implemented and `VUEDBGEN` is read-only 0. Smuedbgsec introduces independent `UEDBGEN` and `VUEDBGEN` fields in CSR `mdtcfg`. If a mode or its corresponding control is not implemented, the corresponding field is read-only 0. When Sutcfg is implemented, it provides the Sdtrig trigger access path for a U-mode or VU-mode debugger.

U-mode External Debug Control

The `UEDBGEN` field takes effect when `mdbgen`=0 and `SEDBGEN`=0. Because U-mode and VS/VU-mode are not ordered with respect to each other, `VSEDBGEN` and `VUEDBGEN` do not affect U-mode external debug permission.

When `UEDBGEN`=1, `mdbgen`=0, and `SEDBGEN`=0, U-mode external debug is allowed:

- The debug access privilege is U-mode. Abstract Commands and instructions in the Program Buffer operate with U-mode privilege.
- The debug operations are allowed when the hart executes in U-mode.
- Privilege-changing instructions (other than EBREAK) executed in the Program Buffer must raise an exception, stopping execution and setting `abstractcs`.CMDERR to 3.
- The `udcsr` and `udpc` registers described in Section 3.1.8.3 provide access to the permitted `dcsr` and `dpc` state.
- When Sutcfg is implemented, a U-mode debugger can access Sdtrig trigger state through the Sutcfg interface (`uiselect`/`uireg*`).
- U-mode is the only allowed resume privilege mode.

When `UEDBGEN` is set to 0 and the hart is running in U-mode, external debug is disallowed for U-mode:

- The hart will not enter Debug Mode while running in U-mode:
  - Halt requests remain pending until external debug is allowed.
  - Triggers with ACTION=1 do not match or fire.
  - EBREAK raises a breakpoint exception instead of entering Debug Mode.
- External trigger outputs with ACTION=8 or ACTION=9 do not match or fire.
- Accesses to user-visible debug CSRs fail and set `abstractcs`.CMDERR to 3.
- The configuration visible through `udcsr` is ignored as if it were 0.

VU-mode External Debug Control

The `VUEDBGEN` field takes effect when `mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=0. `UEDBGEN` does not affect VU-mode external debug permission.

When `VUEDBGEN`=1, `mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=0, VU-mode external debug is allowed:

- The debug access privilege is VU-mode. Abstract Commands and instructions in the Program Buffer operate with VU-mode privilege.

- The debug operations are allowed when the hart executes in VU-mode.
- Privilege-changing instructions (other than EBREAK) executed in the Program Buffer must raise an exception, stopping execution and setting `abstractcs`.CMDERR to 3.
- The `udcsr` and `udpc` registers described in Section 3.1.8.3 provide access to the permitted `dcsr` and `dpc` state.
- When Sutcfg is implemented, a VU-mode debugger can access Sdtrig trigger state through the Sutcfg interface (`uiselect`/`uireg*`).
- VU-mode is the only allowed resume privilege mode.

When `VUEDBGEN` is set to 0 and the hart is running in VU-mode, external debug is disallowed for VU-mode:

- The hart will not enter Debug Mode while running in VU-mode:
  - Halt requests remain pending until external debug is allowed.
  - Triggers with ACTION=1 do not match or fire.
  - EBREAK raises a breakpoint exception instead of entering Debug Mode.
- External trigger outputs with ACTION=8 or ACTION=9 do not match or fire.
- Accesses to user-visible debug CSRs fail and set `abstractcs`.CMDERR to 3.
- The configuration visible through `udcsr` is ignored as if it were 0.

`udcsr` and `udpc`

The `udcsr` and `udpc` registers provide U-mode or VU-mode read/write access to the `dcsr` and `dpc` state when the corresponding `UEDBGEN` or `VUEDBGEN` control allows debug. The `udcsr` exposes the subset of `dcsr` shown in Register 3. Access to `udcsr`.EBREAKU is redirected to `dcsr`.EBREAKVU when the virtualization mode is 1. The `udpc` register provides full access to `dpc`.




The `udcsr` does not expose `dcsr`.V. A U-mode or VU-mode debugger therefore cannot switch between U-mode and VU-mode.

Table 8. CSR addresses for U/VU-mode shadows of Debug Mode CSRs

Number	Name	Description
address TBD	udcsr	U-mode or VU-mode debug control and status register.
address TBD	udpc	U-mode or VU-mode debug program counter.

The `udcsr` register exposes a subset of `dcsr`, formatted as shown in Register 3, while the `udpc` register provides full access to `dpc`.

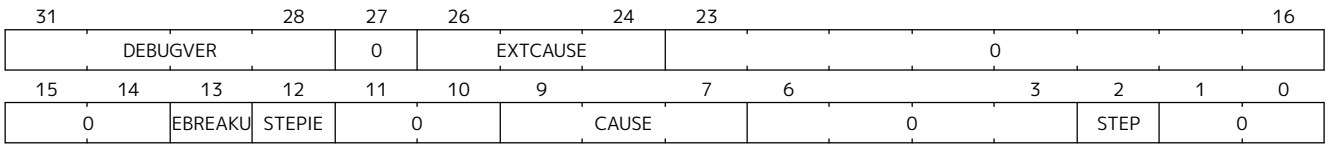

Register 3: U-mode or VU-mode debug control and status register (udcsr)

3.1.9. Trigger `DMODE` Management

This section specifies how software outside Debug Mode can save, park, and restore triggers whose `tdata1`.DMODE is 1, for example when switching software contexts. It applies when Sdtrig is implemented. Each access path to trigger state exposes a *view* of the trigger: the native view through `tselect` and `tdata*`,

the S/HS view through **sireg*** (Chapter 4), the VS view through **vsireg*** (Chapter 4), the U view through **uireg*** when V=0, and the VU view through **uireg*** when V=1 (Chapter 6).

Owner Accesses

When the hart is not in Debug Mode and the selected trigger has **DMODE**=1, accesses to **sireg** through **sireg4**, **vsireg** through **vsireg4**, and **uireg** through **uireg4** while the corresponding select CSR holds the trigger access value read 0, and writes to them are ignored. A permitted management access to a trigger within its view, as specified below, is the only exception.

M-mode accesses to **tdata1**, **tdata2**, and **tdata3** that are not management accesses follow Sdtrig.

The trigger selection index in alias 5 is not affected. When the hart is in Debug Mode, these accesses follow the base Sdtrig **DMODE** rules.

Management Accesses

A *management access* lets software outside Debug Mode save, park, and restore a **DMODE**=1 trigger of a lower-privilege software context. A privilege mode can make management accesses only when external debug is disallowed for that mode. This rule extends the M-mode rule in Smmedbgsec (**mdbgen**=0) to the lower privilege modes. When the rule is satisfied, the debug access privilege of an external debugger (Table 4) is not equal to or higher than the privilege of the managing mode. It is either lower, or, for U-mode and VS-mode, not ordered. The within-view condition below excludes the triggers of a debugger whose privilege is not ordered with the managing mode.

The following accesses are management accesses when the hart is not in Debug Mode and the condition in the last column is satisfied. Each access manages one view:

Access	Managed view	Mode-enable fields covered	Condition
M-mode accesses to **tdata1**, **tdata2**, and **tdata3**	Native	All	**mdbgen**=0
M-mode accesses to **uireg** through **uireg4** while **uiselect** holds the trigger access value	U	U	**mdbgen**=0
HS-mode accesses to **vsireg** through **vsireg4** while **vsiselect** holds the trigger access value	VS	VS and VU (exposed as S and U)	**mdbgen**=0 and **SEDBGEN**=0
S/HS-mode accesses (V=0) to **uireg** through **uireg4** while **uiselect** holds the trigger access value	U	U	**mdbgen**=0 and **SEDBGEN**=0
VS-mode accesses (V=1) to **uireg** through **uireg4** while **uiselect** holds the trigger access value	VU	VU (exposed as U)	**mdbgen**=0, **SEDBGEN**=0, and **VSEDBGEN**=0

When the condition is not satisfied, the access is not a management access. A delegated access then follows the owner rule above when **DMODE**=1.

A trigger is *within* a managed view when every mode-enable field of the trigger (M, S, U, VS, and VU in **tdata1**) that the view does not cover is 0. A trigger whose type has no mode-enable fields, such as a disabled trigger, is within every view. Hardware evaluates this condition on the current state of the selected trigger for each management access.

No privilege mode manages a view that covers its own mode. A `DMODE`=1 trigger that enables S/HS-mode is within only the native view, so only M-mode can manage it. A `DMODE`=1 trigger that enables VS-mode is within only the native view and the VS view.

A management access to a trigger within its view behaves as follows:

- Reads return the trigger state, including `DMODE`, through the field modifications and type constraints of the view.
- The Sdtrig `DMODE` write restrictions do not apply. `DMODE` is writable, and writes to `tdata1`, `tdata2`, and `tdata3` (alias 1 through alias 3) of a trigger with `DMODE`=1 are not ignored. Sdtrig gives this access only to Debug Mode.
- Writes follow the field modifications and type constraints of the view and the Sdtrig WARL rules for `tdata1`. As specified by Sdtrig, `tdata1` cannot hold `DMODE`=0 and `ACTION`=1.

A management access through a delegated view to a trigger that is not within that view follows the owner rule above when `DMODE`=1. When `DMODE`=0, it follows the field modifications and type constraints of the view, and `DMODE` is not writable.

Management accesses remain subject to the access controls of the corresponding interface in Chapter 4 and Chapter 6.



The condition makes sure that software never changes a `DMODE`=1 trigger configured by an external debugger with an equal or higher debug access privilege. When `mdbgen`=1, the debugger has M-mode debug access privilege, and no software outside Debug Mode can manage its triggers. When `mdbgen`=0 and `SEDBGEN`=1, the debugger has S/HS-mode debug access privilege, and only M-mode can manage its triggers. The within-view condition is a second check on the trigger itself. It prevents a management access from changing a trigger that also matches in a mode outside the view, for example a trigger that a debugger with a higher debug access privilege configured before the debug control state changed.



Management accesses can write `DMODE`=1 and `ACTION`=1. Hardware does not check that such a write restores a configuration created by an external debugger; this specification trusts the managing software for the views it manages. A trigger with `ACTION`=1 does not match or fire while external debug is disallowed for the hart's current privilege mode.

Context Switch Procedure

In the following procedure, alias 1 through alias 5 are `tdata1`, `tdata2`, `tdata3`, `tinfo`, and `tselect` for the native view. For a delegated view, they are `uireg` through `uireg5` or `vsireg` through `vsireg5` while `uiselect` or `vsiselect` holds the trigger access value. Software that switches trigger context through a management access should:

1. For a delegated view, save the select CSR and write the trigger access value to it. Save the trigger selection index (alias 5).
2. For each trigger to be switched, write its index to alias 5, save alias 1 through alias 3, and then write 0 to alias 1. As specified by Sdtrig, writing 0 to `tdata1` disables the trigger and leaves it in a state where `tdata2` and `tdata3` can be written. Through a delegated view, a trigger whose alias 1 through alias 4 all read as 0 is not available to this access and is skipped.
3. After all triggers to be switched are disabled, restore them in increasing index order. For each trigger, write its index to alias 5, write alias 2 and alias 3, and then write alias 1 with its final value, which may set `DMODE`=1 and `ACTION`=1 together. Read back alias 1 to confirm the written value, because `tdata1` is WARL.

4. Restore the trigger selection index, and then, for a delegated view, restore the select CSR.



The restore steps follow the Sdtrig sequence for writing a trigger: write 0 to `tdata1`*, write* `tdata2` *and* `tdata3`*, and then write* `tdata1`*. Disabling all switched triggers before restoring any of them, and restoring them in increasing index order, avoids the Sdtrig* `chain` *rules that depend on a neighboring trigger's* `DMODE`*: hardware must clear* `chain` *in a write that sets* `DMODE` *to 0 while the next trigger has* `DMODE`*=1, and should ignore a write that sets* `DMODE` *to 1 while the previous trigger has* `DMODE`*=0 and* `chain`*=1.*

Triggers with `DMODE`=0 are also subject to cooperative trigger allocation, as specified in Chapter 4 and Chapter 6.

3.2. Trace Security Extensions

When trace is implemented, trace output can expose sensitive information across privilege boundaries. The extensions below provide security controls to restrict trace output based on privilege levels.

3.2.1. Trace Security Control States

The following table defines the trace control states introduced by the trace security extensions. In this specification, *control state* covers both platform-controlled states, such as `mtrcen`, and CSR fields, such as `mdtcfg.SETRCEN`.

Table 9. Trace Control States

Extension	Trace Control State	Target Modes
Smmetrcsec	mtrcen	M-mode
Smsetrcsec	mdtcfg.SETRCEN	S/HS-mode
Smvsetrcsec	mdtcfg.VSETRCEN	VS-mode
Smuetrcsec	mdtcfg.UETRCEN, mdtcfg.VUETRCEN	U-mode and VU-mode, independently

Allowing trace for a privilege mode also allows it for all lower privilege modes. U-mode and VU-mode are not ordered with respect to each other, so `UETRCEN` and `VUETRCEN` control them independently. Each `mdtcfg` control field introduced by an unimplemented optional trace extension is read-only 0.



The availability of trace output is controlled through signals defined in the RISC-V hart-trace interface (RHTI) [4]. An implementation can convert the logical `sec_inhibit` *signal to the canonical trace interface signals.*

The following `mdtcfg` fields provide trace control states for privilege modes other than M-mode. The `mdtcfg` CSR must be implemented when Smmetrcsec is implemented, even if Smmedbgsec is not implemented.

Table 10. Details of trace security control states in `mdtcfg`

Field	Description	Access	Reset
SETRCEN	S/HS-mode external trace enable. When set to 1, trace is allowed for S/HS-mode, U-mode, VS-mode, and VU-mode when `mtrcen` is 0. Introduced by Smsetrcsec.	WARL	0
VSETRCEN	VS-mode external trace enable. When set to 1, trace is allowed for VS-mode and VU-mode when `mtrcen`=0 and `SETRCEN`=0. This field does not control U-mode. Introduced by Smvsetrcsec.	WARL	0

Field	Description	Access	Reset
UETRCEN	U-mode external trace enable. When set to 1, U-mode trace is allowed when `mtrcen`=0 and `SETRCEN`=0. `VSETRCEN` and `VUETRCEN` do not affect U-mode permission. Introduced by Smuetrcsec.	WARL	0
VUETRCEN	VU-mode external trace enable. When set to 1, VU-mode trace is allowed when `mtrcen`=0, `SETRCEN`=0, and `VSETRCEN`=0. `UETRCEN` does not affect VU-mode permission. Introduced by Smuetrcsec.	WARL	0

3.2.2. M-mode Trace Security Extension (Smmetrcsec)

The Smmetrcsec extension is the base extension of the Secure Trace family.



The `mtrcen` *state is a per-hart platform-controlled state that controls whether M-mode trace output is enabled. It may be delivered to the hart through various methods, such as a new input port, a handshake with the system Root of Trust (RoT), or other methods. The* `mtrcen` *state for the Root-of-Trust (RoT) itself should be managed by SoC hardware, likely dependent on lifecycle fusing. The implementation can choose to group several harts together and use one signal to drive their* `mtrcen` *state or assign each hart its own dedicated state. For example, a homogeneous computing system can use a signal to drive all* `mtrcen` *states to enforce a unified trace policy across all harts. Unlike external debug, trace has no privilege mode above M-mode, so this specification does not introduce a platform-level enable analogous to* `pdbgsecen`*. The* `pdbgsecen` *state does not control trace.*

When `mtrcen` is set to 1, trace is allowed for all privilege modes. When `mtrcen` is set to 0, trace is inhibited for M-mode by asserting the logical `sec_inhibit` signal to the trace encoder when the hart is executing in M-mode.

3.2.3. S/HS-mode Trace Security Extension (Smsetrcsec)

The Smsetrcsec extension is optional and requires Smmetrcsec. It introduces the `SETRCEN` field in CSR `mdtcfg` and controls S/HS-mode trace output when M-mode trace is disallowed.

The `SETRCEN` field only takes effect when `mtrcen` is 0.

When `SETRCEN` is set to 1, trace is allowed for all privilege modes except M-mode. When `SETRCEN` is set to 0, trace is inhibited for S/HS-mode by asserting the logical `sec_inhibit` signal to the trace encoder when the hart is executing in S/HS-mode.

3.2.4. VS-mode Trace Security Extension (Smvsetrcsec)

The Smvsetrcsec extension is optional and requires Smsetrcsec. It introduces the `VSETRCEN` field in CSR `mdtcfg` and controls VS-mode trace output when S/HS-mode trace is disallowed.

The `VSETRCEN` field only takes effect when both `mtrcen` is 0 and `SETRCEN` is 0.

When `VSETRCEN` is set to 1, trace is allowed for VS-mode and VU-mode. When `VSETRCEN` is set to 0, trace is inhibited for VS-mode by asserting the logical `sec_inhibit` signal to the trace encoder when the hart is executing in VS-mode.

3.2.5. U-mode and VU-mode Trace Security Extension (Smuetrcsec)

The Smuetrcsec extension is optional. It requires Smmetrcsec and, on harts that implement S/HS-mode, Smsetrcsec. When VU-mode trace control is implemented, Smuetrcsec also requires Smvsetrcsec. Smvsetrcsec is not required when only U-mode trace control is implemented and `VUETRCEN` is read-only 0. Smuetrcsec introduces independent `UETRCEN` and `VUETRCEN` fields in CSR `mdtcfg`. If a mode or its corresponding trace control is not implemented, the corresponding field is read-only 0.

The `UETRCEN` field takes effect when `mtrcen`=0 and `SETRCEN`=0. `VSETRCEN` and `VUETRCEN` do not affect U-mode trace permission. When `UETRCEN` is 1, trace is allowed in U-mode; when it is 0, trace is inhibited in U-mode by asserting the logical `sec_inhibit` signal.

The `VUETRCEN` field takes effect when `mtrcen`=0, `SETRCEN`=0, and `VSETRCEN`=0. `UETRCEN` does not affect VU-mode trace permission. When `VUETRCEN` is 1, trace is allowed in VU-mode; when it is 0, trace is inhibited in VU-mode by asserting the logical `sec_inhibit` signal.

Chapter 4. Smtdeleg and Sstcfg (ISA Extensions)

This chapter specifies two distinct ISA extensions that allow Sdtrig [1] triggers to be accessed from S/HS-mode and VS-mode. They are not part of the Secure Debug or Secure Trace families.

Sdtrig CSRs are accessible only with M-mode privilege. A self-hosted debugger with less than M-mode privilege therefore requires an SBI to reach them, which adds traps on trigger accesses. An external debugger has no SBI it can invoke from Debug Mode. If a Secure Debug extension is implemented and Debug Mode has less than M-mode privilege, the debugger cannot access triggers unless a delegated access path is provided.

The Smtdeleg extension provides that path for S/HS-mode and VS-mode, using the indirect CSR interface (Sscsrind) [5]. It also controls S/HS-mode and VS-mode access to triggers using the State Enable extensions (Smstateen/Ssstateen) [6]. Sstcfg is the supervisor-level companion to Smtdeleg. Sstcfg is a distinct extension, and its implementation requires Smtdeleg.

U-mode and VU-mode trigger access is specified by the distinct Sutcfg extension, which requires Sucsrind. Those extensions are not part of Smtdeleg or Sstcfg.



This specification treats S/HS-mode software as trusted to manage trigger state assigned to lower-privilege VS-mode, VU-mode, and U-mode contexts when external debug is disallowed for S/HS-mode. The management accesses defined in Section 3.1.9 do not protect that lower-privilege trigger state from S/HS-mode software. They do not let S/HS-mode software change a `DMODE`*=1 trigger configured by an external debugger with M-mode or S/HS-mode debug access privilege.*

4.1. Sstcfg Scope

Sstcfg includes:

- Trigger selection and trigger access behavior via `siselect`/`sireg*`, including VS-mode substitution to `vsiselect`/`vsireg*` when V=1.
- The state access modifications applied when triggers are accessed through the indirect interface.

Smtdeleg encompasses the Sstcfg functionality, and additionally includes:

- The `mstateen0`.TR and `hstateen0`.TR bit definitions for access control.
- The machine-level specification of delegation and virtualization behavior.

4.2. Supervisor and Virtual Supervisor Trigger Access



The `siselect` *value for trigger access is to be allocated from the Sscsrind select address space. When Sutcfg is implemented, the same value is used for* `uiselect` *trigger access. Throughout this document, this value is referred to as the trigger access value.*

While `siselect` holds the trigger access value, `sireg5` provides supervisor read/write access to the trigger selection index, and `sireg` through `sireg4` provide supervisor read/write access to register state associated with the trigger selected by that index, the same state accessed by M-mode CSRs `tdata*` and `tinfo`. The register mapping is shown below.

Table 11. Indirect Trigger Register Mappings When `siselect` *Holds the Trigger Access Value*

Indirect CSR	State Accessed
`sireg`	Same as `tdata1`
`sireg2`	Same as `tdata2`
`sireg3`	Same as `tdata3`
`sireg4`	Same as `tinfo` (read-only; writes ignored), with type bits restricted as specified in Section 4.3.1
`sireg5`	Same as `tselect` (trigger selection index), as specified in Section 4.2.1



This method requires one `siselect` *index and no new direct CSR. Allocating a range of* `siselect` *values to select the trigger, bypassing* `tselect`*, would also add no new CSRs but would cap the number of triggers accessible in S/HS-mode.* `tselect` *supports up to* 2^{MXLEN} *triggers, while a dedicated* `siselect` *range would likely cover only a practical subset. Placing the selection index in* `sireg5`*, an alias otherwise unused by the trigger mapping, preserves the* `tselect` *index range without consuming a direct CSR address. Selecting a trigger requires no additional* `siselect` *write, because* `siselect` *already holds the trigger access value.*

While the privilege mode is M-mode or S/HS-mode and `siselect` holds the trigger access value, illegal-instruction exceptions are raised for attempts to access `sireg6`.

When V=1, attempts from VS-mode to access `sireg6` (really `vsireg6`) while `vsiselect` holds the trigger access value raise an illegal-instruction exception.

When HS-mode accesses `vsireg6` while `vsiselect` holds the trigger access value, an illegal-instruction exception is raised.

4.2.1. Trigger Selection

While `siselect` holds the trigger access value, `sireg5` accesses the same underlying state as `tselect`: writing `sireg5` updates the trigger index that `tselect` reads, and vice versa. When V=1, VS-mode accesses to `sireg5` are substituted by `vsireg5`, which accesses the same index while `vsiselect` holds the trigger access value. HS-mode accesses to `vsireg5` while `vsiselect` holds the trigger access value also access this index. When Sutcfg is implemented, `uireg5` also accesses this index while `uiselect` holds the trigger access value. Each hart has one trigger selection index.

The trigger selection index accessed through `sireg5` or `vsireg5` is WARL and follows the same legal-value conversion as Sdtrig `tselect`. Writes of values greater than or equal to the number of supported triggers may result in a different value than what was written, or may select a trigger where `tdata1`.TYPE=0. To verify that a written index is valid, software can read back `sireg5` and check that it holds the written value, then read `sireg` (or, when V=1, `vsireg`) and check that TYPE is non-zero.

Accesses to `sireg5` and `vsireg5` are not subject to the field modifications in Section 4.3, the type constraints in Section 4.3.1, or the `DMODE` read-only-0 rule in Section 4.3.2. They read and write the selection index regardless of the configuration of the selected trigger. A write to `sireg5` or `vsireg5` changes only the selection index and does not modify the `tdata*` state of any trigger.

Software must save and restore the selection index when switching trigger access between M-mode, S/HS-mode, VS-mode, and U/VU-mode. M-mode software must not assume that `tselect` retains its value across delegated accesses. Because the index is shared between S/HS-mode and VS-mode, software must save and restore it when switching between S/HS-mode and VS-mode contexts.

4.2.2. Virtualization

When V=1, accesses from VS-mode to `siselect` and `sireg*` are substituted by `vsiselect` and `vsireg*`, as specified by Sscsrind. Field relocations that apply to VS-mode accesses are specified in Section 4.3. The trigger selection index accessed through `vsireg5` is shared with S/HS-mode, as specified in Section 4.2.1.

When HS-mode accesses `vsiselect` and `vsireg*` directly, the accesses use the VS-mode field modifications and type constraints in this chapter. When external debug is disallowed for S/HS-mode, these accesses provide HS-mode management of VS-mode and VU-mode trigger context as specified in Section 4.3.3.

4.3. Supervisor Trigger State Access Modifications

`sireg*` and `vsireg*` provide access to a subset of the fields in the native trigger registers, and in some cases fields are relocated. The field modifications that apply when trigger registers are accessed via `sireg*` or `vsireg*` are documented below.

Table 12. Delegated Trigger CSR Field Modifications

Sdtrig Register(s)	`sireg*` Field Modifications	`vsireg*` Field Modifications
`mcontrol6`, `icount`, `etrigger`, `itrigger` (accessed by `sireg` / `vsireg`)	M is read-only 0	M is read-only 0 The S field maps to the underlying VS field in `tdata1` The U field maps to the underlying VU field in `tdata1` VS and VU are read-only 0
`textra32`, `textra64` (accessed by `sireg3` / `vsireg3`)	none	MHVALUE and MHSELECT are read-only 0



The bit positions for the M, S, U, VS, and VU fields vary based on the trigger type specified by `tdata1`.TYPE; see The RISC-V Debug Specification [1], Chapter 5.7.

4.3.1. Type Delegation Constraints

The following constraints apply to permitted accesses through `sireg*` and `vsireg*`.

The trigger types supported through `siselect`/`sireg*`, and through VS-mode substituted accesses (`vsiselect`/`vsireg*`), are `mcontrol6`, `icount`, `itrigger`, `etrigger`, and disabled (Sdtrig type 15). When the selected trigger's `tdata1`.TYPE is any other value, including `mcontrol`, `tmexttrigger`, legacy, custom, and reserved types, accesses through `sireg`, `sireg2`, `sireg3`, and `sireg4` are read-only 0 and writes are ignored. The same applies to `vsireg` through `vsireg4` when V=1 or when they are accessed directly from HS-mode as specified in Section 4.3.3.

When `tdata1`.TYPE is a supported type, `sireg4` and `vsireg4` (including HS-mode management accesses) read `tinfo` with bits corresponding to types not supported through this interface read-only 0. Writes to `tdata1`.TYPE through `sireg` or `vsireg` are WARL and may only select a type supported through this interface.

Table 13. Type-Specific Constraints for Delegated Trigger Access

Trigger type	Delegated register-interface constraints
`itrigger`	Programming access is allowed only for interrupt causes that a handler at the S/HS view or the VS view can observe. Through `sireg*`, `sireg2` bit *i* is writable if `mideleg`[*i*]=1. Through `vsireg*`, writability follows the interrupt cause number reported to the VS-mode handler (`vscause`), after the standard virtual-interrupt translation described in the following NOTE. Bits that are not permitted are read-only 0 and writes are ignored. The `nmi` field in `tdata1` (accessed through `sireg` / `vsireg`) is read-only 0; NMI is not delegated by `mideleg` or `hideleg`.
`etrigger`	Programming access is allowed only for exception causes permitted in the S/HS view or the VS view. Through `sireg*`, `sireg2` bit *i* is writable if `medeleg`[*i*]=1. Through `vsireg*`, `vsireg2` bit *i* is writable if `hedeleg`[*i*]=1. Exception cause numbers are not translated. Bits that are not permitted are read-only 0 and writes are ignored.



`mcontrol` is deprecated and is not supported through this interface. Use `mcontrol6` for address/control triggers.



Sdtrig interprets each `itrigger` `tdata2` bit as the interrupt number in the mode in which the trap handler executes; virtualized interrupt numbers are not the same in every mode. When a virtual supervisor interrupt is delegated to VS-mode, the Hypervisor extension translates the cause written to `vscause`: code 10 becomes 9, code 6 becomes 5, and code 2 becomes 1. VS-mode programming of `vsireg2` therefore permits bit 9 when `hideleg`[10]=1, bit 5 when `hideleg`[6]=1, and bit 1 when `hideleg`[2]=1. A same-numbered test of `hideleg`[i] for bit i would reject these VS-visible causes (`hideleg` bits 9, 5, and 1 are read-only 0) and would permit the untranslated codes 10, 6, and 2, which a VS-mode handler does not observe. For interrupt causes 16 and above, VS-mode uses the translated cause number if the Hypervisor extension translates that cause when the interrupt is delegated to VS-mode; otherwise it uses the `hideleg` bit index.

For `etrigger`, exception codes are not translated, so VS-mode uses `hedeleg`[*i*] for `vsireg2` bit *i*. Trap delegation is hierarchical: an interrupt or exception delegated to VS-mode must first be delegated to S/HS-mode. S/HS-mode save and restore of guest `etrigger` state therefore uses the same `medeleg`[*i*] permission as for S/HS-mode's own causes. Guest `itrigger` state uses the VS-visible cause bits 1, 5, and 9 for the standard virtual supervisor interrupts. For these standard virtual interrupts, the corresponding host delegation conditions are `mideleg`[10], `mideleg`[6], and `mideleg`[2], respectively, together with `hideleg`[10], `hideleg`[6], and `hideleg`[2], respectively. The `mideleg` bits for these virtual interrupts are read-only 1 when H is implemented and delegate them to HS-mode, while the `hideleg` bits delegate the virtual interrupts to VS-mode.

4.3.2. DMODE Interaction

When the hart is not in Debug Mode and the selected trigger has `tdata1`.DMODE=1, the trigger is reserved for Debug Mode use. M-mode and S/HS-mode accesses through `sireg` through `sireg4`, and VS-mode accesses through `vsireg` through `vsireg4`, follow the owner rule in Section 3.1.9: they read 0 and writes are ignored. When the hart is in Debug Mode, these accesses follow the field modifications in this section together with the base Sdtrig `DMODE` rules.

4.3.3. HS-mode Management of VS/VU Trigger Context

When `mdbgen`=0 and `SEDBGEN`=0, HS-mode accesses to `vsireg` through `vsireg4` while `vsiselect` holds the trigger access value are management accesses in the VS view, as specified in Section 3.1.9. The VS view covers the VS and VU mode-enable fields, so HS-mode can save, park, and restore `DMODE`=1 triggers that match only in VS-mode or VU-mode. When `mdbgen`=1 or `SEDBGEN`=1, these accesses are not management accesses and follow the owner rule in Section 3.1.9. These accesses use the VS-mode field modifications,

type constraints, and type-specific constraints in this chapter, and they do not provide HS-mode with native access to fields masked by the VS view.

These HS-mode management accesses are architectural accesses and do not require an SBI. When Smstateen is implemented, they remain subject to `mstateen0`.CSRIND and `mstateen0`.TR. `hstateen0`.TR controls VS-mode and VU-mode software access; it does not restrict HS-mode management accesses.

When switching between VS-mode or VU-mode contexts, HS-mode software should follow the procedure in Section 3.1.9 using `vsiselect` and `vsireg` through `vsireg5`.



When the hart is not in Debug Mode and `sireg` *through* `sireg4` *all read as zero for the trigger index held in* `sireg5`*, or, when V=1,* `vsireg` *through* `vsireg4` *all read as zero, the selected slot is unavailable through this interface. The slot may be reserved by Debug Mode (*`DMODE`*=1), may have an unsupported* `tdata1`*.TYPE, or may have* `tdata1`*.TYPE=0. Software should try the next trigger index. An all-zero read of aliases 1–4 does not distinguish these cases. Sdtrig* `chain` *WARL on a visible trigger still depends on a neighboring trigger's* `DMODE`*; this interface does not redefine that WARL. An external debugger whose debug access privilege is S/HS-mode or VS-mode uses the same interface from Debug Mode, where* `DMODE`*=1 is visible and writable, so it can program* `ACTION`*=1 in accordance with Sdtrig.*

4.4. Supervisor and Virtual Supervisor Trigger State Access Control

When Smstateen is implemented, access is checked in the following order. When V=1 and the privilege mode is VS, accesses to `siselect` and `sireg*` are substituted by `vsiselect` and `vsireg*` as specified by Sscsrind. The following checks apply to those effective CSRs.

1. If the privilege mode is less privileged than M-mode and `mstateen0`.TR=0, attempts to access `sireg`, `sireg2`, `sireg3`, `sireg4`, or `sireg5` while `siselect` holds the trigger access value, or, from HS-mode, to access `vsireg`, `vsireg2`, `vsireg3`, `vsireg4`, or `vsireg5` while `vsiselect` holds the trigger access value, raise an illegal-instruction exception.
2. Otherwise, if V=1 and the privilege mode is VS or VU and `hstateen0`.TR=0, attempts to access `sireg`, `sireg2`, `sireg3`, `sireg4`, or `sireg5` while `siselect` holds the trigger access value raise a virtual-instruction exception.
3. Otherwise, if the privilege mode is M-mode, S/HS-mode, or V=1 and the privilege mode is VS, accesses to `sireg`, `sireg2`, `sireg3`, `sireg4`, and `sireg5` while `siselect` holds the trigger access value are permitted. HS-mode accesses to `vsireg`, `vsireg2`, `vsireg3`, `vsireg4`, and `vsireg5` while `vsiselect` holds the trigger access value are also permitted.

M-mode accesses through `sireg*` while `siselect` holds the trigger access value use the S/HS-view field modifications and type constraints in this chapter; they do not use the native `tdata*` encoding.

`hstateen0`.TR is read-only 0 when `mstateen0`.TR=0.

The TR bit is bit 3 in `mstateen0` and `hstateen0`. Sutcfg defines `sstateen0`.TR to control U-mode access to delegated triggers. When Sutcfg is not implemented, `sstateen0`.TR remains read-only 0.



See the Sscsrind specification [5] for how bit 60 (CSRIND) in `mstateen0` *and* `hstateen0` *can also restrict access to* `siselect` *and* `sireg*` *from privilege modes less privileged than M-mode, including VS-mode when V=1. The CSRIND bit provides blanket control over indirect CSR infrastructure, while TR provides trigger-specific delegation control.*



Smtdeleg uses one TR bit per privilege level to control delegated trigger access. If per-trigger delegation is needed in the future, new delegation registers (for example `tdelegX`/`htdelegX`*)*

could be introduced.

4.5. Access to tcontrol

The tcontrol CSR is not accessible through the delegated indirect interface. tcontrol remains M-mode only.

When a delegated trigger with ACTION=0 fires in S/HS-mode or VS-mode, a breakpoint exception is taken through the normal privilege trap mechanism (scause/stval for S/HS-mode, vscause/vstval for VS-mode). ACTION=1 follows Sdtrig and enters Debug Mode, except that it does not match or fire while external debug is disallowed for the hart's current privilege mode, as specified in Section 3.1. Other ACTION values retain the behavior defined by Sdtrig.



tcontrol.MTE and tcontrol.MPTE affect only triggers with ACTION=0 while the hart is in M-mode, as specified by Sdtrig. They do not disable triggers that match or fire in a less-privileged mode, and they do not affect ACTION=1. Delegated ACTION=0 triggers follow Sdtrig's native-trigger match and reentrancy rules. Because tcontrol is not accessible from S-mode, it does not provide a less-privileged analogue of the M-mode handler-reentrancy control.

4.6. Debugger Access from S/HS-mode and VS-mode

When Smsedbgsec is implemented, mdbgen=0, and SEDBGEN=1, an external debugger whose debug access privilege is S/HS-mode can access triggers through the siselect/sireg* interface, provided that mstateen0.TR=1.

When Smvsedbgsec is implemented, mdbgen=0, SEDBGEN=0, and VSEDBGEN=1, an external debugger whose debug access privilege is VS-mode uses the same interface with the Sscsrind substitution to vsiselect/vsireg*, provided that mstateen0.TR=1 and hstateen0.TR=1.



This access path is one of the primary motivations for Smtdeleg: without it, an external debugger restricted to S/HS-mode or VS-mode privilege has no path to trigger state. For an external debugger restricted to U-mode or VU-mode privilege, Sutcfg provides the corresponding access path via uiselect/uireg.*

4.7. Trigger Allocation

Smtdeleg uses Smstateen bits for delegation control. When mstateen0.TR=1, S/HS-mode can access delegated trigger state through siselect/sireg* (subject to DMODE restrictions and type-specific constraints). When V=1 and hstateen0.TR=1, VS-mode uses the same selection state with the Sscsrind substitution to vsiselect/vsireg*. When external debug is disallowed for S/HS-mode, HS-mode can also use direct vsiselect/vsireg* accesses to manage VS-mode and VU-mode trigger context as specified in Section 4.3.3.

DMODE takes priority over delegated S/HS-mode and VS-mode access, as specified in Section 3.1.9. Higher-privilege software can reconfigure triggers with DMODE=0 through its own interface, overriding lower-privilege configuration. A DMODE=1 trigger that enables S/HS-mode is within only the native view, so S/HS-mode software cannot release it outside Debug Mode and requests M-mode assistance. When external debug is disallowed for S/HS-mode, HS-mode can manage DMODE=1 triggers within the VS view as specified in Section 4.3.3. Debug Mode can reclaim a trigger through the corresponding delegated interface.

Software must manage trigger allocation cooperatively. TR enables delegated trigger access but does not identify per-trigger ownership. There is no per-trigger hardware allocation. Before setting the applicable

TR bit, higher-privilege software should clear its own mode-enable bits on any trigger it is exposing.

- M-mode allocates triggers between its own use and S/HS-mode delegation.
- M-mode firmware sets `mstateen0`.TR=1 once it is prepared to delegate trigger access.
- S/HS-mode software allocates triggers between its own use and VS delegation.
- When Sutcfg is implemented, S/HS-mode software allocates triggers between its own use and U-mode delegation.

4.8. Dependencies

Smtdeleg depends on the following extensions:

- Sdtrig — Base trigger extension defining trigger CSRs and types.
- Sscsrind / Smcsrind — Indirect CSR interface framework [5].
- Smstateen / Ssstateen — State enable framework for access control.
- H extension (optional) — Required for virtualization controls via `hstateen0`.

Sstcfg requires Smtdeleg. The dependencies listed above for Smtdeleg therefore also apply to Sstcfg.

U-mode and VU-mode trigger access is provided by Sutcfg, which requires Sucsrind and, when S-mode is implemented, also requires Smtdeleg and Sstcfg.

4.9. Summary of New State

Sstcfg introduces no new CSRs. It allocates the trigger access value in the `siselect` select space and uses `sireg` through `sireg5` as specified in Section 4.2.

Table 14. New Smstateen Bits Introduced by Smtdeleg

Register	Bit	Purpose
`mstateen0`	3 (TR)	Controls access to delegated triggers below M-mode
`hstateen0`	3 (TR)	Controls delegated trigger access in VS-mode when V=1

The `sstateen0`.TR bit for U-mode delegation is defined by Sutcfg.

Chapter 5. Sucsrind (ISA Extension)

This chapter specifies the Sucsrind ISA extension, which extends the indirect CSR access mechanism defined by Smcsrind [5] to U-mode. Sucsrind is not a member of the Secure Debug or Secure Trace families.

Sucsrind provides U-mode with its own set of indirect register select and alias CSRs. This enables extensions to expose register arrays to U-mode software without consuming large portions of the limited user-level CSR address space, mirroring the benefits Sscsrind provides at supervisor level.



The Sscsrind specification reserves CSR address space for this extension: CSR address space is reserved for a possible future Sucsrind extension that extends indirect CSR access to user mode.

Sucsrind requires Smcsrind, which provides the machine-level indirect CSR interface and the machine-level behavior for the hart. When S-mode is implemented, Sucsrind also requires Sscsrind.

5.1. User-level CSRs

Table 15. User Indirect CSR Access CSRs

Number	Privilege	Width	Name	Description
address TBD	URW	XLEN	`uiselect`	User indirect register select
address TBD	URW	XLEN	`uireg`	User indirect register alias
address TBD	URW	XLEN	`uireg2`	User indirect register alias 2
address TBD	URW	XLEN	`uireg3`	User indirect register alias 3
address TBD	URW	XLEN	`uireg4`	User indirect register alias 4
address TBD	URW	XLEN	`uireg5`	User indirect register alias 5
address TBD	URW	XLEN	`uireg6`	User indirect register alias 6



The `uireg*` CSR numbers are not consecutive because one address in the allocated range is reserved, consistent with the gap in the Sscsrind supervisor-level and machine-level indirect alias CSR numbering. Final CSR addresses are allocated by ARC.

The value of `uiselect` determines which register is accessed upon read or write of each of the user indirect alias CSRs (`uireg*`). `uiselect` value ranges are allocated to dependent extensions, which specify the register state accessible via each `uireg*` register, for each `uiselect` value. `uiselect` is a WARL register.

The `uiselect` register will support the value range 0..0xFFF at a minimum. A future extension may define a value range outside of this minimum range. Only if such an extension is implemented will `uiselect` be required to support larger values.



Requiring a range of 0-0xFFF for `uiselect`, even though most or all of the space may be reserved or inaccessible, permits S-mode to emulate indirectly accessed registers in this implemented range, including registers that may be standardized in the future.

Values of `uiselect` with the most-significant bit set (bit XLEN-1 = 1) are designated only for custom use. Values of `uiselect` with the most-significant bit clear are designated only for standard use and are reserved until allocated to a standard architecture extension. If XLEN is changed, the most-significant bit of `uiselect` moves to the new position, retaining its value from before.

The behavior upon accessing `uireg*` from M-mode, S-mode, or U-mode, while `uiselect` holds a value that

is not implemented at user level, is UNSPECIFIED.



It is expected that implementations will typically raise an illegal-instruction exception for such accesses, so that, for example, they can be identified as software bugs.

Attempts to access `uireg*` while `uiselect` holds a number in an allocated and implemented range results in a specific behavior that, for each combination of `uiselect` and `uireg*`, is defined by the extension to which the `uiselect` value is allocated.



Ordinarily, each `uireg*` *will access register state, access read-only 0 state, or raise an illegal-instruction exception.*

User-level, supervisor-level, and machine-level select values are separate address spaces from each other. An extension may define user-level and supervisor-level CSRs with the same select value as partial or full aliases, typically for state that can be delegated from supervisor-level to user-level.

The widths of `uiselect` and `uireg*` are always the current XLEN.

5.2. Virtualization

Sucsrind does not define separate virtual-user `vu*` indirect CSRs.

When V=1, accesses from VS-mode or VU-mode to `uiselect` and `uireg*` use the same CSR interface and semantics as U-mode accesses but applied to VU-mode. Higher privilege modes are expected to swap the content of these registers as needed.

5.3. Access Control by the State-Enable CSRs

If extension Smstateen is implemented together with Sucsrind, bit 4 (UCSRIND) of state-enable register `mstateen0` controls access to `uiselect` and `uireg*`. When `mstateen0`.UCSRIND=0, an attempt to access `uiselect` or `uireg*` from a privilege mode less privileged than M-mode results in an illegal-instruction exception. Bit 60 (CSRIND) of `mstateen0` continues to control only the Sscsrind CSRs (`siselect`, `sireg*`, `vsiselect`, and `vsireg*`) and does not gate `uiselect` or `uireg*`.

If the hypervisor extension is implemented, `hstateen0`.UCSRIND also controls accesses from VS-mode or VU-mode to `uiselect` and `uireg*`. When `hstateen0`.UCSRIND=0 and `mstateen0`.UCSRIND=1, all attempts from VS-mode or VU-mode to access `uiselect` or `uireg*` raise a virtual-instruction exception.

When S-mode is implemented, `sstateen0`.UCSRIND controls accesses from U-mode to `uiselect` and `uireg*`, and, when V=1, virtual `sstateen0`.UCSRIND controls accesses from VU-mode. `sstateen0`.UCSRIND is read-only 0 when `mstateen0`.UCSRIND=0, and virtual `sstateen0`.UCSRIND is read-only 0 when `hstateen0`.UCSRIND=0. Allocating the enable at bit 4 keeps it in the low end of `sstateen0`, with the same bit position in `mstateen0` and `hstateen0`, as required for state accessible at user level [6].



Individual extensions that use `uiselect`/`uireg*` *to access specific register state may define additional* `sstateen` *bits to provide S-mode with fine-grained control over U-mode access to that state. Sutcfg defines* `sstateen0`*.TR to control U-mode access to trigger registers accessed through* `uireg*`*.*

5.4. Dependencies

Sucsrind depends on the following extensions:

- Smcsrind — Machine-level indirect CSR access framework [5].
- Sscsrind (required when S-mode is implemented) — Supervisor-level indirect CSR access framework.
- S-mode (optional) — Required for `sstateen0` access control and for Sscsrind. In implementations without S-mode, `mstateen0` alone controls U-mode access to `uiselect`/`uireg*`. When Smstateen is not implemented, all indirect CSR state is accessible as defined by this extension.
- H extension (optional) — Required for VS/VU-mode virtualization support.

5.5. Summary of New State

Table 16. New CSRs Introduced by Sucsrind

CSR	Address	Privilege	Notes
`uiselect`	address TBD	URW	User indirect register select
`uireg`	address TBD	URW	User indirect register alias
`uireg2`	address TBD	URW	User indirect register alias 2
`uireg3`	address TBD	URW	User indirect register alias 3
`uireg4`	address TBD	URW	User indirect register alias 4
`uireg5`	address TBD	URW	User indirect register alias 5
`uireg6`	address TBD	URW	User indirect register alias 6

Table 17. New Smstateen Bits Introduced by Sucsrind

Register	Bit	Purpose
`mstateen0`	4 (UCSRIND)	Controls access to `uiselect` and `uireg*` below M-mode
`hstateen0`	4 (UCSRIND)	Controls access to `uiselect` and `uireg*` in VS/VU-mode when V=1
`sstateen0`	4 (UCSRIND)	Controls U-mode access to `uiselect` and `uireg*`

Chapter 6. Sutcfg (ISA Extension)

This chapter specifies the Sutcfg ISA extension, which provides U-mode and VU-mode access to Sdtrig [1] triggers using the user-level indirect CSR interface defined by Sucsrind. Sutcfg is not a member of the Secure Debug or Secure Trace families.

When S-mode is implemented, U-mode access requires `mstateen0`.TR=1 and `sstateen0`.TR=1. When V=1, VU-mode access additionally requires `hstateen0`.TR=1 and virtual `sstateen0`.TR=1. When S-mode is not implemented, `mstateen0`.TR directly controls U-mode access.

Sutcfg enables:

- U-mode and VU-mode self-hosted debuggers to access triggers using `uiselect` and `uireg*`.
- An external debugger to access triggers through `uiselect` and `uireg*` when a Secure Debug extension is implemented and Debug Mode has less than M-mode privilege.

Sutcfg is a distinct extension. Its implementation requires Sucsrind. When S-mode is implemented, Sutcfg also requires Smtdeleg and Sstcfg.

6.1. User Trigger Access



The `uiselect` value for trigger access is to be allocated from the Sucsrind select address space. When Smtdeleg and Sstcfg are implemented, the same value is used for `siselect` trigger access. Throughout this document, this value is referred to as the trigger access value. See Section 4.2.

While `uiselect` holds the trigger access value, `uireg5` provides user-mode read/write access to the trigger selection index, and `uireg` through `uireg4` provide user-mode read/write access to register state associated with the trigger selected by that index, the same state accessed by M-mode CSRs `tdata*` and `tinfo`. The register mapping is shown below.

Table 18. Indirect Trigger Register Mappings When `uiselect` Holds the Trigger Access Value

Indirect CSR	State Accessed
`uireg`	Same as `tdata1`
`uireg2`	Same as `tdata2`
`uireg3`	Same as `tdata3`
`uireg4`	Same as `tinfo` (read-only; writes ignored), with type bits restricted as specified in Section 6.2.1
`uireg5`	Same as `tselect` (trigger selection index), as specified in Section 6.1.1



Placing the selection index in `uireg5`, an alias otherwise unused by the trigger mapping, avoids consuming a user-level direct CSR address. Selecting a trigger requires no additional `uiselect` write, because `uiselect` already holds the trigger access value.

While `uiselect` holds the trigger access value, attempts to access `uireg6` raise an illegal-instruction exception.

6.1.1. Trigger Selection

While `uiselect` holds the trigger access value, `uireg5` accesses the same underlying state as `tselect`: writing `uireg5` updates the trigger index that `tselect` reads, and vice versa. When S-mode is implemented,

`sireg5` and `vsireg5` also access this index, as specified in Section 4.2.1. Each hart has one trigger selection index.

The trigger selection index accessed through `uireg5` is WARL and follows the same legal-value conversion as Sdtrig `tselect`. Writes of values greater than or equal to the number of supported triggers may result in a different value than what was written, or may select a trigger where `tdata1`.TYPE=0. To verify that a written index is valid, software can read back `uireg5` and check that it holds the written value, then read `uireg` and check that TYPE is non-zero.

Accesses to `uireg5` are not subject to the field modifications in Section 6.2, the type constraints in Section 6.2.1, or the `DMODE` read-only-0 rule in Section 6.2.2. They read and write the selection index regardless of the configuration of the selected trigger. A write to `uireg5` changes only the selection index and does not modify the `tdata*` state of any trigger.

Software must save and restore the selection index when switching trigger access between M-mode, S/HS-mode, VS-mode, and U/VU-mode. Higher-privilege software must not assume that `tselect` retains its value across delegated U-mode accesses.

6.1.2. Virtualization

When V=1, accesses from VS-mode or VU-mode to `uiselect` and `uireg*` follow Sucsrind virtualization rules. Field relocations that apply to VS-mode or VU-mode accesses are specified in Section 6.2.

6.2. User Trigger State Access Modifications

`uireg*` provides access to a subset of the fields in the native trigger registers, and in some cases fields are relocated. The field modifications that apply when trigger registers are accessed via `uireg*` are documented below.

Table 19. U-mode and VS/VU-mode Trigger CSR Field Modifications

Sdtrig Register(s)	`uireg*` Field Modifications (U-mode)	`uireg*` Field Modifications (VS/VU-mode)
`mcontrol6`, `icount` (accessed by `uireg`)	M, S, VS, and VU are read-only 0	M, S, VS, and VU are read-only 0 The U field maps to the underlying VU field in `tdata1`
`textra32`, `textra64` (accessed by `uireg3`)	MHVALUE, MHSELECT, SVALUE, SSELECT, and SBYTEMASK are read-only 0	MHVALUE, MHSELECT, SVALUE, SSELECT, and SBYTEMASK are read-only 0



The bit positions for the M, S, U, VS, and VU fields vary based on the trigger type specified by `tdata1`*.TYPE; see The RISC-V Debug Specification [1], Chapter 5.7.*

6.2.1. Type Delegation Constraints

The trigger types supported through `uiselect` and `uireg*` are `mcontrol6`, `icount`, and disabled (Sdtrig type 15). When the selected trigger's `tdata1`.TYPE is any other value, including `mcontrol`, `itrigger`, `etrigger`, `tmexttrigger`, legacy, custom, and reserved types, accesses through `uireg`, `uireg2`, `uireg3`, and `uireg4` are read-only 0 and writes are ignored.



`itrigger` *and* `etrigger` *are excluded because Sdtrig fires them just before the first instruction of the trap handler, and each* `tdata2` *bit selects a cause number interpreted in the mode in which that handler executes. The S/HS and VS views can filter those bits with*

> `mideleg`/`medeleg` *or* `hideleg`/`hedeleg`*, as specified in Section 4.3.1. U-mode and VU-mode do not execute trap handlers and have no equivalent delegation register, so this interface does not define a writable subset of* `tdata2`*.*

When `tdata1`.TYPE is a supported type, `uireg4` reads `tinfo` with bits corresponding to types not supported through this interface read-only 0. Writes to `tdata1`.TYPE through `uireg` are WARL and may only select a type supported through this interface.

> `mcontrol` *is deprecated and is not supported through this interface. Use* `mcontrol6` *for address/control triggers.*

6.2.2. DMODE Interaction

When the hart is not in Debug Mode and the selected trigger has `tdata1`.DMODE=1, the trigger is reserved for Debug Mode use. U-mode and VU-mode accesses through `uireg` through `uireg4` follow the owner rule in Section 3.1.9: they read 0 and writes are ignored. M-mode, S/HS-mode, and VS-mode accesses follow the owner rule unless they are management accesses, as specified below. When the hart is in Debug Mode, these accesses follow the field modifications in this section together with the base Sdtrig `DMODE` rules.

The following accesses to `uireg` through `uireg4` while `uiselect` holds the trigger access value are management accesses, as specified in Section 3.1.9:

- M-mode accesses when `mdbgen`=0, in the U view.
- S/HS-mode accesses when `mdbgen`=0 and `SEDBGEN`=0, in the U view.
- VS-mode accesses (V=1) when `mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=0, in the VU view.

The U view covers only the U mode-enable field, so S/HS-mode can save, park, and restore `DMODE`=1 triggers that match only in U-mode. These accesses use the U-mode field modifications and type constraints in this chapter. VS-mode accesses use the VU-mode field modifications, in which the U field maps to the underlying VU field. The VU view therefore covers only the VU mode-enable field, so VS-mode can save, park, and restore `DMODE`=1 triggers that match only in VU-mode. VS-mode management accesses remain subject to `hstateen0`.TR, so HS-mode controls whether VS-mode can manage VU-mode trigger context.

When switching between U-mode application contexts, S/HS-mode software should follow the procedure in Section 3.1.9 using `uiselect` and `uireg` through `uireg5`. When switching between VU-mode application contexts, VS-mode software should follow the same procedure. HS-mode can also manage VU-mode context through the VS view, as specified in Section 4.3.3.

> *When the hart is not in Debug Mode and* `uireg` *through* `uireg4` *all read as zero for the trigger index held in* `uireg5`*, VS-mode, U-mode, or VU-mode software cannot use the selected slot through this interface. The slot may be reserved by Debug Mode (*`DMODE`*=1), may have an unsupported* `tdata1`*.TYPE, or may have* `tdata1`*.TYPE=0. Software should try the next trigger index. An all-zero read of aliases 1–4 does not distinguish these cases. Management accesses are governed separately above. Sdtrig* `chain` *WARL on a visible trigger still depends on a neighboring trigger's* `DMODE`*; this interface does not redefine that WARL. An external debugger whose debug access privilege is U-mode or VU-mode uses the same interface from Debug Mode, where* `DMODE`*=1 is visible and writable, so it can program* `ACTION`*=1 in accordance with Sdtrig.*

6.3. User Trigger State Access Control

When S-mode is implemented, U-mode access requires `mstateen0`.TR=1 and `sstateen0`.TR=1. When V=1, VU-mode access additionally requires `hstateen0`.TR=1. The access control is checked in the following

order:

1. If the privilege mode is less privileged than M-mode and mstateen0.TR=0, attempts to access uireg, uireg2, uireg3, uireg4, or uireg5 while uiselect holds the trigger access value raise an illegal-instruction exception.
2. Otherwise, if V=1 and the privilege mode is VS or VU and hstateen0.TR=0, attempts to access uireg, uireg2, uireg3, uireg4, or uireg5 while uiselect holds the trigger access value raise a virtual-instruction exception.
3. Otherwise, if V=0 and the privilege mode is U and sstateen0.TR=0, attempts to access uireg, uireg2, uireg3, uireg4, or uireg5 while uiselect holds the trigger access value raise an illegal-instruction exception.
4. Otherwise, if V=1 and the privilege mode is VU and virtual sstateen0.TR=0, attempts to access uireg, uireg2, uireg3, uireg4, or uireg5 while uiselect holds the trigger access value raise a virtual-instruction exception.

When S-mode is implemented, VS-mode accesses through this interface use the VU-mode field view and are controlled by hstateen0.TR; U-mode accesses are controlled by sstateen0.TR; and VU-mode accesses are controlled by both hstateen0.TR and virtual sstateen0.TR. S/HS-mode management accesses use mstateen0.UCSRIND and mstateen0.TR and are not restricted by these lower-level state-enable bits.

When S-mode is not implemented, sstateen0 does not exist. In this case, mstateen0.TR alone controls U-mode access to uireg through uireg5 while uiselect holds the trigger access value. An illegal-instruction exception is raised for those accesses when mstateen0.TR=0.

M-mode accesses to uireg through uireg5 while uiselect holds the trigger access value are not restricted by TR and are permitted. When S-mode is implemented and mstateen0.TR=1, S/HS-mode accesses to those CSRs are likewise permitted. Those accesses use the U-mode field modifications and type constraints in this chapter, including the management access to DMODE in Section 6.2.2.

S/HS-mode management accesses are architectural accesses and do not require an SBI. When Smstateen is implemented, they remain subject to mstateen0.UCSRIND and mstateen0.TR. sstateen0.TR and hstateen0.TR control VS-mode, U-mode, and VU-mode software access; they do not restrict S/HS-mode management accesses.

When mstateen0.TR=0, sstateen0.TR is read-only 0. When V=1 and hstateen0.TR=0, virtual sstateen0.TR is read-only 0.

The TR bit is bit 3 in sstateen0.



See the Sscsrind and Sucsrind specifications [5] for how bit 60 (CSRIND) in mstateen0 *and* hstateen0 *restricts access to* siselect *and* sireg* *from privilege modes less privileged than M-mode, including VS-mode when V=1. Access to* uiselect *and* uireg* *is gated by the UCSRIND bit (bit 4) of* mstateen0, hstateen0, *and* sstateen0, *as specified in Sucsrind. The CSRIND and UCSRIND bits provide blanket control over the Sscsrind and Sucsrind indirect CSR infrastructure, while TR provides trigger-specific delegation control.*

6.4. Access to tcontrol

The tcontrol CSR is not accessible through the delegated indirect interface. tcontrol remains M-mode only.

When a delegated trigger with ACTION=0 fires in U-mode or VU-mode, a breakpoint exception is taken through the normal privilege trap mechanism. ACTION=1 follows Sdtrig and enters Debug Mode, except

that it does not match or fire while external debug is disallowed for the hart's current privilege mode, as specified in Section 3.1. Other ACTION values retain the behavior defined by Sdtrig.



`tcontrol`.MTE and `tcontrol`.MPTE affect only triggers with ACTION=0 while the hart is in M-mode, as specified by Sdtrig. They do not disable triggers that match or fire in a less-privileged mode, and they do not affect ACTION=1. Delegated ACTION=0 triggers follow Sdtrig's native-trigger match and reentrancy rules. Because `tcontrol` is not accessible from S-mode, it does not provide a less-privileged analogue of the M-mode handler-reentrancy control.

6.5. Debugger Access from U-mode and VU-mode

When Smuedbgsec is implemented, `mdbgen`=0, `SEDBGEN`=0, and `UEDBGEN`=1, an external debugger whose debug access privilege is U-mode can access triggers through the `uiselect`/`uireg*` interface, provided that the applicable TR bits permit access (`mstateen0`.TR=1 and, when S-mode is implemented, `sstateen0`.TR=1).

When Smuedbgsec is implemented, `mdbgen`=0, `SEDBGEN`=0, `VSEDBGEN`=0, and `VUEDBGEN`=1, an external debugger whose debug access privilege is VU-mode uses the same interface, provided that `mstateen0`.TR=1, `hstateen0`.TR=1, and virtual `sstateen0`.TR=1.



This access path is one of the primary motivations for Sutcfg: without it, an external debugger restricted to U-mode or VU-mode privilege has no path to trigger state.

6.6. Trigger Allocation

When the applicable TR bits permit access, U-mode and VU-mode can access delegated trigger state through `uiselect`/`uireg*` (subject to DMODE restrictions and type-specific constraints). When S-mode is implemented and `mstateen0`.TR=1, S/HS-mode can use the same access path to manage U-mode trigger context, as specified in Section 6.2.2.

`DMODE` takes priority over delegated VS-mode, U-mode, and VU-mode access, as specified in Section 3.1.9. Higher-privilege software can reconfigure triggers with `DMODE`=0 through its own interface, overriding lower-privilege configuration. When external debug is disallowed for the managing mode, S/HS-mode can manage `DMODE`=1 triggers within the U view, VS-mode can manage `DMODE`=1 triggers within the VU view, as specified in Section 6.2.2, and HS-mode can manage VS-mode and VU-mode trigger context as specified in Section 4.3.3. Debug Mode can reclaim a trigger through the corresponding delegated interface.

Software must manage trigger allocation cooperatively. TR enables delegated trigger access but does not identify per-trigger ownership. There is no per-trigger hardware allocation. Before setting the applicable TR bit, higher-privilege software should clear its own mode-enable bits on any trigger it is exposing.

- M-mode allocates triggers between its own use and lower-privilege delegation.
- When S-mode is implemented, S/HS-mode software allocates triggers between its own use and U-mode delegation, and sets `sstateen0`.TR=1 once it is prepared to delegate trigger access to U-mode.
- When S-mode is not implemented, M-mode firmware sets `mstateen0`.TR=1 once it is prepared to delegate trigger access to U-mode.

6.7. Dependencies

Sutcfg depends on the following extensions:

- Sdtrig — Base trigger extension defining trigger CSRs and types.

- Sucsrind — User-mode indirect CSR interface (`uiselect`/`uireg*`).
- Smtdeleg and Sstcfg (required when S-mode is implemented) — Define S-mode trigger access through `siselect`/`sireg*`.
- Smstateen / Ssstateen — State enable framework for access control [6].
- H extension (optional) — Required for trigger delegation controls in VS/VU-mode.

6.8. Summary of New State

Sutcfg introduces no new CSRs. It uses the trigger access value in the `uiselect` select space and `uireg` through `uireg5` as specified in Section 6.1.

Table 20. New Smstateen Bits Introduced by Sutcfg

Register	Bit	Purpose
`sstateen0`	3 (TR)	Controls U-mode delegated trigger access



`mstateen0`.*TR and* `hstateen0`.*TR are defined by Smtdeleg. In implementations without S-mode,* `mstateen0`.*TR is defined directly by Sutcfg.*

Chapter 7. Debug Module Security (non-ISA) Extension

This chapter defines the required security enhancements for the Debug Module. The debug operations listed below are modified by this extension.

- Halt
- Reset
- Keepalive
- Abstract commands (Access Register, Quick Access, Access Memory)
- System bus access

If any hart in the system implements Smmedbgsec, the Debug Module must also implement the Debug Module Security Extension.

7.1. External Debug Security Extensions Discovery

The ISA and non-ISA external debug security extensions impose security constraints and introduce non-backward-compatible changes. The presence of the extensions can be determined by polling the ALLSECURED and/or ANYSECURED bits in `dmstatus` Table 21. These bits will read as 0 when `pdbgsecen` is 0, regardless of whether the harts implement Smmedbgsec. When `pdbgsecen` is 1, ALLSECURED is set to 1 if all currently selected harts implement Smmedbgsec, and ANYSECURED is set to 1 if any currently selected hart implements Smmedbgsec. When any hart implements Smmedbgsec, it indicates that the Debug Module implements the Debug Module Security Extension as described in this chapter.

7.2. Halt

The halt behavior for a hart is detailed in Section 3.1. According to *The RISC-V Debug Specification* [1], a halt request must be responded to within one second. However, this constraint must be relaxed, as the request might remain pending when debugging is disallowed. In the case of a halt-on-reset request (SETRESETHALTREQ), the request is only acknowledged by the hart once it has reached a privilege level in which debug is allowed.

7.3. Reset

The HARTRESET operation resets selected harts. When M-mode debugging is disallowed, the hart will raise a security fault error to the Debug Module on HARTRESET operations. The error can be detected through ALLSECFAULT and ANYSECFAULT in `dmstatus`.

The NDMRESET operation is a system-level reset not tied to hart privilege levels and resets the entire system (excluding the Debug Module). The Debug Module Security Extension makes the NDMRESET field read-only 0 when `pdbgsecen` is 1. The debugger can determine support for the NDMRESET operation by setting the field to 1 and subsequently verifying the returned value upon reading.

7.4. Keepalive

The SETKEEPALIVE bit serves as an optional request for the hart to remain available for debugging. This bit only takes effect when M-mode debugging is allowed; otherwise, the hart behaves as if the bit is not set.



Keepalive affects whole-hart power and availability, including M-mode. Halt and single-step requests with `mdbgen`*=0 remain privilege-scoped and do not imply hart-global power control.*

> *Therefore, a lower-privilege debug enable does not grant the debugger authority to keep the hart available through keepalive, and* `SETKEEPALIVE` *remains read-only 0 when* `mdbgen`*=0. If keepalive is needed later, it should be introduced as a separate M-mode delegation extension rather than implied by* `mdtcfg.*EN`*.*

7.5. Abstract Commands

The hart's response to abstract commands is detailed in Section 3.1. The following subsection delineates the constraints when the Debug Module issues an abstract command.

7.5.1. Relaxed Permission Check `relaxedpriv`

The `relaxedpriv` field is hardwired to 0.

7.5.2. Address Translation AAMVIRTUAL

The field `command`.AAMVIRTUAL determines whether the Access Memory command uses a physical or virtual address. When `mdbgen`=1, the behavior follows the original RISC-V Debug Specification [1]. When `mdbgen`=0:

- If AAMVIRTUAL=0, the hart responds with a security fault error (setting `abstractcs`.CMDERR to 6).
- If AAMVIRTUAL=1, addresses are treated as virtual and are translated and protected according to the **debug access privilege**, as defined in Section 3.1.3, and may be modified to the **effective debug access privilege** as defined in Section 3.1.6.2 or Section 3.1.7.2.

7.5.3. Quick Access

When M-mode debugging is disallowed (`mdbgen`=0) for a hart, any Quick Access operation will be discarded by the Debug Module, causing `abstractcs`.CMDERR to be set to 6.



> *Quick Access abstract commands initiate a halt, execute the Program Buffer, and resume the selected hart. These halts cannot remain pending until debugging is allowed because the debugger blocks while waiting for completion. To address this, the hart would need to distinguish between Quick Access and other halt requests. Since Quick Access is an optional optimization, the Debug Module Security Extension avoids this additional hardware complexity by disallowing Quick Access when* `mdbgen` *is 0.*

7.6. System Bus Access

The System Bus Access must be checked by bus initiator protection mechanisms such as IOPMP [7] or RISC-V Worlds [8]. The bus protection unit can return an error to the Debug Module on illegal accesses; in that case, the Debug Module will set `sbcs`.SBERROR to 6 (security fault error).



> *Trusted entities like the RoT should configure IOPMP or equivalent protection before external debug is allowed.*

7.7. Security Fault Error Reporting

A dedicated error code, security fault error (CMDERR 6), is included in `abstractcs`.CMDERR. Issuance of abstract commands under disallowed circumstances sets `abstractcs`.CMDERR to 6. Additionally, the bus

security fault error (SBERROR 6) is introduced in `sbcs`.SBERROR to denote errors related to system bus access.

Error status bits are internally maintained for each hart. The ALLSECFAULT and ANYSECFAULT fields in `dmstatus` indicate the error status of the currently selected harts. These error statuses are sticky and can only be cleared by writing 1 to `dmcs2`.ACKSECFAULT Table 22.

7.8. Platform Debug Security Enable

The platform state element `pdbgsecen` is introduced to enable the debug security constraints defined by this specification. When `pdbgsecen` is 0, the platform retains full debugging capabilities, as if the Secure Debug extensions were not implemented:

- All debug operations are executed with M-mode privilege (equivalent to having `mdbgen` set to 1) for all harts in the system.
- The NDMRESET operation is allowed.
- The RELAXEDPRIV field may be configurable.
- System Bus Access may bypass the bus initiator protections.

If `mdtcfg` is implemented, it remains accessible to M-mode software when `pdbgsecen` is 0. Implemented debug-related fields retain their specified WARL behavior, but their values do not constrain external debug; the unrestricted debug behavior defined above applies. The trace-related fields remain independent of `pdbgsecen` and retain their specified effect.

When `pdbgsecen` is 1, the debug security constraints in this specification apply.

7.9. Authorization Handoff

An **authorization handoff** occurs when the platform ends debug for one principal or domain, or admits a different one. That includes one S-mode domain finishing debug before another starts.

A hart entering or leaving a debug-allowed privilege mode is not a handoff, as long as the same principal or domain still holds debug authority. Changing `pdbgsecen` or a hart's debug access privilege is not a handoff by itself.

After a handoff, the newly admitted debugger must not observe or use Debug Module state obtained under authorization it does not have. An operation issued before the handoff must not complete afterwards in a way that makes such state observable or usable.

The platform must complete sanitization before the succeeding debugger is admitted. The mechanism is implementation-specific.



The following state needs an explicit hardware or software clear/invalidate path across a handoff:

- *Must sanitize:* `data*`; `progbuf*` *if it is DMI-readable;* `sbdata*`.
- *Should also review:* `sbaddress*` *(last SBA address);* `command` *(e.g.* `regno`*);* `abstractauto`*; and the SBA auto bits in* `sbcs` *(*`sbreadondata`, `sbreadonaddr`, `sbautoincrement`*). Leftover control can re-issue an earlier access or reveal what was touched.*

Clearing existing register contents is insufficient if an earlier operation can later repopulate them.

> *One option is to set* `dmcontrol`*.DMACTIVE to 0 and wait for the state change to complete, which resets Debug Module state. NDMRESET does not reset the Debug Module. Software sanitization is another option. Writing zero to the affected registers is not a generic sanitization procedure: when* `abstractauto` *is set, accessing* `data` *or* `progbuf` *may execute* `command`*, and writing* `sbdata0` *starts a system bus write.*

7.10. Update of Debug Module Registers

The Debug Module Security Extension introduces new fields in the Debug Module registers. In `dmstatus`, ANYSECURED and ALLSECURED are added at bit 20 and bit 21 respectively, while ANYSECFAULT and ALLSECFAULT are added at bit 25 and bit 26. The ACKSECFAULT field is added to `dmcs2` at bit 12.

Table 21. Details of newly introduced fields in `dmstatus`

Field	Description	Access	Reset
ALLSECURED	The field is 0 when `pdbgsecen` is 0. When `pdbgsecen` is 1, this field is 1 if all currently selected harts implement Smmedbgsec.	R	-
ANYSECURED	The field is 0 when `pdbgsecen` is 0. When `pdbgsecen` is 1, this field is 1 if any currently selected hart implements Smmedbgsec.	R	-
ALLSECFAULT	The field is 1 when all currently selected harts have raised a security fault due to reset operation	R	-
ANYSECFAULT	The field is 1 when any currently selected hart has raised a security fault due to reset operation	R	-

Table 22. Detail of ACKSECFAULT in `dmcs2`

Field	Description	Access	Reset
ACKSECFAULT	0 (nop): No effect. 1 (ack): Clears error status bits for any selected harts.	W1	-

Appendix A: Valid Extension Combinations

This appendix lists valid external debug and trace extension combinations for the supported privilege-mode architectures. The two families are independent, so each table applies only to the family it covers.

A.1. External Debug Security Extension Combinations

Table Table 23 shows valid external debug extension combinations for different architectures:

Table 23. Valid External Debug Extension Combinations

Architecture	Valid Debug Extension Combinations
M-only	• Smmedbgsec
M/U	• Smmedbgsec • Smmedbgsec + Smuedbgsec
M/S/U	• Smmedbgsec • Smmedbgsec + Smsedbgsec • Smmedbgsec + Smsedbgsec + Smuedbgsec
M/S/VS/VU/U	• Smmedbgsec • Smmedbgsec + Smsedbgsec • Smmedbgsec + Smsedbgsec + Smuedbgsec • Smmedbgsec + Smsedbgsec + Smvsedbgsec • Smmedbgsec + Smsedbgsec + Smvsedbgsec + Smuedbgsec

Smtdeleg, Sstcfg, Sucsrind, and Sutcfg are distinct extensions specified in Chapter 4, Chapter 5, and Chapter 6. Sstcfg requires Smtdeleg. Sutcfg requires Sucsrind and, when S-mode is implemented, also requires Smtdeleg and Sstcfg. Smtdeleg and Sstcfg provide S/HS-mode and VS-mode access to Sdtrig trigger state for a lower-privilege debugger, and Sutcfg provides U-mode and VU-mode access. None is a prerequisite for the combinations listed above.

A.2. Trace Security Extension Combinations

Table Table 24 shows valid trace extension combinations for different architectures:

Table 24. Valid Trace Extension Combinations

Architecture	Valid Trace Extension Combinations
M-only	• Smmetrcsec
M/U	• Smmetrcsec • Smmetrcsec + Smuetrcsec
M/S/U	• Smmetrcsec • Smmetrcsec + Smsetrcsec • Smmetrcsec + Smsetrcsec + Smuetrcsec
M/S/VS/VU/U	• Smmetrcsec • Smmetrcsec + Smsetrcsec • Smmetrcsec + Smsetrcsec + Smuetrcsec • Smmetrcsec + Smsetrcsec + Smvsetrcsec • Smmetrcsec + Smsetrcsec + Smvsetrcsec + Smuetrcsec

Appendix B: Software Debug/Trace Security Policy Management

This section provides guidance on how software at different privilege levels can manage debug/trace security policies.

B.1. M-mode Management

M-mode software is responsible for managing the `SEDBGEN`, `VSEDBGEN`, `UEDBGEN`, and `VUEDBGEN` fields in the `mdtcfg` CSR for external debug, and the `SETRCEN`, `VSETRCEN`, `UETRCEN`, and `VUETRCEN` fields in the `mdtcfg` CSR for trace. The `mdbgen` and `mtrcen` states are read-only to software and are typically controlled by platform hardware, such as an RoT or lifecycle fuses.

M-mode software should:

1. Initialize debug/trace security policy for lower privilege modes based on security requirements.
2. Provide interfaces for dynamic debug/trace security policy updates (e.g., through SBI calls from lower privilege modes).
3. Save and restore debug/trace security policies when switching between supervisor software contexts.
4. When `mdbgen`=0, save and restore trigger context at lower-privilege software boundaries through the native management access, following the procedure in Section 3.1.9.
5. When Smtdeleg is implemented, set `mstateen0`.TR when prepared to delegate trigger access to S/HS-mode.
6. Save and restore `tselect` around delegated trigger accesses because `sireg5`, `vsireg5`, and `uireg5` access the same selection state as `tselect` while the corresponding select CSR holds the trigger access value.
7. When Sutcfg is implemented without S-mode, set `mstateen0`.TR when prepared to delegate trigger access to U-mode.

B.2. S/HS-mode Management

S/HS-mode software is responsible for managing the debug/trace security policy for lower privilege modes:

1. Call M-mode to apply the debug/trace security policy before launching an application or VM.
2. Provide interfaces to handle dynamic debug/trace security policy update requests (e.g., SBI calls from VMs) and call M-mode to apply the security policy accordingly.
3. Save and restore debug/trace security policies when switching between applications or VMs.
4. When Sstcfg is implemented and `mstateen0`.TR=1, save and restore the visible delegated S/HS-mode trigger context (typically `DMODE`=0) through `siselect`/`sireg*` when switching supervisor contexts. Save and restore `siselect` and the trigger selection index in `sireg5`. For each visible S/HS-mode trigger, select it through `sireg5`, write 0 to `sireg` before writing `sireg2` or `sireg3`, and then write the final `sireg` value, following the Sdtrig sequence for writing a trigger; `sireg6` is illegal for this access. When HS-mode manages VS-mode or VU-mode contexts and external debug is disallowed for S/HS-mode (`mdbgen`=0 and `SEDBGEN`=0), save and restore their trigger context, including `DMODE`=1 triggers within the VS view, as specified in Section 4.3.3.
5. When Sstcfg is implemented and the hart is not in Debug Mode, skip a trigger index if `sireg` through `sireg4` all read as zero. The slot is reserved by Debug Mode (`DMODE`=1) or is otherwise unavailable. An S/HS-mode external debugger programs `DMODE`=1 and `ACTION`=1 through the same interface from Debug Mode; see Section 4.3.2. A `DMODE`=1 slot in the S/HS view is not reclaimed through `sireg*`; request M-

mode assistance as in Smmedbgsec.

6. When Sutcfg is implemented, set `sstateen0`.TR when prepared to delegate trigger access to U-mode, and save and restore U-mode trigger context. When external debug is disallowed for S/HS-mode, this includes `DMODE`=1 triggers within the U view, as specified in Section 6.2.2.

B.3. VS-mode Management

VS-mode software is responsible for managing the debug/trace security policy for applications in VU-mode:

1. Call S/HS-mode to apply the debug/trace security policy before launching an application.
2. Save and restore debug/trace security policies when switching between applications.
3. When Sstcfg is implemented and the hart is not in Debug Mode, skip a trigger index if `vsireg` through `vsireg4` all read as zero. The slot is reserved by Debug Mode (`DMODE`=1) or is otherwise unavailable. A VS-mode external debugger programs `DMODE`=1 and `ACTION`=1 through `vsiselect`/`vsireg*` from Debug Mode; see Section 4.3.2. VS-mode has no management access through `vsireg*`, so a `DMODE`=1 slot is not reclaimed by VS-mode through `vsireg*`; HS-mode manages VS/VU trigger state as specified in Section 4.3.3.
4. When Sutcfg is implemented and `hstateen0`.TR=1, set virtual `sstateen0`.TR when prepared to delegate trigger access to VU-mode, and save and restore the trigger selection index (through `sireg5`, which VS-mode accesses as `vsireg5`) around delegated VU-mode accesses.
5. When Sutcfg is implemented, `hstateen0`.TR=1, and external debug is disallowed for VS-mode (`mdbgen`=0, `SEDBGEN`=0, and `VSEDBGEN`=0), save and restore VU-mode trigger context, including `DMODE`=1 triggers within the VU view, through `uiselect`/`uireg*` when switching between VU-mode applications, as specified in Section 6.2.2.

B.4. U-mode and VU-mode Management

When Sutcfg is implemented and the applicable TR bits permit access, VS-mode, U-mode, and VU-mode software can access delegated trigger state through `uiselect`/`uireg*`. VS-mode, U-mode, and VU-mode software should save and restore visible trigger context (typically `DMODE`=0) when switching application contexts that use delegated triggers. When the hart is not in Debug Mode, skip a trigger index if `uireg` through `uireg4` all read as zero; the slot is reserved by Debug Mode (`DMODE`=1) or is otherwise unavailable. A U-mode or VU-mode external debugger programs `DMODE`=1 and `ACTION`=1 through the same interface from Debug Mode; see Section 6.2.2. A `DMODE`=1 slot is not reclaimed by U-mode or VU-mode software. When external debug is disallowed for the managing mode, S/HS-mode can manage U-mode trigger state and VS-mode can manage VU-mode trigger state as specified in Section 6.2.2, and HS-mode can manage VU-mode trigger state as specified in Section 4.3.3.

Appendix C: Execution-Based Implementation with Sdsec

In an execution-based implementation, the code executing the "park loop" can always run with M-mode privilege to access memory and CSRs. However, once execution is dispatched to an Abstract Command or the Program Buffer, the privilege level used to access memory and CSRs should be restricted to the debug access privilege.

To achieve this, a Debug-Mode-only state element (e.g., a field in a custom CSR) may be introduced to control the privilege level in Debug Mode. When the state is set to 1, Debug Mode allows M-mode privilege; when cleared to 0, it enforces the debug access privilege. The hardware sets this state to 1 upon entering the park loop and clears it to 0 with the final instruction of the park loop, immediately before execution is transferred to an Abstract Command or the Program Buffer.

Bibliography

[1] “RISC-V Debug Specification.” [Online]. Available: github.com/riscv/riscv-debug-spec.

[2] “RISC-V Efficient Trace for RISC-V.” [Online]. Available: github.com/riscv-non-isa/riscv-trace-spec.

[3] “RISC-V N-Trace (Nexus-based Trace) Specification.” [Online]. Available: github.com/riscv-non-isa/riscv-nexus-trace.

[4] “RISC-V Hart-Trace Interface (RHTI).” [Online]. Available: github.com/riscv-non-isa/riscv-hart-trace-interface.

[5] “Smcsrind/Sscsrind Indirect CSR Access, Version 1.0.” [Online]. Available: docs.riscv.org/reference/isa/priv/indirect-csr.html.

[6] “Smstateen/Ssstateen Extensions, Version 1.0.” [Online]. Available: docs.riscv.org/reference/isa/priv/smstateen.html.

[7] “RISC-V IOPMP Architecture Specification.” [Online]. Available: github.com/riscv-non-isa/riscv-iopmp.

[8] “RISC-V Worlds.” [Online]. Available: github.com/riscv/riscv-worlds.