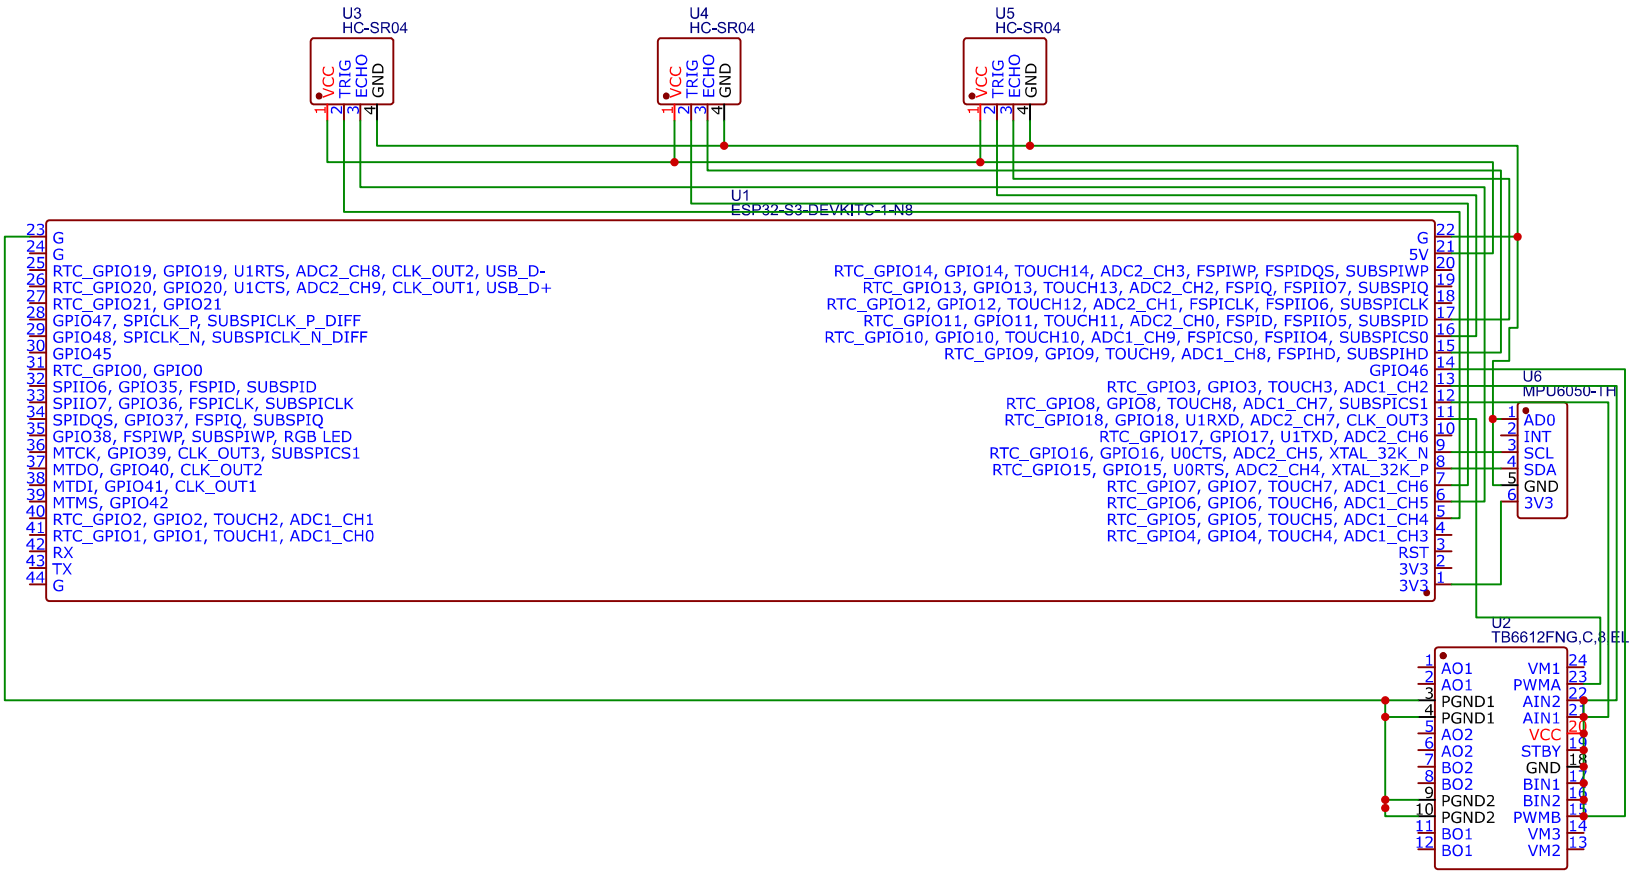

U3
HC-SR04
VCC
TRIG
ECHO
GND
U4
HC-SR04
VCC
TRIG
ECHO
GND
U5
HC-SR04
VCC
TRIG
ECHO
GND
U1
ESP32-S3-DEVKITC-1-N8
G
G
RTC_GPIO19, GPIO19, U1RTS, ADC2_CH8, CLK_OUT2, USB_D-
RTC_GPIO20, GPIO20, U1CTS, ADC2_CH9, CLK_OUT1, USB_D+
RTC_GPIO21, GPIO21
GPIO47, SPICLK_P, SUBSPICLK_P_DIFF
GPIO48, SPICLK_N, SUBSPICLK_N_DIFF
GPIO45
RTC_GPIO0, GPIO0
SPIIO6, GPIO35, FSPID, SUBSPID
SPIIO7, GPIO36, FSPICLK, SUBSPICLK
SPIDQS, GPIO37, FSPIQ, SUBSPIQ
GPIO38, FSPIWP, SUBSPIWP, RGB LED
MTCK, GPIO39, CLK_OUT3, SUBSPICS1
MTDO, GPIO40, CLK_OUT2
MTDI, GPIO41, CLK_OUT1
MTMS, GPIO42
RTC_GPIO2, GPIO2, TOUCH2, ADC1_CH1
RTC_GPIO1, GPIO1, TOUCH1, ADC1_CH0
RX
TX
G
G
5V
RTC_GPIO14, GPIO14, TOUCH14, ADC2_CH3, FSPIWP, FSPIDQS, SUBSPIWP
RTC_GPIO13, GPIO13, TOUCH13, ADC2_CH2, FSPIQ, FSPIIO7, SUBSPIQ
RTC_GPIO12, GPIO12, TOUCH12, ADC2_CH1, FSPICLK, FSPIIO6, SUBSPICLK
RTC_GPIO11, GPIO11, TOUCH11, ADC2_CH0, FSPID, FSPIIO5, SUBSPID
RTC_GPIO10, GPIO10, TOUCH10, ADC1_CH9, FSPICS0, FSPIIO4, SUBSPICS0
RTC_GPIO9, GPIO9, TOUCH9, ADC1_CH8, FSPIHD, SUBSPIHD
GPIO46
RTC_GPIO3, GPIO3, TOUCH3, ADC1_CH2
RTC_GPIO8, GPIO8, TOUCH8, ADC1_CH7, SUBSPICS1
RTC_GPIO18, GPIO18, U1RXD, ADC2_CH7, CLK_OUT3
RTC_GPIO17, GPIO17, U1TXD, ADC2_CH6
RTC_GPIO16, GPIO16, U0CTS, ADC2_CH5, XTAL_32K_N
RTC_GPIO15, GPIO15, U0RTS, ADC2_CH4, XTAL_32K_P
RTC_GPIO7, GPIO7, TOUCH7, ADC1_CH6
RTC_GPIO6, GPIO6, TOUCH6, ADC1_CH5
RTC_GPIO5, GPIO5, TOUCH5, ADC1_CH4
RTC_GPIO4, GPIO4, TOUCH4, ADC1_CH3
RST
3V3
3V3
U6
MPU6050-TH
AD0
INT
SCL
SDA
GND
3V3
U2
TB6612FNG,C,8 EL
AO1
AO1
PGND1
PGND1
AO2
AO2
BO2
BO2
PGND2
PGND2
BO1
BO1
VM1
PWMA
AIN2
AIN1
VCC
STBY
GND
BIN1
BIN2
PWMB
VM3
VM2