
WIRING DIAGRAM

Cooper, Cooper 'S', Countryman, Traveller, and Super De-luxe (1964 to 1967)

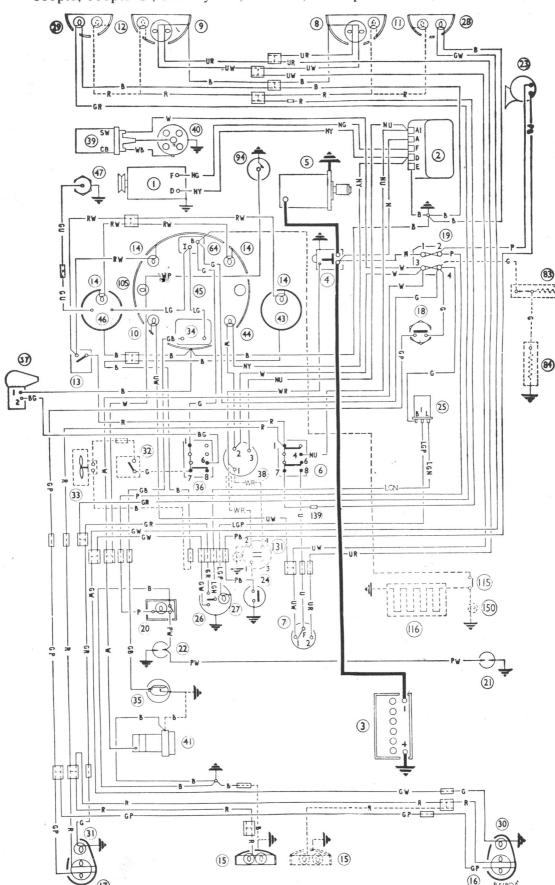

KEY TO WIRING DIAGRAM

No.	Description	No.	Description
1.	Dynamo.	30.	R.H. rear flasher lamp.
2.	Control box.	31.	L.H. rear flasher lamp.
3.	12-volt battery.	32.	Heater switch \ when
4.	Starter solenoid.	33.	Heater motor \int fitted.
5.	Starter motor.	34.	Fuel gauge.
6.	Lighting switch.	35.	Fuel gauge tank unit.
7.	Headlamp dip switch.	36.	Windscreen wiper switch.
8.	R.H. headlamp.	37.	Windscreen wiper motor.
9.	L.H. headlamp.	38.	Ignition/starter switch.
10.	Main-beam warning lamp.	39.	Ignition coil.
11.	R.H. sidelamp (in headlamp or	40.	Distributor.
12	flasher) lamp. L.H. sidelamp (in headlamp or	41.	Fuel pump.
12.	flasher) lamp.	42.	Oil pressure switch.
13.	Panel lamps switch.	43.	Oil pressure warning lamp.
14.	Panel lamps.	44.	Ignition warning lamp.
15.	Number-plate lamp (two for Countryman and Traveller).	45.	Speedometer.
16.	R.H. stop and tail lamp.	46.	Temperature gauge.
17.	L.H. stop and tail lamp.	47.	Temperature gauge transmitter.
18.	Stop lamp switch.	64.	Bi-metal instrument voltage stabilizer.
19.	Fuse unit: 1-2, 35 amp.; 3-4, 35 amp.	83.	Induction heater and thermostat (when fitted).
20.	Interior light.	84.	Suction chamber heater (when fitted).
21.	R.H. door switch.	94.	Oil filter switch.
22.	L.H. door switch.	105.	Oil filter warning lamp.
23.	Horn.	115.	Rear window demister switch (when fitted).
24.	Horn-push.	116.	Rear window demister unit (when
25.	Flasher unit.	121	fitted).
26.	Direction indicator switch.	131.	Combined reverse switch/automatic gearbox switch (when fitted).
27.	Direction indicator warning lamp.	139.	Connect to No. 6 for U.S.A. (alternative connection).
28.	R.H. front flasher lamp.	150.	Rear window demister warning light
29.	L.H. front flasher lamp.	130.	(when fitted).

CABLE COLOUR CODE

B. Black. G. Green. W. U. Blue. P. Purple. Y. N. Brown. R. Red. L.G

W. White.Y. Yellow.L.G. Light Green.