
## WIRING DIAGRAM

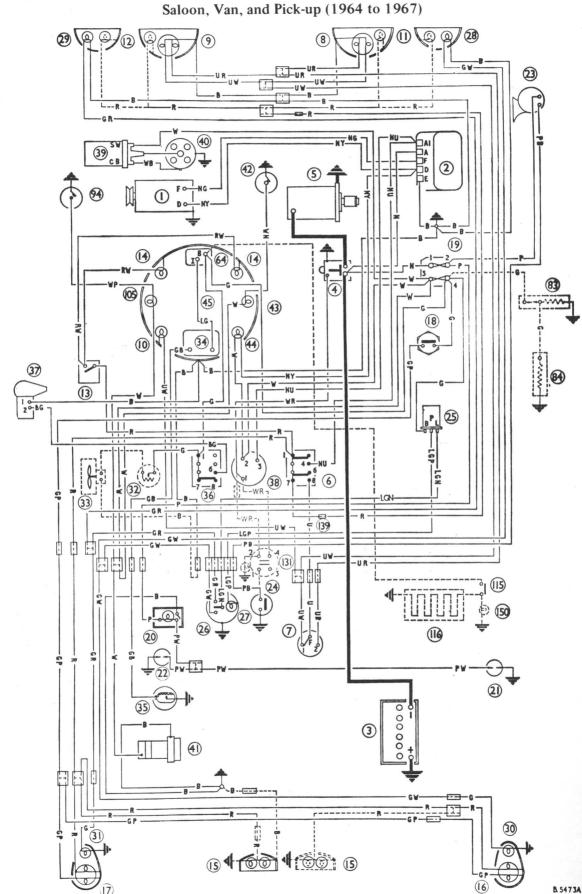

## **KEY TO WIRING DIAGRAM**

No.	Description	No.	Description
1.	Dynamo.	29.	L.H. front flasher lamp.
2.	Control box.	30.	R.H. rear flasher lamp.
3.	12-volt battery.	31.	L.H. rear flasher lamp.
4.	Starter solenoid.	32.	Heater switch when
5.	Starter motor.	33.	Heater motor fitted.
6.	Lighting switch.	34.	Fuel gauge.
7.	Headlamp dip switch.	35.	Fuel gauge tank unit.
8.	R.H. headlamp.	36.	Windscreen wiper switch.
9.	L.H. headlamp.	37.	Windscreen wiper motor.
10.	Main-beam warning lamp.	38.	Ignition/starter switch.
11.	R.H. sidelamp (in headlamp or	39.	Ignition coil.
10	flasher) lamp.	40.	Distributor.
12.	L.H. sidelamp (in headlamp or flasher) lamp.	41.	Fuel pump.
13.	Panel lamps switch	42.	Oil pressure switch.
14.	Panel lamps.	43.	Oil pressure warning lamp.
15.	Number-plate lamp (two for Van).	44.	Ignition warning lamp.
16.	R.H. stop and tail lamp.	45.	Speedometer.
17.	L.H. stop and tail lamp.	64.	Bi-metal instrument voltage stabilizer.
18.	Stop lamp switch.	83.	Induction heater and thermostat (when fitted).
19.	Fuse unit: 1-2, 35 amp.; 3-4, 35 amp.	84.	Suction chamber heater (when fitted).
20.	Interior light.	94.	Oil filter switch.
21.	R.H. door switch.	105.	Oil filter warning lamp.
<ul><li>22.</li><li>23.</li></ul>	L.H. door switch.  Horn.	115.	Rear window demister switch (when fitted).
24.	Horn-push.	116.	Rear window demister unit (when
25.	Flasher unit.		fitted).
26.	Direction indicator switch.	131.	Combined reverse switch/automatic gearbox switch (when fitted).
27.	Direction indicator warning lamp.	139.	139. Connect to No. 6 for U.S.A. (alternative connection).
28.	R.H. front flasher lamp.	150.	Rear window demister warning light (when fitted).

## CABLE COLOUR CODE

B. Black,
U. Blue,
N. Brown,
R. Red.
W. White.
Y. Yellow.
L.G Light Green.

When a cable has two colour code letters the first denotes the main colour and the second denotes the tracer colour.