
2001,2002,2003,2003T

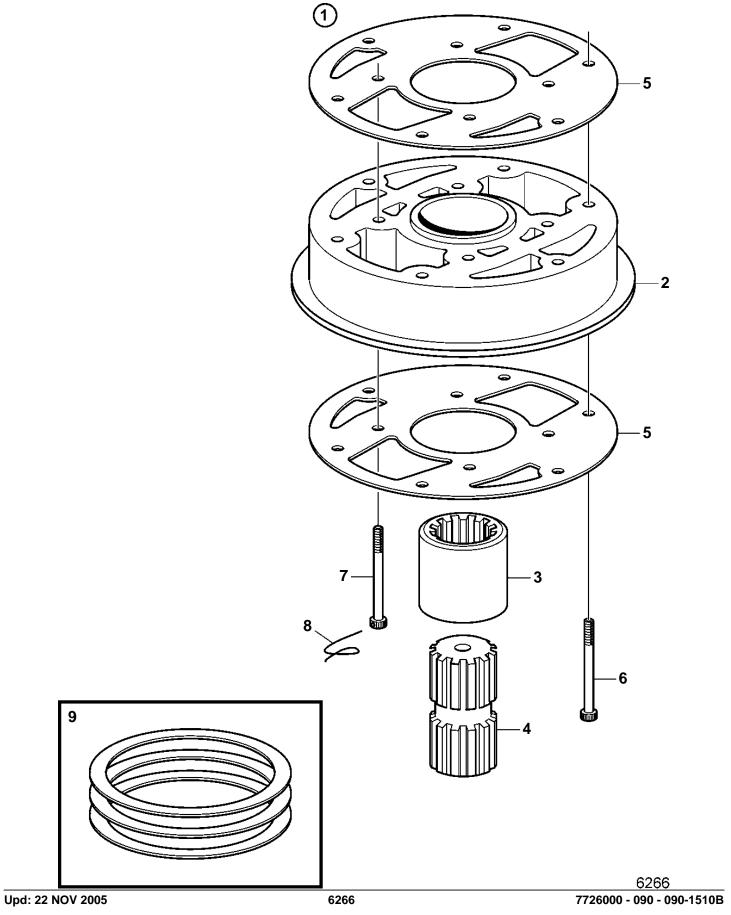

Upd: 22 NOV 2005

2001,2002,2003,2003T

7726000 - 090 - 090-1510B

1	REF	PART NO.	QTY	DESCRIPTION	NOTES
2 1 SPACER 3 852442 1 Splined sleeve 4 852444 1 Extension shaft 5 853892 2 Gasket 6 967688 4 Screw 851859 4 Screw 7 967689 2 Screw 8 852669 1 Locking wire 9 948298 X Adjusting washer 9 748299 X Adjusting washer 7 748299 748299 748299 748299 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8 749251 749251 749251 8<					
3 852442 1 Splined sleeve 4 852444 1 Extension shaft 5 853892 2 Gasket 6 967688 4 Screw 851859 4 Screw 7 967689 2 Screw 8 852669 1 Locking wire 9 948298 X Adjusting washer TH = 0,10 MM 948299 X Adjusting washer TH = 0,15 MM	1	854172	1	Extension kit	(851857) L = 102 M
4 852444 1 Extension shaft 5 853892 2 Gasket (851996) 6 967688 4 Screw L = 140 MM 851859 4 Screw L = 140 MM 7 967689 2 Screw L = 160 MM 8 852669 1 Locking wire TH = 0,10 MM 9 948298 X Adjusting washer TH = 0,15 MM 948299 X Adjusting washer TH = 0,15 MM	2	0.50.1.10	1	· SPACER	
5 853892 2 - Gasket (851996) 6 967688 4 - Screw L = 140 MM 851859 4 - Screw L = 140 MM 7 967689 2 - Screw L = 160 MM 8 852669 1 - Locking wire TH = 0,10 MM 9 948298 X - Adjusting washer TH = 0,10 MM 948299 X - Adjusting washer TH = 0,15 MM	3	852442	1	Splined sleeve	
5 853892 2 - Gasket (851996) 6 967688 4 - Screw L = 140 MM 851859 4 - Screw L = 140 MM 7 967689 2 - Screw L = 160 MM 8 852669 1 - Locking wire TH = 0,10 MM 9 948298 X - Adjusting washer TH = 0,10 MM 948299 X - Adjusting washer TH = 0,15 MM	1	952444	1	- Extension shaft	
6 967688 4 · Screw L = 140 MM 851859 4 · Screw L = 140 MM 7 967689 2 · Screw L = 160 MM 8 852669 1 · Locking wire 9 948298 X · Adjusting washer TH = 0,10 MM 948299 X · Adjusting washer TH = 0,15 MM		853802	2	- Cacket	(851006)
851859 4 Screw L = 140 MM 7 967689 2 Screw L = 160 MM 8 852669 1 Locking wire TH = 0,10 MM 9 948298 X Adjusting washer TH = 0,10 MM 948299 X Adjusting washer TH = 0,15 MM		033092		- Gasket	(651990)
851859 4 Screw L = 140 MM 7 967689 2 Screw L = 160 MM 8 852669 1 Locking wire TH = 0,10 MM 9 948298 X Adjusting washer TH = 0,10 MM 948299 X Adjusting washer TH = 0,15 MM					
851859 4 Screw L = 140 MM 7 967689 2 Screw L = 160 MM 8 852669 1 Locking wire TH = 0,10 MM 9 948298 X Adjusting washer TH = 0,10 MM 948299 X Adjusting washer TH = 0,15 MM	6	967688	4	· Screw	L = 140 MM
7 967689 2 · Screw L = 160 MM 8 852669 1 · Locking wire 9 948298 X · Adjusting washer TH = 0,10 MM 948299 X · Adjusting washer TH = 0,15 MM		851859	4	· Screw	
8 852669 1 - Locking wire 9 948298 X - Adjusting washer TH = 0,10 MM 948299 X - Adjusting washer TH = 0,15 MM					
9 948298 X Adjusting washer TH = 0,10 MM 948299 X Adjusting washer TH = 0,15 MM	7	967689	2	· Screw	L = 160 MM
948299 X · Adjusting washer TH = 0,15 MM	8	852669	1	Locking wire	
948300 X - Adjusting washer TH = 0,35 MM TH = 0,35 MM	9	948298	X	Adjusting washer	TH = 0,10 MM
948300 X • Agjusting wasner IH = 0,35 MM		948299	X	Adjusting washer	IH = 0,15 MM
		948300	X	Adjusting wasner	1H = 0,35 MM

6266