
2001

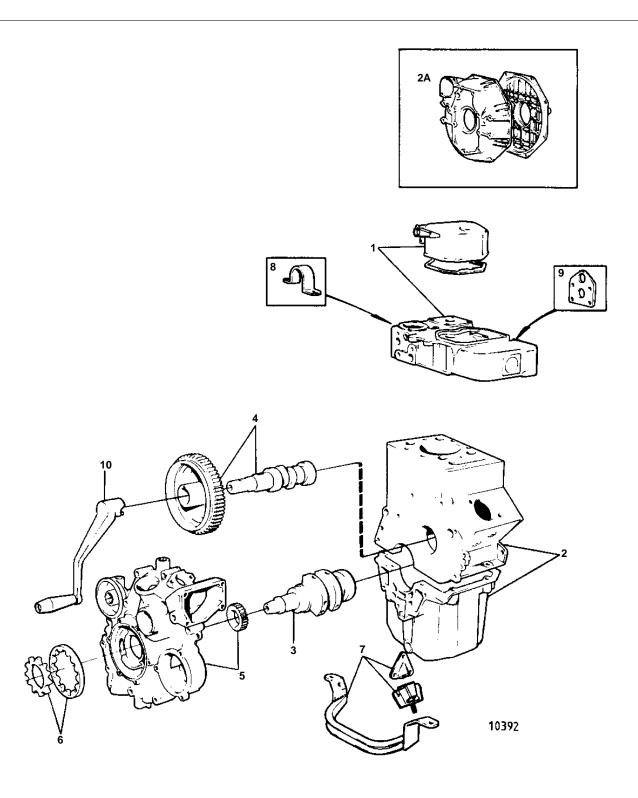

Upd: 22 NOV 2005

2001

| REF | QTY | DESCRIPTION | SEE SEC. | NOTES |
|-----|-----|-----------------------------------|----------|-------------|
| 1 | | CYLINDER HEAD | 02A-4000 | HOILO |
| 2 | 1 | CYLINDER BLOCK | 02A-5000 | |
| 2A | 1 | FLYWHEEL COVER | 02A-5800 | |
| 3 | | CRANKSHAFT AND RELATED PARTS | 02A-5600 | |
| 3 | | CICANICOTIAL LAND ICELATED LAICTS | 02A-0000 | |
| 4 | 1 | CAMSHAFT AND VALVE MECHANISM | 02A-7000 | |
| - | | CAMOLIAL LAND VALVE MEGLIANION | 02A-7000 | |
| 5 | 1 | TIMING GEAR COVER AND GEARS | 02A-8000 | |
| 5 | ı. | TIIVIING GEAR COVER AND GEARS | 02A-0000 | |
| 6 | 4 | LUBRICATING SYSTEM | 024 9500 | |
| | | | 02A-8500 | |
| 7 | 1 | ENGINE MOUNTS | 02A-9000 | OFF OBOUR |
| 8 | 1 | LIFT IRON | | SEE GROUP 2 |
| 9 | 1 | LIFT IRON | | SEE GROUP 2 |
| 10 | 1 | STARTING CRANK | | SEE GROUP 9 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

Upd: 22 NOV 2005