



WT11A4600LL  
WT11A4600RR  
WT11A4260GD  
WT95A4260GD  
WT90C4260GG  
WT10C4260GG

# Washing Machine

## user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

[www.samsung.com/in](http://www.samsung.com/in)

**SAMSUNG**



## contents

Before operating the unit, please read this manual thoroughly, and retain for future reference.

<b>FEATURES . . . . .</b>	<b>2</b>
<b>SAFETY INSTRUCTIONS . . . . .</b>	<b>2</b>
Cautions . . . . .	2
Precautions when operating . . . . .	3
<b>DESCRIPTION OF PARTS . . . . .</b>	<b>4</b>
<b>CONTROL PANEL . . . . .</b>	<b>5</b>
<b>INSTALLATION . . . . .</b>	<b>6</b>
Environment . . . . .	6
Connecting the drain hose . . . . .	6
Connecting the inlet hose . . . . .	6
<b>CLEANING THE MACHINE . . . . .</b>	<b>6</b>
Cleaning the magic filter . . . . .	6
Cleaning the wash tub . . . . .	6
<b>WASHING PROCEDURE . . . . .</b>	<b>6</b>
Washing . . . . .	6
Spinning dry . . . . .	7
Rinsing . . . . .	7
Overflow rinse . . . . .	8
Additional rinse . . . . .	8
<b>LAUNDRY GUIDE . . . . .</b>	<b>8</b>
<b>MAINTENANCE . . . . .</b>	<b>9</b>
<b>TROUBLESHOOTING . . . . .</b>	<b>9</b>
<b>SPECIFICATIONS . . . . .</b>	<b>10</b>

## Instructions about the WEEE

**Correct Disposal of This Product  
(Waste Electrical & Electronic Equipment)**  
(Applicable in countries with separate collection systems)



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For more information on safe disposal and recycling, visit our website [www.samsung.com](http://www.samsung.com) or contact our Helpline numbers on the last page.

## features

### • Air Turbo Drying System

- Air Turbo technology spins hard and fast so you can spend less time drying.
- Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavyjeans, bulky sweaters, and thick blankets are dried more rapidly.
- Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

### • Transparent Window (option)

- This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation. While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

### • Hexa storm Pulsator

- Hexa storm pulsator results effective washing performance with fabric care.
- The 6 blades creates multi-directional water flow and 3 rollers and 2 side boards have a series of ridges which give a scrub wash effect with less fabric damage

### • Magic Filter

- This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

### • Magic Mixer

- You dont need to manual stir the harsh detergent with hand. With Magic mixer, just put water and detergent and set a magic mixer on the panel. Samsung hexa storm generates strong water current and mixing the detergent into water thoroughly


## safety instructions

- Must follow the cautions and precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

### cautions

#### • Be sure that the washing machine is grounded.

To avoid electrical shock, use a metal pipe for the ground connection. But, don't ground the washing machine with gas pipes or telephone lines to avoid to dangers of explosion or lightning strike.

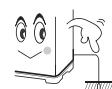

#### • Do not put your hands into the spin dryer basket when it is spinning.

Your fingers can be caught by spinning laundry and damaged.



- **Never allow children to operate or play with the washing machine.**

Children playing with the washing machine may accidentally fall into the washing tub.



- **Do not climb up the Washing Machine or lids (Wash and Spin Lid)**

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washing machine.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**

## **⚠️ precautions when operating**

- **Don't use excessively hot water. (50°C or more)**

Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.



Do not connect to the hot water supply.

- **Before washing, check all pockets.**

If nails or pins remain in pockets, they may damage the washing machine or clothes.

- **Close the water tap a little if the water pressure is too high.**

- **To avoid water splashes, close the wash tub lid.**

- **Never splash water on the control panel.**

Take out personal belongings from pockets.



Check the pockets! Hairpins and coins cause damages to clothes and washing machine.




They make noise and problems to the machine. Must check the pocket.




Do not put clothes with such substances in the tub like keys, pins, nails, sharp items, coins. Kindly ensure that all metallic buckles / zippers / hooks must be turned inside.

- **Be sure to cover with the inner cover on laundry before spinning.**

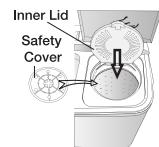


This prevents laundry from being tossed out and damaged.

- **Be sure lay the drain hose(A) down.**

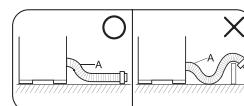

- **Don't pull off the Knobs. Knobs can't take off from outside of the Panel.**
- **Do not pour castic soda & bleach over the washing machine. It causes damages to rubber parts.**
- **Do not expose the washing machine to direct sunlight or rain.**


## description of parts

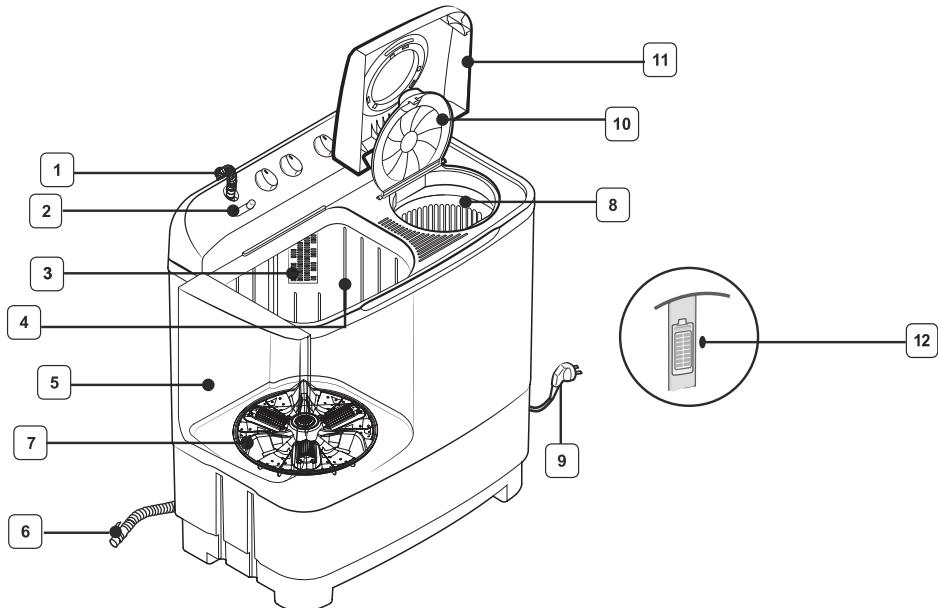


- |    |  |
|----|--|
| 1  | <b>INLET HOSE</b>  |
| 2  | <b>WASH/SPIN INLET SELECTOR</b>  |
| 3  | <b>PLASTIC FILTER</b>  |
| 4  | <b>TWIN TUB</b>  |
| 5  | <b>WASH LID</b><br>Be sure to keep the lid closed during washing and spinning.   |
| 6  | <b>DRAIN HOSE</b>  |
| 7  | <b>PULSATOR</b>  |
| 8  | <b>SPIN TUB</b>  |
| 9  | <b>POWER CORD</b><br>The plug's shape may not correspond with this drawing.  |
| 10 | <b>INNER LID</b>   |
| 11 | <b>SPIN LID</b><br>When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system. |
| 12 | <b>MAGIC FILTER</b><br>Lint will be collected in the filter during washing   |

# control panel


WT11A4600LL / WT11A4600RR

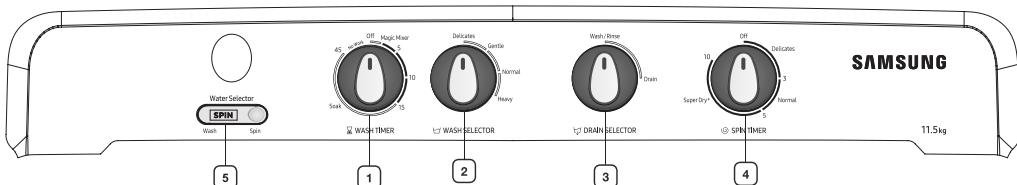


WT11A4260GD

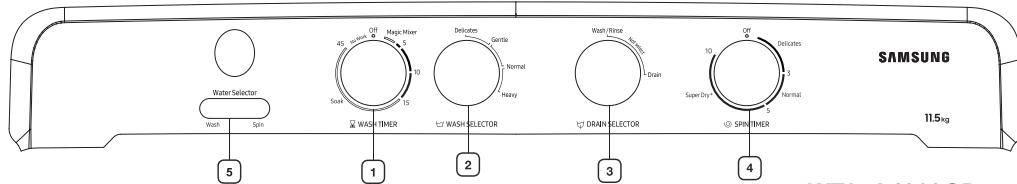


WT95A4260GD

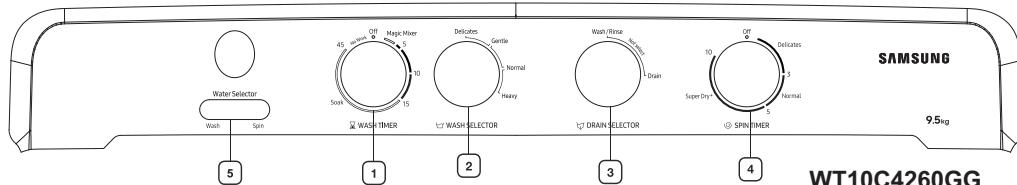

WT10C4260GG

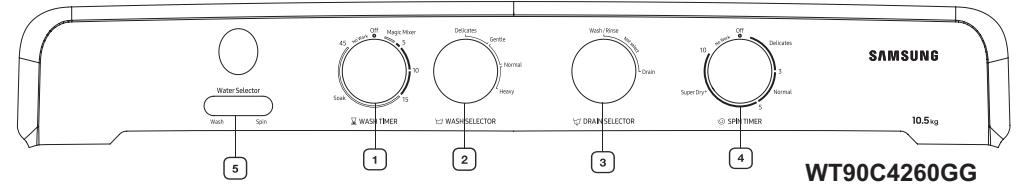

WT90C4260GG

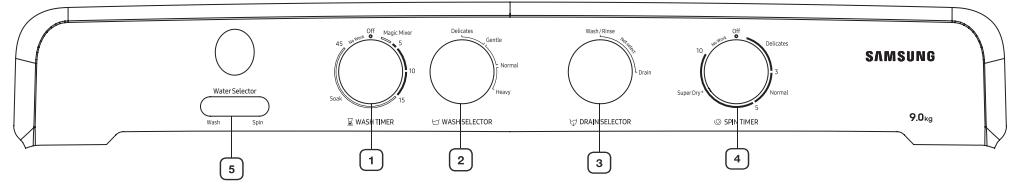

<b>1</b>	<b>WASH TIMER</b>	This is used to set the wash time, 1-45 minutes.
<b>2</b>	<b>WASH SELECTOR</b>	This is used to select wash action.
<b>3</b>	<b>DRAIN SELECTOR</b>	This is used to select the Washing / draining.
<b>4</b>	<b>SPIN TIMER</b>	This is used to set the spin time, 1-10 minutes
<b>5</b>	<b>WATER SELECTOR</b>	This is used to direct water supply to wash tub for washing or spin tub for spin shower.


## installation

### Environment

- **Leave some space.**  
Space at least 15 cm between the washing machine and the wall.
- **Place the washing machine on a sturdy flat surface.**  
If the washing machine is placed on an uneven or weak surface, noise or vibration may be occurred.  
(Allowable is 2°)
- **How to move the Machine**  
Casters are provided for easy translocation of machine. Hold the machine properly as shown in fig. Be Careful that the machine should not be dropped. Machine should not be move when loaded.
- **Never install the washing machine near water.**  
Do not place the washing machine in steamy rooms or where the washing machine is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.
- **Avoid direct sunlight or heating devices.**  
As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers,etc. Do not place under direct sunlight.




### Connecting the drain hose

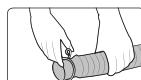


General type

1. Press and hold down the joint ring, and insert it into the drain hose
2. Insert the drain hose into the drain outlet. Make sure to connect them firmly using the joint ring.

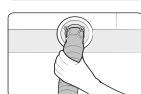


- Push it with force further to the bottom of the drain outlet
- Check the drain hose for not getting apart from the outlet by drawing it.

### Connecting the inlet hose

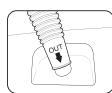

(Insert the inlet hose into washing machine)

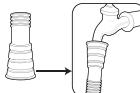

(Insert the inlet hose into faucet)

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

## cleaning the machine

### Cleaning the Magic filter

Clean the filter net often to keep the washing machine clean.

1. Push the upper part of the Magic filter and pull in.



2. Open the cover as shown in the figure.



3. Clean the Magic filter.



4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.




### Cleaning the wash tub

1. Wipe off stains on the cabinet and operation panel with soft cloth.
2. Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.
3. When cleaning don't spray water directly to the parts of the washer. It may make its life span shorter. Also an electric shock or fire may take place.


## washing procedure

### Washing


1. Before starting washing, check the following;
  - Connect the water inlet hose and open the water tap.
  - Connect the power cord to the power supply outlet.
  - Lay the drain hose(A) down toward a sinkhole.

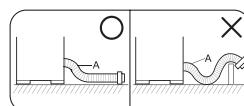

2. Set the WASH SELECTOR KNOB to the desired mode.

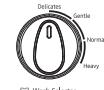

3. Set the DRAIN SELECTOR KNOB to 'WASH'.

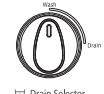

4. Set the LEVEL WATER SELECTOR to WASH



5. Load laundry in the wash tub.



6. Fill water in the wash tub and add the detergent.



7. Set the WASH TIMER.



Set the Wash Timer 1~45 min.

(Set the Wash Timer to a point between 15 to 45 mins for soak function).

#### SOAK FUNCTION(option)


If the WASH TIMER is set to a point between "15" to "45", the washing machine starts the wash (15 min), after the soak (30.0 min) is completed. The Soak function (30.0 min) repeats the cycle that is 1.5~2.0 min on washing.

8. After washing, set the DRAIN SELECTOR KNOB to 'DRAIN' for drain.




## Spinning dry

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

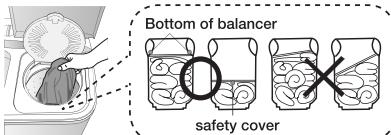

2. Be sure to attach the safety cover and close the inner lid.

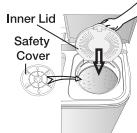


3. Close the spin dryer lid.



4. Set the SPIN DRYER TIMER 1-10 minutes.

1-10 min Spin Dry Timer

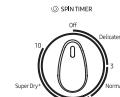

5. Incomplete spinning.(Severe vibration or unbalance) See "When you load ..." on page 9.

## Rinsing

1. Set the DRAIN SELECTOR KNOB to 'WASH'



2. Supply the proper amount of water as not to overflow the top of the washing tub.

3. Set the WASH TIMER 2~3 minutes.



4. Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.



5. Repeat this cycle until drain water is clean. (2~3 cycles)

6. Be sure lay the drain hose down.

\*Note - During Spin Shower, if water comes to wash tub, then reduce the water pressure.

## Over flow rinse


### 1. Keep supplying water.

 Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.

### 2. Set the WASH TIMER 6~8 minutes.



### 3. As soon as the WASH TIMER shuts off, turn off the water tap.

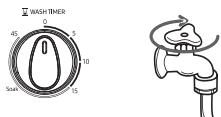

### 4. Set the DRAIN SELECTOR KNOB to 'DRAIN'.




## Additional rinse

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)


### 1. Load the laundry evenly into the spin basket.



### 2. Set the LEVER WATER SELCTOR to SPIN(a) and DRAIN SELECTOR KNOB to 'DRAIN(b)'.

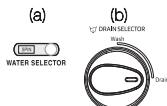

### 3. Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub.

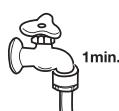


### 4. After stopping water supply, cover the laundry with safety cover and close the inner lid.



### 5. Close the spin dryer lid.



### 6. Set the SPIN DRY TIMER 2~3 minutes.

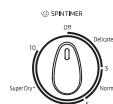

## laundry guide

### Washing time

Kinds of clothing	Washing time	Washing Selection
Extremely soiled heavy fabric	10 to 15 minutes	HEAVY
Linen,cotton,etc.	8 to 10 minutes	
Ordinary clothes (underwear,etc)	7 minutes	
Slightly soiled synthetic fiber	2 to 5 minutes	NORMAL/GENTLE
100% wool,mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5 minutes	

### Detergent

#### 9.0Kg, 9.5Kg, 10.5Kg & 11.5Kg Capacity

Amount of detergent	Water level
69 g	Low (61 ℥)
86.5 g	Medium (78 ℥)
105 g	High (94 ℥)

The amount of detergent is average.

Follow the instruction detergent printed on the package for amount of detergent.

Choose the amount of detergent depending on the fabric type.

### Spin dry time

Type of laundry	Time
Thin (synthetic fiber)	1 min.
Wool	1~2 min.
Cotton	3~5 min.
Thick (cotton)	10 min. (Air Turbo)

## maintenance


### WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

Bottom of balancer





Safety cover

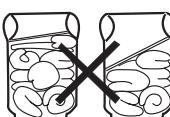

## troubleshooting

TROUBLE	CHECK POINT
The washing machine does not work.	Check that the power cord is connected to a power outlet well. Power stoppage?
Clothes does not move freely.	Is the laundry overloaded?
Incomplete spinning. (Severe vibration or unbalance.)	Are the laundry arranged evenly? ⇒ See "When you load..." on page 9.
Water does not drain.	Be sure lay the drain hose down. ⇒ See page 3.
The spin dryer basket does not run.	Is the spin dryer lid closed completely? Are laundry (socks,etc.) falling out of the spin dryer basket and clinging to the axle? ⇒ See "To pick out the clothing...." on page 9.
The water drains out immediately.	Is the Drain Selector set to drain? Is the drain hose clogged with scrap? ⇒ Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again. (Scrub will be removed by water drain pressure.)
Pulsator not moving.	<ul style="list-style-type: none"><li>Although the machine may stay still, maximum 5 minutes.</li><li>If the WASH TIMER indicates in excess of 15 minutes. It is just in the process of soaking and not a breakdown.</li><li>Check the knob position. It should not be in 'No Work' zone.</li></ul>
Spin Basket not moving	<ul style="list-style-type: none"><li>Check the knob position. It should not be in 'No Work' zone.</li></ul>

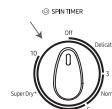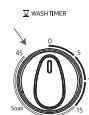

## specifications

---

	MODEL	WASH
CAPACITY	WT11A4600LL	11.5 Kg
	WT11A4600RR	
	WT11A4260GD	
	WT95A4260GD	9.5 Kg
	WT90C4260GG	9.0 Kg
	WT10C4260GG	10.5 Kg
DIMENSIONS (W x D x H)mm	915(W) x 560(D) x 1045(H)	10.5Kg & 11.5 Kg
	915(W) x 560(D) x 1015(H)	9.0Kg & 9.5 Kg
WATER PRESSURE	0.05~0.3 MPa 0.5 ~ 3.0 kg·f/cm <sup>2</sup>	
WEIGHT	29.5 kg	10.5Kg & 11.5 Kg
	28 kg	9.0Kg & 9.5 Kg
STANDARD QUANTITY OF WATER	94 ℥	

\* The energy label specifications have been determined by using the following program according to IEC 60456.

This Program is “(For 11.5 Kg- WT11A4600LL / WT11A4600RR / WT11A4260GD Delicate Programme)”

**For 11.5 Kg:** Program is Wash 15min -> Rinse 15min -> Spin 10min -> Spin 10min.  
(Wash selector: Delicate, Water level: Maximum, Spin weight: Half+Half

This Program is “(For 9.5 kg - WT95A4260GD Delicate Programme)”

**For 9.5 Kg:** Program is Wash 15min -> Rinse 10min -> Spin 5min -> Spin 5min.  
(Wash selector: Delicate, Water level: Maximum, Spin weight: Half+Half

**This Program is “(For 9.0 Kg- WT90C4260GG/TL Delicate Programme)”**

**For 9.0Kg:** Program is Wash 15min -> Rinse 10min -> Spin 5min -> Spin 5min.  
(Wash selector: Delicate, Water level: Maximum, Spin weight: Half+Half

**This Program is “(For 10.5 Kg- WT10C4260GG/TL Delicate Programme)”**

**For 10.5Kg:** Program is Wash 15min -> Rinse 15min -> Spin 10min -> Spin 10min.  
(Wash selector: Delicate, Water level: Maximum, Spin weight: Half+Half

## **Terms of Warranty**

### **Warranty not applicable in any of the following cases**

1. The Complete warranty Card is not presented to the service engineer at the time of repairs being undertaken/ requested.
2. The Product is not purchased from an Authorized Samsung Sales Dealer.
3. The Product purchased is not used according to the instruction given in the INSTRUCTION MANUAL as determined by company personnel.
4. Defect Caused by improper use, as determined by the authorized service centers/ Company Personnel.
5. Modification or alterations of any nature mode in the circuitry by the Purchaser or unauthorized Personnel, as determined by Company personnel.
6. The Warranty is not applicable if the washing machine used for commercial purpose or Public places like Hotels, training centers and other similar applications.
7. The Original Serial number is removed, obliterated or altered from the Product.
8. Defect due to causes beyond control like lightening, abnormal voltage, acts of god or while in transit to service center or to the purchaser residence.
9. Correcting the installation for example leveling the product, adjustment of drain hose, Adjustment of Tap adopter.
10. Noise or Vibration that is considered as normal for example water drain sound, spin sound or warning beeps.
11. Removal of foreign objects/substances from machine, including the Drain Valve and inlet hose filter for example coin, Grit, safety pin, buttons, hooks, Dirt accumulation etc.
12. Replace fuse, correcting house wiring, house plumbing and defect or damage caused by household pets, rats, cockroaches or any other animals or insects.

For warranty conditions refer warranty card.

memo

---



This warranty card gives the key points related to warranty claim. for further details log on to [www.samsung.com/in/support](http://www.samsung.com/in/support).

## Warranty Card

\*TERMS & CONDITIONS

1. Proof of purchase is a pre-requisite to claim warranty.
2. The product should have been purchased from an authorised Samsung Sales Dealer in India.
3. Warranty can be claimed only if the repair was carried out by the Samsung authorised service center.
4. Carry-in service or In-Home service applicability depends on the product category and Samsung policy.
5. Free installation or demo of the product, if applicable, can be availed only once and within 6month from the date of purchase. In case of installation, any additional material required over and above the standard installation kit shall be on the chargeable basis.
6. In case of defective accessory, only the accessory will be repaired or replaced.
7. Cosmetic/ Aesthetic / Plastic / Glass Parts /Bulbs / Cable /Wiring / Piping/ Consumables are not covered under warranty.
8. The defective parts/ products which were replaced by Samsung under this warranty shall be the property of Samsung.
9. While carrying out repair, Samsung may use accessories or parts that are new or refurbished or reconditioned.
10. Samsung shall not be liable for any losses or consequential losses due to product failure or the installed software.
11. Samsung shall be free to decide on whether or not to provide a software update for its products.
12. Samsung shall not be responsible for any loss or misuse of data, personal information, setting, third party software during product usage or repair or software update.
13. Samsung shall not be liable for any loss, cost, expense, inconvenience or damage that may result from use inability to use the product. Under no circumstances shall Samsung be liable for any loss, cost, expense, inconvenience or damage exceeding the purchase price of the product.
14. Defects caused by customer negligence, tampering shall void the product warranty.
15. Any extended/addition warranty offered by Samsung has to be supported by relevant proofs.
16. Usage of power stabilizers of proper rating is necessary unless explicitly mentioned by Samsung on product literature/instruction booklet.
17. In case of defect arising out of installation done by party other than Samsung authorised party, the limited warranty will be applicable as per revised T&C as Samsung shall deem fit.
18. Regular upkeep, maintenance and cleaning of parts are necessary in certain products. Such periodic maintenance shall be on chargeable basis unless otherwise provided and not covered under warranty.
19. In the event of any unforeseen circumstances, and spares not being available Samsung's prevailing depreciation rules will be binding on the purchaser and same shall be considered as a commercial solution in lieu of repairs.
20. Defects arising out of the following are not covered under warranty like Mishandling/Misuse,Improper ventilation, Improper voltage, Use of external material, Normal wear and tear, Physical damage and / or electrical damage caused by physical impact.
21. Complaints related to playability, printability, compatibility with external accessories, software, file systems, third party applications, CODEs, signals, Networks& ISP bandwidth shall not be considered as defect in product and not covered under warranty.
22. This warranty covers only the defects in products arising out of manufacturing or faulty workmanship.
23. This warranty covers repair/replacement of parts.
24. Warranty period of parts & accessories may vary from product to product.
25. Maximum liability out of this warranty is limited to the product purchase value/MRP.
26. No warranty on certain parts/conditions/types of product failures.
27. Under certain conditions where warranty obligations cannot be met, depreciation will be applicable on the existing product.

### CUSTOMER DETAILS CUM WARRANTY CARD

Customer copy ( to be retained by customer):

Model No: \_\_\_\_\_  
Product Serial No: \_\_\_\_\_ Date of Purchase: \_\_\_\_\_  
Name: \_\_\_\_\_  
Address in Full: \_\_\_\_\_ Model No: \_\_\_\_\_  
Telephone No.: \_\_\_\_\_ Model No: \_\_\_\_\_  
Dealer Name & Address : \_\_\_\_\_

Customer's Signature & Date  
(I accept the Terms & Conditions of warranty)

Dealer 's Signature with rubber stamp

**The Warranty shall be null and void in any of the following cases, and in such cases Samsung may at its sole discretion repair the equipment on a chargeable basis. The decision of Samsung, whether a complaint falls in any of these categories or not shall be binding on the Purchaser.**

- The duly filled warranty card/proof of purchase is not presented to the service engineer at the time of repairs being undertaken / requested.
- The original serial number of the product is removed, altered or obliterated from the product.
- The product purchased is not used as per the rated power conditions or instructions mentioned in the INSTRUCTION MANUAL.
- The product is being used for commercial purpose OR if the product has been used excessively and beyond reasonable usage as permitted within the product instruction manual.
- Site (premises where the product is used/ kept) conditions that do not conform to the recommended operations of the product.
- Defects caused due to exposure to moisture/dampness/extreme thermal or environmental conditions or rapid changes in such of conditions/corrosions/oxidations/spilling of food/liquid/influence of Chemical substances.
- Defects due to causes beyond control like lightning, abnormal voltage, spikes, external sources (ex: cable/set top box connections), fire, water logging, natural calamities, commotion, riots, theft, anti-social action, acts of God or while in transit.
- Defects caused by household pets, rats, cockroaches, ants, pests, fungi or any other animal/birds/insects.
- Defects caused due to negligence/omission of the Purchaser on account of periodic maintenance(s)/periodic servicing as mentioned in the instruction manual of the product.
- Defects caused due to usage of third party material/non Samsung Authorized Consumables.
- Any modifications, including but not limited to, rooting attempts, reverse engineering, unlocking, jail-breaking etc. of the original firmware(s) or software(s) of the product.
- Repair due to misuse/third party repair attempts are not covered in warranty.
- Warranty does not cover repair due to external factors/mediums/data types.
- Warranty shall apply only if the product is used as per its usage specifications (ex: personal, commercial etc.)
- Warranty shall be void if product has failed under certain conditions/types (ex: water logging, misuse, etc.)

All disputes arising out of this warranty are subject to Delhi jurisdiction only.

**Warranty period commences from the date of purchase of the product unless specified otherwise.**

Product Group	Product Description	Warranty Period (Months)	Parts/Accessory Warranty (if applicable)
AC	Room/Split Air Conditioner/ Floor Standing Air Conditioners (F AC)	12	Compressor : 60 months (120 months for Digital Inverter Compressor)* Condenser : 60 months (12 months for Fin & Tube type)*
	Window Air Conditioner	12	60 Months on Compressor*
	Duct Type Air Conditioner	15*	
	Cassette Air Conditioner	15*	36 Months on Compressor*
	FJM	15*	
	Indoor DVM & Outdoor DVM	12**	12 Months on Compressor*
Ventilation	ERV	12**	
Dish Washer	Dish Washer	12	
Microwave	Microwave	12	120 Months on Ceramic Enamel Cavity*
Refrigerator	Refrigerator	12	Compressor : 60 months (240 months for Digital Inverter Compressor)*
Washing Machine	Semi Automatic	24	Wash Motor : 60 months on Semi Automatic Wash Motor *
	Rear control panel Top Loading Fully Automatic	24	AC Motor : 120 months * Digital Inverter Motor : 240 months *
	Front control panel Top Loading Fully Automatic	24	(Applicable for Rear & Front Control Panel models with Wobble Pulsator)*
	Fully Auto Front Loading	24	Universal motor : 60 months* Digital Inverter Motor : 240 months
Air Cleaner	Air Cleaner	12	Warranty not applicable on Air Purifier Filters

\* 15 Months from date of purchase or 12 months from installation, whichever ends early. \*\*12 Months from date of commissioning.

\* In case of parts warranty, labour cost and gas charging cost(if applicable) will be chargeable as per the applicable rates.



#### Correct disposal of the product ( Waste Electrical & Electronic Equipment)

This marking on the product, accessories or literature indicates that the electronic accessories (e.g. charger, headset, and USB cable) should not be dispose with other household waste at the end of their working life.



For more information on safe disposal and recycling visit our website or contact number.





#### QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
INDIA	1800 40 7267864 (1800 40 SAMSUNG) 1800 5 7267864 (1800 5 SAMSUNG)	<a href="http://www.samsung.com/in/support">www.samsung.com/in/support</a>



WT11A4600LL  
WT11A4600RR  
WT11A4260GD  
WT95A4260GD  
WT90C4260GG  
WT10C4260GG

# Washing Machine

## उपभोक्ता निर्देशिका

कल्पना से परे – खूबियाँ अपार

यह सैमसंग उत्पाद खरीदने पर आपको धन्यवाद!  
सुनियोजित सेवाएं प्राप्त करने के लिए अपने उत्पाद  
को नीचे दिये गये लिंक पर पंजीकृत करवाएं!

[www.samsung.com/in](http://www.samsung.com/in)

**SAMSUNG**



## विवरणी

यूनिट को चालू करने से पहले कृपया मेनुअल को अच्छी तरह पढ़ें तथा भविष्य के संदर्भ हेतु सुरक्षित रखें।

गुण.....

सुरक्षा निर्देश.....

चेतावनी.....

मशीन चालू रहने पर सुरक्षा उपाय.....

हिस्सों – पुर्जों की पहचान.....

कंट्रोल पैनल.....

मशीन स्थापना.....

आस-पास का वातावरण.....

ड्रेन होज को जोड़ना.....

इनलेट होज को जोड़ना.....

मशीन की साफ-सफाई.....

मैजिक फिल्टर सफाई.....

वॉश टब सफाई.....

धुलाई का तरीका.....

धुलाई .....

कपड़े सुखाना.....

खंगालना.....

ओर पतो खंगालना.....

अतिरिक्त खंगालना.....

कपड़ों की धुलाई पर सुझाव.....

रख-रखाव.....

समस्या तथा उपाय.....

विशेषताएं.....

## गुण

### • एअर टर्बो ड्राइंग सिस्टम

— एअर टर्बो तकनीक तेज घूमती है।

ताकि आपको सुखाने में कम समय लगे।

— टर्बो आपके समय की बचत करता है, यह सुनिश्चित

करता है कि आपके कपडे टांग कर सुखाने की तुलना

में 30% – 40% तेजी से सूख रहे हैं। विशेष रूप से

बारिस में मौसम में और उच्च-आर्द्ध मौसम में कपड़े

धोने के एक बार ड्रिप ड्राप, जैसे कि हैपी जीन, भारी रेवेटर,

ओर मोटे कंबल तेजी से सूख जाते हैं।

### • पारदर्शी विंडो (विकल्प)

— एअर टर्बो सिंथेटिक कपड़ों के लिए एकदम सही है।

अब कपड़े टांग कर प्रतीक्षा करने की जरूरत नहीं।

वॉशर में निकालकर सीधा इस्त्री करें, व्यापक एअर टर्बो

कपड़ों को इस्त्री करने के लिए पर्याप्त रूप से तैयार

कर देता है।

### • हेक्सा टूफान पल्सेटर

— हेक्सा स्टॉर्म पल्सेटर कपड़े की देखभाल के साथ

प्रभावी धुलाई प्रदर्शन का परिणाम है।

— 6 ब्लेड बहु-दिशात्मक जल प्रवाह बनाता है और

3 रोलर्स और 2 साइड बोर्ड में लकीरों की एक

श्रृंखला होती है जो कपड़ों को कम नुकसान पहुँचाए

स्क्रब वॉश का प्रभाव देती है।

### • मैजिक फिल्टर

— यह अनोखा मैजिक फिल्टर यह सुनिश्चित करता है कि टब के अन्दर सभी लिंट को लागातार प्रभावी सफाई परिणाम देने के लिए शीर्ष गुणवत्ता फिल्टरिंग परिणामों के लिए कैचर किया गया है।

### • मैजिक मिक्सर

— आपको डिटर्जेंट को अपने हाथों से घोलने की जरूरत नहीं है। मैजिक मिक्सर केसाथ, बस पानी और

डिटर्जेंट डालें और मैजिक मिक्सर सेट करें।

सैमसंग हेक्सा स्टॉर्म मजबूत पानी का प्रवाह

उत्पन्न करता है और डिटर्जेंट को अच्छी तरह

से पानी में मिलता है।

## सुरक्षा निर्देश—

- आप हमेशा सभी सुरक्षा निर्देश एवं सावधानियों पर अमल करें ताकि किसी भी अप्रत्याशित खतरे एवं नुकसान से बचा जा सके।

### चेतावनी-

- सुनिश्चित करें कि वाशिंग मशीन की अधिंग की गई हो।

विजली के अंतर्कों से बचने के लिए धातु की पाइप से ही जारीन की अधिंग करें।

वाशिंग मशीन को गैंस पाइप या टेलीफोन लार से अधिंग न करें जिससे विस्कोट या

विजली पतन के खतरों की सम्भावना से बचा जा सके।

- रिपन ड्रायर बार्स्टेट के चलते समय

अपने हाथ उसमें न डालें।

आपकी उंगलियां घूमते कपड़ों में फँसकर

उनको नुकसान पहुँचा सकती हैं।

WEEE (इलेक्ट्रॉनिक और इलेक्ट्रिकल कबाड़ उपकरण) के सम्बन्ध में निर्देश—

उत्पाद का उचित तरीके से कड़ा-निपटान


(अलग से कड़ा-ग्रहण की व्यवस्था वाले देशों में प्रभावी)



मशीन, इसकी किताब तथा सहायक इलेक्ट्रॉनिक उपकरणों पर जैसे चार्जर, हेंडेकेट, यूएसबी-केबल आदि पर लगे निशान बताते हैं कि बैंकर होने पर इन्हें घर के कूड़े की तरह नहीं फैका जा सकता है। मनुष्य तथा वातावरण को असंतुष्टि कूड़ा निपटान से उत्पन्न खतरे से बचाने हेतु इन्हें दूसरे कूड़े से अलग कर मिमीदारी से रिसाइकिल करें ताकि भौमिक संसाधनों की सुरक्षा की जा सके।

वातावरण में इनके सुरक्षित रिसाइकिलिंग करने के लिए घरेलू उपभोक्ता या तो ख्यानीय सकारात्मकार्यालय से संपर्क करें या फिर रिटेलर से जिससे अपने उत्पाद खरीदा हो ताकि इन्हें किसे और किस उपरक्षित जगह पर हम लेकर जा सकते हैं। व्यवसायिक उपभोक्ता अपने निविदा (कॉर्ट्रेट) के निवेदन व शर्तों के अनुसार अपने आपूर्तिकर्ता (सलायर) से संपर्क करें। उत्पाद तथा इसके सहायक इलेक्ट्रॉनिक हिस्से-पुर्जे के निपटान के लिए व्यवसायिक कूड़े में इसे ना मिलाएं।

सुरक्षित कूड़ा निपटान तथा रिसाइकिलिंग की जानकारी के लिए हमारी वेबसाइट [www.samsung.com](http://www.samsung.com) पर देखें या आंतिम पेज पर लिखें हमारे सहायता केंद्र से संपर्क करें।

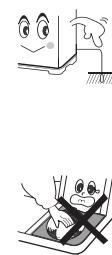

- बच्चों को वाशिंग मशीन चलाने या इसके साथ खेलने की इजाजत न दे। वाशिंग मशीन से खेलते हुए बच्चे कभी भी दुर्घटनावश वाशिंग टब में गिर सकते हैं।



- वाशिंग मशीन या लीड (वाश या स्पीन) के ऊपर ना चढ़े।
- मशीन जब चालू न हो तो बिजली के तार (पावर कॉर्ड) को पावर साकेट से निकाल दें।
- जब भी वाशिंग मशीन कारपेट फ्लोर पर रखी जाए तो व्याधि रहे कि हवा निकासी (**ventilation**) हेतु बने छेद को कारपेट द्वारा रोका न जाए।
- यदि पावर सप्लाई का तार खराब हो जाए तो इसे निर्माता या सर्विस एंजेंट या वेसे ही किसी योग्य व्यक्ति द्वारा बदला जाए ताकि किसी खतरे की संभावना न रहे।
- इस मशीन को ऑपरेटर की औजूदीय में मध्यम पानी सप्लाई से ही भरा जाए ताकि जल भराव से कोई नुकसान ना पहुंचे।
- वाशिंग मशीन जिसकी हवा निकासी का छेद मशीन के बेस में बना हुआ है। उसमें यह व्याधि रहे कि कारपेट से बह बंद न हो।
- अपने वाशिंग मशीन में पावर सप्लाई के लिए एडाप्टर या एक्स्ट्रैशन कॉर्ड का प्रयोग न करें।
- वेसे लोग जिनकी शारीरिक, मानसिक, स्पर्श शक्ति कमज़ोर हो या अनुभव तथा जानकारी का आवश हो, जिसमें बच्चे भी शामिल हैं— के द्वारा तबतक मशीन को नहीं चलाना चाहिए जबतक कि उनकी सुरक्षा के प्रति जवाबदेह किसी व्यक्ति द्वारा मशीन के संचालन संबंधी निर्देश न दिया जाय या देखरेख न किया जाए।
- बच्चों पर निगरानी रखनी चाहिए ताकि वे मशीन के साथ खिलवाड़ न करें।

## ⚠️ मशीन संचालन में सावधानियां-

- अत्यधिक गर्म पानी (50 डिग्री से अधिक) का प्रयोग ना करें। इससे मशीन के प्लास्टिक हिस्से—पुर्जा बेकार या खराब हो सकते हैं। कपड़े बेकार और बेग हो सकते हैं।



गरम पानी की सप्लाई से मशीन को ना जोड़ें।

- धुलाई के फले कपड़ों के सभी पॉकेट को जींच कर लें। यदि कील या पिन पॉकेट में छूट जाते हैं तो यह मशीन तथा कपड़ों को नुकसान पहुंचा सकते हैं।
- पानी का प्रेशर अधिक होने पर नल को थोड़ा बंद कर दें।
- पानी के छींटों से बचाव के लिए वॉश टब लीड को बंद करें।
- कंट्रोल पैनल पर पानी न गिरने दें।
- कपड़ों के सभी पॉकेट से अपनी सारी वस्तुएं निकालें।




- ⚠️ CAUTION** हेयर पिन तथा सिक्के मशीन तथा कपड़ों को नुकसान पहुंचा सकते हैं। इससे मशीन में आवाज के साथ परशानी भी पैदा हो सकती है। पॉकेट को जरुर जांच करें।




कपड़ों के साथ बाहरी चीजें जैसे चाबी, पिन, कील, नुकीली वस्तुएं व सिक्के टब में न भालें। कृपया सुनिश्चित करें कि सभी धातु की चीजें जैसे बककल/जिपर/डुक अन्दर की तरफ मुड़े हों।


- कपड़ों को स्पिन (घुमाने) से पहले मशीन का ढक्कन (इनर लीड) जरुर बंद करें। इससे कपड़े बाहर निकलने एवं खराब होने से बचते हैं।
- ड्रेन पाइप (होज) को गीचे जमीन पर समतल रखें।

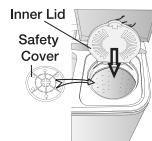


- मशीन में लगे बटन या नॉब को बाहर न खीचें। नॉब को पैनल के बाहरी ओर से नहीं निकाला जा सकता।
- वाशिंग मशीन के ऊपर कारिटक सोडा तथा ल्वीच न फैलाएं, इससे रबर के हिस्से पुर्जा को नुकसान पहुंच सकता है।
- वाशिंग मशीन को सीधे धूप या बारिश से बचाएं।

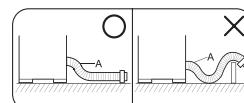


## हिस्सों—पुर्जों की पहचान

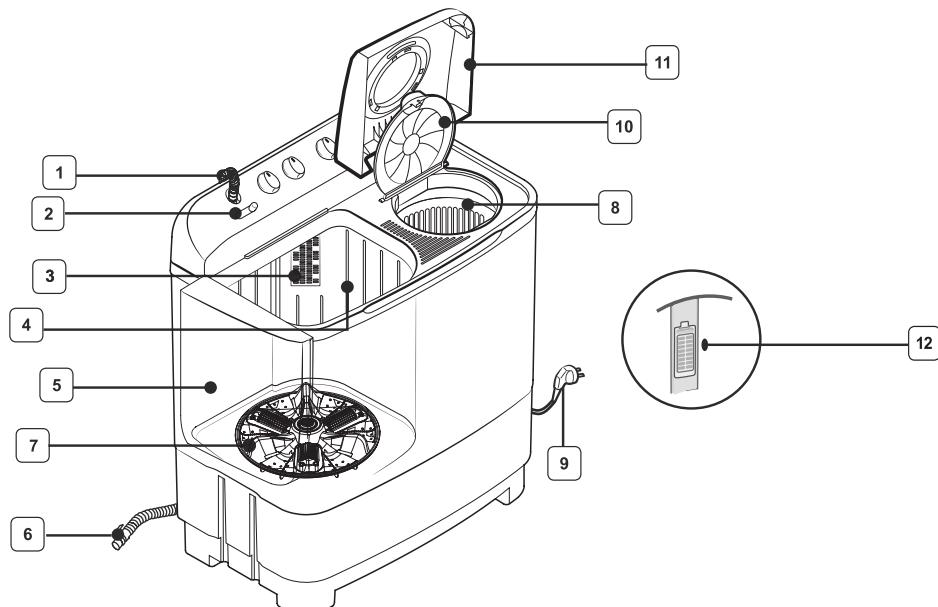


- 1** इनलेट होज
- 2** वॉशस्पीन सलेक्टर
- 3** प्लास्टिक फिल्टर
- 4** द्रवीन टब
- 5** वॉश लीड — धुलाई व घूमने के दौरान ढक्कन(लीड) को बंद रखें।
- 6** ड्रेन होज
- 7** पल्सेटर
- 8** स्पीन टब
- 9** पावर कोर्ड — चित्र के अनुसार हमेशा पावर प्लग का आकार समान नहीं हो सकता है।
- 10** इनर लीड
- 11** स्पीन लीड — स्पीन बास्केट घूमते समय यदि आप इसे खोलते हैं तो इसे ब्रेक सिस्टम द्वारा बंद कर दिया जाएगा।
- 12** मैजिक फिल्टर  
धोने के दौरान फिल्टर में लिंट एकत्र किया जाएगा।

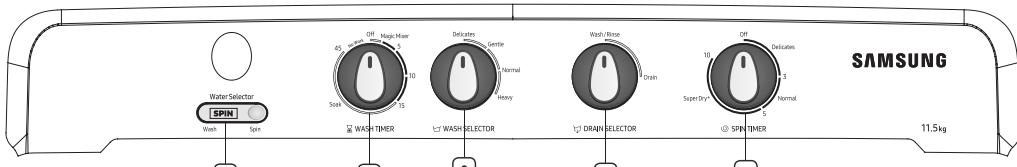


**WT11A4260GD**

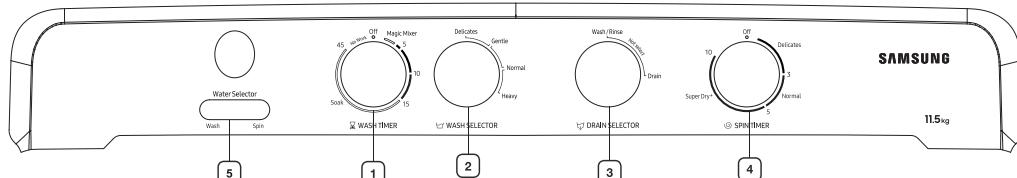


**WT95A4260GD**

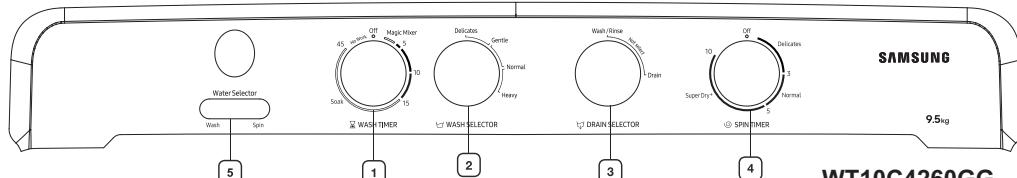

**WT10C4260GG**

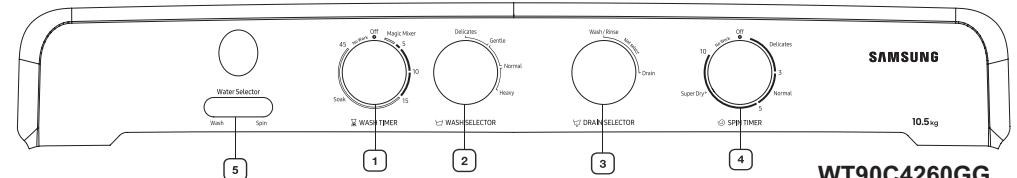

**WT90C4260GG**

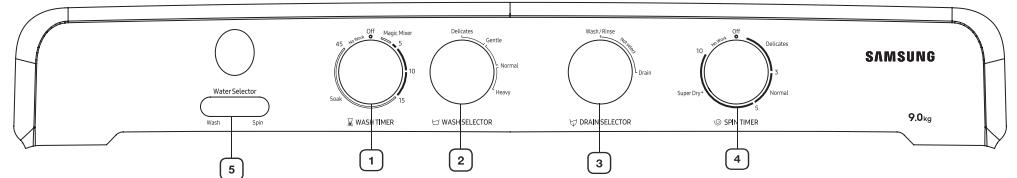

<b>1</b>	वॉश टाइमर	वॉशिंग का समय तय करने हेतु 1 - 45 मिनट चयन द्वारा
<b>2</b>	वॉश सलेक्टर	वॉशिंग के तरीके चुनने हेतु
<b>3</b>	ड्रेन सलेक्टर	वॉशिंग व ड्रेनिंग के लिये
<b>4</b>	स्पीन टाइमर	धूमने (स्पीन ) का समय तय करने हेतु 1 - 10 मिनट चयन द्वारा
<b>5</b>	वॉटर सलेक्टर	यह धुलाई के दौरान वॉश टब तथा स्पिन टब में स्पिन शावर के लिए पानी की आपूर्ति को निर्देशित करने के लिए उपयोग किया जाता है।


# मशीन स्थापना

## आस-पास का वातावरण


- कुछ जगह छोड़े  
वाशिंग मशीन और दिवार के बीच कम से कम 15 सेंटीमीटर की जगह छोड़े।
- वॉशिंग मशीन को सख्त समतल सतह पर रखें  
यदि वॉशिंग मशीन को ढेढ़े या कमज़ोर फर्श पर रखा जाता है तो आवाज और झनझनाहट पैदा हो सकती है केवल 2 डिग्री टेंडा होने तक मान्य।
- कैसे मशीन को सरकाँ  
मशीन को इधर-उधर ले जाने के लिए कैस्टर्स दिए गए हैं। चित्र के अनुसार मशीन को पकड़े सावधान रखें कहाँ मशीन पिंन न जाए जब मशीन कपड़ों से भरी हुई हो तो इसे न सरकाए।
- पानी के निकट वॉशिंग मशीन को न लगाएं  
वॉशिंग मशीन को गीलेपल या सीधी बारिश वाले जगह पर न रखें। इलेक्ट्रिकल इंसुलेशन गीलेपन के कारण खराब हो सकता है तथा बिजली के झटके का खतरा हो सकता है।
- गर्मी देने वाले बिजली के उपकरणों और सूरज की रोशनी से दूर रखें।  
प्लास्टिक तथा बिजली के हिस्से पूर्जे जो सीधे गर्मी लगाने से प्रभावित होते हैं वाशिंग मशीन का कभी भी किसी हीटर, बॉयलर आदि के निकट न रखें। सीधे धूप से बचाए।



## सामान्य प्रकार के ड्रेन होज को जोड़ना-

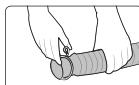


चित्र 1. के अनुसार ज्वाइंट रिंग को दबाकर पकड़े तथा उसमें ड्रेन होज को लगाएं।

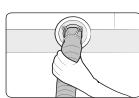

चित्र 2. के अनुसार ड्रेन आउटलेट में ड्रेन होज को लगाए। ज्वाइंट रिंग की सहायता से इसे अच्छी तरह मशीन से जोड़ दे।

- ड्रेन आउटलेट के नीचे की तरफ इसे ताकत से दबाए।
- ड्रेन होज को बाहर की तरफ खींच कर यह जांचें कि कहीं यह बाहर तो नहीं निकल रहा है।

## इनलेट होज को जोड़ना

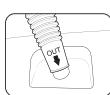

(वाशिंग मशीन में इनलेट होज को जोड़ें)



(इनलेट होज को नल से जोड़ें)

मशीन के साथ दिए गए नए होज सेट का ही प्रयोग करें। पुराने होज सेट को दुबारा प्रयोग में ना लाएं।

# मशीन की साफ-सफाई

## मैजिक फिल्टर साफ-सफाई

वाशिंग मशीन साफ रखने के लिए फिल्टर की जाली को समय-समय पर साफ करें।

- मैजिक फिल्टर के ऊपरी हिस्से को दबाकर बाहर निकालें।



- चित्र के अनुसार ढक्कन को खोलें।



- मैजिक फिल्टर साफ करें।



- ढक्कन को बंद करें तथा फिल्टर के निचले हिस्से को बास्केट में लगाकर इसे दबाए जब तक विलक की आवाज ना आये।




## वॉश टब की साफ-सफाई

- मुलायम कपड़े से मशीन की बॉर्डी तथा ऑपरेशन पैनल से दाग को हटाए।
- वाशिंग मशीन पर बैंडीन, थिनर, क्लीनर व वैक्स, का प्रयोग ना करें और न इसे ब्रश से खुरचे। रंगीन तथा प्लास्टिक के हिस्से खराब हो सकते हैं।
- साफ करते वक्त सीधे वॉशर के हिस्सों पर पानी ना छिड़के। इससे मशीन की काम करने की क्षमता कम होती है। साथ ही बिजली के झटके या आग लगने का खतरा बना रहता है।


## धुलाई का तरीका

### धुलाई

- धुलाई करने से पहले नीचे लिखे गए निर्देशों की जांच करें।
- वॉटर इनलेट होज को जोड़े तथा नल को खोलें।
- पावर कॉर्ड को पावर सप्लाई प्लग से जोड़े।
- ड्रेन होज® को सिंक होल की तरफ फैला कर सीधा करें।

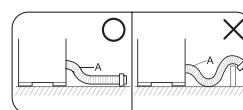

- वॉश सलेक्टर बटन के द्वारा अपनी इच्छा के अनुसार मोड सलेक्ट करें।

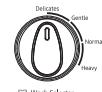

- ड्रेन सलेक्टर बटन को वॉश मोड पर रखें।



4. वॉटर लेवल सलेक्टर को वाश मोड पर रखें।



5. कपड़ों को वाश टब में डालें।



6. वॉटर टब को भरकर निश्चित मात्रा में वाशिंग पाउडर डालें।



7. वाश टाइमर सेट करें



वाश टाइमर सेट करें 1-15 मिनट (के अनुसार)  
वाश टाइमर सेट करें 1-45 मिनट (के अनुसार)  
(वाश टाइमर को 15 से 45 मिनट के बीच धोने के लिए रखें।)

## भिगोने के लिए


यदि वाश टाइमर को 15 से 45 मिनट के बीच रखा गया है तो युरु के 35 मिनट भिगोने के बाद ही 15 मिनट तक मशीन द्वारा कपड़ों की धुलाई होती है। धुलाई के दौरान भिगोने की क्रिया हर 1.5 से 2 मिनट तक चलती है तथा पूरे 35 मिनट के बाद चक्र को पूरा किया जाता है।

8. धुलाई के बाद ड्रेन सलेक्टर बटन को ड्रेन पर ले जाएं।



## कपड़े सुखाना

1. कपड़ों को ठीक ढंग से समान रूप से दबाकर स्पीन टब में डालें।

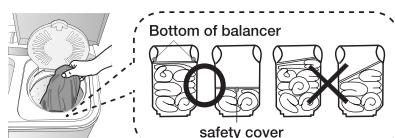

2. इनर लीड को बंद करने तथा सुरक्षा कवर को लगाने का हमशा ध्यान रखें।




3. स्पीन ड्रायर लीड को बंद करें।



4. स्पीन ड्रायर का समय 1 से 10 मिनट पर सेट करें।


स्पीन ड्रायर का समय 1 से 10 मिनट सुविधा के अनुसार चुनें।

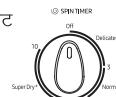

5. यदि धूमने (स्पिन) के दौरान तेजी से मशीन हिले या अस्थिर हो जाए तो पेज नम्बर 9 पे देखें (स्पिन बारकेट में कपड़े डालते समय.....)


## खंगालना

1. ड्रेन सलेक्टर नॉब को वाश मोड पर सेट करें।

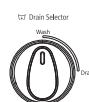

2. पानी की सही मात्रा मशीन में डालें, ध्यान रहे पानी वाश टब के ऊपर से बाहर न निकले।

3. वाश टाइमर को 2 से 3 मिनट के बीच में रखें।

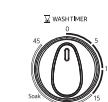

4. पानी बाहर निकाले, ड्रेन सलेक्टर बटन को ड्रेन पर रखें।



5. ड्रेन वाटर साफ होने तक इसी चक्र को 2 से 3 बार दोहराएं।

6. ध्यान रहे कि ड्रेन होज को नीचे अच्छी तरह से रखें।

**\*Note -**स्पिन शावर के दौरान, अगर पानी वाश टब में आता है, तो पानी के प्रवाह को कम करें।

## ओवर फ्लो खंगालना

1. पानी की सप्लाई चालू रखें।

 पानी के दबाव को इस तरह बनाए रखें ताकि मशीन के अंदर जाने वाला पानी ड्रेन से बाहर निकलने वाले पानी की मात्रा से ज्यादा न हो।

2. वॉश टाइमर को 6 से 8 मिनट के बीच रखें।



3. वॉश टाइमर के बंद होते ही नल बंद कर दे।



4. ड्रेन सेलेक्टर बटन को ड्रेन पर ले जाए।



## अतिरिक्त खंगालना


खंगालने की प्रक्रिया के बाद आप इस तरीके का चुनाव ज्यादा प्रभावी ढंग से खंगालने के लिए कर सकते हैं। (केवल खंगालने के लिए इसका प्रयोग ना करें)

1. स्पीन टब में कपड़ों को समान रूप से फैलाएं।



2. वॉटर सेलेक्टर बटन को स्पीन तथा ड्रेन सेलेक्टर बटन को ड्रेन मोड पर रखें।

(a)  
WATER SELECTOR

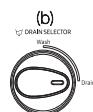

3. पानी की सप्लाई को 1 मिनट के लिए चालू करें। पानी के बहाव को नियंत्रित करने के बाद लॉस्ट्री को सुखाने के साथ ढकें।




4. पानी की सप्लाई बंद करने के बाद कपड़ों को सुरक्षा करें तथा इनर लीड से ढकें।



5. स्पीन ड्रायर लीड को बंद करें।



6. स्पीन ड्रायर टाइमर को 2 से 3 मिनट के बीच रखें।

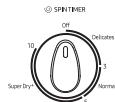

## कपड़ों की धुलाई पर सुझाव

### धुलाई का समय

कपड़ों के प्रकार	धुलाई का समय	वाशिंग का चुनाव
बेहद गंदे भारी कपड़े	10 से 15 मिनट	Heavy हैवी
चादर, सूती कपड़े	8 से 10 मिनट	
सामान्य कपड़े (अंडर वियर, आदि)	7 मिनट	
हल्के गंदे सिंथेटिक कपड़े	2 से 5 मिनट	Normal / Gentle
शत प्रतिशत ऊनी, मिश्रित ऊनी स्वेटर नाजुक सिंथेटिक कपड़े जिनको हाथ से धुला जाना हो।	2 से 5 मिनट	

### डिटर्जेंट (वाशिंग पाउडर)

9.0, 9.5, 10.5 & 11.5 किलोग्राम क्षमता

डिटर्जेंट की मात्रा	पानी का स्तर
69 ग्राम	कम 61 लीटर
86.5 ग्राम	मध्यम 78 लीटर
105 ग्राम	अधिक 94 लीटर

1. डिटर्जेंट की मात्रा सामान्य है।

2. पैकेट पर लिखी गई मात्रा के अनुसार डिटर्जेंट का प्रयोग करें।

3. कपड़ों के अनुसार डिटर्जेंट का प्रयोग करें।

### कपड़े सुखाने का समय


कपड़ों का प्रकार	समय
नाजुक सिंथेटिक कपड़े	1 मिनट
ऊनी कपड़े	1 से 2 मिनट
सूती कपड़े	3 से 5 मिनट
मोटे सूती कपड़े	10 मिनट (एयर टर्बो)

## रखरखाव

### स्पिन बास्केट में कपड़े डालते समय



थित्र के अनुसार कपड़ों को दबाकर समान रूप से फैलाएं तथा स्पीन बास्केट ड्रम के ऊपर सुरक्षा कवर लगाएं।

बैलेसर का निचला हिस्सा

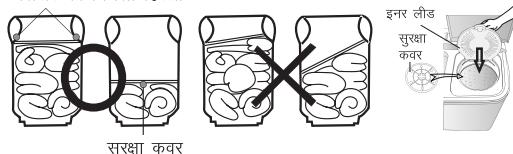

## समस्या तथा उपाय

समस्या	जांच विंदु
वाशिंग मशीन काम नहीं कर रहा है ।	मशीन तक पॉर्ट नहीं पहुँच पा रहा है । जांच लें कि पावर कॉर्ड अच्छी तरह पावर सॉकेट से जुड़ा है ।
कपड़े आसानी से धूम नहीं रहे हैं ।	क्या मशीन में वजन से ज्यादा कपड़े डाले गए हैं ?
मशीन का तेजी से हिलना अस्थिर हो जाना तथा अचानक धूमना रुक जाना ।	क्या कपड़े टब में समान रूप से दबा कर रखे गए हैं ? थित्र के अनुसार कपड़ों को दबाकर समान रूप से फैलाएं तथा स्पीन बास्केट ड्रम के ऊपर सुरक्षा कवर लगाएं । ⇒ पेज 9 पर (अगर कपड़े बास्केट ..... ) देखें ।
पानी का नहीं निकलना	सुनिश्चित करें कि ड्रेन होज नीचे समतल पर रखा गया हो । ⇒ पेज संख्या 3 देखें ।
स्पीन ड्रायर बास्केट चल नहीं रहा है ।	क्या स्पीन ड्राई लीड को अच्छी तरह बंद किया गया है ? क्या मोजे आदि छोटे कपड़े स्पीन ड्रायर बास्केट से बाहर निकलकर एकसेल में फँस गए हैं ? अगर कपड़े बास्केट तथा टब के बीच में पिर गए हो तो ⇒ पेज 9 पर (अगर कपड़े बास्केट ..... ) देखें ।
पानी तुरंत बाहर निकल जा रहा है ।	क्या ड्रेन सेलेक्टर बटन ड्रेन पर है ? क्या ड्रेन होज में गंदगी जम गई है ? ⇒ ड्रेन हुक के ऊपर ड्रेन होज को लटकाए । वाश टब को पानी से आधा भरकर फिर से पानी निकालने का प्रयास करें । जमी गंदगी पानी के दबाव से निकल जाएगी ।
पलसेटर धूम नहीं रहा है ।	<ul style="list-style-type: none"> <li>• मशीन अधिकतम 5 मिनट तक रुक सकती है यदि वाश टाइमर को 15 मिनट से ज्यादा के लिए ढुना गया हो । हो सकता है कि अभी भी भिगोने की क्रिया चालू हो । यह काइ मशीनी खराबी नहीं है ।</li> <li>• सलेक्टर बटन (नाब) की रिथित जाँचें । यह कभी भी नो वर्क के रूपान पर नहीं होना चाहिए ।</li> </ul>
स्पीन बास्केट नहीं धूम रहा है	<ul style="list-style-type: none"> <li>• सेलेक्टर बटन को जाँचें । यह कभी भी 'नो वर्क' के रूपान पर नहीं होना चाहिए ।</li> </ul>

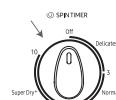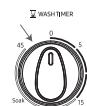

## विशेषताएँ

	मॉडल	वॉश
<b>क्षमता</b>		
WT11A4600LL	11.5 किलो	
WT11A4600RR		
WT11A4260GD		
WT95A4260GD	9.5 किलो	
WT90C4260GG	9.0 किलो	
WT10C4260GG	10.5 किलो	
आकार (चौड़ाई X गहराई X ऊंचाई) मिली मीटर	915 चौड़ाई X 560 गहराई X 1045 ऊंचाई 915 चौड़ाई X 560 गहराई X 1015 ऊंचाई	10.5 & 11.5 किलो 9.0 & 9.5 किलो
पानी का दबाव	0.05 ~ 0.3 Mpa 0.5 ~ 3.0 kg/cm <sup>2</sup>	
भार	29.5 किलोग्राम 28 किलोग्राम	10.5 & 11.5 किलो 9.0 & 9.5 किलो
पानी की मानक मात्रा	94 लीटर	

\* उर्जा लेबल विनिर्देशों **IEC 60456** के अनुसार निम्नलिखित कार्यक्रम का उपयोग करके निर्धारित किया जाता है।

यह कार्यक्रम है "(11.5 किलो के लिए - **WT11A4600LL / WT11A4600RR / WT11A4260GD** नाजुक कार्यक्रम)"

\* 11.5 किलोग्राम के लिए – वॉश प्रोग्राम है – 15 मिनट -> रीन्स 15 मिनट-> स्पिन– 10 मिनट-> स्पिन– 10 मिनट,  
(वॉश सेलेक्टर– डेलीकेट, जल–स्तर: ज्यादा से ज्यादा, स्पिन वजन: आधा+आधा)

यह कार्यक्रम है "(9.5 किलो के लिए - **WT95A4260GD** नाजुक कार्यक्रम)"

\* 9.5 किलोग्राम के लिए – वॉश प्रोग्राम है – 15 मिनट -> रीन्स 10 मिनट-> स्पिन– 5 मिनट-> स्पिन– 5 मिनट,  
(वॉश सेलेक्टर– डेलीकेट, जल–स्तर: ज्यादा से ज्यादा, स्पिन वजन: आधा+आधा)

यह कार्यक्रम है "(10.5 किलो के लिए - **WT10C4260GG** नाजुक कार्यक्रम)"

\* 10.5 किलोग्राम के लिए – वॉश प्रोग्राम है – 15 मिनट -> रीन्स 15 मिनट-> स्पिन– 10 मिनट-> स्पिन– 10 मिनट,  
(वॉश सेलेक्टर– डेलीकेट, जल–स्तर: ज्यादा से ज्यादा, स्पिन वजन: आधा+आधा)

यह कार्यक्रम है "(9.0 किलो के लिए - **WT90C4260GG** नाजुक कार्यक्रम)"

\* 9.0 किलोग्राम के लिए – वॉश प्रोग्राम है – 15 मिनट -> रीन्स 10 मिनट-> स्पिन– 5 मिनट-> स्पिन– 5 मिनट,  
(वॉश सेलेक्टर– डेलीकेट, जल–स्तर: ज्यादा से ज्यादा, स्पिन वजन: आधा+आधा)

## वारंटी शर्तें

### इन मामलों में वारंटी लागू नहीं होगी

1. मरम्मत का अनुरोध या मशीन ठीक करते वक्त सर्विस इंजीनियर को वारंटी कार्ड के साथ सभी कागजात नहीं दिए गए हों ।
2. उत्पाद को Samsung के अधिकृत विक्रेता से नहीं खरीदा गया हो ।
3. जब कंपनी प्रतिनिधि द्वारा यह निर्धारित किया गया हो कि खरीदे गए उत्पाद को निर्देश मेनुअल में बताए गए तरीकों के अनुसार प्रयोग में नहीं लाया गया है ।
4. अधिकृत सर्विस सेंटर या कंपनी प्रतिनिधि द्वारा यह निर्धारित किया गया हो कि खराबी गलत तरीकों से इस्तेमाल के कारण हुई है ।
5. जब कंपनी प्रतिनिधि द्वारा यह निर्धारित किया गया हो कि खरीददार या अनाधिकृत व्यक्ति द्वारा इलेक्ट्रिकल सर्किट में किसी प्रकार का बदलाव या संशोधन किया गया हो ।
6. यदि वाशिंग मशीन का व्यवसायिक या पब्लिक जगह पर जैसे कि होटल प्रशिक्षण केंद्र तथा ऐसे दूसरे कामों में उपयोग किया गया हो तो उस स्थिति में वारंटी प्रभावी नहीं होगी ।
7. उत्पाद पर से असली क्रम संख्या हटाया बदला या खुरच दिया गया हो ।
8. जब बिजली गिरने, अनियंत्रित वोल्टेज, प्राकृतिक आपदा या सर्विस सेंटर से खरीददार के घर ले जाते वक्त अपने नियंत्रण से बाहर मामलों के फलस्वरूप खराबी आ गई हो ।
9. मशीन संस्थापना के बाद मशीन के लेवल होज तथा नल एडाप्टर की स्थिति में बदलाव किया गया हो ।
10. वैसे मामलों में जहां वाटर ड्रेनेज, स्पीन या चेतावनी की ध्वनि जिसे मशीन चलने के दौरान सामान्य माना जाता है ।
11. सिक्के, सेफ्टी पिन, बटन, हुक, जमी हुई गंदगी आदि बाहरी चीजों के साथ—साथ ड्रेन वाल्व तथा इनर होज फिल्टर को मशीन से निकालने के मामलों में वारंटी लागू नहीं होगी ।
12. वैसी स्थिति में जब की खराबी या नुकसान घर के बिजली के तार या प्यूज बदलने, प्लंबिंग काम के दौरान या फिर पालतू जानवरों, चूहों, तिलचट्टो या अन्य किसी प्रकार के जानवर या कीट पतंगों के कारण हुआ हो ।

वारंटी शर्तों के लिए वारंटी कार्ड देखें ।

મેમો

---





**SAMSUNG**

## प्रश्न या सुझाव

देश	सम्पर्क करें	या आनलाइन देखें
भारत	1800 40 7267864 (1800 40 SAMSUNG) 1800 5 7267864 (1800 5 SAMSUNG)	<a href="http://www.samsung.com/in/support">www.samsung.com/in/support</a>