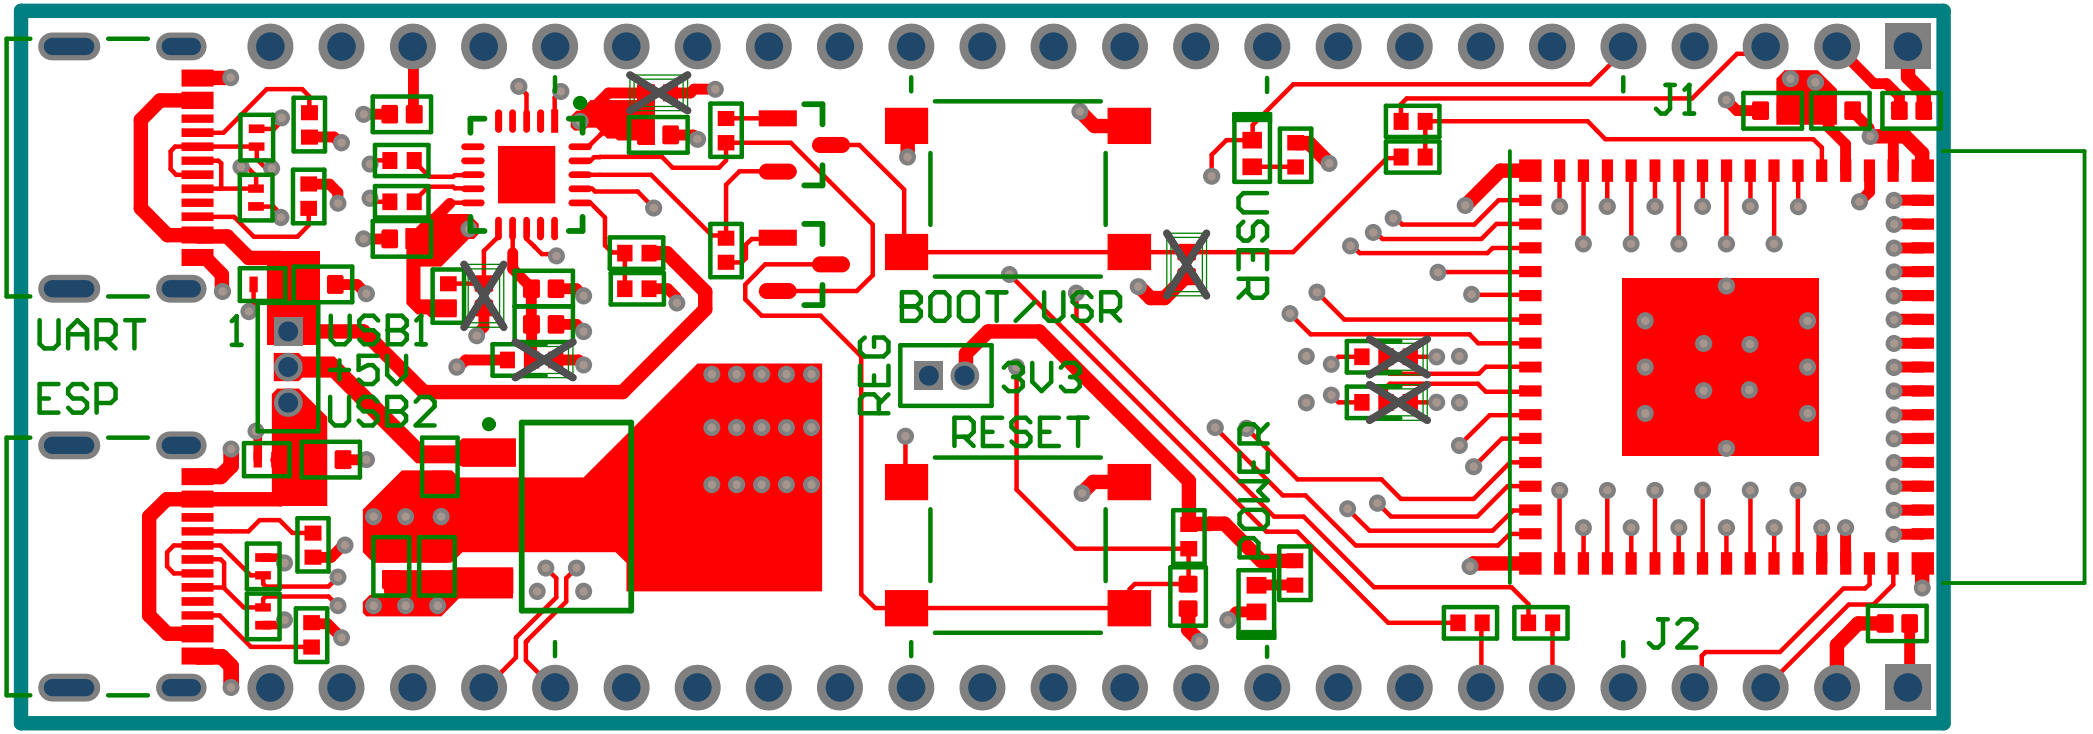
UART
ESP
1
USB1
+5V
USB2
BOOT/USR
REG
3V3
RESET
USER
POWER
J1
J2