

User Guide

Water AMR Head End System(HES)

Document Date: October, 2024

Document Version: 3.0

Author: Vishal Padhaar

Document No.: Water-AMR-01

Document Approver: Diptesh Patel

Document Classification: Public

Copyright ©2023, System Level Solutions, Inc. (SLS) All rights reserved. SLS, an Embedded systems company, the stylized SLS logo, specific device designations, and all other words and logos that are identified as trademarks and/or service marks are, unless noted otherwise, the trademarks and service marks of SLS in India and other countries. All other products or service names are the property of their respective holders. SLS products are protected under numerous U.S. and foreign patents and pending applications, mask working rights, and copyrights. SLS reserves the right to make changes to any products and services at any time without notice. SLS assumes no responsibility or liability arising out of the application or use of any information, products, or service described herein except as expressly agreed to in writing by SLS. SLS customers are advised to obtain the latest version of specifications before relying on any published information and before orders for products or services.

ug_wateramrhes_3.0

Preface

Privacy Information

This document may contain information of a sensitive nature. This information should not be given to any persons outside of the System Level Solutions (I) Pvt. Ltd. without prior consent.

Revision History

Version	Date	Description of Changes
1.0	February, 2024	Initial Release
2.0	July, 2024	New functionality added
3.0	October, 2024	Improvements

Approval

Name	Position	Signature	Date
Diptesh Patel	Manager		12/01/2024
Niril Chauhan	Staff Engineer		23/07/2024

Typographic Conventions

This data sheet uses the typographic conventions as shown below:

Visual Cue	Meaning
Bold Type with Initial Capital letters	All headings and Subheadings Titles in a document are displayed in bold type with initial capital letters; Example: General Description, Features.
Bold Type with Italic Letters	All Definitions, Figure and Table Headings are displayed in Italics. Examples: <i>Figure 1-1. Water AMR HES Home Screen, Table 1-1. Water AMR HES Specifications.</i>
1., 2.	Numbered steps are used in a list of items, when the sequence of items is important. such as steps listed in procedure.
•	Bullets are used in a list of items when the sequence of items is not important.

THIS PAGE IS LEFT BLANK INTENTIONALLY.

Table of Contents

1	Introduction.....	6
2	Head End System.....	7
2.1	Login.....	7
2.1.1	Forgot Password.....	8
2.1.2	Sign Up.....	9
2.2	Dashboard.....	12
2.3	Organization Management.....	13
2.3.1.	Vendor Setting.....	14
2.4	Asset Management.....	15
2.4.1.	Division.....	15
2.4.2.	Sub Division.....	16
2.4.3.	Meters.....	17
2.4.3.1.	Bulk Upload.....	18
2.4.3.2.	Meter Dashboard.....	21
2.5.	Consumer Management.....	26
2.5.1.	Consumer Category.....	26
2.5.2.	Consumer.....	27
2.5.2.1	Bulk Upload.....	28
2.5.2.2	Consumer Dashboard.....	31
2.5.2.3	Exit & Replacement.....	34
2.5.3	Alert Management.....	34
2.6.	Reports.....	36
2.7	Guest User Dashboard.....	39
2.7.1.	Meters.....	39

1 Introduction

This user guide contains information to perform any operation on the smart meter. Users can read and write data from smart meters. They can also view consumption data, set alarms, and view the status of other connected devices. Additionally, users can remotely control their smart meters and receive alerts when consumption exceeds the desired limit. Furthermore, users can also access reports to better understand their consumption.

This system is used by the following users.


1. Utility providers
2. Consumers

Both utility providers and users have access as per permission given by the organization. Consumers can view individual meter data.

2 Head End System

2.1 Login

Initially, on clicking URL, provided by the SLS Team, it will open the following login page.

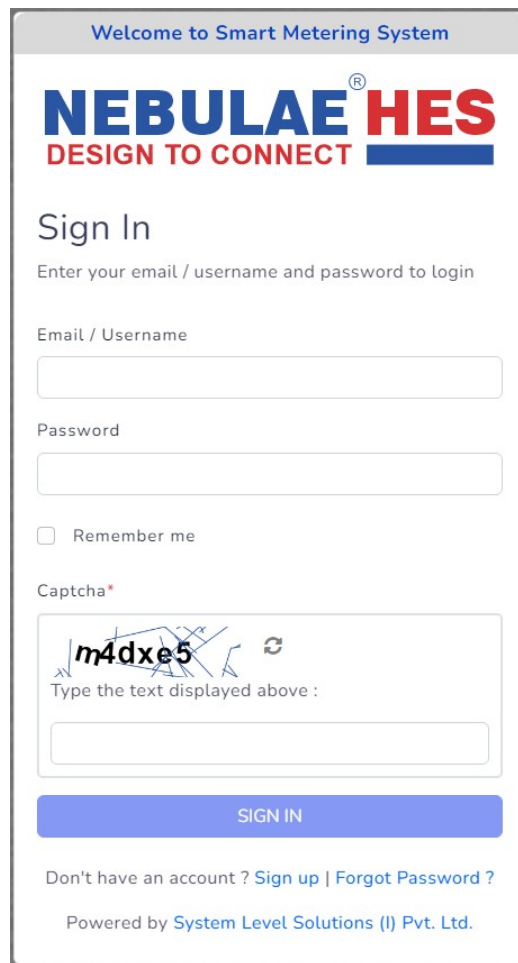


The screenshot shows a web browser displaying the login page for the NEBULAE HES system. The page has a grey header with the text "Welcome to Smart Metering System". Below the header is the NEBULAE HES logo, which includes the text "NEBULAE HES" in blue and red, and "DESIGN TO CONNECT" in red. The main content area is white and contains the "Sign In" section. It starts with the text "Enter your email / username and password to login". There are two input fields: "Email / Username" and "Password". Below these is a checkbox labeled "Remember me". A "Captcha*" section follows, showing a distorted image of the text "m4dx5" with a refresh icon. Below the captcha is a text input field with the prompt "Type the text displayed above :". At the bottom of the form is a blue "SIGN IN" button. Below the button are links for "Don't have an account ? Sign up | Forgot Password ?" and a footer line "Powered by System Level Solutions (I) Pvt. Ltd."

Users must provide a valid email address and password along with a Captcha to access the system. System Admin can create multiple users with different roles and based on the role, users can access the system.

2.1.1 Forgot Password

Whenever a user forgets their password, they must enter their email address. An email will be sent if the email address is correct and available in the system.

Screen Navigation: Login → Click on forgot password

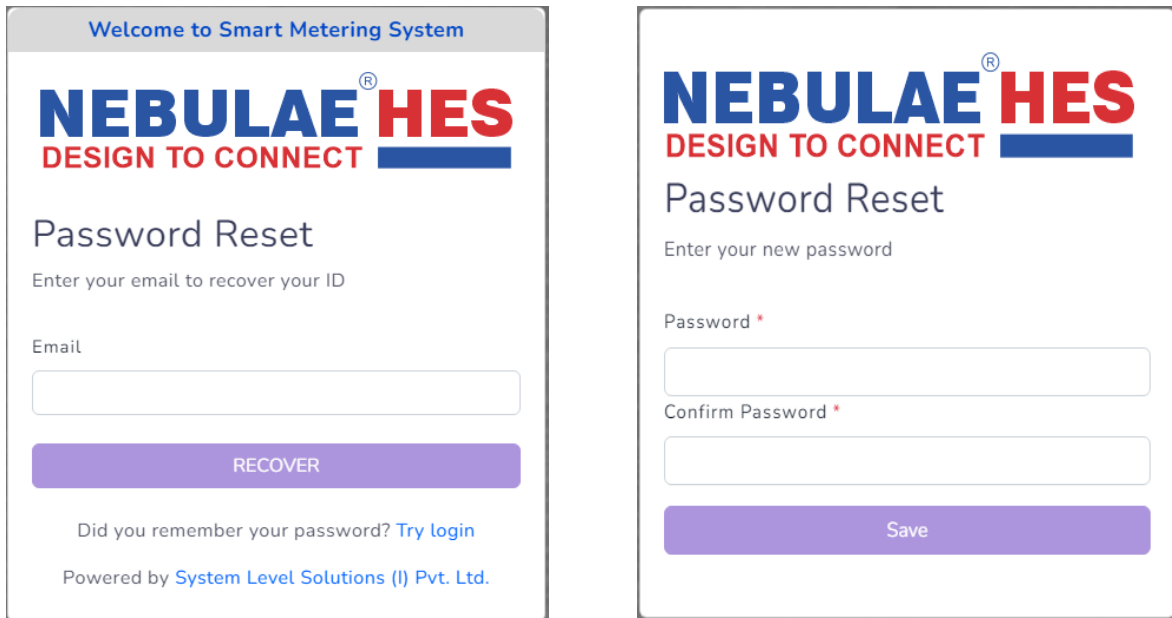

The image displays two sequential screenshots of the NEBULAE HES Password Reset interface.

Left Screenshot: The header reads "Welcome to Smart Metering System". Below it is the NEBULAE HES logo with the tagline "DESIGN TO CONNECT". The main heading is "Password Reset", followed by the instruction "Enter your email to recover your ID". There is an "Email" label above a text input field. Below the input field is a purple button labeled "RECOVER". At the bottom, there is a link "Did you remember your password? Try login" and a footer "Powered by System Level Solutions (I) Pvt. Ltd."


Right Screenshot: The header is the same. Below the logo, the heading is "Password Reset", followed by the instruction "Enter your new password". There are two password input fields: "Password *" and "Confirm Password *". Below the second input field is a purple button labeled "Save".

This email contains a password reset link. The user has to click on that link and it opens the page as shown in the image above. Users have to provide the updated password and click on the **Save** button to update the password.

2.1.2 Sign Up

Users can click on Sign Up to open the following dialogue box. The user must provide all required details and click on the **Continue** button to add the user as a Guest user to the system.

The user must add the consumer and click on the **Continue** button to verify using the generated OTP on the consumer's email ID/mobile number.

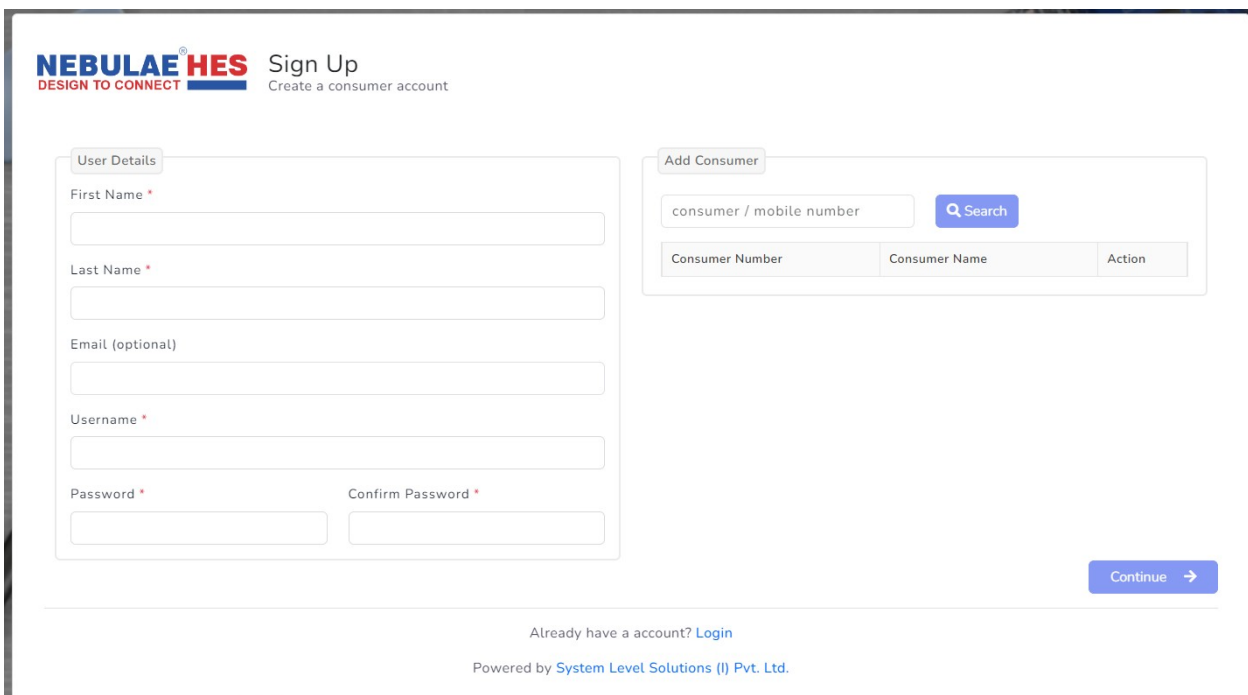

The image shows a web form titled "NEBULAE HES Sign Up" with the subtitle "Create a consumer account". The form is divided into two main sections: "User Details" and "Add Consumer".

User Details Section:

- First Name *
- Last Name *
- Email (optional)
- Username *
- Password *
- Confirm Password *

Add Consumer Section:

- Input field: consumer / mobile number
- Search button (magnifying glass icon)
- Table with columns: Consumer Number, Consumer Name, Action

Buttons and Links:

- Continue button (blue, with right arrow)
- Already have an account? [Login](#)
- Powered by [System Level Solutions \(I\) Pvt. Ltd.](#)

The user must enter a valid consumer number or consumer mobile number and then click the search button. If the provided number is valid, the consumer details will appear in the list. The user can verify these details using the OTP sent to the consumer's email ID or mobile number.



Sign Up

Create a consumer account

User Details

First Name *

Ashtha

Last Name *

Soni

Email (optional)

ashtha2311@gmail.com

Username *

ashthasoni2311

Password *

.....

Confirm Password *

.....

Add Consumer

SLS0724000001

Search

Consumer Number	Consumer Name	Action
SLS0724000001	Ashtha Soni	

Continue →

Already have an account? [Login](#)

Powered by [System Level Solutions \(I\) Pvt. Ltd.](#)

After clicking on the Continue button the following dialog box opens to enter OTP for consumer verification. When the user clicks on the Get OTP button, an email/message with OTP will be sent to the consumer's email address/mobile number. This is if the consumer's **email address/mobile number** is correct and available in the system.



Sign Up

Create a consumer account



Name : Ashtha Soni

Username: METER_30M_D3193A350

Email : ashtha2311@gmail.com



Provide Verification Code

SLS0724000001

Get OTP

Submit

Note: Please do not refresh this page, as it will require you to reverify the consumer.

Powered by [System Level Solutions \(I\) Pvt. Ltd.](#)

 **NEBULAE[®]HES**
DESIGN TO CONNECT

Sign Up
Create a consumer account





Name : Ashtha Soni
Username: METER_30M_D3193A350
Email : ashtha2311@gmail.com



Provide Verification Code
SLS0724000001
We have sent a code to both xxxxxx2365 and to the email address ashxxxxxmail.com.

4

7

2

5

Verify

Resend OTP

Note: Please do not refresh this page, as it will require you to reverify the consumer.
Powered by [System Level Solutions \(I\) Pvt. Ltd.](#)

Submit

Thus, the user must verify by entering OTP and if the correct OTP is entered then the user can click on the **Submit** button to verify the consumer successfully and then the user can log in successfully with the **Guest User email ID/User Name** and password.

 **NEBULAE[®]HES**
DESIGN TO CONNECT

Sign Up
Create a consumer account





Name : Ashtha Soni
Username: METER_30M_D3193A350
Email : ashtha2311@gmail.com



Consumer Verified
SLS0724000001

Note: Please do not refresh this page, as it will require you to reverify the consumer.
Powered by [System Level Solutions \(I\) Pvt. Ltd.](#)

Submit

Note: A guest user must add a consumer when signing up as a guest user to access the respective consumer's data.


2.2 Dashboard

From the Dashboard, the User can view the summary of all smart meters. The total number of installed meters, Online/Offline meters, and daily consumption are available on the dashboard.


Monthly total consumption (Litre) will be shown on the graph.

A graph of the meters will be shown on the map with Locations.

Screen Navigation: Login → Dashboard

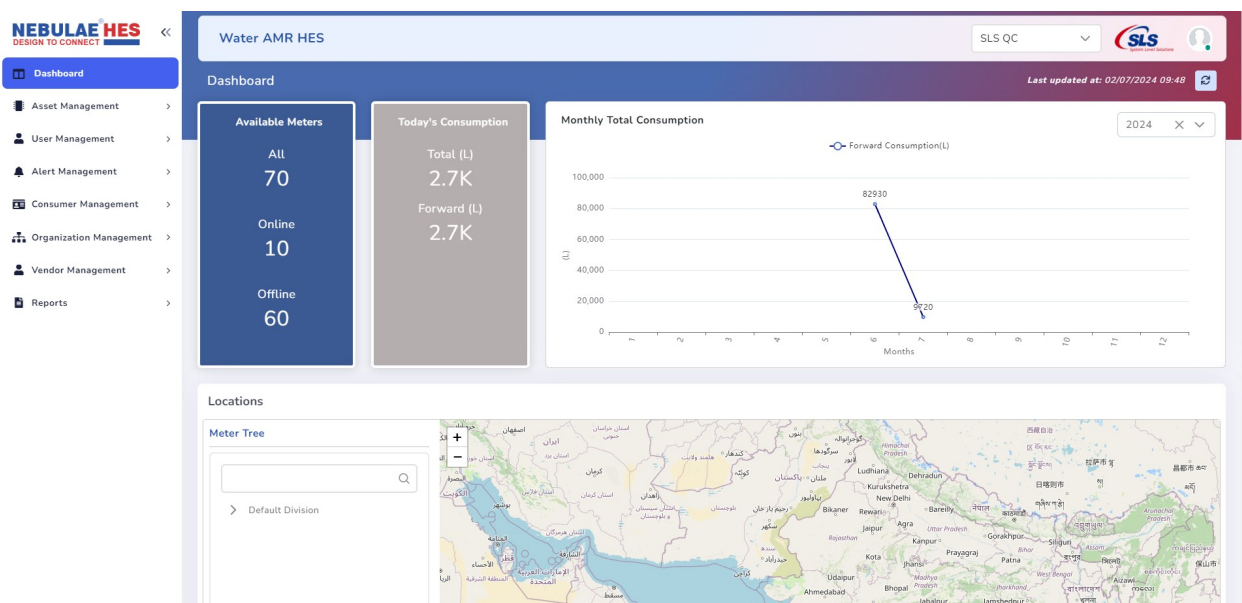

As shown in the following image, the user can see the organization list in the drop-down as shown in the top-right corner.

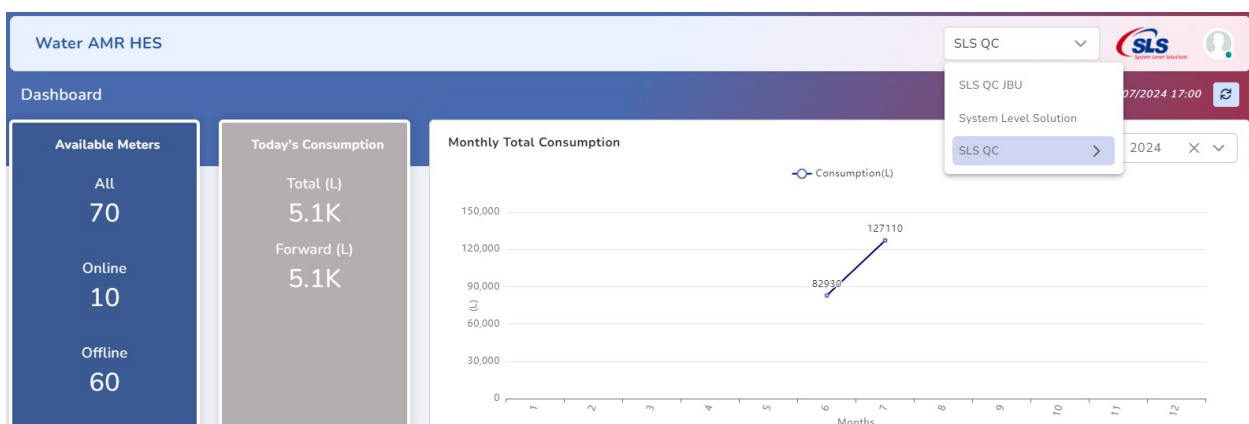

The user can select an organization and all page data will be retrieved according to the organization selected.

2.3 Organization Management

According to the requirements, users can create the Organization from the following page. Users can add, edit, update and delete organizations from this page.

Screen Navigation: Login → Organization Management → Organization

Available organizations

All created organizations are listed on this page. Users can filter the organization to get the information they need.

Water AMR HES						SLS QC		
Available Organizations						+ Add Organization		
Name	Email	Active	Created By	Created Date	Action			
System Level Solution	admin@slscorp.com	☒	SLS	05/04/2023 17:17	Edit Delete			
SLS QC	sls qc@slscorp.com	☒	SLS	04/12/2023 17:37	Edit Delete			
SLS QC JBU	suman@gmail.com	☒	SLS	05/12/2023 14:53	Edit Delete			

To add an organization, the user must click on the **Add Organization** button. It will open the following page. The user must provide all required details and click on the **Save** button to add the organization to the system.

Note: click **Edit** icon to change the organization information.



- Dashboard
- Asset Management
- User Management
- Alert Management
- Consumer Management
- Organization Management**
 - Organization
 - Vendor Management
 - Reports

Water AMR HES

SLS QC





Add Organization

Organization Details

Name *

Country *

Pin Code *

Contact Number *

Tin GST Number

Display Name *

State *

Country Code *

Customer Care Number

Tin CST Number

Email *

City *

Short Code *

Emergency Contact Number

PAN Number

Logo

Address *

Network Details

Username *

Password *

Base URL *

Reset

Save


2.3.1. Vendor Setting

After creating a Meter Type, Users can create the Vendor Setting from this page according to the requirement. Users can add, edit, update and delete vendor settings from this page.

Screen Navigation: Login → Vendor Management → Vendor Setting


Available Vendor Settings

All created Vendor Settings are listed in this page. Users can apply the filters and get the required vendor setting.

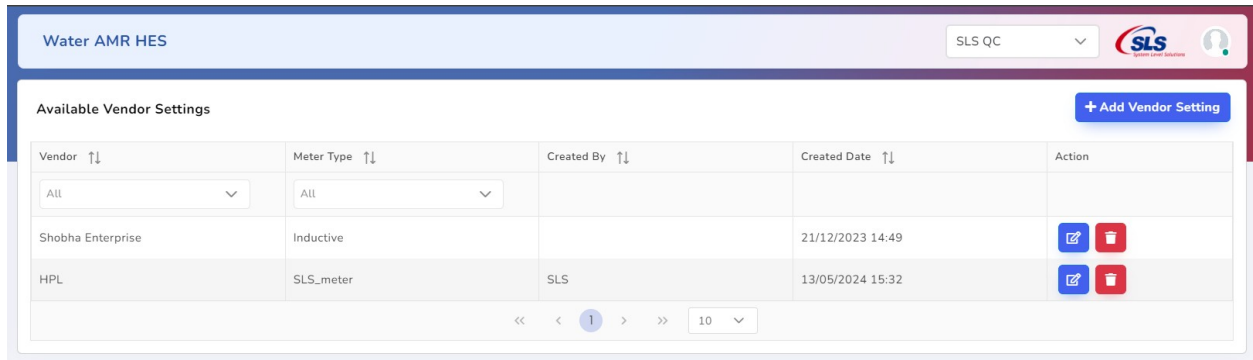

Vendor ↑↓	Meter Type ↑↓	Created By ↑↓	Created Date ↑↓	Action
All	All			
Shobha Enterprise	Inductive		21/12/2023 14:49	 
HPL	SLS_meter	SLS	13/05/2024 15:32	 

To add a new vendor setting, the user must click on the **Add Vendor Setting** button. It will open the following page. Users have to select from the drop-downs and click on **Save** button to add vendor settings in the system.

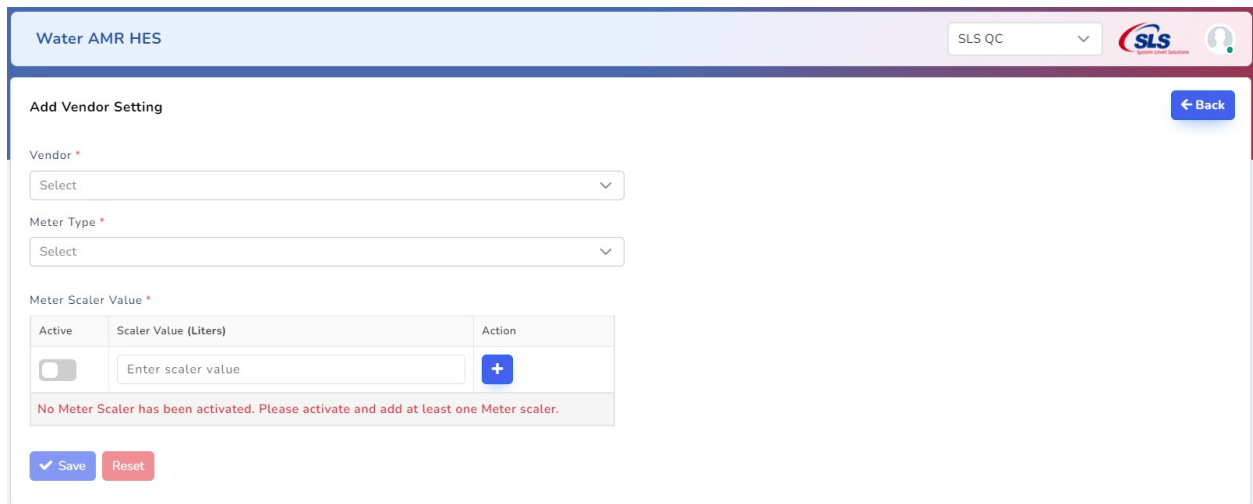

Add Vendor Setting

Vendor *

Meter Type *

Meter Scaler Value *

Active ☐ Scaler Value (Liters) Action 

No Meter Scaler has been activated. Please activate and add at least one Meter scaler.

Here, the meter scaler value means the volume of water used in one unit.

eg. if the scaler value is 30 then 1 unit = 30 Litre.

2.4 Asset Management


2.4.1. Division

First of all, Users have to create the Divisions in the system. It is used to create the hierarchy of the installed meters. Users can add, update and delete the Division from the system using this page.

Screen Navigation: Login → Asset Management → Division


Available Division

All divisions are shown in the list. Users can edit and delete the division based on the requirement.

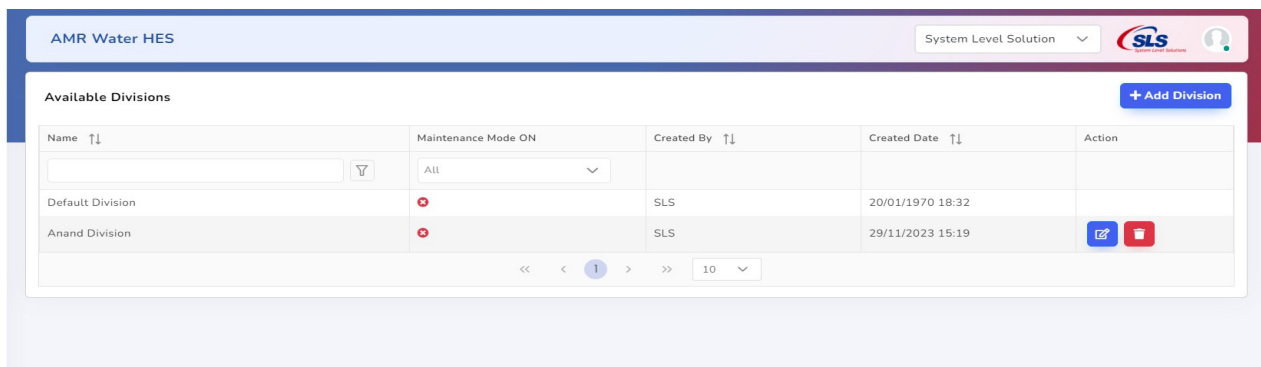

Name ↑↓	Maintenance Mode ON	Created By ↑↓	Created Date ↑↓	Action
Default Division	☒	SLS	20/01/1970 18:32	
Anand Division	☒	SLS	29/11/2023 15:19	Edit Delete

Users have to click on the **Add Division** button to add a new Division into the system. It will open the following page.

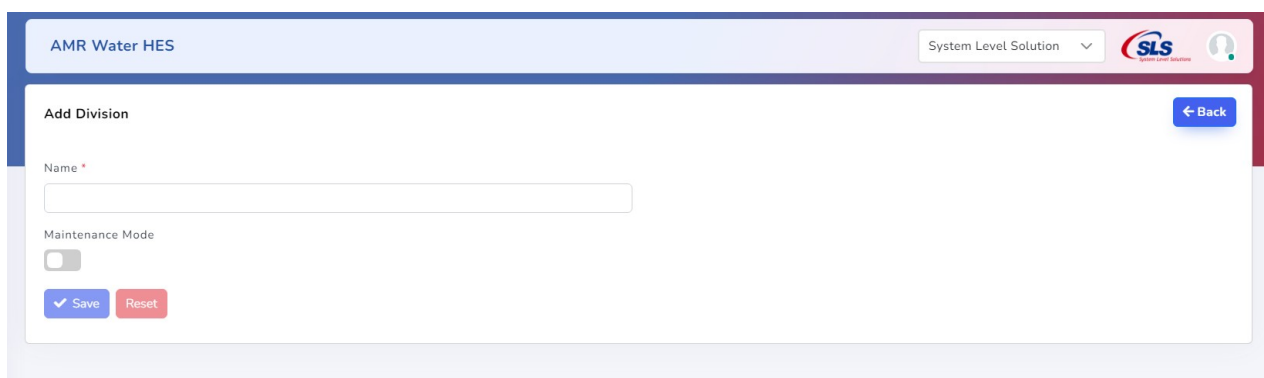

Users have to provide proper Division name. Maintenance mode is to be used if any division is under maintenance. By default, maintenance mode is disabled.

Click on **Save** button to add division into the system.


2.4.2. Sub Division

After creating Division, users have to create the Sub-Divisions under the Division. Users can add, update and delete the Sub Division from the system using this page.

Screen Navigation: Login → Asset Management → Sub Division


Available Sub Division

All Sub Divisions are shown in the list. Users can edit and delete the sub division based on the requirement.

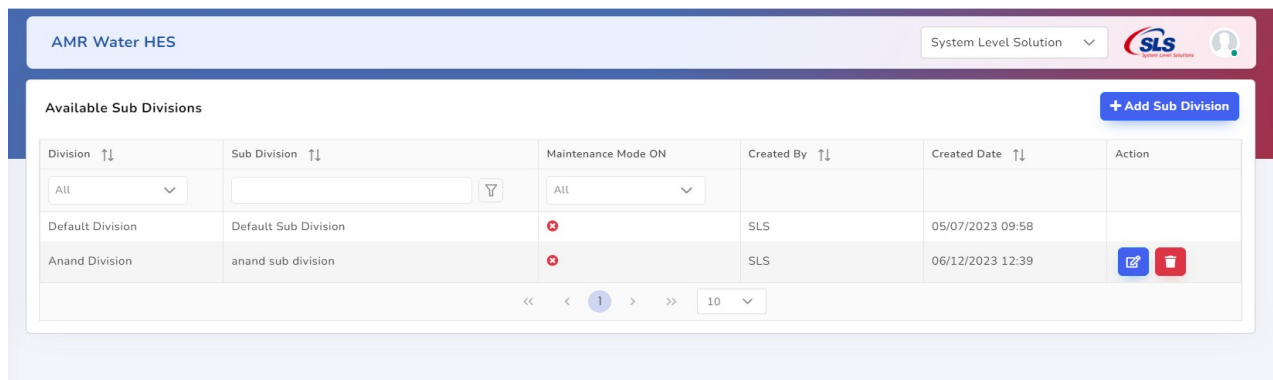

Division	Sub Division	Maintenance Mode ON	Created By	Created Date	Action
Default Division	Default Sub Division	✖	SLS	05/07/2023 09:58	
Anand Division	anand sub division	✖	SLS	06/12/2023 12:39	 

User have to click on **Add Sub Division** button to add new Sub Division in to the system. It will open the following page.

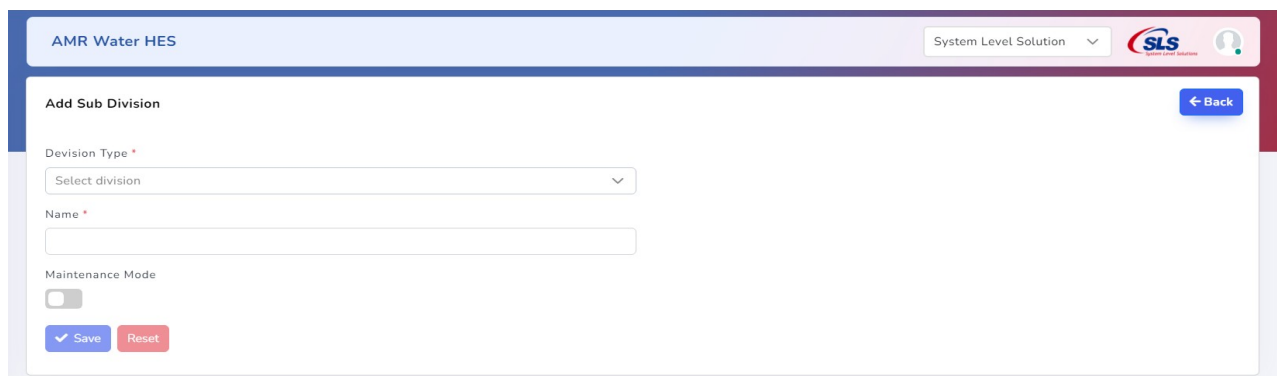

Users have to select the Division from the drop down under which Sub-Division will be created and provide the Sub Division name.

Click on **Save** button to add Sub Division into the system.

2.4.3. Meters

Once Division and Sub Division created, users can add meter into the system. The meter manufacturer and supported meter type details will be configured into the system by the organization.

Users can add, edit, update and delete meter from this page.

Screen Navigation: Login → Asset Management → Meter

Available Devices

In Available Devices, there is one tab: **Meters**

Meters

All installed meters are listed in the **Meters** tab. Users can apply the filter on the columns and check the meter accordingly.

Water AMR HES

SLS QC

Available Devices

[+ Add Device](#) [Bulk Upload](#)

Meters

Meter Serial Number	Consumer Name	Consumer Number	AMR Serial Number	AMR MAC	Division	Sub-Division	Meter type	Meter Read
METER_1H_9566DBCDAA	Anshul Sanmugasund eram	SLS0524000006	CA60609566DBCDAA	CA60609566DBCDAA	Default Division	Default Sub Division	SLS_meter	0
METER_30M_D3193A350	Ashtha Soni	SLS0724000001	CA30602D3193A350	CA30602D3193A350	Default Division	Default Sub Division	Inductive	0
meter_serial_6	Astha parikh	SLS0624000001	serial_L6	123456789ABCDEF5	Default Division	Default Sub Division	Inductive	5
METER_1H_22AD2A0183	Bikram Mackherdhuj	SLS0524000016	CA606022AD2A0183	CA606022AD2A0183	Default Division	Default Sub Division	Inductive	0
METER_1H_067CC79587	Dilawar Marita	SLS0524000017	CA6060067CC79587	CA6060067CC79587	Default Division	Default Sub Division	Inductive	0
METER_1H_986CC6D5DA	Kapil Utpat	SLS0524000005	CA6060986CC6D5DA	CA6060986CC6D5DA	Default Division	Default Sub Division	Inductive	0
METER_1H_AD22A280B4	Oojam Godambe	SLS0524000002	CA6060AD22A280B4	CA6060AD22A280B4	Default Division	Default Sub Division	Inductive	0

If users want to add **Device** then click on **Add Device** button. It will open the following page. The user must provide all required details and click on the **Save** button to add the **Device** to the system.

NEBULAE HES

DESIGN TO CONNECT

Water AMR HES

SLS QC

SLS

Dashboard

Asset Management

Meter

Division

Sub division

User Management

Alert Management

Consumer Management

Organization Management

Vendor Management

Reports

Add Device

Back

AMR Details

Name *

Serial Number *

MAC Address *

Base Pulse Count *

Application *

Device Profile *

Meter Details

Meter Serial Number *

Meter Base Reading *

Division *

Sub Division *

Vendor *

Meter Type *

Meter Scaler Value (Liters) *

Meter Size *

Longitude

Latitude

Save

Reset

2.4.3.1. Bulk Upload

Users can upload multiple meters using bulk upload options. Click on the **Bulk Upload** button. It will open the following page in which all Device Bulk Upload History will be listed.

Water AMR HES

SLS QC

SLS

Device Bulk Upload History


Upload

Back

Transaction Id	Vendor	Meter Type	File Name	Status	Division	Subdivision	Created Date
2105-1	Shobha Enterprise	Inductive	DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	21/05/2024 18:05
D500	Shobha Enterprise	Inductive	D500DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 16:37
C500-2	Shobha Enterprise	Inductive	C500DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 16:26

Upload


Users have to click on the **Upload** button to fill details for bulk upload. It will open the following page.

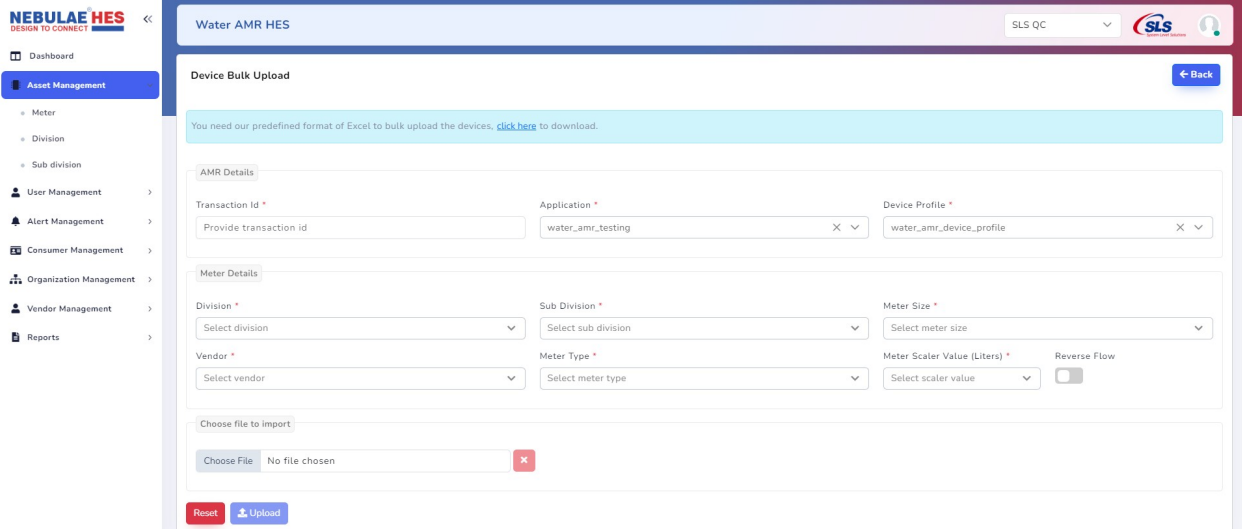

Users need to provide all required details from the drop down. Transaction ID is a unique value which is used for the reference only. Choose the file which is filled in the above step and click on the upload button.

Note: Users have to provide all the meter details into the CSV file. **Make sure all the meters are of the same Application Id, Device profile, Division, Sub-Division, Meter Size, Meter scaler, Vendor and Meter Type.**

Once all details are filled up, users must click the **Upload** button. It will open the Device Bulk Upload History page and list all data from the .CSV file.

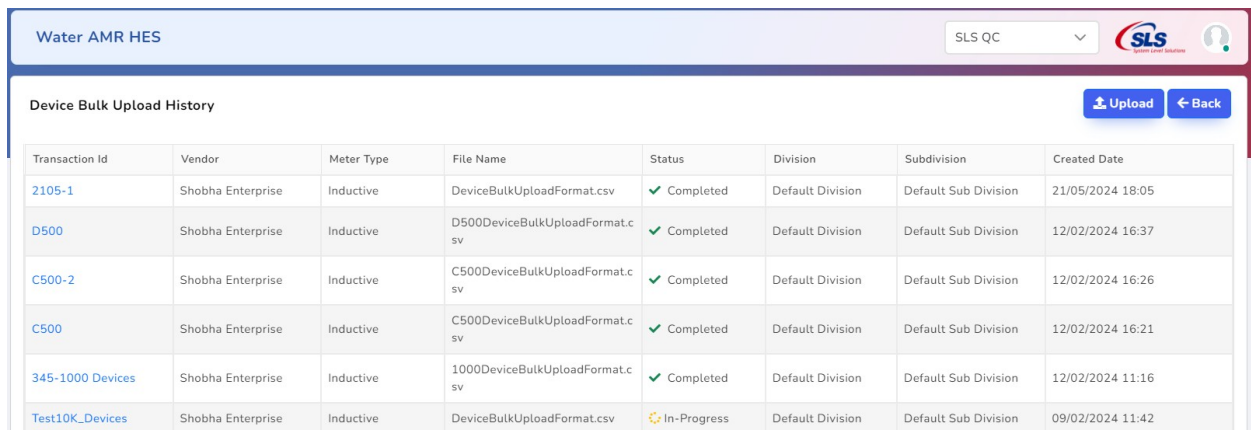

Transaction Id	Vendor	Meter Type	File Name	Status	Division	Subdivision	Created Date
2105-1	Shobha Enterprise	Inductive	DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	21/05/2024 18:05
D500	Shobha Enterprise	Inductive	D500DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 16:37
C500-2	Shobha Enterprise	Inductive	C500DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 16:26
C500	Shobha Enterprise	Inductive	C500DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 16:21
345-1000 Devices	Shobha Enterprise	Inductive	1000DeviceBulkUploadFormat.csv	✓ Completed	Default Division	Default Sub Division	12/02/2024 11:16
Test10K_Devices	Shobha Enterprise	Inductive	DeviceBulkUploadFormat.csv	🔄 In-Progress	Default Division	Default Sub Division	09/02/2024 11:42

Users have to click on the **Transaction Id** link of a particular transaction from Device Bulk Upload History. It will open the following page.

Water AMR HES								
						SLS QC		
Device Bulk Upload Details								
						Download	Back	
Device Name	AMR Serial Number	Meter Serial Number	MAC Address	Base Pulse Count	Meter Base Reading	Status	Message	Created Date
								
AMR_CA001930	CA00000000001930	METER_CA001930	CA00000000001930	0	0	✓ Completed	AMR Device added successfully.	12/02/2024 16:45
AMR_CA001931	CA00000000001931	METER_CA001931	CA00000000001931	0	0	✓ Completed	AMR Device added successfully.	12/02/2024 16:45

Users can also verify the device bulk upload details from the bulk upload list. If any meter fails to upload, its Failed response will be shown in the Status column and with what reason in the Message column.

Users have to click on the **Download** button to download the Device Bulk Upload list in CSV file format.

2.4.3.2. Meter Dashboard

Water AMR HES

SLS QC

Available Devices

+ Add Device

Bulk Upload

Meters

Meter Serial Number	Sub-Division	Meter type	Meter Reading Offset	Meter Scaler Value	Online/Offline	Last Communicated	AMR Action	Action
					All			
METER_1H_9566DBCD AA	Default Sub Division	SLS_meter	0	10		23/07/2024 15:55		
METER_30M_D3193A3 50	Default Sub Division	Inductive	0			11/06/2024 14:58		
meter_serial_6	Default Sub Division	Inductive	5	10		24/06/2024 11:16		
METER_1H_22AD2A01 83	Default Sub Division	Inductive	0	10		23/07/2024 15:55		
METER_1H_067CC7958 7	Default Sub Division	Inductive	0	10		23/07/2024 15:55		
METER_1H_986CC6D5 DA	Default Sub Division	Inductive	0	10		23/07/2024 15:55		
METER_1H_AD22A280 B4	Default Sub Division	Inductive	0	10		23/07/2024 15:55		
METER_1H_80143CCA2 C	Default Sub Division	Inductive	0	10		23/07/2024 15:55		
METER_1H_29017AAB 93	Default Sub Division	SLS_meter	0	10		23/07/2024 15:55		
Meter_1305	Default Sub Division	Inductive	0	10		24/06/2024 15:37		

Showing 1 to 10 of 70 entries

<<

<

1

2

3

4


5

>




>>

10

Once the meter is added/commissioned successfully into HES, users can view the meter dashboard by clicking on **Meter Serial Number** of the respective meter. It will open the following page.

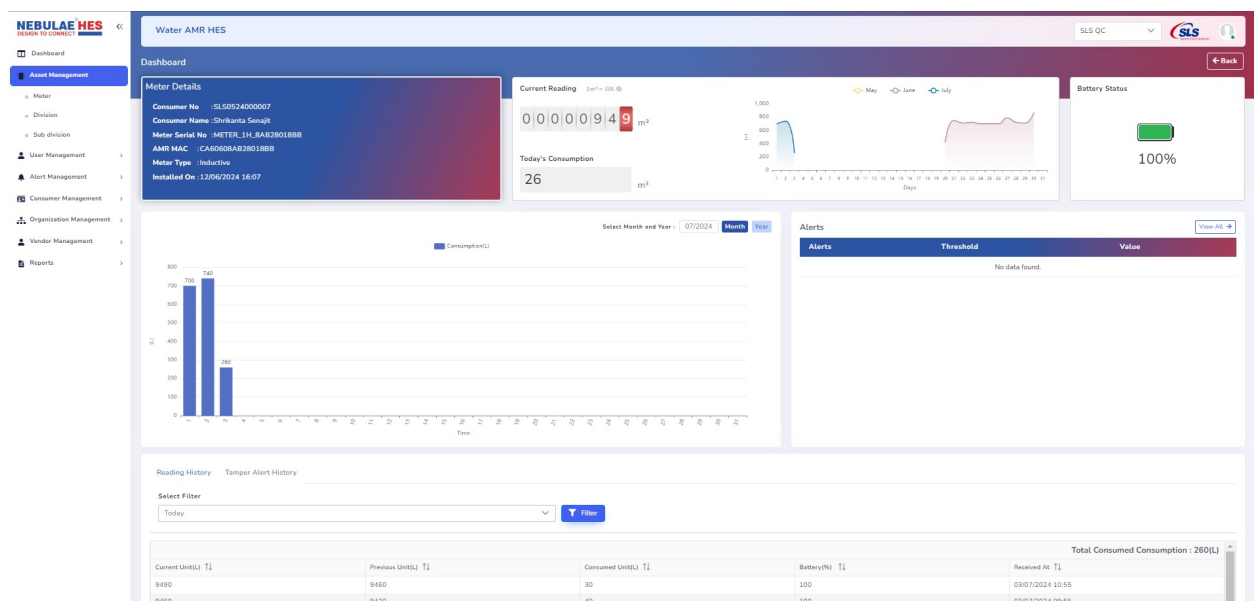


All the required parameters are shown in the meter dashboard. Respective users having access rights can do the read operation with a meter. In meter dashboard following details will be shown:

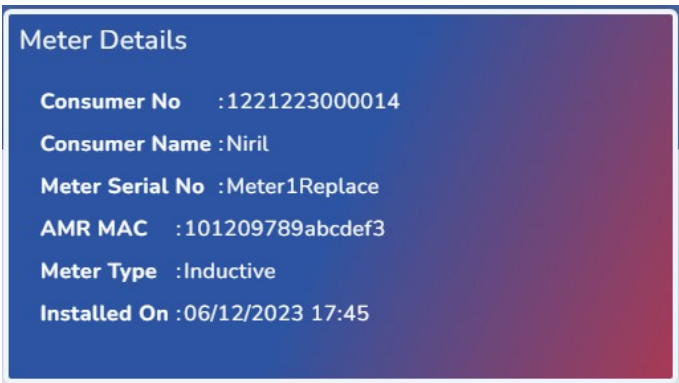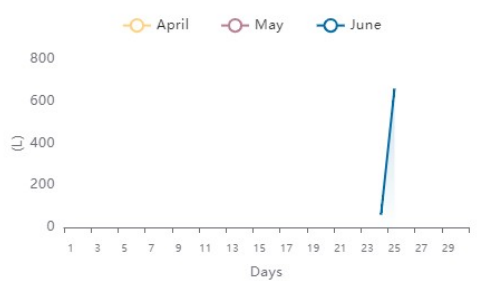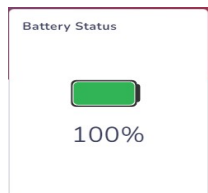Meter Details To get the updated details of the meter.	
Current Reading and Today's Consumption with Meter scaler value	Current Reading 1m³ = 30L ⓘ 0 0 0 0 0 0 4 9 m³ Today's Consumption 25 m³
Last 3 months Consumption Chart	
Battery Status	

Consumption Graph

Users can view the consumption graph for Day, Week and Month wise.

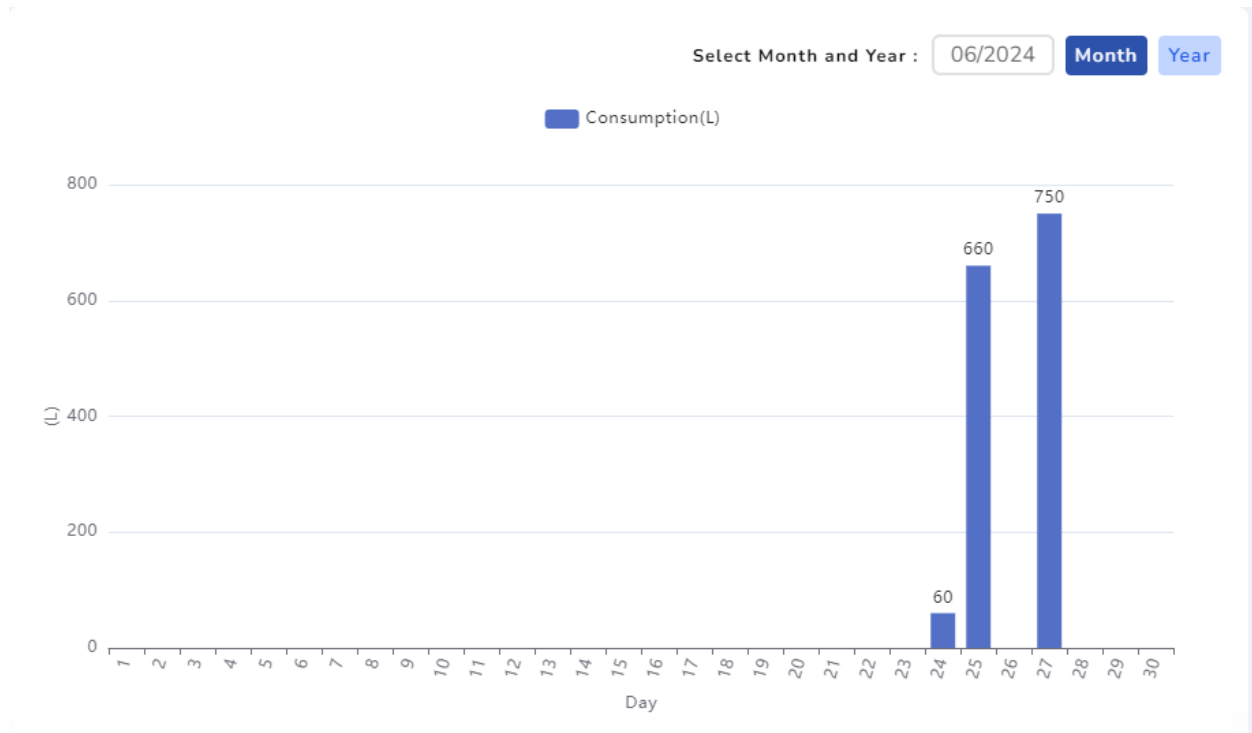

Alerts

Users can view generated Alerts of respective Meter.

Alerts			View All →
Alerts	Threshold	Value	
Low Battery Alert(%) 27/06/2024 14:34	20	0	
Minimum Flow Threshold 27/06/2024 14:34	10	2	

Users can view all alerts of respective meter by clicking on the **View All** button and opening the following page which shows all alerts of resolved, warning and escalate.

Water AMR HES

SLS QC

Alert Report

← Back

Select Meter

Select



	Alert Name ↑↓	Meter Serial Number	Threshold	Value	Captured Date ↑↓	Updated Date ↑↓	Alert Status ↑↓
							All ↓
➤	Volume Above Threshold (Daily)	METER_1H_80143CCA2C	70	73	02/07/2024 22:57	02/07/2024 23:57	⚠
➤	Volume Above Threshold (Daily)	METER_1H_986CC6D5DA	70	73	01/07/2024 23:56	01/07/2024 23:56	⚠
➤	Volume Above Threshold (Daily)	meter_serial_6	70	100	24/06/2024 11:11	24/06/2024 11:16	⚡
➤	Volume Above Threshold (Daily)	METER_1H_A507B69306	70	80	23/06/2024 22:55	23/06/2024 23:55	⚡
➤	Volume Above Threshold (Daily)	METER_1H_986CC6D5DA	70	79	23/06/2024 20:55	23/06/2024 23:55	⚡
➤	Volume Above Threshold (Daily)	METER_1H_80143CCA2C	70	85	23/06/2024 19:55	23/06/2024 23:55	⚡
➤	Volume Above Threshold (Daily)	METER_1H_A507B69306	70	73	22/06/2024 22:57	22/06/2024 23:57	⚡
➤	Volume Above Threshold (Daily)	METER_1H_80143CCA2C	70	78	22/06/2024 21:57	22/06/2024 23:57	⚡
➤	Volume Above Threshold (Daily)	METER_1H_80143CCA2C	70	72	21/06/2024 23:55	21/06/2024 23:55	⚡
➤	Volume Above Threshold (Daily)	METER_1H_986CC6D5DA	70	90	21/06/2024 18:59	21/06/2024 23:55	⚡

Showing 1 to 10 of 10 entries

<< < 1 > >>

25

Alert Status Symbols indicates:

Resolved	
Warning	
Escalate	

Reading History

Users can view the Consumption history data for battery, consumed unit, previous unit and current unit. Here, **Total Consumed Consumption** is a total of **Consumed Unit**. Users can also view reading history based on filters like today, yesterday, last month and more.

Reading History

Tamper Alert History

Select Filter

Today

Filter

Total Consumed Consumption : 750(L)

Current Unit(L) ↑↓	Previous Unit(L) ↑↓	Consumed Unit(L) ↑↓	Battery(%) ↑↓	Received At ↑↓
750	600	150	0	27/06/2024 14:34
600	450	150	0	27/06/2024 14:34
450	300	150	0	27/06/2024 14:33
300	150	150	0	27/06/2024 14:33
150	720	150	0	27/06/2024 14:33

Showing 1 to 5 of 5 entries

<<

<

1

>

>>

10

▼

Tamper Alert History

Users can view the Tamper Alert History data for magnet tamper and button tamper.

Tamper Alert Status Symbol Indicates:

Reading History

Tamper Alert History

Select Filter

This Month

▼

Filter

Indication	Count	Duration(s)/Time(Date)	Received At
✔ Clear	1	17s	06/06/2024 15:41
⚠ Raise	3		06/06/2024 15:40
✔ Clear	1	28s	06/06/2024 15:33
⚠ Raise	3		06/06/2024 15:32

Showing 1 to 4 of 4 entries

<<

<

1

>

>>

10

▼

Magnet Tamper Raise	 Raise
Magnet Tamper Clear	 Clear
Button Tamper	Button

2.5. Consumer Management


2.5.1. Consumer Category

Users can create the consumer category from this page according to the requirement. Users can add, edit, update and delete consumer a category from this page.

Screen Navigation: Login → Consumer Management → Consumer Category


Available Consumer Category

All created consumer categories are listed in this page. Users can apply the filter on the name and get the required consumer category.

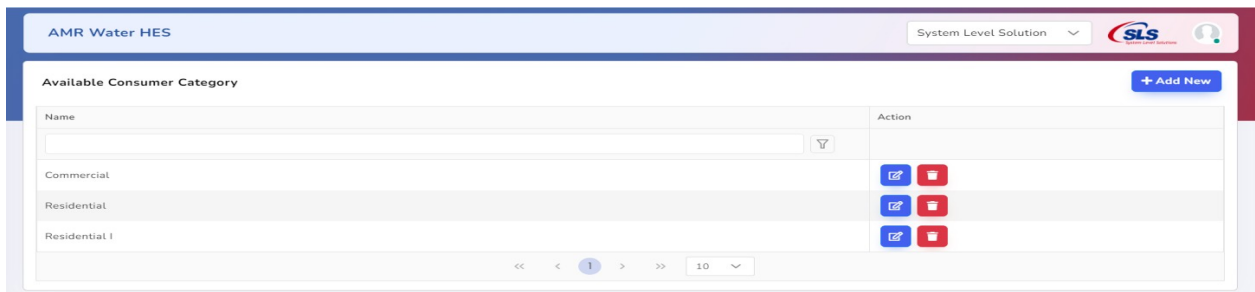

Name	Action
Commercial	 
Residential	 
Residential I	 

To add a new category, the user must click on the **Add New** button. It will open the following page. Users have to provide the proper Category name and click on the **Save** button to add a category in the system.

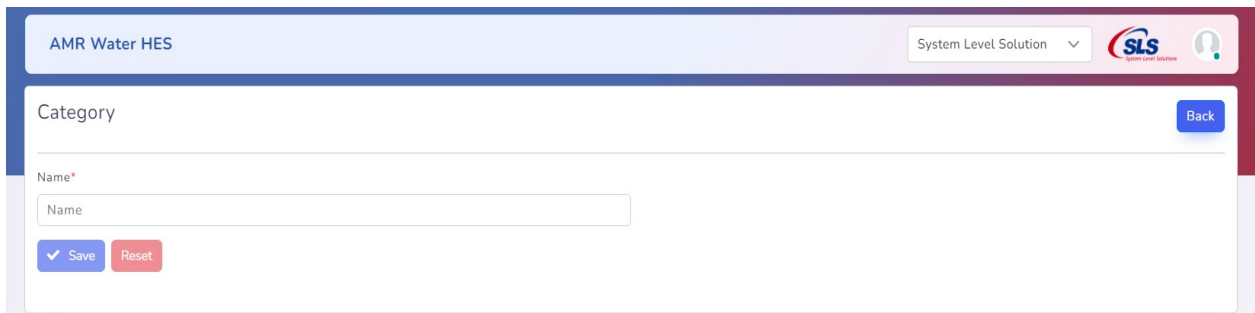

Category Back

Name*

✓ Save Reset

2.5.2. Consumer

After creating a Consumer Category, Users can create the consumer from this page according to the requirement. Users can add, edit, update and delete a consumer from this page.

Screen Navigation: Login → Consumer Management → Consumer

Available Consumer

All created consumers are listed in the following page. Users can apply the filters and get the required consumer.

AMR Water HES

System Level Solution 

Available Consumer

[+ Add Consumer](#)
[Bulk Upload](#)

Consumer Number ↑↓	Serial Number ↑↓	Consumer Name ↑↓	Consumer Category ↑↓	Current Consumption	Alert Profile ↑↓	Action
1220124000002	meterserial05	suman	Commercial	50	alert_testing_2	 
1220124000001	meter_4	vishal	Commercial	10	AlertTesting1	 
1221223000002	meter_3	demo	Commercial	480	AlertTesting1	 
1221223000001	METER2	test	Residential I	9475	AlertProfile1	 
1221123000001	meter_2	suman	Residential I	78467	AlertProfile1	 

Showing 1 to 5 of 5 entries << < 1 > >> 25

Add Consumer

To add a new consumer, the user must click on the **Add Consumer** button. It will open the following page. Users have to provide the proper consumer name with address in detail and click on the **Save** button to add a consumer in the system (Add Meter Details is optional to save).

Water AMR HES
SLS QC



Add Consumer
Back

Personal Details

Consumer Name *
Email (Optional)
Consumer category *
Select consumer category
Contact Number *

Address Details

Flat / House no / Floor / Building *
Address *
State *
Select State
District *
Sub-District *
City *
Pincode *
Select district
Select Sub District

+ Add Meter details (optional)

Save
Reset

Map Meter

Select the meter from the drop-down and map the meter with the newly created consumer.

Here, users can also create a default guest user by clicking on the switch button. The **username** will be the **meter serial number** and **password** will be the **consumer's contact number**.

2.5.2.1 Bulk Upload

Users can upload multiple consumers using bulk upload options. Click on the **Bulk Upload** button. It will open the following page in which all Consumer Bulk Upload History will be listed.

Water AMR HES
SLS QC




Consumer Bulk Upload History
Upload
Back

Transaction Id	File Name	Consumer Category	State	District	Sub District	Status	Created Date
						All	
No details found.							
Showing 0 to 0 of 0 entries							

Upload

Users have to click on the **Upload** button to fill details for bulk upload. It will open the following page:

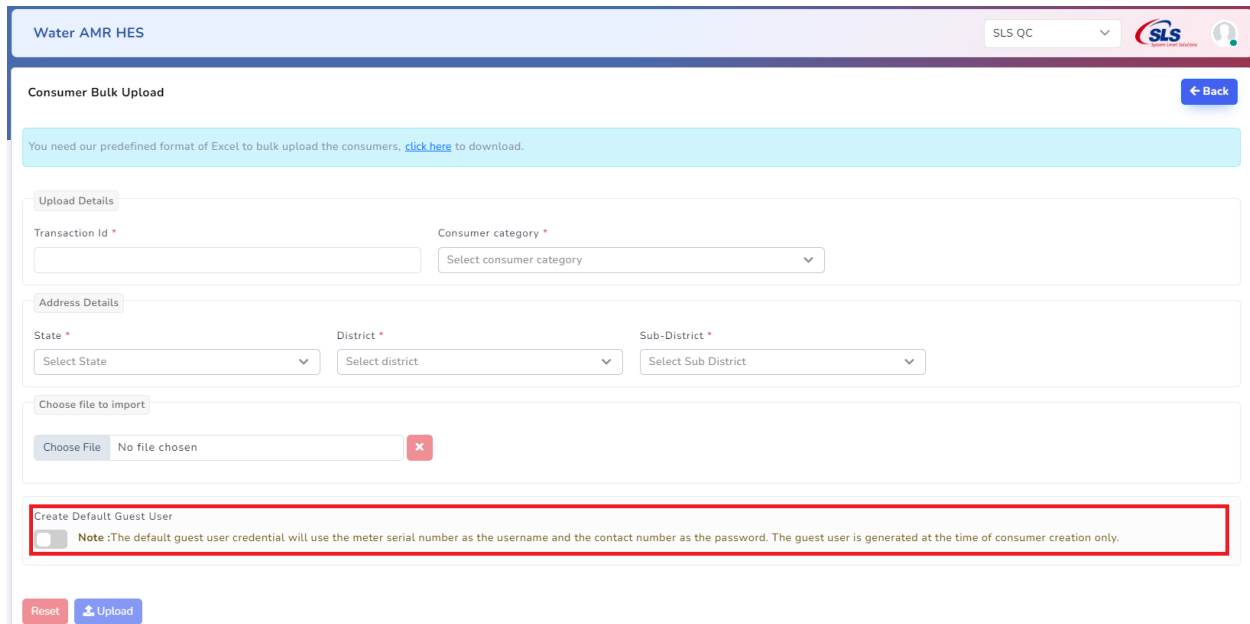

Water AMR HES SLS QC

Consumer Bulk Upload

You need our predefined format of Excel to bulk upload the consumers. [click here](#) to download.

Upload Details

Transaction Id * Consumer category *

Select consumer category

Address Details

State * District * Sub-District *

Select State Select district Select Sub District

Choose file to import

Choose File No file chosen

Create Default Guest User

☐ Note :The default guest user credential will use the meter serial number as the username and the contact number as the password. The guest user is generated at the time of consumer creation only.

Reset Upload

Users can download a predefined Excel format for bulk upload by clicking the 'Click Here' link.

Also, Users need to provide all required details from the drop down. Transaction ID is a unique value which is used for the reference only. Choose the file filled in the above step and click on the **Upload** button.

Note: Users have to provide all the consumer details into the CSV file. **Make sure all the consumers are of the same Consumer category, State, District and Sub-District.**

To create a guest user by default for all the consumers click on the switch button (**Create Default Guest User**). It will create a default guest user with the **meter serial number** as **username** and **consumer's contact number** as **password**.

Once all details are filled up, Users must click on the **Upload** button. It will open the Consumer Bulk Upload History page and list all data from the CSV file.

AMR Water HES

System Level Solution



Consumer Bulk Upload History

Upload

Back

Transaction Id	File Name	Consumer Category	State	District	Sub District	Status	Created Date
						All	
tr_1	ConsumerBulkUploadFor mat (7).csv	Commercial	Andaman & Nicobar Islands	Arunachal Pradesh	Arunachal Pradesh	Completed	10/01/2024 14:29
tr_5	ConsumerBulkUploadFor mat (7).csv	Commercial	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Completed	09/01/2024 16:25
tr_4	ConsumerBulkUploadFor mat (7).csv	Commercial	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Completed	09/01/2024 15:40
t_2	ConsumerBulkUploadFor mat (7).csv	Commercial	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Completed	09/01/2024 12:09
rr	ConsumerBulkUploadFor mat (5).csv	Commercial	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Completed	29/12/2023 11:37
t0	ConsumerBulkUploadFor mat (5).csv	Commercial	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Andaman & Nicobar Islands	Completed	28/12/2023 17:27

Showing 1 to 6 of 6 entries

1

10

Users have to click on the **Transaction Id** link of a particular transaction from Consumer Bulk Upload History. It will open the following page.

AMR Water HES

System Level Solution



Consumer Bulk Upload Details

Download

Back

Consumer Name	Contact Number	Meter Serial Number	Address	Email	Status	Message	Created Date
Y	Y	Y		Y	All		
darshan	1478523690	meterserial1	dd	darshan@s.com	Failed	Meter already bind with o ther consumer	09/01/2024 16:25

Showing 1 to 1 of 1 entries

<<

<

1

>

>>


25

Users can also verify the consumer bulk upload details from the bulk upload list. If any consumer has failed to upload, its Failed response will be shown in the Status column and with what reason in the Message column.

Users have to click on the **Download** button to download the Consumer Bulk Upload list in CSV file format.

2.5.2.2 Consumer Dashboard

Users can view the Consumer dashboard by clicking on the consumer number on the respective consumer.

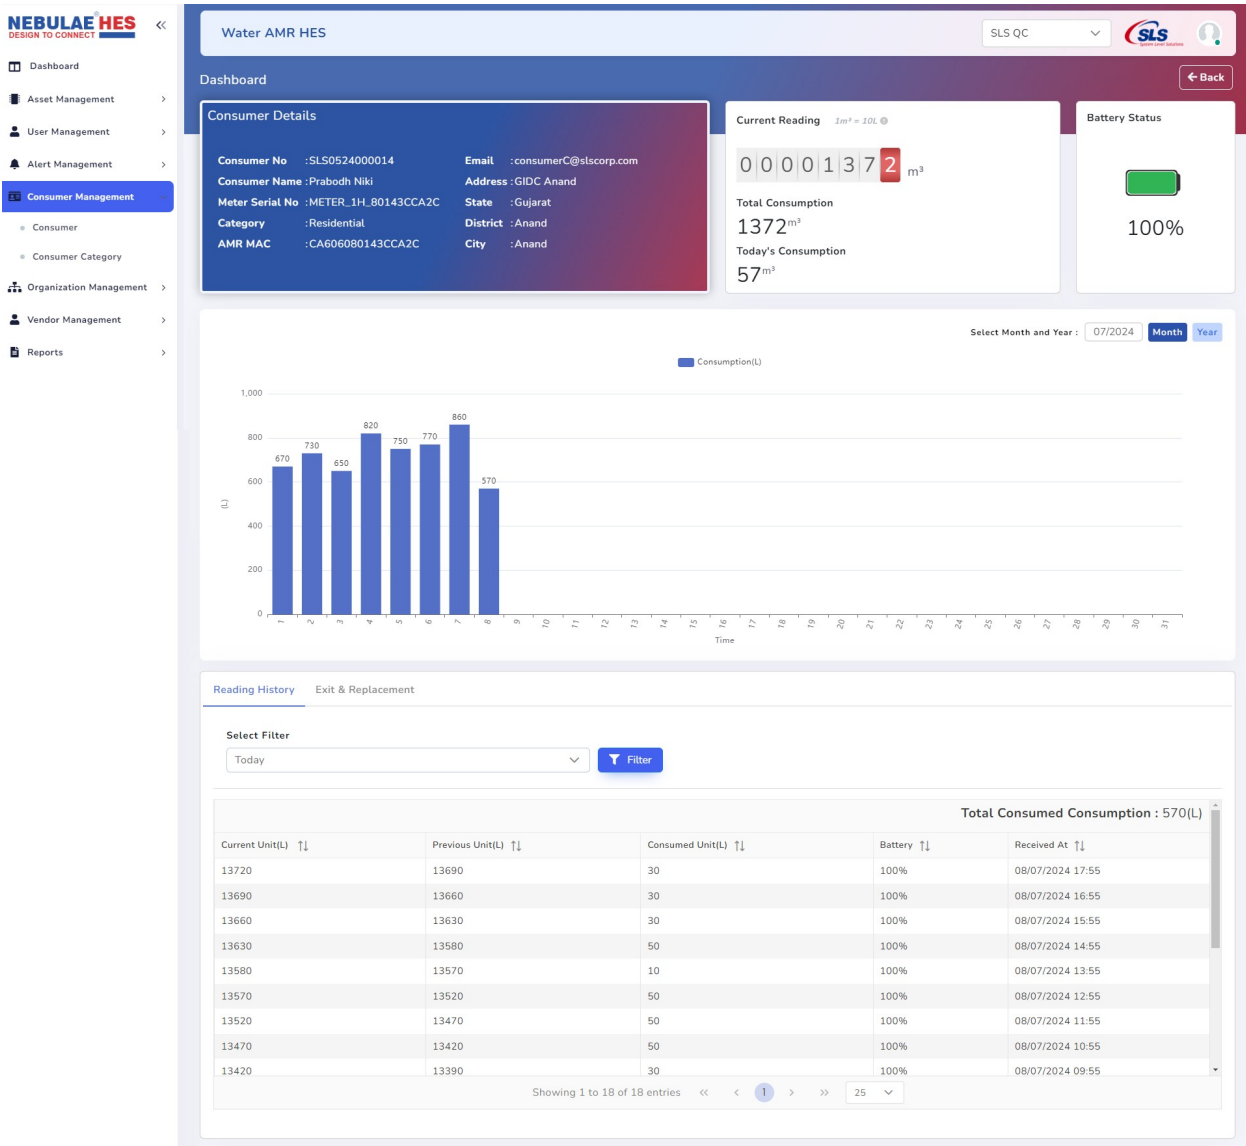


All the required parameters are shown in the consumer dashboard. Each user having access rights can do the read operation with the consumer. In consumer dashboard following details will be shown:

Consumer Details To get the updated details of Consumer with Meter details.	Consumer Details Consumer No :SLS0524000014 Consumer Name :Prabodh Niki Meter Serial No :METER_1H_80143CCA2C Category :Residential AMR MAC :CA606080143CCA2C Email :consumerC@slscorp.com Address :GIDC Anand State :Gujarat District :Anand City :Anand
Current Reading (Meter Dial Reading) and Today's Forward Consumption	Current Reading 1m³ = 10L @ 00001372 m³ Total Consumption 1372m³ Today's Consumption 57m³
Battery Status	Battery Status 100%

Consumption Graph

Users can view the consumption graph for Day and Month wise.

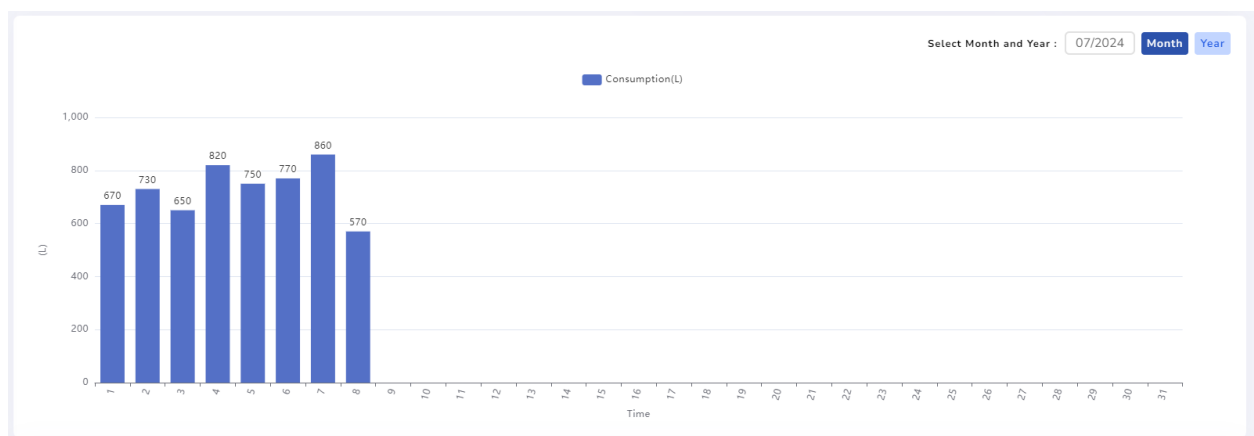

Reading History

Users can view the Consumption history data for battery, consumed unit, previous unit and current unit. Users can also view reading history based on filters like today, yesterday, last month and more.

Reading History		Exit & Replacement		
Current Unit	Previous Unit	Consumed Unit	Battery	Received At
118767	118752	15	100%	21/12/2023 17:32
118752	118738	14	100%	21/12/2023 17:27
118738	118723	15	100%	21/12/2023 17:22
118723	118533	190	100%	21/12/2023 17:17
118533	118518	15	100%	21/12/2023 16:12
118518	118503	15	100%	21/12/2023 16:07
118503	118489	14	100%	21/12/2023 16:02
118489	118474	15	100%	21/12/2023 15:57
118474	118460	14	100%	21/12/2023 15:52
118460	118445	15	100%	21/12/2023 15:52

Showing 1 to 10 of 17 entries << < 1 2 > >> 10

Consumer → Replacement

Users can replace the consumer bind meter by clicking on the **Add Replacement** button. It will open the following dialog box. User can select meter to replace consumer meter.

Replacement
×

Consumer No*
BDN0924000015

Current Meter*
1382242700848

Current AMR Device*
AMR1382242700848

Meter

Select New Meter*
Select Meter

Select Alert Profile
Select Alert Profile

Old Meter Reading*
4

New Meter Offset*

AMR Device

Select AMR Device *
Select AMR Device

New AMR Base Pulse Count *

Old AMR Pulse Count*

Reason *

Cancel Submit

2.5.2.3 Exit & Replacement

Exit Consumer

In Water HES, when a consumer exits from a meter, it typically means that the consumer is no longer connected to or utilizing the measured by that meter. This could occur when a consumer moves out of a residence, disconnects a service, or adopts an alternative source. As a result, HES will update its records to reflect the change in consumer status and adjust its monitoring accordingly.

It is necessary for the users to exit the bound consumer by clicking the **Exit Consumer** button and meter will be vacant state.

2.5.3 Alert Management

Users can create the Alert Profile from this page according to the requirement. Users can add, edit, update and delete alert profiles from this page.

Screen Navigation: Login → Alert Management → Alert Profile

Available Alert Profiles

Water AMR HES

SLS QC

Available Alert Profiles

+ Add Alert Profile

Name ↑↓	Meter Type ↑↓	Consumer Category ↑↓	Mark as Default	Created By ↑↓	Created Date ↑↓	Action
⌵	⌵	⌵	All⌵			
alert_profile_1	Inductive	Residential	✖	hes@slscorp.com	19/01/2024 17:43	
AlertTesting1	SLS_meter	Commercial	✔	demo_qc@slscorp.com	14/05/2024 11:02	
Main Profile	Inductive	Residential	✔	darshan@slscorp.com	07/12/2023 15:40	

<<<

<

1

>

>>>

10⌵

All created Alert Profiles are listed in this page. Users can apply the filters and get the required alert profile. To add a new alert profile, users must click on the Add Alert Profile button. It will open the following page. Users have to provide the proper alert profile name, select alerts and click on the **Save** button to add an alert profile in the system.

Water AMR HES
System Level Solution



Add Alert Profile
Back

Name *
Meter Type *
Consumer category *

Select

Select

Alerts

Select	Name	Values
☐	Low Battery Alert (%)	Min
☐	Volume Below Threshold	Monthly ☐ Enabled Min Daily ☐ Enabled Min
☐	Volume Above Threshold	Monthly ☐ Enabled Max Daily ☐ Enabled Max

Save
Reset

2.6. Reports

2.6.1. Consumption History

To view consumption history of all meters, users can view from the report section. It will open the following page:

To download the report in XLSX format click on **Download** button.

Screen Navigation: Login → Reports → Consumption History

In consumption history, there are two tabs: Meter, Consumer

Meter

All meter consumption with or without the consumer is shown in the meter tab. Use the filter to see the consumption based on specific time/day. Users can apply the filter on the columns and check the consumption accordingly.

Meter
Consumer

Select Filter
This Month
Filter

Download

Meter Serial Number	Division Name	Sub Division Name	Total Consumption(L)		
			Start	End	Total
METER_0001118e69	Default Division	Default Sub Division	60	1530	1470
METER_0001118e68	Default Division	Default Sub Division	120	750	630
METER_0001118e67	Default Division	Default Sub Division	80	520	440
METER_0001115226	Default Division	Default Sub Division	10	190	160
METER_150017780a	Default Division	Default Sub Division	30	210	180

Showing 1 to 5 of 5 entries
1
25

Consumer

All meters consumed by the consumers are shown in the consumer tab. Users can apply the filter on the columns and check the consumption accordingly.

Water AMR HES

SLS QC

MeterConsumer

Select Filter

Today

Filter

Download

Consumer Number	Consumer Name	Category	Total Consumption (L)		
			Start	End	Total
SLS0524000017	Dilawar Marita	Commercial	23290	23830	540
SLS0524000016	Bikram Mackherdhuj	Commercial	22280	22830	550
SLS0524000015	Rasaraj Lalitesh	Commercial	22630	23240	610
SLS0524000014	Prabodh Niki	Residential	23500	24070	570
SLS0524000012	Vitthal Shroff	Commercial	22680	23310	630
SLS0524000007	Shrikanta Senajit	Commercial	23190	23630	440
SLS0524000006	Anshul Sanmugasunderam	Commercial	23510	24150	640
SLS0524000005	Kapil Utpat	Residential	23040	23700	660
SLS0524000004	Sainath Deivan	Residential	22580	23140	560
SLS0524000002	Oojam Godambe	Commercial	22710	23220	510

Showing 1 to 13 of 13 entries

1

<<<>>>

25

2.6.2. Alert History

To view alert history of all meters, users can view from the report section. It will open the following page:

Screen Navigation: Login → Reports → Alert History

Alert Report

Water AMR HES

SLS QC

Alert Report

Select Meter

Select



	Alert Name 	Meter Serial Number	Threshold	Value	Captured Date 	Updated Date 	Alert Status 
							All 
>	Volume Above Threshold (Daily)	METER_1H_986CC6D5 DA	70	74	21/07/2024 23:55	21/07/2024 23:55	
>	Volume Above Threshold (Daily)	METER_1H_80143CCA 2C	70	79	21/07/2024 22:00	21/07/2024 23:55	
>	Volume Above Threshold (Daily)	METER_1H_80143CCA 2C	70	79	20/07/2024 21:59	20/07/2024 23:59	
>	Volume Above Threshold (Daily)	METER_1H_986CC6D5 DA	70	75	19/07/2024 22:59	19/07/2024 23:59	
>	Volume Above Threshold (Daily)	METER_1H_986CC6D5 DA	70	71	18/07/2024 23:58	18/07/2024 23:58	
>	Volume Above Threshold (Daily)	METER_1H_A507B693 06	70	72	18/07/2024 23:58	18/07/2024 23:58	
>	Volume Above Threshold (Daily)	METER_1H_80143CCA 2C	70	73	18/07/2024 21:58	18/07/2024 23:58	
>	Volume Above Threshold (Daily)	METER_1H_986CC6D5 DA	70	75	17/07/2024 23:58	17/07/2024 23:58	
>	Volume Above Threshold (Daily)	METER_1H_A507B693 06	70	75	17/07/2024 22:58	17/07/2024 23:58	
>	Volume Above Threshold (Daily)	METER_1H_80143CCA 2C	70	78	17/07/2024 20:58	17/07/2024 23:58	

Showing 1 to 10 of 43 entries

12345

10


Users can apply the filters and check the data as per the requirement.

2.6.3. Gateway Uplinks

To view gateway uplinks of all meters, users can view from the report section. It will open the following page:

Screen Navigation: Login → Reports → Gateway Uplinks

Gateway Uplinks

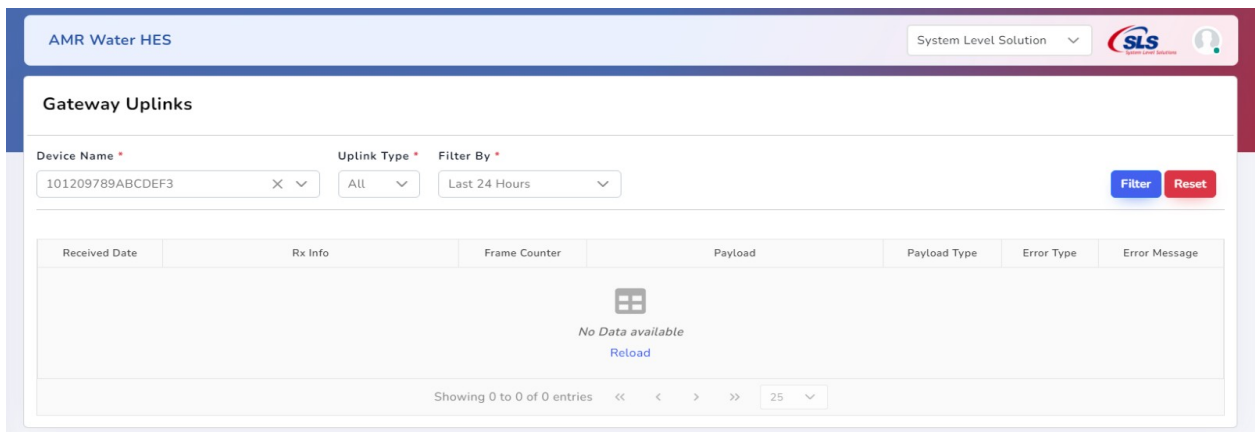

Users can apply the filters and check the data as per the requirement.

2.7 Guest User Dashboard

Users can login with Guest User email Id/username and password, after Signing up.

Note: A guest user must add a consumer when signing up as a guest user to access the respective consumer's data.

By default, the Available Meters page is opened.


2.7.1. Meters

All installed meters are listed in the **Meters** tab.

Screen Navigation: Login → Meter


Available Meters

Users can apply the filter on the columns and check the meter accordingly.

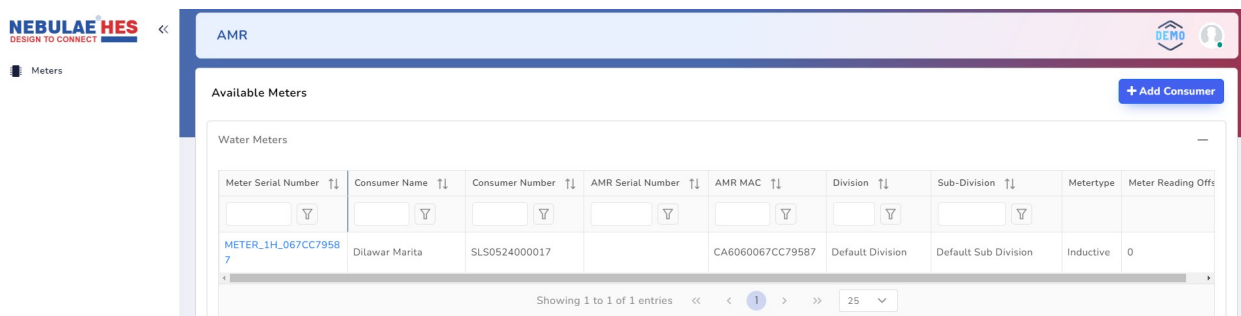


Meter Serial Number	Consumer Name	Consumer Number	AMR Serial Number	AMR MAC	Division	Sub-Division	Metertype	Meter Reading Off
METER_1H_067CC79587	Dilawar Marita	SL50524000017		CA6060067CC79587	Default Division	Default Sub Division	Inductive	0

Users can view the meter dashboard by clicking on the Meter Serial Number of the respective meter. It will open the following page:

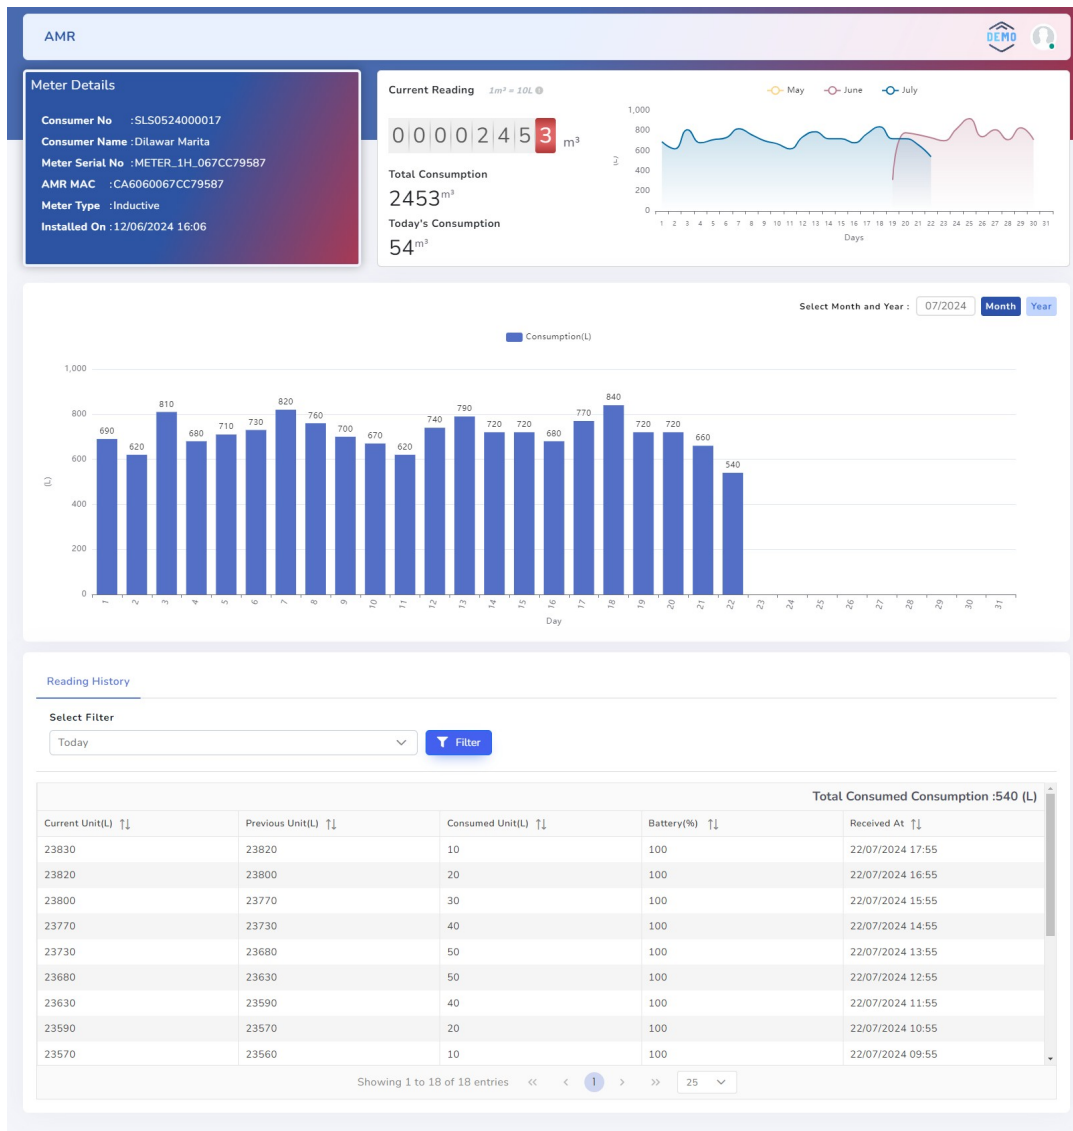


All the required parameters are shown in the meter dashboard. Each user having access rights can do the read operation with a meter. In meter dashboard following details will be shown:

Meter Details To get the updated details of the meter.	Meter Details - Consumer No : SLS0524000017 - Consumer Name : Dilawar Marita - Meter Serial No : METER_1H_067CC79587 - AMR MAC : CA6060067CC79587 - Meter Type : Inductive - Installed On : 12/06/2024 16:06
--	--

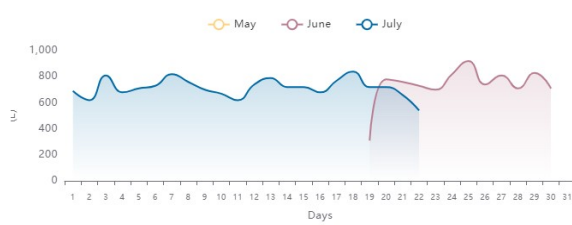Current Reading and Total Consumption and Today's Consumption	Current Reading 1m³ = 10L 00002453 m³ Total Consumption 2453 m³ Today's Consumption 54 m³
Last 3 months Consumption Chart	

Consumption Graph

Users can view the consumption graph for Day and Month wise:

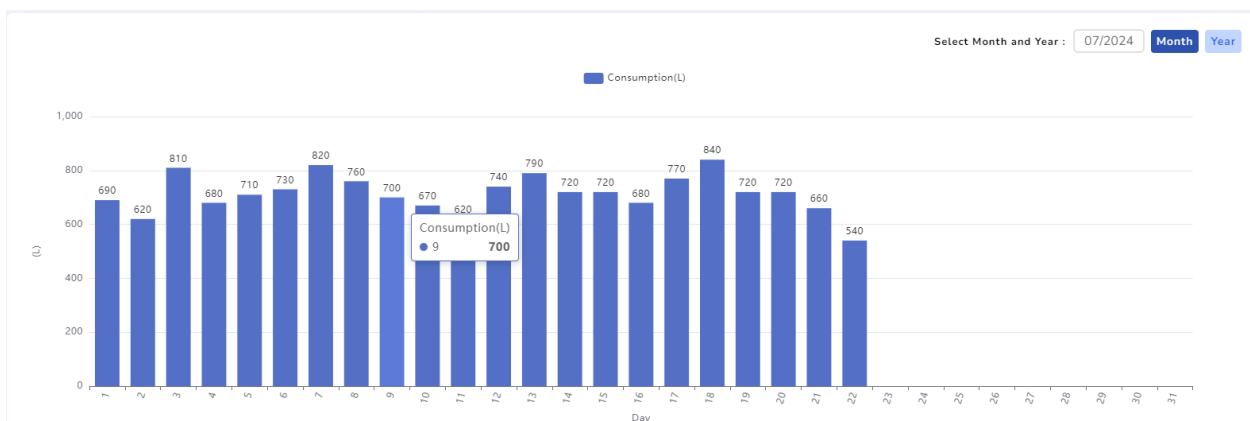

Reading History

Users can view the Consumption history data for battery, consumed unit, previous unit and current unit.

Reading History

Select Filter: Today Filter

Current Unit(L) ↑↓	Previous Unit(L) ↑↓	Consumed Unit(L) ↑↓	Battery(%) ↑↓	Received At ↑↓
23830	23820	10	100	22/07/2024 17:55
23820	23800	20	100	22/07/2024 16:55
23800	23770	30	100	22/07/2024 15:55
23770	23730	40	100	22/07/2024 14:55
23730	23680	50	100	22/07/2024 13:55
23680	23630	50	100	22/07/2024 12:55
23630	23590	40	100	22/07/2024 11:55
23590	23570	20	100	22/07/2024 10:55
23570	23560	10	100	22/07/2024 09:55

Total Consumed Consumption :540 (L)

Showing 1 to 18 of 18 entries