CLOSING

STEP 6:

Press "Finished - Turn Off".


STEP 7:

Unplug the power cord.
Close & re-lock the Power
Cord compartment.

STEP 8:

After DS200 turns off, remove 2 memory sticks.

- Printer compartment
- Battery compartment

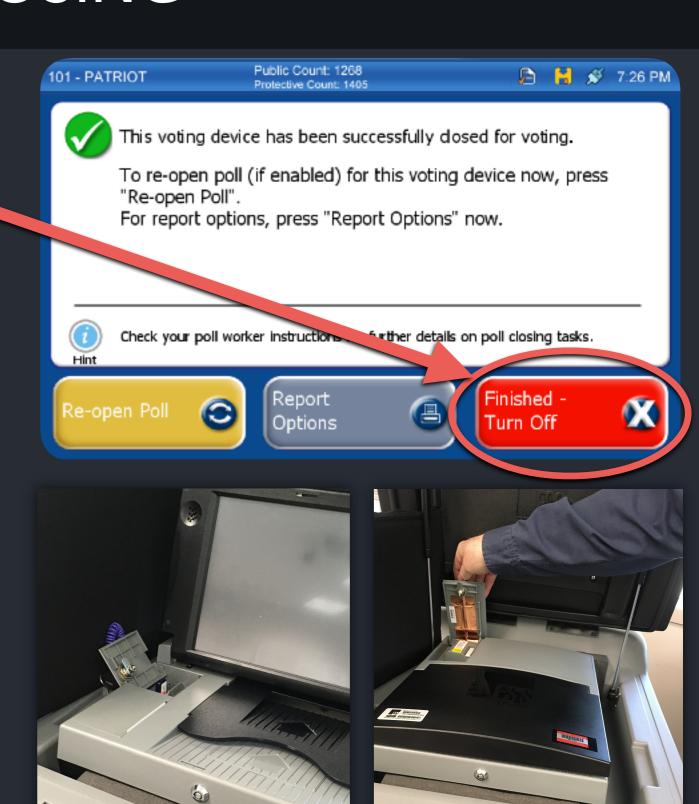

CLOSING



STEP 9:

Close & re-lock DS200 screen.
Close & re-lock outer machine lid.

STEP 10:

On election day, secure with red zip-tie seal and record number on Machine Certification Form.