




Year
4Runner: 1996
Tacoma/T100: 1995-1997
Engine: 5VZ-FE (3.4L V6)
Board: uaEFI Adapter Board V1.0

Notes:
Automatic Transmission Only
Automatic Transmission Only

****WARNING**** Do not plug your ECU into your laptop/computer if your laptop/computer is plugged into the vehicle's 12v charging port!



ECM Terminals

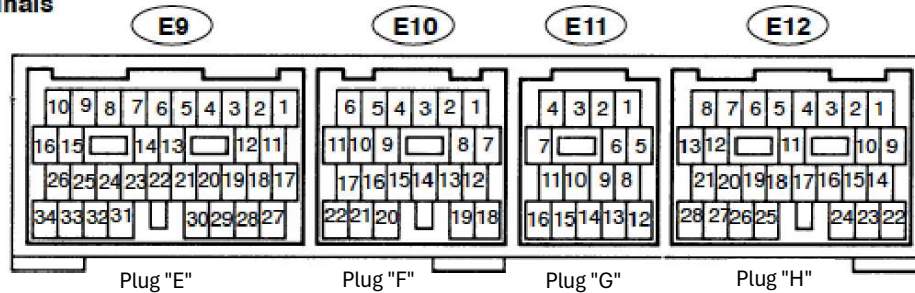

OPEN PINS

Note: Populate open slots in ECU connectors with MLC040II-SKT1 (OEM p/n 82998-24110) or MLC040II-SKT2 (OEM p/n 82998-24120) pins					
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E9	E	2	AUX1	D1 AUX1	Analog Input #1 (0-5v)
E9	E	3	Lowside Output (with PWM)	B17 Low Side Output 3	PWM Ground Output
E9	E	4	7th Injector	B9 MR Weak LS 1	Connect 7th injector negative here, and positive to +B (12V EFI Relay Circuit)
E9	E	18	Ignition Output 4	B11 Coil 4	**MUST be used with an igniter or smart coils**
E9	E	19	Ignition Output 5	B13 Coil 5	**MUST be used with an igniter or smart coils**
E9	E	20	Ignition Output 6	B10 Coil 6	**MUST be used with an igniter or smart coils**
E9	E	21	5V Sensor	N/A	+5V for sensors
E9	E	28	AUX2	C3 AUX2	Analog Input #2 (0-5v)
E9	E	30	Digital Input	MEGA_EPIC_D30	Ground switched
E9	E	31	Digital Input	MEGA_EPIC_D31	Ground switched
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E10	F	2	HB1+		H-Bridge 1 +
E10	F	3	HB1-		H-Bridge 1 -
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E11	G	2	Sensor Ground	N/A	For sensor grounds only
E11	G	6	Sensor Ground	N/A	For sensor grounds only
E11	G	7	PPS2	C4 PPS2	Pedal Position Sensor 2 (Can be used for any 0-5v Analog Input)
E11	G	8	Lowside Output / EGR	MEGA_EPIC_D44	On/Off Ground Output (this is connected to the EGR on some Tacoma & T100)
E11	G	9	Lowside Output / FPU	MEGA_EPIC_D46	On/Off Ground Output (this is connected to the Fuel Pressure Up valve on some Tacoma & T100)
E11	G	10	Lowside Output / ACV	MEGA_EPIC_D45	On/Off Ground Output (this is connected to the A/C Idle Up valve on some Tacoma & T100)
E11	G	11	PPS1	D6 PPS1	Pedal Position Sensor 1 (Can be used for any 0-5v Analog Input)
E11	G	12	5V Sensor	N/A	+5V for sensors
E11	G	14	MAP	D9 MAP	Manifold Absolute Pressure Sensor (Can be used for any 0-5v Analog Input)
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E12	H	8	H-	N/A	For Bosch 17025 (LSU 4.9) WBO Heater - (Connector Pin 3)
E12	H	9	H+	N/A	For Bosch 17025 (LSU 4.9) WBO Heater + (Connector Pin 4)
E12	H	11	TPS2	C14 TPS2	Throttle Position Sensor 2 (Can be used for any 0-5v Analog Input)
E12	H	13	VS	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 6)
E12	H	15	Flex	D5 FLEX	Flex Fuel Signal
E12	H	16	Sensor Ground	N/A	For sensor grounds only
E12	H	19	CalR	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 5)
E12	H	21	IP	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 1)
E12	H	23	CAN1H	N/A	CANBUS High If connecting to stock OBD2 port, use pin p/n BD-SKT (OEM p/n 776001-1) and populate OBD2 pin #6
E12	H	24	CAN1L	N/A	CANBUS Low If connecting to stock OBD2 port, use pin p/n BD-SKT (OEM p/n 776001-1) and populate OBD2 pin #14
E12	H	27	+B	N/A	Switched +12V power from EFI relay circuit
E12	H	28	VS/IP	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 2)

17 025 MATING CONNECTOR

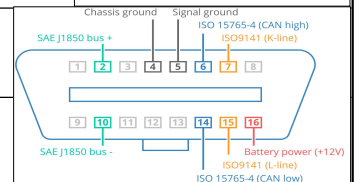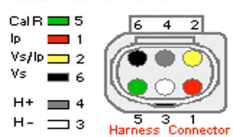




Year
4Runner: 1996
Tacoma/T100: 1995-1997
Engine: 5VZ-FE (3.4L V6)
Board: uaEFI Adapter Board V1.0

Notes:
 Automatic Transmission Only
 Automatic Transmission Only

****WARNING**** Do not plug your ECU into your laptop/computer if your laptop/computer is plugged into the vehicle's 12v charging port!

ECM Terminals

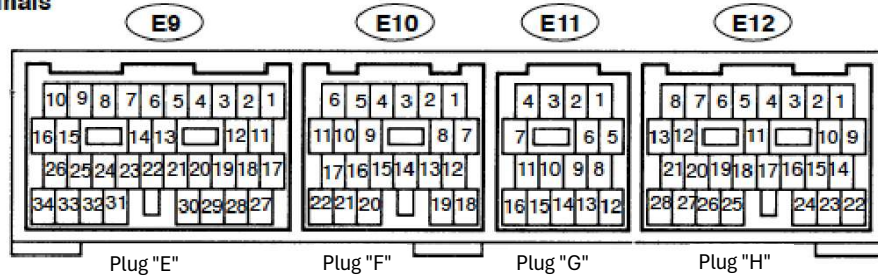

POPULATED PINS

Note: Populate open slots in ECU connectors with MLC040II-SKT1 (OEM p/n 82998-24110) or MLC040II-SKT2 (OEM p/n 82998-24120) pins

Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E9	E	5	#60	B1 Injector Output 6	Injector #6
E9	E	6	#50	B2 Injector Output 2	Injector #5
E9	E	7	#40	B3 Injector Output 4	Injector #4
E9	E	8	#30	B4 Injector Output 3	Injector #3
E9	E	9	#20	B5 Injector Output 2	Injector #2
E9	E	10	#10	B6 Injector Output 1	Injector #1
E9	E	11	S1	MEGA_EPIC_D39	Shift Solenoid 1
E9	E	13	STA	MEGA_EPIC_D28	Cranking Signal
E9	E	14	NSW	MEGA_EPIC_D32	Neutral Safety Switch
E9	E	15	HT2	MEGA_EPIC_D12	Downstream Oxygen Sensor Heater
E9	E	16	HT1	MEGA_EPIC_D13	Upstream O2 Sensor Heater
E9	E	17	S2	MEGA_EPIC_D41	Shift Solenoid 2
E9	E	22	RSC	B18 Low Side Output 2	Idle Air Control Valve - Close
E9	E	23	RSO	B7 Low Side Output 1	Idle Air Control Valve - Open
E9	E	24	IGT1	B15 Coil 1	Ignition Coil #1
E9	E	25	IGT2	B14 Coil 2	Ignition Coil #2
E9	E	26	IGT3	B12 Coil 3	Ignition Coil #3
E9	E	27	SL	MEGA_EPIC_D5	TCC Lockup Solenoid
E9	E	29	L4	MEGA_EPIC_D25	Transfer Case Low Range
E9	E	32	IDL	MEGA_EPIC_D40	Idle Sensor
E10	F	5	NE	C6 HALL2	Crank Signal
E10	F	7	VTA (TPS)	D13 TPS1	Throttle Position Sensor
E10	F	8	VG	C15 AUX3	Mass Air Flow Sensor Signal
E10	F	9	SP2+	C18 VR1+ Discrete	Speed Sensor 2 (use selector switch on the board to select between 4Runner/Tacoma or T100)
E10	F	10	G	C7 HALL3	Cam Signal
E10	F	12	OIL	MEGA_EPIC_ADC_12	Automatic Transmission Fluid Temperature
E10	F	13	OX1	MEGA_EPIC_A1	Upstream Narrowband Oxygen Sensor Signal
E10	F	14	THA	D15 IAT	Intake Air Temperature
E10	F	15	PTNK	MEGA_EPIC_ADC_14	EVAP Pressure
E10	F	16	KNK2	D14 Knock Input	Knock Sensor Bank 2 (use selector switch on carrier board to choose KNK1 or KNK2)
E10	F	17	KNK1	D14 Knock Input	Knock Sensor Bank 1 (use selector switch on carrier board to choose KNK1 or KNK2)
E10	F	19	OX2	MEGA_EPIC_A15	Downstream Narrowband Oxygen Sensor Signal
E10	F	20	THW	D16 CLT Coolant	Engine Coolant Temperature
E11	G	1	IDL	MEGA_EPIC_D40	Idle Sensor
E11	G	3	W	MEGA_EPIC_D43	Check Engine Light
E11	G	4	FC	B16 Low Side Output 4	Fuel Pump
E11	G	8	EGR	MEGA_EPIC_D44	On/Off Ground Output (this is connected to the EGR on some Tacoma & T100)
E11	G	9	FPU	MEGA_EPIC_D46	On/Off Ground Output (this is connected to the Fuel Pressure Up valve on some Tacoma & T100)
E11	G	10	ACV	MEGA_EPIC_D45	On/Off Ground Output (this is connected to the A/C Idle Up valve on some Tacoma & T100)
E11	G	15	EVP	B8 LS2	EVAP Solenoid
E12	H	1	R	MEGA_EPIC_D34	Reverse (Automatic Transmission)
E12	H	2	2	MEGA_EPIC_D35	2nd Gear Selector (Automatic Transmission)
E12	H	3	L	MEGA_EPIC_D33	Low Gear Selector (Automatic Transmission)
E12	H	4	OILW	MEGA_EPIC_D42	A/T Fluid Overheat Light
E12	H	5	ACT	MEGA_EPIC_D49	A/C Terminate
E12	H	6	OD2	C9 BUTTON 3	Overdrive Lockout Switch / Light
E12	H	10	PWR	MEGA_EPIC_D24	ECT PWR Button (Automatic Transmission)
E12	H	12	SP1	C5 HALL1	Speed Sensor 1
E12	H	20	AC1	MEGA_EPIC_D23	A/C Request
E12	H	25	BK	MEGA_EPIC_D22	Brake Light
E12	H	26	4WD	MEGA_EPIC_D29	4WD Indicator