




Year
4Runner: 1997-1998
Tacoma: 1998-2000
Engine: 5VZ-FE (3.4L V6)
Board: uaEFI Adapter Board V1.0

Notes:

Federal (Non-California) models for 2000 Tacoma



****WARNING**** Do not plug your ECU into your laptop/computer if your laptop/computer is plugged into the vehicle's 12v charging port!

ECM Terminals

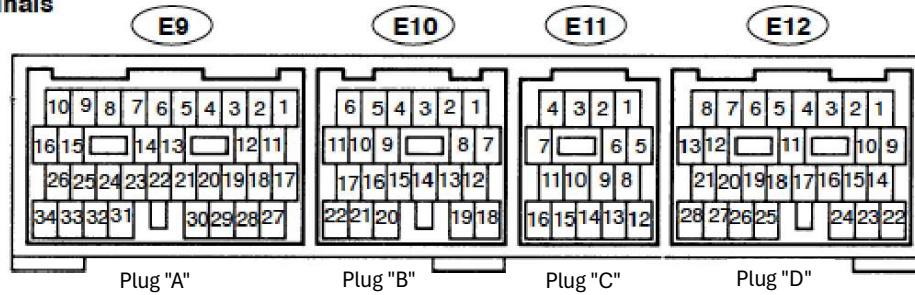

OPEN PINS

Note: Populate open slots in ECU connectors with MLC040II-SKT1 (OEM p/n 82998-24110) or MLC040II-SKT2 (OEM p/n 82998-24120) pins					
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E9	A	3	Lowside Output (with PWM)	B17 Low Side Output 3	PWM Ground Output
E9	A	4	7th Injector	B9 MR Weak LS 1	Connect 7th injector negative here, and positive to +B (12V battery)
E9	A	18	Ignition Output 4	B11 Coil 4	**MUST be used with an igniter or smart coils**
E9	A	19	Ignition Output 5	B13 Coil 5	**MUST be used with an igniter or smart coils**
E9	A	20	Ignition Output 6	B10 Coil 6	**MUST be used with an igniter or smart coils**
E9	A	21	AUX2	C3 AUX2	Analog Input #2 (0-5v)
E9	A	25	CAN1H	N/A	CANBUS High If connecting to stock OBD2 port, use pin p/n BD-SKT (OEM p/n 776001-1) and populate OBD2 pin #6
					CANBUS Low If connecting to stock OBD2 port, use pin p/n BD-SKT (OEM p/n 776001-1) and populate OBD2 pin #14
E9	A	26	CAN1L	N/A	Throttle Position Sensor 2 (Can be used for any 0-5v Analog Input)
E9	A	29	TPS2	C14 TPS2	Analog Input #1 (0-5v)
E9	A	32	AUX1	D1 AUX1	
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E10	B	2	HB1+		H-Bridge 1 +
E10	B	3	HB1-		H-Bridge 1 -
E10	B	10	Sensor Ground	N/A	For sensor grounds only
E10	B	11	G-	N/A	For separated negative VR leads in the factory wiring harness. Connect camshaft VR- here.
E10	B	16	Sensor Ground	N/A	For sensor grounds only
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E11	C	1	Flex	D5 FLEX	Flex Fuel Signal
E11	C	4	5V Sensor	N/A	+5V for sensors
E11	C	15	5V Sensor	N/A	+5V for sensors
Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E12	D	2	H+	N/A	For Bosch 17025 (LSU 4.9) WBO Heater + (Connector Pin 4) -- Tie this into switched 12v power from EFI relay
		3	VS	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 6)
		4	IP	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 1)
		9	H-	N/A	For Bosch 17025 (LSU 4.9) WBO Heater - (Connector Pin 3)
E12	D	13	VS/IP	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 2)
E12	D	17	Lowside Output (with PWM)	B8 Low Side Output 2	PWM Ground Output (flyback diode has been added to the adapter board for protection)
E12	D	21	MAP	D9 MAP	Manifold Absolute Pressure Sensor (Can be used for any 0-5v Analog Input)
E12	D	25	PPS1	D6 PPS1	Pedal Position Sensor 1 (Can be used for any 0-5v Analog Input)
E12	D	26	CalR	N/A	For Bosch 17025 (LSU 4.9) WBO (Connector Pin 5)
E12	D	27	Digital Input	MEGA_EPIC_D30	Ground switched
E12	D	28	Digital Input	MEGA_EPIC_D31	Ground switched
E12	D	28	PPS2	C4 PPS2	Pedal Position Sensor 2 (Can be used for any 0-5v Analog Input)

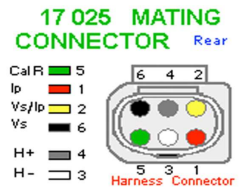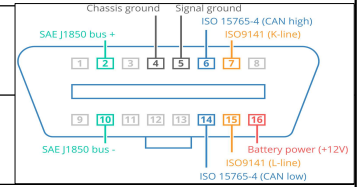




Year
4Runner: 1997-1998
Tacoma: 1998-2000
Engine: 5VZ-FE (3.4L V6)
Board: uaEFI Adapter Board V1.0

Notes:

Non-California models for 2000 Tacoma

****WARNING**** Do not plug your ECU into your laptop/computer if your laptop/computer is plugged into the vehicle's 12v charging port!

ECM Terminals

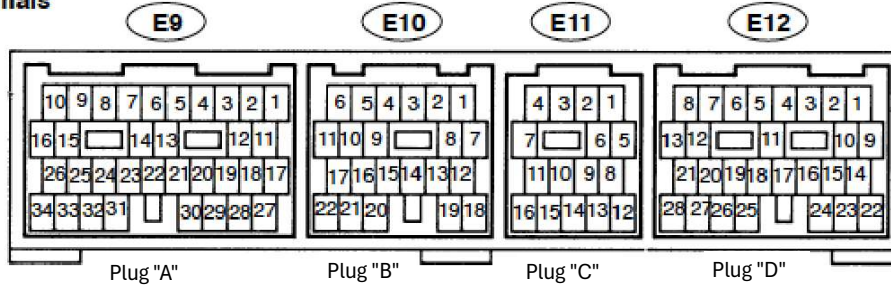

POPULATED PINS

Note: Populate open slots in ECU connectors with MLC040II-SKT1 (OEM p/n 82998-24110) or MLC040II-SKT2 (OEM p/n 82998-24120) pins

Connector	Plug	Pin	Function	Tuner Studio Channel Name	Notes
E9	A	1	4WD/AWD	MEGA_EPIC_D29	4WD Indicator
E9	A	2	L4	MEGA_EPIC_D25	Transfer Case Low Range
E9	A	5	#60	B1 Injector Output 6	Injector #6
E9	A	6	#50	B2 Injector Output 2	Injector #5
E9	A	7	#40	B3 Injector Output 4	Injector #4
E9	A	8	#30	B4 Injector Output 3	Injector #3
E9	A	9	#20	B5 Injector Output 2	Injector #2
E9	A	10	#10	B6 Injector Output 1	Injector #1
E9	A	11	S1	MEGA_EPIC_D39	Shift Solenoid 1
E9	A	13	STA	MEGA_EPIC_D28	Cranking Signal
E9	A	14	NSW	MEGA_EPIC_D32	Neutral Safety Switch
E9	A	15	IGT3	B12 Coil 3	Ignition Coil #3
E9	A	16	IGT2	B14 Coil 2	Ignition Coil #2
E9	A	17	S2	MEGA_EPIC_D41	Shift Solenoid 2
E9	A	22	RSC	B18 Low Side Output 2	Idle Air Control Valve - Close
E9	A	23	RSO	B7 Low Side Output 1	Idle Air Control Valve - Open
E9	A	24	IGT1	B15 Coil 1	Ignition Coil #1
E9	A	27	SL	MEGA_EPIC_D5	TCC Lockup Solenoid
E9	A	30	OIL	MEGA_EPIC_ADC_12	Automatic Transmission Fluid Temperature
E9	A	31	PSW	MEGA_EPIC_D27	Power Steering Switch
E10	B	7	VTA (TPS)	D13 TPS1	Throttle Position Sensor
E10	B	9	SP2+	C18 VR1+ Discrete	Speed Sensor 2
E10	B	12	PWR	MEGA_EPIC_D24	ECT PWR Button (Automatic Transmission)
E10	B	13	OX1	MEGA_EPIC_A1	Upstream Narrowband Oxygen Sensor Signal
E10	B	14	KNK2	D14 Knock Input	Knock Sensor Bank 2 (use selector switch on carrier board to choose KNK1 or KNK2)
E10	B	15	KNK1	D14 Knock Input	Knock Sensor Bank 1 (use selector switch on carrier board to choose KNK1 or KNK2)
E10	B	17	G	C7 HALL3	Cam Signal
E10	B	18	FC	B16 Low Side Output 4	Fuel Pump
E10	B	19	OX2	MEGA_EPIC_A15	Downstream Narrowband Oxygen Sensor Signal
E10	B	20	THW	D16 CLT Coolant	Engine Coolant Temperature
E10	B	21	THA	D15 IAT	Intake Air Temperature
E11	C	2	EVP	MEGA_EPIC_D3	EVAP Solenoid
E11	C	3	W	MEGA_EPIC_D43	Check Engine Light
E11	C	6	OILW	MEGA_EPIC_D42	A/T Fluid Overheat Light
E11	C	10	HT2	MEGA_EPIC_D12	Downstream Oxygen Sensor Heater
E11	C	11	HT1	MEGA_EPIC_D13	Upstream O2 Sensor Heater
E11	C	13	PTNK	MEGA_EPIC_ADC_14	EVAP Pressure
E12	D	1	L	MEGA_EPIC_D33	Low Gear Selector (Automatic Transmission)
E12	D	5	ACT	MEGA_EPIC_D49	A/C Terminate
E12	D	6	OD2/ODLP	C9 BUTTON 3	Overdrive Lockout Switch / Light
E12	D	10	2	MEGA_EPIC_D35	2nd Gear Selector (Automatic Transmission)
E12	D	11	IDL	MEGA_EPIC_D40	Idle Sensor
E12	D	12	SP1	C5 HALL1	Speed Sensor 1
E12	D	15	R	MEGA_EPIC_D34	Reverse (Automatic Transmission)
E12	D	16	AC1	MEGA_EPIC_D23	A/C Request
E12	D	22	ODMS	C9 BUTTON 3	Overdrive Lockout Switch / Light
E12	D	24	BK	MEGA_EPIC_D22	Brake Light