

This document provides additional assistance with wiring your Extron IP Link® Pro Series enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link® Pro Series enabled product or the controlled device manufacturer supplied documentation.

Device Specifications

Device Type: Camera
Manufacturer: 1 Beyond
Firmware Version: N/A
Model(s): AutoTracker 3

Tested on the Following Software and Firmware Versions

GC (Plus, Pro) Version	3.8.0.503
IP Link Pro Control Processor Firmware	3.09.0000-b009
MediaLink Plus Controller Firmware	3.01.0000-b005
HC 400 Series Firmware	2.08.0002-b002
TLC Pro Series Firmware	3.05.0000-b011

Version History

Driver Version	Date	Notes
1_0_1	7/1/2020	Added Auto Tracking.
1_0_0	3/24/2020	Initial Version

Driver Notes

- User Defined command takes a string parameter and sends the string out of the port.
- Only Power Command will be sent to the device when it is Off or Internal Power Circuit Error.
- Device ID parameter required to be set to the ID of the camera. Default value set to 1.

Driver Timings

- Recommended repeat rate for this driver is .1 seconds.

Control Commands & States

Auto Exposure			
Value	Full Auto Iris Priority	Manual Bright	Shutter Priority
Auto Tracking			
Value	On	Off	
Backlight			
Value	On	Off	
Focus			
Focus Speed	0 – 7		
Value	Far	Near	Stop
Focus Mode			
Value	Auto	Manual	
Home			
Value	None		
Iris			
Value	Up	Down	Reset
Pan Tilt			
Pan Speed	1 – 24		
Tilt Speed	1 – 20		
Value	Up	Down	Left
	Right	Up Left	Up Right
	Down Left	Down Right	Stop
Pan Tilt Reset			
Value	None		
Power			
Value	On	Off	
Preset Recall			
Value	0 – 255		
Preset Reset			
Value	0 – 255		

Preset Save	
Value	0 – 255
Shutter	
Value	Up Down Reset
User Defined Command	
Value	None
User Defined String	
Value	String
Zoom	
Zoom Speed	0 – 7
Value	Tele Wide Stop

Status Available

Auto Exposure			
Value	Full Auto	Manual	Shutter Priority
	Iris Priority	Bright	
Backlight			
Value	On	Off	
Connection Status ^{RP}			
Value	Connected	Disconnected	
Focus Mode			
Value	Auto	Manual	
Power			
Value	On	Off	Internal Power Circuit Error
User Defined String			
Value	String		

^{RP} Connection Status is based off of the following string:

\xD\x09\x04\x00\xFF where \xD ranges from \x81-\x87

Cable and Adapter Requirements

Captive Screw to Mini-DIN 8-pin Serial Cable

Notes for the Device

The following setting needs be set for the driver to function properly.

Set **Protocol** setting to **VISCA**

- Under Main Menu > System > Protocol > VISCA

Serial communication

Port Type: RS-232, RS-485

Baud Rate: 9600

Data Bits: 8


Parity: None

Stop Bits: One


Flow Control: None

Pin Assignments Diagram


RS-232

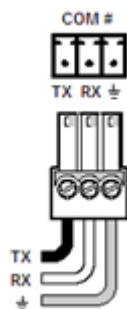


Signal	Main Cable	Pin	Signal
TxD		3	TxD
RxD		5	RxD
GND		4/6	GND

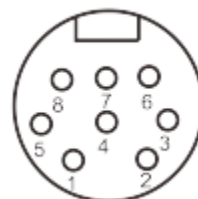

RS-485

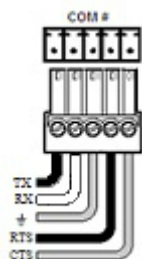

Please contact the manufacturer for pin diagram.

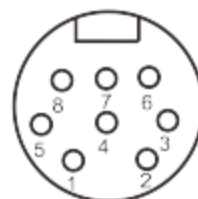

Network communication

When configuring the Ethernet driver, be sure device settings match that of the GCP configuration.

Port Type:	Ethernet (TCP)
Default Port:	5500
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Driver Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

The following setting needs be set for the driver to function properly.

Set **Protocol** setting to **VISCA**

- Under Main Menu > System > Protocol > VISCA