

This document provides additional assistance with wiring your Extron IP Link® Pro Series enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link® Pro Series enabled product or the controlled device manufacturer supplied documentation.

Device Specifications

Device Type: Camera
Manufacturer: 1 Beyond
Firmware Version: N/A
Model(s): PTZ-IP12, PTZ-IP20

Tested on the Following Software and Firmware Versions

GC (Plus, Pro) Version	3.13.0.53
IP Link Pro Control Processor Firmware	3.13.0000-b006
MediaLink Plus Controller Firmware	3.01.0000-b005
HC 400 Series Firmware	2.09.0001-b016
TLC Pro Series Firmware	3.06.0001-b001

Version History

Driver Version	Date	Notes
1_0_1	6/15/2021	Changed Ethernet communication to TCP.
1_0_0	3/24/2020	Initial Version

Driver Notes

- User Defined command takes a string parameter and sends the string out of the port.
- Only Power Command will be sent to the device when it is Off or in Internal Power Circuit Error.
- The Device ID must match the ID set on the camera. The driver default is 1 and ranges from 1 – 7.

Driver Timings

- Recommended repeat rate for this driver is .1 seconds.

Control Commands & States

Auto Exposure			
Value	Full Auto Iris Priority	Manual Bright	Shutter Priority
Auto Focus			
Value	On	Off	
Backlight			
Value	On	Off	
Focus			
Speed	0 – 7		
Value	Far	Near	Stop
Gain			
Value	Up	Down	Reset
Iris			
Value	Up	Down	Reset
Pan Tilt			
Pan Speed	1 – 24		
Tilt Speed	1 – 20		
Value	Up	Down	Left
	Right	Up Left	Up Right
	Down Left	Down Right	Stop
	Home	Reset	
Power			
Value	On	Off	
Preset			
Action	Reset	Save	Recall
Value	0 – 255		
Shutter			
Value	Up	Down	Reset
User Defined Command			
Value	None		

User Defined String			
Value	String		
White Balance			
Value	Auto	Indoor	Outdoor
	One Push	Manual	One Push Trigger
Zoom			
Speed	0 – 7		
Value	Tele	Wide	Stop

Status Available

Auto Exposure			
Value	Full Auto Iris Priority	Manual Bright	Shutter Priority
Auto Focus			
Value	On	Off	
Backlight			
Value	On	Off	
Connection Status ^{RP}			
Value	Connected	Disconnected	
Power			
Value	On	Off	Internal Power Circuit Error
User Defined String			
Value	String		
White Balance			
Value	Auto One Push	Indoor Manual	Outdoor

^{RP} Connection Status is based off of the following string: \x8Y\x09\x04\x00\xFF where Y is the Device ID

For example: Device ID = 1: \x81\x09\x04\x00\xFF

Cable and Adapter Requirements

Captive Screw to 8 pin DIN Serial Cable

Notes for the Device

To ensure the functionality of the driver, please set the following:

- Menu → System → Protocol → VISCA
- On the bottom of the camera, set switch 1 and 2 to the OFF position for the SW2 dip switches

Serial communication

Port Type: RS-232, RS-485

Baud Rate: 9600

Data Bits: 8


Parity: None

Stop Bits: One


Flow Control: None

Pin Assignments Diagram


RS-232

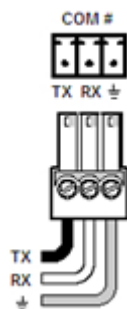


Signal	Main Cable	Pin	Signal
TxD		3	TxD
RxD		5	RxD
GND		4/6	GND

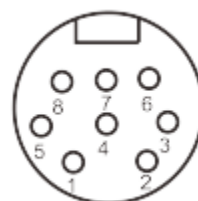

RS-485

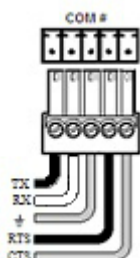

Please contact the manufacturer for pin diagram.

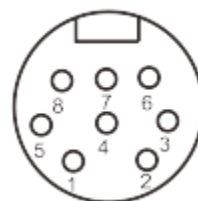

Network communication

When configuring the Ethernet driver, be sure device settings match that of the GCP configuration.

Port Type:	Ethernet (TCP)
Default Port:	5500
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Driver Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the driver, please set the following:

- Menu → System → Protocol → VISCA
- On the bottom of the camera, set switch 1 and 2 to the OFF position for the SW2 dip switches