

This document provides additional assistance with wiring your Extron IP Link® Pro Series enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link® Pro Series enabled product or the controlled device manufacturer supplied documentation.

## Device Specifications

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Type:      | Audio Processor                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Manufacturer:     | Biamp                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Firmware Version: | 5.4.0.8                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Software Version: | 5.4.0.25301                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Model(s):         | TesiraFORTE AI, TesiraFORTE TI, TesiraFORTE VI, TesiraFORTE CI, Tesira SERVER-IO, Tesira SERVER, TesiraFORTE VT, TesiraFORTE VT4, TesiraFORTE DAN AI, TesiraFORTE DAN CI, TesiraFORTE DAN TI, TesiraFORTE DAN VI, TesiraFORTE DAN VT, TesiraFORTE DAN VT4, TesiraFORTE AVB AI, TesiraFORTE AVB CI, TesiraFORTE AVB VT, TesiraFORTE AVB VT4, TesiraFORTE AVB TI, TesiraFORTE AVB VI, TesiraFORTE X 400, TesiraFORTE X 800, TesiraFORTE X 1600 |

## Tested on the Following Software and Firmware Versions

|                                             |                |
|---------------------------------------------|----------------|
| GC (Plus, Pro) Version                      | 3.30.1.4       |
| IP Link Pro Control Processor Firmware      | 3.18.0001-b002 |
| IP Link Pro Control Processor xi Firmware   | 1.11.0001-b002 |
| IP Link Pro Control Processor Q xi Firmware | 1.11.0001-b002 |
| MediaLink Plus Controller Firmware          | 3.04.0000-b001 |
| HC 400 Series Firmware                      | 2.11.0002-b002 |
| TLP Pro x25 and TLC Pro x26 Series Firmware | 3.11.0000-b006 |
| TLP Pro 300M Firmware                       | 1.06.0000-b009 |

## Version History

| Driver Version | Date       | Notes                                                                                                  |
|----------------|------------|--------------------------------------------------------------------------------------------------------|
| 1_20_0         | 12/10/2025 | Extron Certified. Tested on TesiraFORTE SERVER-IO. Added Serial Number parameter to Device Fault List. |
| 1_18_3         | 6/28/2023  | Extron Certified. Tested on TesiraFORTE VI.                                                            |

|        |            |                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        |            | <p>Added commands:</p> <ul style="list-style-type: none"> <li>• Source Selector Output Level</li> <li>• Source Selector Output Mute</li> </ul>                                                                                                                                                                                                                                                                         |
| 1_18_2 | 3/2/2023   | <p>Extron Certified. Tested on TesiraFORTE VI.</p> <p>Accounted for unique Instance Tags for the following commands:</p> <ul style="list-style-type: none"> <li>• Room Combiner Output Level</li> <li>• Signal Present Meter</li> <li>• VoIP Line In Use</li> </ul>                                                                                                                                                    |
| 1_18_0 | 6/29/2022  | <p>Extron Certified. Tested on TesiraFORTE VI. Removed AEC commands for AI models (not supported).</p>                                                                                                                                                                                                                                                                                                                 |
| 1_15_1 | 10/6/2021  | <p>Extron Certified. Tested on Tesira SERVER-IO. Updated Room Combiner Output Level command to use subscribe status.</p>                                                                                                                                                                                                                                                                                               |
| 1_15_0 | 6/15/2021  | <p>Extron Certified. Tested on Tesira SERVER-IO.</p> <p>Added TesiraFORTE X models.</p> <p>Renamed commands:</p> <ul style="list-style-type: none"> <li>• Bluetooth Connection Status → Bluetooth USB Connection Status</li> <li>• Bluetooth Streaming Status → Bluetooth USB Streaming Status</li> </ul> <p>Added AVB and Bluetooth/USB commands for Dante models (requires TesiraCONNECT TC-5D expander to use).</p> |
| 1_14_0 | 2/12/2021  | <p>Extron Certified. Added support for IPCP Pro Q xi and xi controllers. Tested on Tesira SERVER-IO.</p>                                                                                                                                                                                                                                                                                                               |
| 1_13_3 | 1/13/2021  | <p>Extron Certified. Added note regarding enabling SSH communication. Tested on Tesira SERVER-IO.</p>                                                                                                                                                                                                                                                                                                                  |
| 1_13_2 | 1/4/2021   | <p>Extron Certified. Tested on Tesira SERVER-IO.</p> <p>Added commands:</p> <ul style="list-style-type: none"> <li>• AVB Input Level</li> <li>• AVB Input Mute</li> <li>• AVB Output Level</li> <li>• AVB Output Mute</li> </ul>                                                                                                                                                                                       |
| 1_13_1 | 10/20/2020 | <p>Added commands:</p> <ul style="list-style-type: none"> <li>• Bluetooth</li> <li>• Bluetooth Connected Device Name</li> <li>• Bluetooth Connection Status</li> <li>• Bluetooth Device Name</li> <li>• Bluetooth Discovery</li> <li>• Bluetooth Streaming Status</li> </ul> <p>(requires Tesira EX-UBT expander to use)</p>                                                                                           |

|        |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1_13_0 | 10/6/2020  | Extron Certified. Fixed Last Dialed status. Tested on Tesira SERVER-IO.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 1_12_4 | 12/31/2019 | Extron Certified. Fixed communication sheet notes regarding SSH communication. Tested on TesiraFORTE VI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 1_12_3 | 10/25/2019 | Extron Certified. Changed driver to SSH. Tested on TesiraFORTE VI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 1_12_2 | 10/2/2019  | Fixed TI Hook command for when 'None' is used for 'Line' command parameter.<br>Added 'None' to 'Line' command parameters for the following commands: <ul style="list-style-type: none"> <li>• Auto Answer</li> <li>• Dial String</li> <li>• DTMF</li> <li>• Last Dialed</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 1_12_1 | 8/9/2019   | Extron Certified. Fixed DTMF command. Tested on Tesira SERVER-IO.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 1_12_0 | 5/28/2019  | Extron Certified. Tested on Tesira SERVER-IO and TesiraFORTE VI.<br>Updated supported Channel values: <ul style="list-style-type: none"> <li>• AEC Enable</li> <li>• AEC Gain</li> <li>• AEC Phantom Power</li> <li>• Fine Level Control</li> <li>• Input Level</li> <li>• Input Mute</li> <li>• Level Control</li> <li>• Logic State</li> <li>• Mute Control</li> <li>• Output Level</li> <li>• Output Mute</li> </ul> Updated supported Input and Output values: <ul style="list-style-type: none"> <li>• Crosspoint Level</li> <li>• Crosspoint State</li> <li>• Router Control</li> </ul> Updated supported Room values: <ul style="list-style-type: none"> <li>• Room Combiner Group</li> </ul> Updated supported Wall values: <ul style="list-style-type: none"> <li>• Room Combiner Wall</li> </ul> Added: <ul style="list-style-type: none"> <li>• Transfer state for VoIP Hook</li> <li>• Answer Call and Transfer states for VoIP Call Status</li> </ul> |

|        |            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        |            | <ul style="list-style-type: none"> <li>Note regarding new AV Router block</li> </ul> <p>Removed:</p> <ul style="list-style-type: none"> <li>None value for Line command parameter for VoIP Hook</li> <li>Send value from TI Hook</li> </ul> <p>Updated:</p> <ul style="list-style-type: none"> <li>Error trace messages</li> <li>Periodic re-subscribe</li> <li>Comm sheet notes and format</li> </ul> <p>Fixed:</p> <ul style="list-style-type: none"> <li>None value for TI Hook command</li> <li>Authentication for serial</li> <li>Initial subscription status issues for serial</li> </ul> |
| 1_11_2 | 6/29/2018  | Extron Certified. Improved driver performance and added periodical re-subscribe logic. Added Device Fault List command. Tested on TesiraFORTE VI and Tesira SERVER-IO FW 3.5.1.2.                                                                                                                                                                                                                                                                                                                                                                                                               |
| 1_11_1 | 5/3/2018   | Extron Certified. Added Firmware Version and Auto Mixer Combiner Input Group commands. Tested on TesiraFORTE VI FW 3.5.0.32.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 1_11_0 | 4/16/2018  | Extron Certified. Fixed Preset Recall (Name) and Preset Save (Name) commands. Tested on Tesira SERVER-IO 3.5.0.32.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 1_9_1  | 3/15/2018  | Extron Certified. Added models TesiraFORTE AVB AI, TesiraFORTE AVB CI, TesiraFORTE AVB VT, TesiraFORTE AVB VT4, TesiraFORTE AVB TI and TesiraFORTE AVB VI. Tested on Tesira SERVER-IO FW 3.4.3.2.                                                                                                                                                                                                                                                                                                                                                                                               |
| 1_8_3  | 12/15/2017 | Extron Certified. Added Logic Meter command. Tested on TesiraFORTE VI FW 3.4.0.14.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 1_8_2  | 10/5/2017  | Extron Certified. Added DAN models. Tested on Tesira SERVER-IO FW 3.3.0.18.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 1_8_1  | 9/22/2017  | Extron Certified. Added TesiraFORTE VT and TesiraFORTE VT4 models. Tested on Tesira SERVER-IO FW 3.2.0.14.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| 1_8_0  | 9/14/2017  | Extron Certified. Removed Line and Call Appearance parameters from TI commands. Adjusted polling times for commands. Added TI Receive Level, TI Receive Mute, TI Transmit Level, and TI Transmit Mute commands. Fixed range for VoIP Transmit Level command. Tested on Tesira SERVER-IO FW 3.2.0.14.                                                                                                                                                                                                                                                                                            |
| 1_7_0  | 8/24/2017  | Extron Certified. Fixed status issues. Updated notes for how to use driver commands. Tested on Tesira SERVER-IO FW 3.1.0.150.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 1_5_20 | 6/16/2017  | Extron Certified. Added Graphic Equalizer Band Gain and Verbose Mode commands. Added command notes. Tested on Tesira SERVER-IO FW 3.0.2.6.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| 1_5_19 | 3/16/2017  | Extron Certified. Added TI Line In Use and VoIP Line In Use commands. Added note regarding Presets. Tested on TesiraFORTE VI FW 3.0.0.60.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

|        |            |                                                                                                                                                                                                        |
|--------|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1_5_18 | 2/8/2017   | Extron Certified. Increased polling frequency of Logic Input/Output command. Tested on Tesira SERVER-IO FW 2.6.0.16.                                                                                   |
| 1_5_17 | 1/25/2017  | Extron Certified. Added Logic Input/Output command. Tested on Tesira SERVER-IO FW 2.6.0.16.                                                                                                            |
| 1_5_16 | 11/23/2016 | Extron Certified. Added Signal Present Meter command. Tested on Tesira SERVER-IO and TesiraFORTE VI FW 2.6.0.16.                                                                                       |
| 1_5_15 | 11/3/2016  | Extron Certified. Added VoIP Receive Level, VoIP Receive Mute, VoIP Transmit Level, and VoIP Transmit Mute commands. Tested on Tesira SERVER-IO and TesiraFORTE VI FW 2.6.0.16.                        |
| 1_5_14 | 10/6/2016  | Extron Certified. Added Source Selector Source Selection command. Tested on Tesira SERVER-IO and TesiraFORTE VI.                                                                                       |
| 1_5_13 | 7/21/2016  | Extron Certified. Tested on Tesira SERVER-IO and TesiraFORTE VI. Added Do Not Disturb command and note regarding Telnet control new default settings.                                                  |
| 1_5_12 | 03/01/2016 | Extron Certified. Added Room Combiner Source Selection, Level, and Mute commands. Added support for logon credentials. Increased driver command pacing. Tested on Tesira SERVER-IO and TesiraFORTE VI. |
| 1_5_11 | 02/15/2016 | Extron Certified. Added Fine Level Control command. Tested on Biamp TesiraFORTE VI.                                                                                                                    |
| 1_5_10 | 01/06/2016 | Extron Certified. Added Room Combiner Input/Output Level and Input/Output Mute commands. Tested on Tesira SERVER-IO.                                                                                   |
| 1_5_9  | 12/08/2015 | Extron Certified. Added qualifier Line to Dial String command.                                                                                                                                         |
| 1_5_8  | 11/20/2015 | Extron Certified. Added Preset Recall (Name) and Preset Save commands. Tested on Biamp TesiraFORTE VI.                                                                                                 |
| 1_5_7  | 11/04/2015 | Modified driver timings and logic.                                                                                                                                                                     |
| 1_5_4  | 11/2/2015  | Extron Certified. Adjusted subscription behavior for control commands. Fixed Router Control and Last Dialed polling. Tested on Biamp TesiraFORTE VI.                                                   |
| 1_5_1  | 09/18/2015 | Updated driver performance.                                                                                                                                                                            |
| 1_5_0  | 09/11/2015 | Extron Certified. Added TI and VoIP Caller ID. Added New Speed Dial Entry commands and Speed Dial Entry statuses. Tested on Biamp TesiraFORTE VI.                                                      |
| 1_3_0  | 04/15/2015 | Extron Certified. Added VoIP Hook – End command. Added Instance Tag parameter to Dial String.                                                                                                          |

|       |            |                                                                       |
|-------|------------|-----------------------------------------------------------------------|
| 1_2_4 | 10/23/2014 | Extron Certified. Changed subscribe. Tested on Biamp TesiraFORTE VI.  |
| 1_2_3 | 10/22/2014 | Extron Certified. Pacing out polling. Tested on Biamp TesiraFORTE VI. |
| 1_2_2 | 08/22/2014 | Extron Certified. Fixed TI Call Status.                               |
| 1_2_1 | 08/06/2014 | Extron Certified. Tested on Biamp TesiraFORTE VI. Fixed driver.       |
| 1_2_0 | 06/16/2014 | Extron Certified. Tested on Biamp TesiraFORTE VI. Fixed Hook.         |
| 1_1_0 | 06/07/2014 | Extron Certified. Tested on Biamp TesiraFORTE VI. Fixed Dialer.       |
| 1_0_0 | 05/27/2014 | Extron Certified. Initial version. Tested on Biamp Tesira Forte VI.   |

## Driver Notes


- User Defined command takes a string parameter and sends the string out of the port.
- For Ethernet control:
  - A password is required for MediaLink Plus and HC 400 Series controllers.
- Most commands require an 'Instance Tag' command parameter that is assigned by the Tesira designer when the Tesira system is configured. **The Instance Tag used in the Tesira configuration must match the Instance Tag used in the GCP configuration for commands to work.** '/' and '&' are illegal characters to use for the Instance Tag.
- Commands in the driver may or may not be valid for a given control depending on the configuration of the Tesira device.
- **To keep status in sync, reload the GCP configuration after making changes to the Tesira configuration.**
- The following error messages returned from the device are expected by the driver and should be ignored as possible issues:
  - '-ERR ALREADY\_SUBSCRIBED'
  - '-ERR NOT\_SUBSCRIBED'
- For TCP communication, reference archived package biam\_25\_150\_v1\_12\_2.pkp

## Driver Timings

- The driver has a 100 ms command pacing time.
- Recommended repeat rate for this driver is .2 seconds.


## How to use Mute Control command:

- This command is only intended to control mutes for either a 'Level' block or a 'Mute' block. ***CAUTION: attempting to control any other blocks is not recommended and may cause issues.***
- If trying to control a mute for either the 'Input' block or the 'Output' block, add a 'Mute' block either after or before the block to control that instead (see example below).

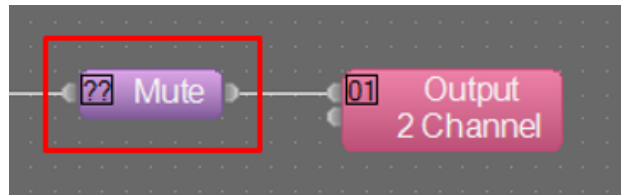


## How to use Fine Level Control and Level Control commands:

- These commands are only intended to control a 'Level' block. ***CAUTION: attempting to control any other blocks is not recommended and may cause issues.***
- These commands have the same functionality except different step sizes. Use them accordingly based on application requirements.
- If trying to control a level for either the 'Input' block or the 'Output' block, add a 'Level' block either after or before the block to control that instead (see example below).

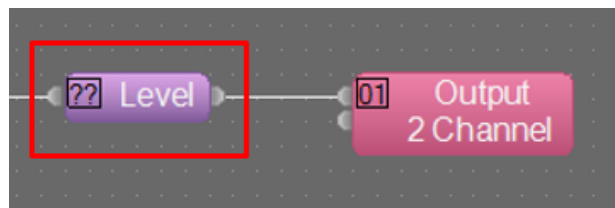

## How to use Input Mute, Input Level, Output Mute, and Output Level commands:

- These commands are intended to control the mutes and levels for 'Mixer' blocks only. ***CAUTION: attempting to control any other blocks is not recommended and may cause issues.***
- These commands are not intended to control mutes or levels within 'Input' blocks or 'Output' blocks. (see example below)

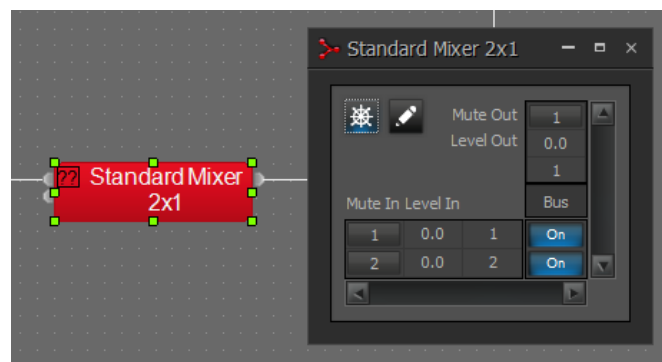

## How to use TI Call Status and VoIP Call Status:


- The 'TI Control/Status' block must be used for TI Call Status, TI Caller ID, and TI Line In Use commands.
- The 'VoIP Control/Status' block must be used for VoIP Call Status, VoIP Caller ID, and VoIP Line in Use commands.
- ***CAUTION: using a 'Dialer' or 'HD-1' block to monitor any of these will not work.***

## Commands that support subscribe status:

- The following commands support subscribe status:
  - AEC Phantom Power
  - Bluetooth
  - Bluetooth Connected Device Name
  - Bluetooth Discovery
  - Bluetooth USB Connection Status
  - Bluetooth USB Streaming Status
  - Fine Level Control
  - Level Control
  - Logic Meter
  - Mute Control
  - Room Combiner Output Level
  - Signal Present Meter
  - Source Selector Output Level
  - Source Selector Output Mute
  - Source Selector Source Selection
  - TI Call Status
  - TI Caller ID
  - TI Line In Use
  - VoIP Call Status
  - VoIP Caller ID
  - VoIP Line In Use
- ***Note: If using the TI commands, it is not recommended to dial via the Tesira software.***

## How to Control the AV Router block:

- If running firmware 3.9 or above, the 'AV Router' block can be controlled using the 'Router Control' driver command. To add an 'AV Router' block to the Tesira configuration, the 'Video' partition must be used.

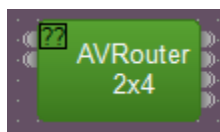

## Control Commands & States

|                                        |                             |
|----------------------------------------|-----------------------------|
| <b>AEC Enable <sup>9</sup></b>         |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 24                      |
| Value                                  | On Off                      |
| <b>AEC Gain <sup>9</sup></b>           |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 24                      |
| Value                                  | 0 to 66 in steps of 6 dB    |
| <b>AEC Phantom Power <sup>9</sup></b>  |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 24                      |
| Value                                  | On Off                      |
| <b>Auto Answer <sup>1</sup></b>        |                             |
| Instance Tag                           | String                      |
| Line <sup>5</sup>                      | 1 – 2 None                  |
| Value                                  | On Off                      |
| <b>Auto Mixer Combiner Input Group</b> |                             |
| Instance Tag                           | String                      |
| Input                                  | 1 – 32                      |
| Value                                  | None A – Z a – f            |
| <b>AVB Input Level <sup>6,8</sup></b>  |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 60                      |
| Value                                  | -100 to 12 in steps of 1 dB |
| <b>AVB Input Mute <sup>6,8</sup></b>   |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 60                      |
| Value                                  | On Off                      |
| <b>AVB Output Level <sup>6,8</sup></b> |                             |
| Instance Tag                           | String                      |
| Channel                                | 1 – 60                      |
| Value                                  | -100 to 0 in steps of 1 dB  |

|                                          |                            |
|------------------------------------------|----------------------------|
| <b>AVB Output Mute<sup>6,8</sup></b>     |                            |
| Instance Tag                             | String                     |
| Channel                                  | 1 – 60                     |
| Value                                    | On Off                     |
| <b>Bluetooth<sup>6,7</sup></b>           |                            |
| Instance Tag                             | String                     |
| Value                                    | On Off                     |
| <b>Bluetooth Discovery<sup>6,7</sup></b> |                            |
| Instance Tag                             | String                     |
| Value                                    | On Off                     |
| <b>Crosspoint Level</b>                  |                            |
| Instance Tag                             | String                     |
| Input                                    | 1 – 256                    |
| Output                                   | 1 – 256                    |
| Value                                    | -100 to 0 in steps of 1 dB |
| <b>Crosspoint State</b>                  |                            |
| Instance Tag                             | String                     |
| Input                                    | 1 – 256                    |
| Output                                   | 1 – 256                    |
| Value                                    | On Off                     |
| <b>Dial String<sup>1</sup></b>           |                            |
| Instance Tag                             | String                     |
| Line <sup>5</sup>                        | 1 – 2 None                 |
| Value                                    | String                     |
| <b>Do Not Disturb<sup>1,2</sup></b>      |                            |
| Instance Tag                             | String                     |
| Line                                     | 1 – 2                      |
| Value                                    | On Off                     |
| <b>DTMF<sup>1</sup></b>                  |                            |
| Instance Tag                             | String                     |
| Line <sup>5</sup>                        | 1 – 2 None                 |
| Value                                    | 0 – 9 * #                  |

|                                    |                               |
|------------------------------------|-------------------------------|
| <b>Fine Level Control</b>          |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 32                        |
| Value                              | -100 to 12 in steps of 0.1 dB |
| <b>Graphic Equalizer Band Gain</b> |                               |
| Instance Tag                       | String                        |
| Band                               | 1 – 31                        |
| Value                              | -30 to 15 in steps of 0.1 dB  |
| <b>Input Level</b>                 |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 256                       |
| Value                              | -100 to 12 in steps of 1 dB   |
| <b>Input Mute</b>                  |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 256                       |
| Value                              | On Off                        |
| <b>Level Control</b>               |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 32                        |
| Value                              | -100 to 12 in steps of 1 dB   |
| <b>Logic Input/Output</b>          |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 16                        |
| Value                              | True False                    |
| <b>Logic State</b>                 |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 32                        |
| Value                              | True False                    |
| <b>Mute Control</b>                |                               |
| Instance Tag                       | String                        |
| Channel                            | 1 – 32                        |
| Value                              | On Off                        |



|                                       |                             |
|---------------------------------------|-----------------------------|
| <b>Room Combiner Group</b>            |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | 0 – 16                      |
| <b>Room Combiner Input Level</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Input Mute</b>       |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Output Level</b>     |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Output Mute</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Source Level</b>     |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Source Mute</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Source Selection</b> |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | No Source 1 – 4             |

|                                         |                             |        |       |
|-----------------------------------------|-----------------------------|--------|-------|
| <b>Room Combiner Wall</b>               |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Wall</b>                             | 1 – 46                      |        |       |
| <b>Value</b>                            | Open                        | Close  |       |
| <b>Router Control</b>                   |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Output</b>                           | 1 – 256                     |        |       |
| <b>Value</b>                            | 0 – 256                     |        |       |
| <b>Source Selector Output Level</b>     |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Value</b>                            | -100 to 12 in steps of 1 dB |        |       |
| <b>Source Selector Output Mute</b>      |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Value</b>                            | On                          | Off    |       |
| <b>Source Selector Source Selection</b> |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Value</b>                            | No Source                   | 1 – 32 |       |
| <b>Speed Dial <sup>1</sup></b>          |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Line</b>                             | 1 – 2                       |        |       |
| <b>Call Appearance</b>                  | 1 – 6                       |        |       |
| <b>Value</b>                            | 1 – 16                      |        |       |
| <b>TI Hook <sup>1, 3</sup></b>          |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Line <sup>5</sup></b>                | 1 – 2                       | None   |       |
| <b>Value</b>                            | Dial                        | Redial | Flash |
|                                         | Answer                      | Off    | On    |
|                                         | End                         |        |       |
| <b>TI Receive Level <sup>1, 3</sup></b> |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Value</b>                            | -100 to 12 in steps of 1 dB |        |       |
| <b>TI Receive Mute <sup>1, 3</sup></b>  |                             |        |       |
| <b>Instance Tag</b>                     | String                      |        |       |
| <b>Value</b>                            | On                          | Off    |       |

|                                           |                             |                  |            |
|-------------------------------------------|-----------------------------|------------------|------------|
| <b>TI Transmit Level <sup>1,3</sup></b>   |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Value</b>                              | -100 to 0 in steps of 1 dB  |                  |            |
| <b>TI Transmit Mute <sup>1,3</sup></b>    |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Value</b>                              | On                          | Off              |            |
| <b>User Defined Command</b>               |                             |                  |            |
| <b>Value</b>                              | None                        |                  |            |
| <b>User Defined String</b>                |                             |                  |            |
| <b>Value</b>                              | String                      |                  |            |
| <b>VoIP Hook <sup>1,2</sup></b>           |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Line</b>                               | 1 – 2                       |                  |            |
| <b>Call Appearance</b>                    | 1 – 6                       |                  |            |
| <b>Value</b>                              | Dial                        | Redial           | Flash      |
|                                           | Send                        | Answer           | Conference |
|                                           | Resume                      | Leave Conference | Hold       |
|                                           | Off                         | On               | End        |
|                                           | Transfer                    |                  |            |
| <b>VoIP Receive Level <sup>1,2</sup></b>  |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Line</b>                               | 1 – 2                       |                  |            |
| <b>Value</b>                              | -100 to 12 in steps of 1 dB |                  |            |
| <b>VoIP Receive Mute <sup>1,2</sup></b>   |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Line</b>                               | 1 – 2                       |                  |            |
| <b>Value</b>                              | On                          | Off              |            |
| <b>VoIP Transmit Level <sup>1,2</sup></b> |                             |                  |            |
| <b>Instance Tag</b>                       | String                      |                  |            |
| <b>Line</b>                               | 1 – 2                       |                  |            |
| <b>Value</b>                              | -100 to 0 in steps of 1 dB  |                  |            |

| VoIP Transmit Mute <sup>1, 2</sup> |        |
|------------------------------------|--------|
| Instance Tag                       | String |
| Line                               | 1 – 2  |
| Value                              | On Off |

<sup>1</sup> Not available for TesiraFORTE AI, TesiraFORTE CI, or Tesira SERVER models

<sup>2</sup> Not available for TesiraFORTE TI models

<sup>3</sup> Not available for TesiraFORTE VI or TesiraFORTE X models

<sup>4</sup> Preset values start at 1001 in Tesira software. (Preset Recall 1 in driver corresponds to Preset 1001 in Tesira software, e.g.)

<sup>5</sup> If using a software dialer (either 'TI Dialer' or 'VoIP Dialer' blocks) or controlling the 'VoIP Control/Status' block, Line 1 or 2 is required to use. If using a hardware dialer ('HD-1' block) or controlling the 'TI Control/Status' block, None is required to use.

<sup>6</sup> Only available for Tesira SERVER, Tesira SERVER-IO, TesiraFORTE DAN, TesiraFORTE AVB, and TesiraFORTE X models

<sup>7</sup> Requires Tesira EX-UBT expander to use

<sup>8</sup> Requires TesiraCONNECT TC-5D expander to use for TesiraFORTE DAN models

<sup>9</sup> Not available for TesiraFORTE AI models

## Status Available

|                                  |                             |                                  |
|----------------------------------|-----------------------------|----------------------------------|
| AEC Enable <sup>9</sup>          |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 24                      |                                  |
| Value                            | On                          | Off                              |
| AEC Gain <sup>9</sup>            |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 24                      |                                  |
| Value                            | 0 to 66 in steps of 6 dB    |                                  |
| AEC Phantom Power <sup>9</sup>   |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 24                      |                                  |
| Value                            | On                          | Off                              |
| Auto Answer <sup>1</sup>         |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Line <sup>5</sup>                | 1 – 2                       | None                             |
| Value                            | On                          | Off                              |
| Auto Mixer Combiner Input Group  |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Input                            | 1 – 32                      |                                  |
| Value                            | None                        | A – Z                      a – f |
| AVB Input Level <sup>6, 8</sup>  |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 60                      |                                  |
| Value                            | -100 to 12 in steps of 1 dB |                                  |
| AVB Input Mute <sup>6, 8</sup>   |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 60                      |                                  |
| Value                            | On                          | Off                              |
| AVB Output Level <sup>6, 8</sup> |                             |                                  |
| Instance Tag                     | String                      |                                  |
| Channel                          | 1 – 60                      |                                  |
| Value                            | -100 to 0 in steps of 1 dB  |                                  |

|                                                      |                            |
|------------------------------------------------------|----------------------------|
| <b>AVB Output Mute<sup>6,8</sup></b>                 |                            |
| Instance Tag                                         | String                     |
| Channel                                              | 1 – 60                     |
| Value                                                | On Off                     |
| <b>Bluetooth<sup>6,7</sup></b>                       |                            |
| Instance Tag                                         | String                     |
| Value                                                | On Off                     |
| <b>Bluetooth Connected Device Name<sup>6,7</sup></b> |                            |
| Instance Tag                                         | String                     |
| Value                                                | String                     |
| <b>Bluetooth Device Name<sup>6,7</sup></b>           |                            |
| Instance Tag                                         | String                     |
| Value                                                | String                     |
| <b>Bluetooth Discovery<sup>6,7</sup></b>             |                            |
| Instance Tag                                         | String                     |
| Value                                                | On Off                     |
| <b>Bluetooth USB Connection Status<sup>6,7</sup></b> |                            |
| Instance Tag                                         | String                     |
| Value                                                | Connected Disconnected     |
| <b>Bluetooth USB Streaming Status<sup>6,7</sup></b>  |                            |
| Instance Tag                                         | String                     |
| Value                                                | On Off                     |
| <b>Connection Status<sup>RP</sup></b>                |                            |
| Value                                                | Connected Disconnected     |
| <b>Crosspoint Level</b>                              |                            |
| Instance Tag                                         | String                     |
| Input                                                | 1 – 256                    |
| Output                                               | 1 – 256                    |
| Value                                                | -100 to 0 in steps of 1 dB |
| <b>Crosspoint State</b>                              |                            |
| Instance Tag                                         | String                     |
| Input                                                | 1 – 256                    |
| Output                                               | 1 – 256                    |
| Value                                                | On Off                     |

|                                       |                                                              |
|---------------------------------------|--------------------------------------------------------------|
| <b>Device Fault List</b>              |                                                              |
| <b>Serial Number</b>                  | String                                                       |
| <b>Value</b>                          | No Fault in Device                      Errors in Fault List |
| <b>Dial String <sup>1</sup></b>       |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Line <sup>5</sup></b>              | 1 – 2                                      None              |
| <b>Value</b>                          | String                                                       |
| <b>Do Not Disturb <sup>1, 2</sup></b> |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Line</b>                           | 1 – 2                                                        |
| <b>Value</b>                          | On                                      Off                  |
| <b>Fine Level Control</b>             |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Channel</b>                        | 1 – 32                                                       |
| <b>Value</b>                          | -100 to 12 in steps of 0.1 dB                                |
| <b>Firmware Version</b>               |                                                              |
| <b>Value</b>                          | String                                                       |
| <b>Graphic Equalizer Band Gain</b>    |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Band</b>                           | 1 – 31                                                       |
| <b>Value</b>                          | -30 to 15 in steps of 0.1 dB                                 |
| <b>Input Level</b>                    |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Channel</b>                        | 1 – 256                                                      |
| <b>Value</b>                          | -100 to 12 in steps of 1 dB                                  |
| <b>Input Mute</b>                     |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Channel</b>                        | 1 – 256                                                      |
| <b>Value</b>                          | On                                      Off                  |
| <b>Last Dialed <sup>1</sup></b>       |                                                              |
| <b>Instance Tag</b>                   | String                                                       |
| <b>Line <sup>5</sup></b>              | 1 – 2                                      None              |
| <b>Value</b>                          | String                                                       |

|                                                        |                             |
|--------------------------------------------------------|-----------------------------|
| <b>Level Control</b>                                   |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 32                      |
| Value                                                  | -100 to 12 in steps of 1 dB |
| <b>Logic Input/Output</b>                              |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 16                      |
| Value                                                  | True False                  |
| <b>Logic Meter</b>                                     |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 32                      |
| Value                                                  | True False                  |
| <b>Logic State</b>                                     |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 32                      |
| Value                                                  | True False                  |
| <b>Mute Control</b>                                    |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 32                      |
| Value                                                  | On Off                      |
| <b>New Speed Dial Entry Name String <sup>1</sup></b>   |                             |
| Instance Tag                                           | String                      |
| Value                                                  | String                      |
| <b>New Speed Dial Entry Number String <sup>1</sup></b> |                             |
| Instance Tag                                           | String                      |
| Value                                                  | String                      |
| <b>Output Level</b>                                    |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 256                     |
| Value                                                  | -100 to 12 in steps of 1 dB |
| <b>Output Mute</b>                                     |                             |
| Instance Tag                                           | String                      |
| Channel                                                | 1 – 256                     |
| Value                                                  | On Off                      |

|                                       |                             |
|---------------------------------------|-----------------------------|
| <b>Room Combiner Group</b>            |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | 0 – 16                      |
| <b>Room Combiner Input Level</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Input Mute</b>       |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Output Level</b>     |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Output Mute</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Source Level</b>     |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | -100 to 12 in steps of 1 dB |
| <b>Room Combiner Source Mute</b>      |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | On Off                      |
| <b>Room Combiner Source Selection</b> |                             |
| Instance Tag                          | String                      |
| Room                                  | 1 – 32                      |
| Value                                 | No Source 1 – 4             |

|                                             |                                                                       |
|---------------------------------------------|-----------------------------------------------------------------------|
| <b>Room Combiner Wall</b>                   |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Wall</b>                                 | 1 – 46                                                                |
| <b>Value</b>                                | Open                                      Close                       |
| <b>Router Control</b>                       |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Output</b>                               | 1 – 256                                                               |
| <b>Value</b>                                | 0 – 256                                                               |
| <b>Signal Present Meter</b>                 |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Channel</b>                              | 1 – 32                                                                |
| <b>Meter Name</b>                           | String <sup>4</sup>                                                   |
| <b>Value</b>                                | Signal Present                                      No Signal Present |
| <b>Source Selector Output Level</b>         |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Value</b>                                | -100 to 12 in steps of 1 dB                                           |
| <b>Source Selector Output Mute</b>          |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Value</b>                                | On                                      Off                           |
| <b>Source Selector Source Selection</b>     |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Value</b>                                | No Source                                      1 – 32                 |
| <b>Speed Dial Entry Name <sup>1</sup></b>   |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Line</b>                                 | 1 – 2                                                                 |
| <b>Entry</b>                                | 1 – 16                                                                |
| <b>Value</b>                                | String                                                                |
| <b>Speed Dial Entry Number <sup>1</sup></b> |                                                                       |
| <b>Instance Tag</b>                         | String                                                                |
| <b>Line</b>                                 | 1 – 2                                                                 |
| <b>Entry</b>                                | 1 – 16                                                                |
| <b>Value</b>                                | String                                                                |

|                                   |                             |                |           |
|-----------------------------------|-----------------------------|----------------|-----------|
| TI Call Status <sup>1, 3</sup>    |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | Idle                        | Dialing        | Ringback  |
|                                   | Busy Tone                   | Error Tone     | Connected |
|                                   | Ringing                     | Dropped        | Init      |
|                                   | Fault                       | Connected Mute |           |
| TI Caller ID <sup>1, 3</sup>      |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | String                      |                |           |
| TI Line In Use <sup>1, 3</sup>    |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | In Use                      | Not in Use     |           |
| TI Receive Level <sup>1, 3</sup>  |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | -100 to 12 in steps of 1 dB |                |           |
| TI Receive Mute <sup>1, 3</sup>   |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | On                          | Off            |           |
| TI Transmit Level <sup>1, 3</sup> |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | -100 to 0 in steps of 1 dB  |                |           |
| TI Transmit Mute <sup>1, 3</sup>  |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Value                             | On                          | Off            |           |
| User Defined String               |                             |                |           |
| Value                             | String                      |                |           |
| Verbose Mode                      |                             |                |           |
| Value                             | True                        | False          |           |
| VoIP Call Status <sup>1, 2</sup>  |                             |                |           |
| Instance Tag                      | String                      |                |           |
| Line                              | 1 – 2                       |                |           |
| Call Appearance                   | 1 – 6                       |                |           |
| Value                             | Init                        | Fault          | Idle      |
|                                   | Dialtone                    | Silent         | Dialing   |

|                                     |                             |                           |                      |
|-------------------------------------|-----------------------------|---------------------------|----------------------|
|                                     | Ringback                    | Ringing                   | Answer Call          |
|                                     | Busy                        | Reject                    | Invalid Number       |
|                                     | Active                      | Active Muted              | On Hold              |
|                                     | Waiting Ring                | Conf Active               | Conf Hold            |
|                                     | Transfer Init               | Transfer Silent           | Transfer Req Dialing |
|                                     | Transfer Process            | Transfer Replaces Process | Transfer Active      |
|                                     | Transfer Ringback           | Transfer On Hold          | Transfer Decision    |
|                                     | Transfer Init Error         | Transfer Wait             |                      |
| VoIP Caller ID <sup>1, 2</sup>      |                             |                           |                      |
| Instance Tag                        | String                      |                           |                      |
| Line                                | 1 – 2                       |                           |                      |
| Call Appearance                     | 1 – 6                       |                           |                      |
| Value                               | String                      |                           |                      |
| VoIP Line In Use <sup>1, 2</sup>    |                             |                           |                      |
| Instance Tag                        | String                      |                           |                      |
| Line                                | 1 – 2                       |                           |                      |
| Call Appearance                     | 1 – 6                       |                           |                      |
| Value                               | In Use                      | Not in Use                |                      |
| VoIP Receive Level <sup>1, 2</sup>  |                             |                           |                      |
| Instance Tag                        | String                      |                           |                      |
| Line                                | 1 – 2                       |                           |                      |
| Value                               | -100 to 12 in steps of 1 dB |                           |                      |
| VoIP Receive Mute <sup>1, 2</sup>   |                             |                           |                      |
| Instance Tag                        | String                      |                           |                      |
| Line                                | 1 – 2                       |                           |                      |
| Value                               | On                          | Off                       |                      |
| VoIP Transmit Level <sup>1, 2</sup> |                             |                           |                      |
| Instance Tag                        | String                      |                           |                      |
| Line                                | 1 – 2                       |                           |                      |
| Value                               | -100 to 0 in steps of 1 dB  |                           |                      |

| VoIP Transmit Mute <sup>1, 2</sup> |        |
|------------------------------------|--------|
| Instance Tag                       | String |
| Line                               | 1 – 2  |
| Value                              | On Off |

<sup>1</sup> Not available for TesiraFORTE AI, TesiraFORTE CI, or Tesira SERVER models

<sup>2</sup> Not available for TesiraFORTE TI models

<sup>3</sup> Not available for TesiraFORTE VI or TesiraFORTE X models

<sup>4</sup> Should match the 'Identifier' label within the 'Signal Present Meter' block of the Tesira software. Underscores ('\_') cannot be used.

<sup>5</sup> If using a software dialer (either 'TI Dialer' or 'VoIP Dialer' blocks) or monitoring the 'VoIP Control/Status' block, Line 1 or 2 is required to use. If using a hardware dialer ('HD-1' block) or monitoring the 'TI Control/Status' block, None is required to use.

<sup>6</sup> Only available for Tesira SERVER, Tesira SERVER-IO, TesiraFORTE DAN, TesiraFORTE AVB, and TesiraFORTE X models

<sup>7</sup> Requires Tesira EX-UBT expander to use

<sup>8</sup> Requires TesiraCONNECT TC-5D expander to use for TesiraFORTE DAN models

<sup>9</sup> Not available for TesiraFORTE AI models

<sup>RP</sup> Connection Status is based off of the following string: SESSION get verbose\r

## Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

## Notes for the Device

- Serial control is not supported for TesiraFORTE X models.

## Serial communication

**Port Type:** RS-232

**Baud Rate:** 115200


**Data Bits:** 8

**Parity:** None

**Stop Bits:** One

**Flow Control:** None

## Pin Assignments Diagram

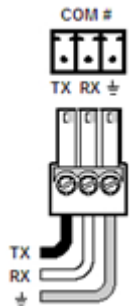

| Signal | Main Cable | Pin | Signal |
|--------|------------|-----|--------|
| TxD    |            | 2   | TxD    |
| RxD    |            | 3   | RxD    |
| GND    |            | 5   | GND    |



## Network communication

When configuring the Ethernet driver, be sure device settings match that of the GCP configuration.

|                                     |                |
|-------------------------------------|----------------|
| <b>Port Type:</b>                   | Ethernet (SSH) |
| <b>Default Port:</b>                | 22             |
| <b>Logon Credentials Supported:</b> | Yes            |
| <b>Default Username:</b>            | default        |
| <b>Multi-Connection</b>             | Yes            |
| <b>Capabilities:</b>                |                |
| <b>Port Changeability:</b>          | No             |

---

## Ethernet Driver Configuration Description

Please refer to user manual for settings and changes to the network communication parameters such as: Username and Password.

- Regardless if using a protected (password) or unprotected (no password) Tesira system, username is always required. The username should be:
  - 'admin' in a protected system
  - 'default' in an unprotected system
- Password must be set accordingly in a protected system or left blank in an unprotected system.

## Notes for the Device

- For the driver to work, SSH communication must be enabled on the device. This can be done from the Tesira software: “Device Maintenance” → “Network Settings” → “Control Network” → “Enable SSH”