



AUTOSAR Startup Sequence

AUTOSAR Startup Sequence

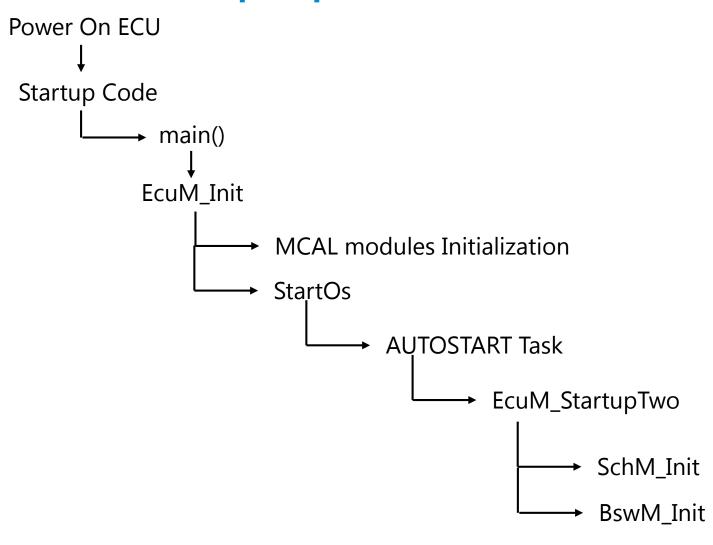


AUTOSAR Startup Sequence (contd.)

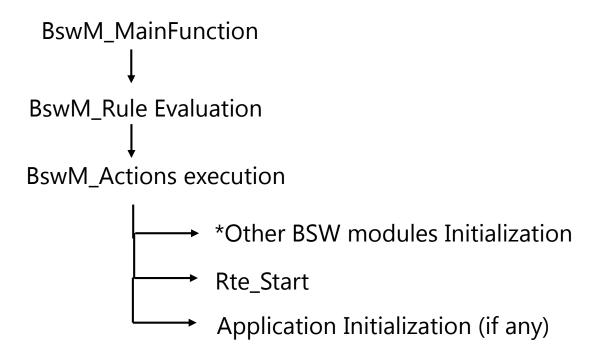

Note:

*If Memory stack is present in the system, care should be taken by the integrator to initialize NvM and then invoke NvM_ReadAll. Then other BSW modules which has dependency on NvM (say Dem, ComM, etc.,) shall be initialized. Lastly, Rte and Applications shall be initialized.

Mode Management example

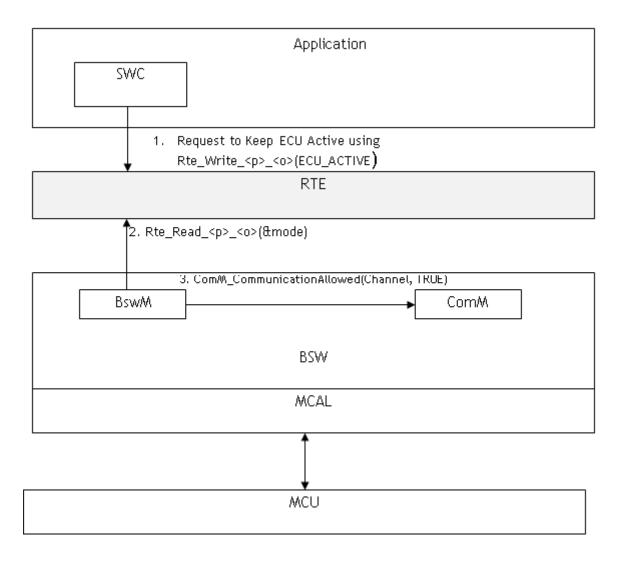

Thank you

www.kpit.com









