


GPIO output pins - PWM signal to fans
 GND - shared with fans and ESP
 12V DC - required to run the case fans
 5v DC - required to power the ESP board

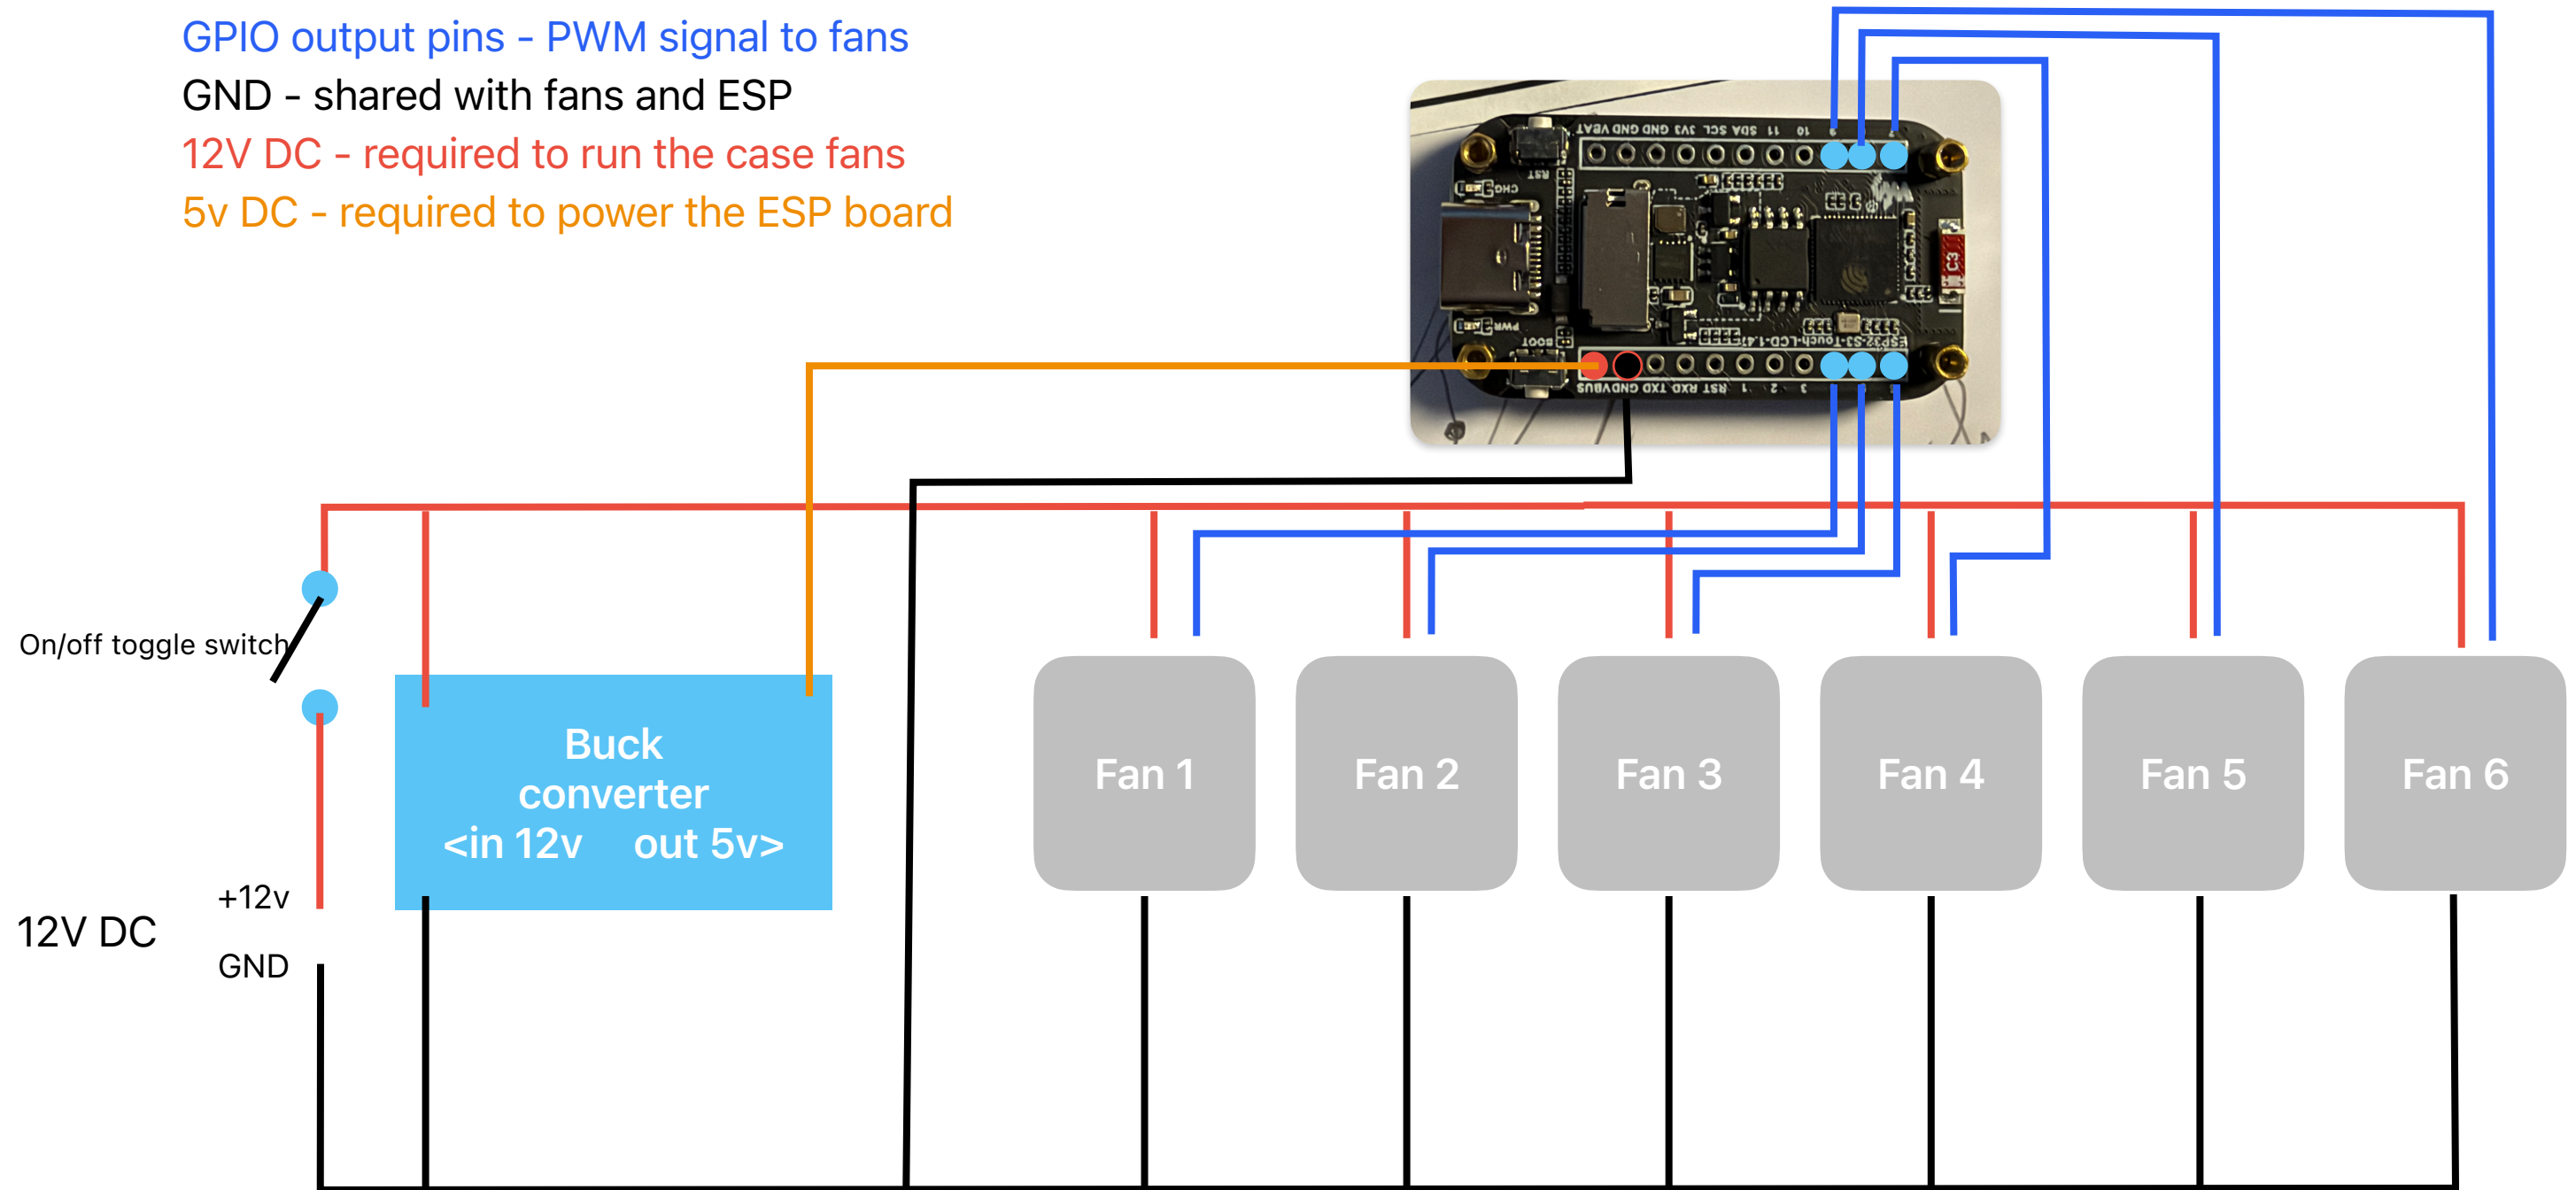

IMPORTANT

Only connect the USB C plug on the ESP board when the 12V supply source is DISCONNECTED and/or main switch is OFF. Otherwise you'll have a conflicting 5V from USB and a 5V from the buck converter to the ESP controller.