
MCHOSE

G20 / G20 Pro
GAMING AUDIO SPEAKER


Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

■ PRODUCT FUNCTION OVERVIEW

G20

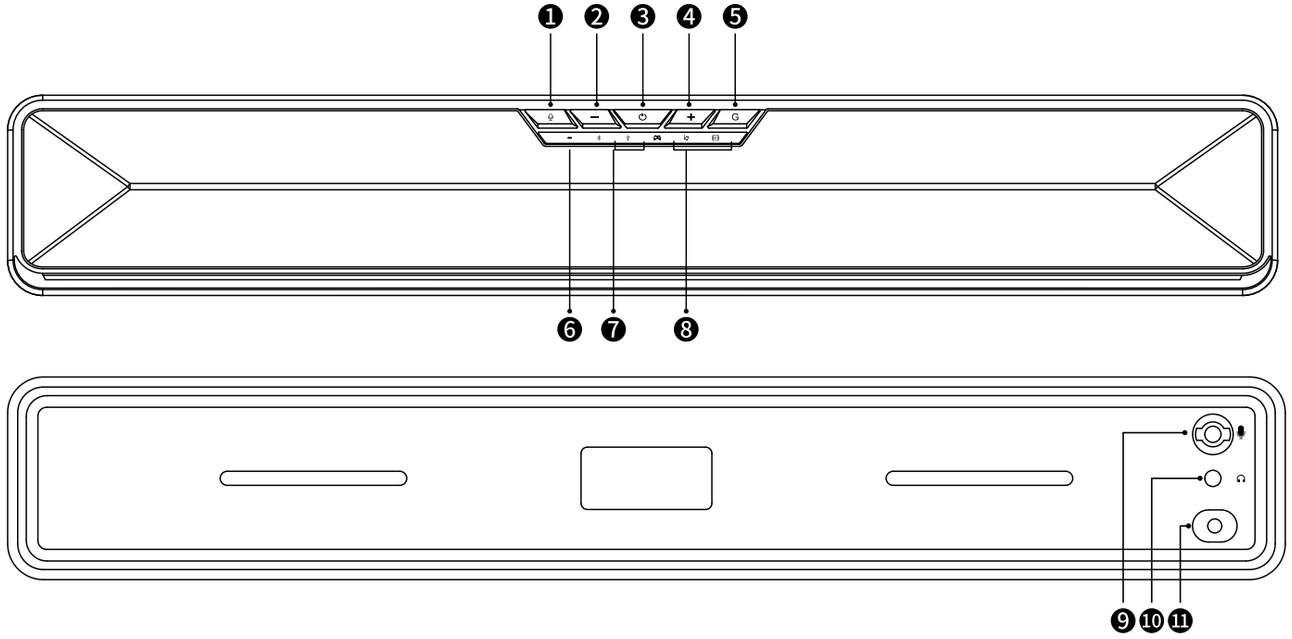


G20 pro

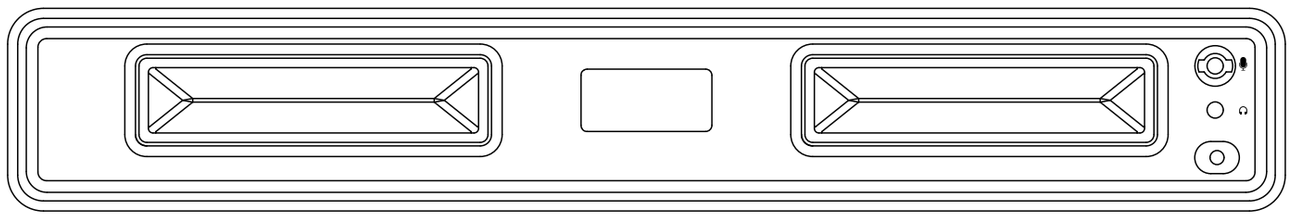


❶ Microphone Power On/Off Button
❷ Volume -
❸ Power/Mode Switch Button
❹ Volume +
❺ Multi-function Button
❻ Microphone Indicator Light
❼ Input Mode Indicator Light
❽ Sound Effect Mode Indicator Light
❾ Microphone Input Port
❿ Audio Output Port
⓫ USB Power Cable

■ POWER CONNECTION

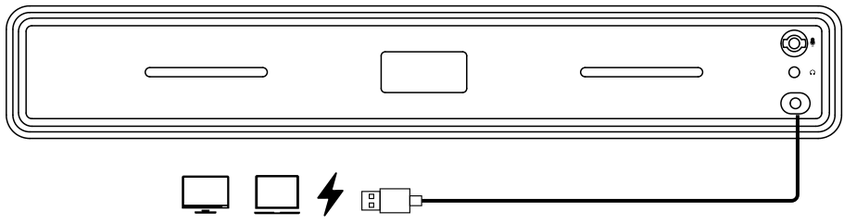

USB Power Supply: Rated Input 5V ⎓ 1A


■ BLUETOOTH INPUT

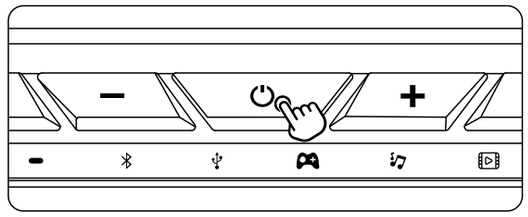




Connect the USB power cable to the USB port of the computer, then press the 【Power/Mode Switch Button】 to switch to 【Bluetooth Input】 mode.
The indicator light (ᛒ) will flash, searching for a device named 【MCHOSE G20】 or 【MCHOSE G20 Pro】. Once connected successfully, the indicator light (ᛒ) will stay steady.


■ POWER ON/OFF

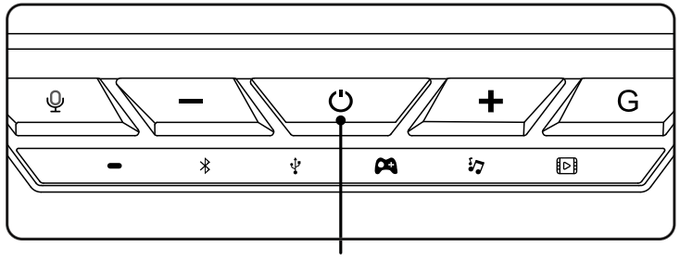

Power On 3s
Power Off 5s


■ USB SOUND CARD INPUT

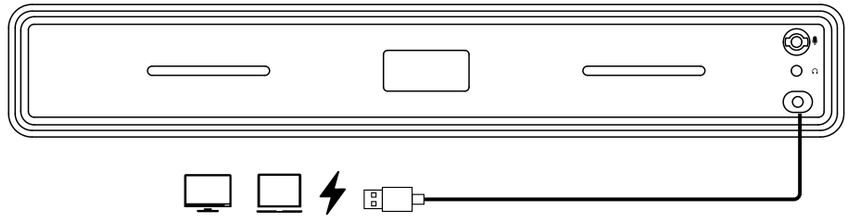


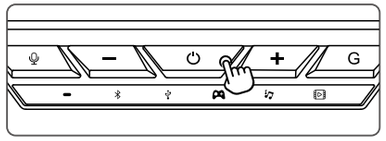



Connect the USB power cable to the USB port of your computer, then press the 【Power/Mode Switch Button】 to switch the 【Sound Card Input】 mode.
The indicator light (ψ) will stay steady.

■ FUNCTION OPERATIONS

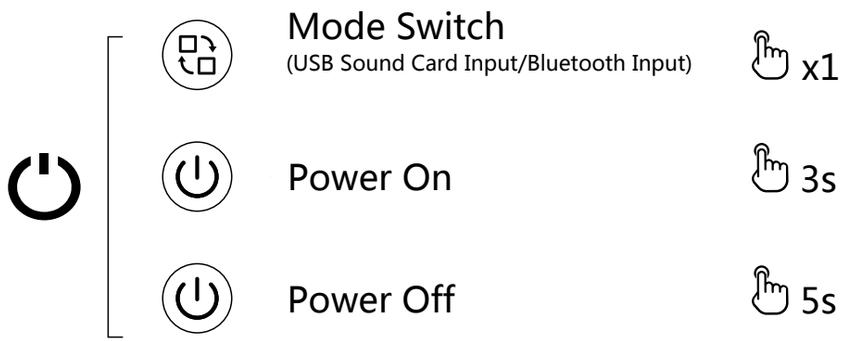

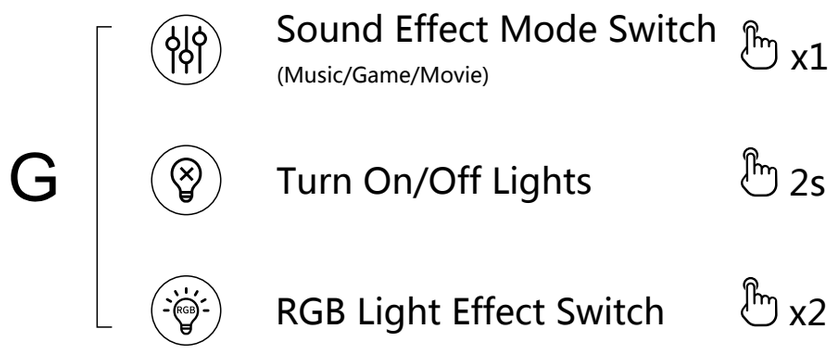

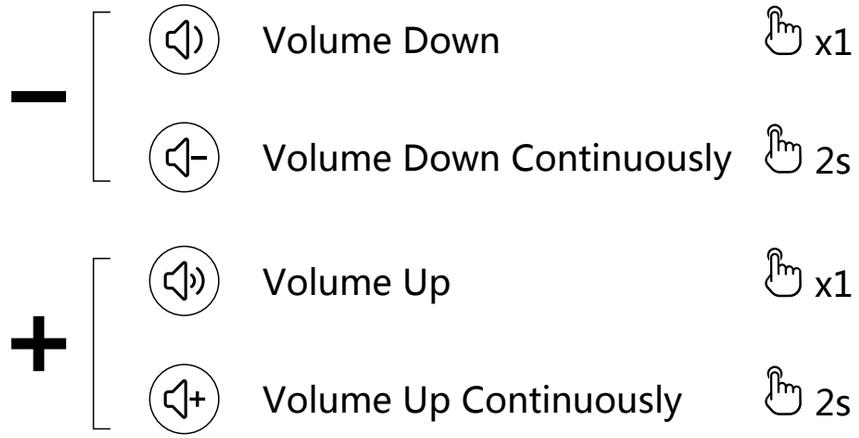

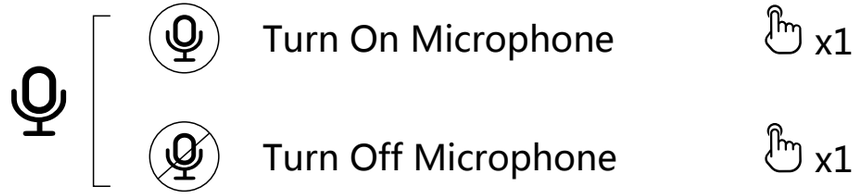



■ M HUB Desktop Driver

Open the URL in your browser，https://www.maicong.cn Click [Driver] - [Download M HUB Driver]

*The M HUB Driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

Notice: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio - frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to a circuit outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the responsible compliance party may void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

	1. It is recommended to power the speaker only through the computer's USB interface. 2. Do not use inferior or non - standard power adapters to power the speaker. 3. Do not use over - voltage or over - current power adapters to power the speaker. 4. Keep the speaker away from high - temperature equipment during use. 5. Turn off the power switch when the speaker is not in use for an extended period.