User's Manual


MCHOSE

K20 GT GAMING SPEAKER

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

■PRODUCT FUNCTION OVERVIEW



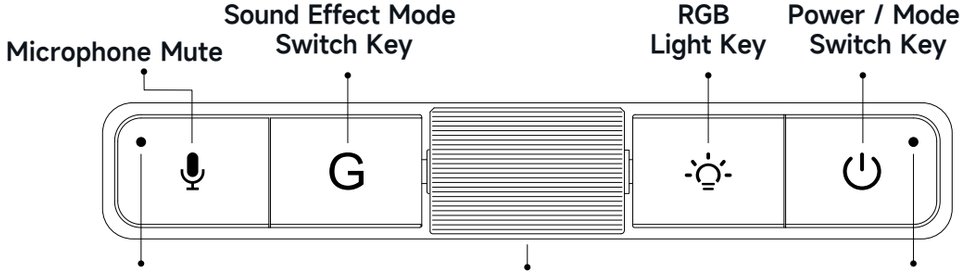

Microphone Indicator Light
Green light: Microphone on
Light off: Microphone off

Volume Control Wheel
Volume +: Scroll Up
Volume -: Scroll Down
Mute On/Off: Press the Wheel

Power Status Indicator Light
Red light: Sound Card Input
White light: Bluetooth Input

Power On/Off	x1.5s
Switch Connection Mode	x1
Disconnect Bluetooth	x2

Cycle Through Screen Display	x1
Turn Screen & Lighting On/Off	x1.5s
Cycle Through Lighting Effects	x2

Switch Sound Effect Mode (Music, Game, Movie)	x1
Reject Call	x2
Answer/Hang Up Call	x1


Microphone On/Off	x1
Voice Prompt On/Off (Only sound effect switch and microphone on/off prompts will be retained)	3s

* Note: After turning off voice prompts, operations such as [Switch Sound Effect Mode] and [Microphone On/Off] will still be accompanied by electronic tone prompts.

Sound Effect Mode Switch Tones:
"Beep" = Game Mode
"Beep Beep" = Movie Mode
"Beep Beep Beep" = Music Mode

Microphone On/Off Tones:
"Ding" = Microphone Off
"Ding Ding" = Microphone On

■USB sound card input

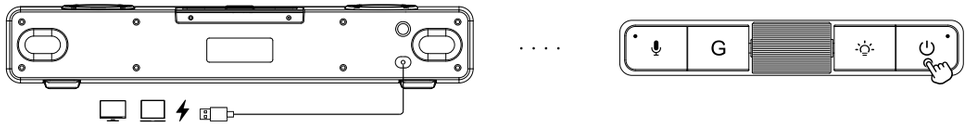


Plug the USB power cable into your computer's USB port, then single-press the [⏻ Power/Mode Switch Key] to switch to [Sound Card Input] mode.
The indicator light will stay solid red.

■Bluetooth input



Plug the USB power cable into your computer's USB port, then single-press the [⏻ Power/Mode Switch Key] to switch to [Bluetooth Input] mode.The indicator light will flash white. Search for the device named [MCHOSE K20 GT]. Once connected successfully, the indicator light will stay solid white.

■Microphone installation

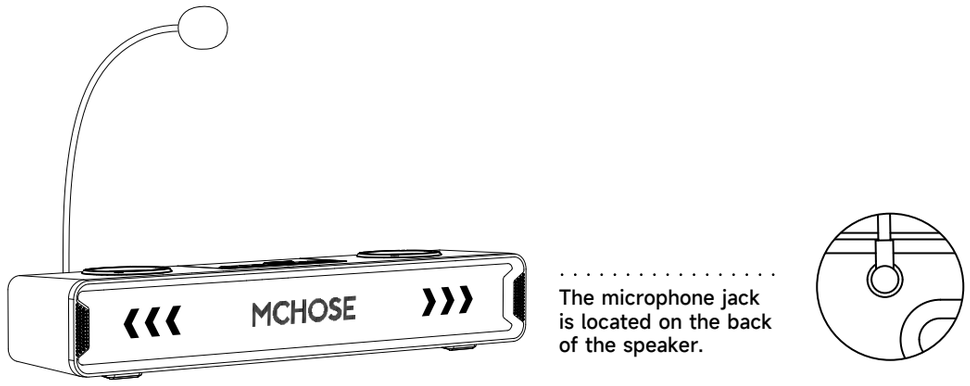

■Common Problem-solving Methods:

No sound from the speaker?

-Check if the speaker indicator light is on, and confirm the current connection status is correct based on the light color(Indicator light: Red = Sound Card Mode; White = Bluetooth Mode; Flashing White = Bluetooth Pairing Mode)

-Adjust the speaker volume wheel to increase the volume, and check if the volume on your computer player is turned up

-Find the speaker icon in the bottom-right corner of your computer desktop, click to check if the current speaker device name is displayed

-Go to computer settings to confirm the speaker is set as the default playback device (Settings > Sound > Output Device)

No sound from the microphone?

-Confirm the microphone is turned on, single-press the microphone button to toggle it on/off

-Re-plug the microphone, pushing it firmly all the way in

-Go to computer settings to confirm the microphone is set as the default recording device (Settings > Sound > Input Device)

-Check if your computer or apps have granted microphone access to the speaker (Settings > Privacy > Microphone > Enable permission)

■ DRIVER INTRODUCTION

M HUB Desktop driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

MCHOSE APP: https://cdn.mchose.com.cn/doc/app.html

Open the URL or scan the QR code in your mobile browser to access the APP download page.

Click 【Download from App Store】 or 【Download Installation Package】 to proceed.

MCHOSE APP

Notice: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio - frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to a circuit outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the responsible compliance party may void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

	1. It is recommended to power the speaker only through the computer's USB interface. 2. Do not use inferior or non - standard power adapters to power the speaker. 3. Do not use over - voltage or over - current power adapters to power the speaker. 4. Keep the speaker away from high - temperature equipment during use. 5. Turn off the power switch when the speaker is not in use for an extended period.