
MCHOSE

# K87 Three - mode mechanical keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

# PRODUCT OVERVIEW



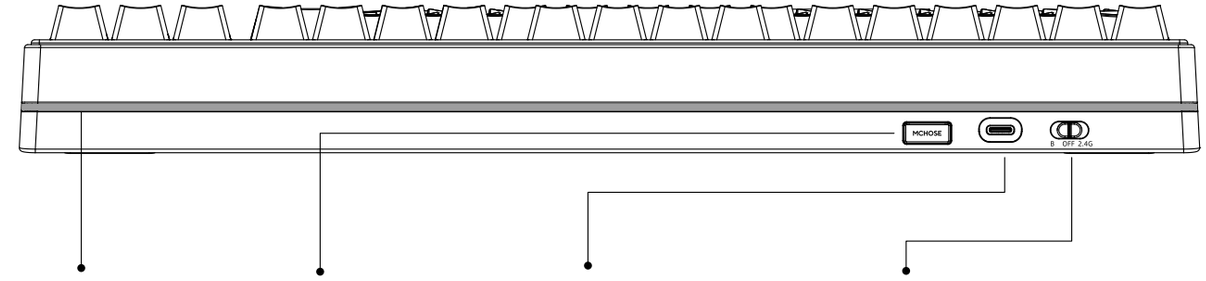


Side lighting


USB receiver

Type-C port

Mode - change Switch:
1.The left - most position 【B】 indicates wireless mode.
2.The middle position 【OFF】 indicates USB wired mode.
3.The right - most position 【2.4G】 indicates 2.4G mode.

CAPS Lock Indicator Light

Status indicator light

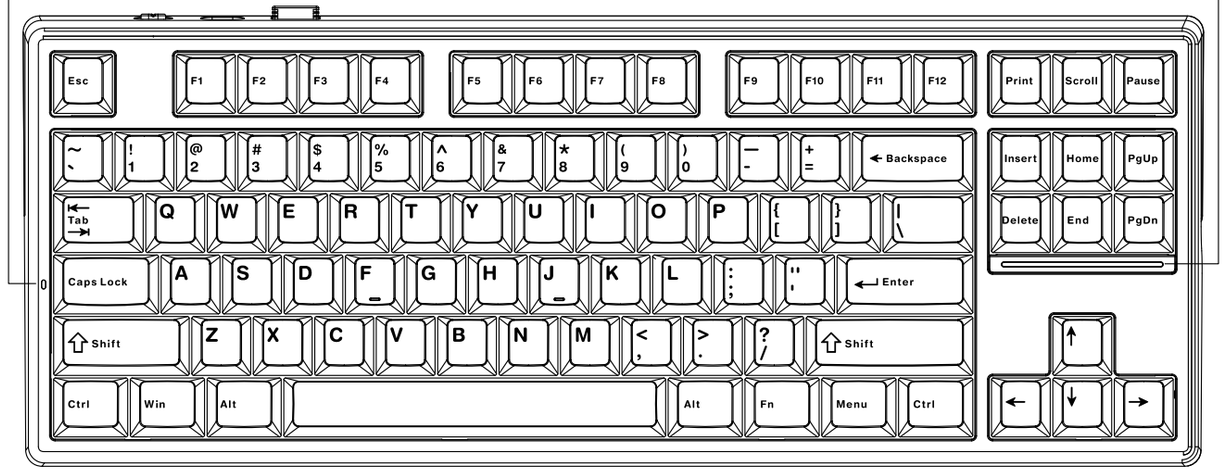


# CONNECTION MODE



### 2.4G Connection:

•Slide the mode - change switch to 【2.4G】.
•Take out the receiver from the storage slot.
•Insert the receiver into the USB port of your computer.
•Manual pairing (factory - default paired): Long - press 【FN+`~】 until the indicator light flashes rapidly. Then insert the receiver into the computer's USB port. When the connection is successful, the indicator light will return to its normal lighting effect.

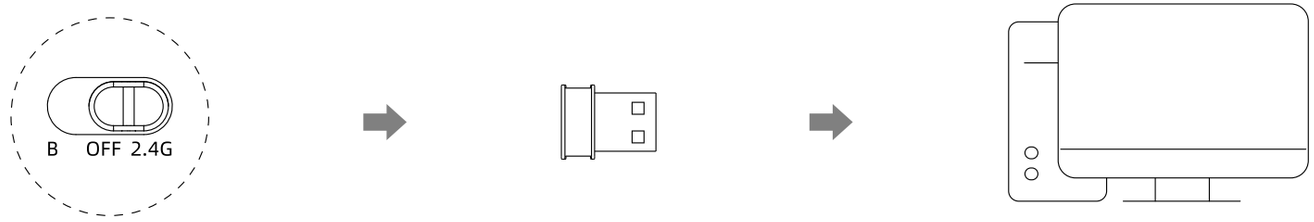



### Wired Connection:

•Slide the mode - change switch to the 【OFF】 mode.
•Insert the Type - C end of the USB cable into the corresponding port of the keyboard.
•Insert the USB end of the cable into the corresponding port of the computer to start using it.



### Wireless Connection:

•Slide the mode - change switch to the 【B】 mode.
•Long - press 【FN+1!】 to start pairing. The indicator light will flash rapidly during pairing.
•Press 【FN+1!】, 【FN+2@】, 【FN+3#】 to switch devices.

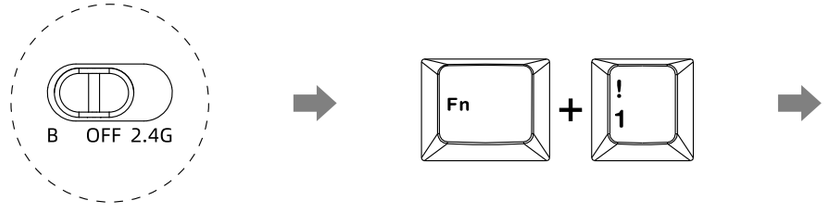


K87 Pairing name:
【MCHOSE K87 3.0】
【MCHOSE K87 5.0】

# DRIVER INTRODUCTION



**M HUB Web :** https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

**M HUB Driver :** https://www.maicong.cn


Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

# FN COMBINATION KEY



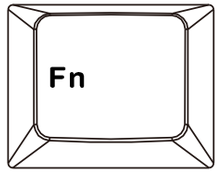



+

| | |
|---|---|
| ESC | Long - press for 3s to restore default |
| Right Shift | Turn on/off keyboard backlight |
| Del | Switch keyboard lighting mode |
| ↑ | Backlight brightness + |
| ↓ | Backlight brightness - |
| → | Backlight speed + |
| ← | Backlight speed - |
| -_ | Switch backlight color |
| END | Switch side lighting mode |
| [ { | Adjust side lighting brightness |
| ] } | Adjust side lighting speed |
| \| | Switch side lighting color |
| HOME | Change LOGO light mode |
| = + | Switch LOGO light color |
| ;: | LOGO light speed - |
| ' " | LOGO light speed + |
| Page Dn | LOGO light brightness - |
| Page Up | LOGO light brightness + |

# FN COMBINATION KEY







+

**Win system**

| Key | Multimedia combination function | Multimedia function (single press) |
|---|---|---|
| F1 | Screen brightness - | F1 |
| F2 | Screen brightness + | F2 |
| F3 | Switch window | F3 |
| F4 | File Explorer | F4 |
| F5 | / | F5 |
| F6 | / | F6 |
| F7 | Previous track | F7 |
| F8 | Play / Pause | F8 |
| F9 | Next track | F9 |
| F10 | Mute | F10 |
| F11 | Volume - | F11 |
| F12 | Volume + | F12 |




+

**Mac system**


| Key | Multimedia combination function | Multimedia function (single press) |
|---|---|---|
| F1 | F1 | Screen brightness - |
| F2 | F2 | Screen brightness + |
| F3 | F3 | Window switch |
| F4 | F4 | File Explorer |
| F5 | F5 | / |
| F6 | F6 | / |
| F7 | F7 | Previous track |
| F8 | F8 | Play / Pause |
| F9 | F9 | Next track |
| F10 | F10 | Mute |
| F11 | F11 | Volume - |
| F12 | F12 | Volume + |

# POWER MANAGEMENT



## 1. Battery Check

•In 2.4G/wireless mode (when the USB is not inserted), you can press FN + B to display the keyboard's battery level. The 【Status Indicator Light】 will switch to the always - on mode, and the keyboard will show the battery - level color. A green light on the 【Status Indicator Light】 indicates a high battery level, an orange light indicates a medium battery level, and a red light indicates a low battery level.

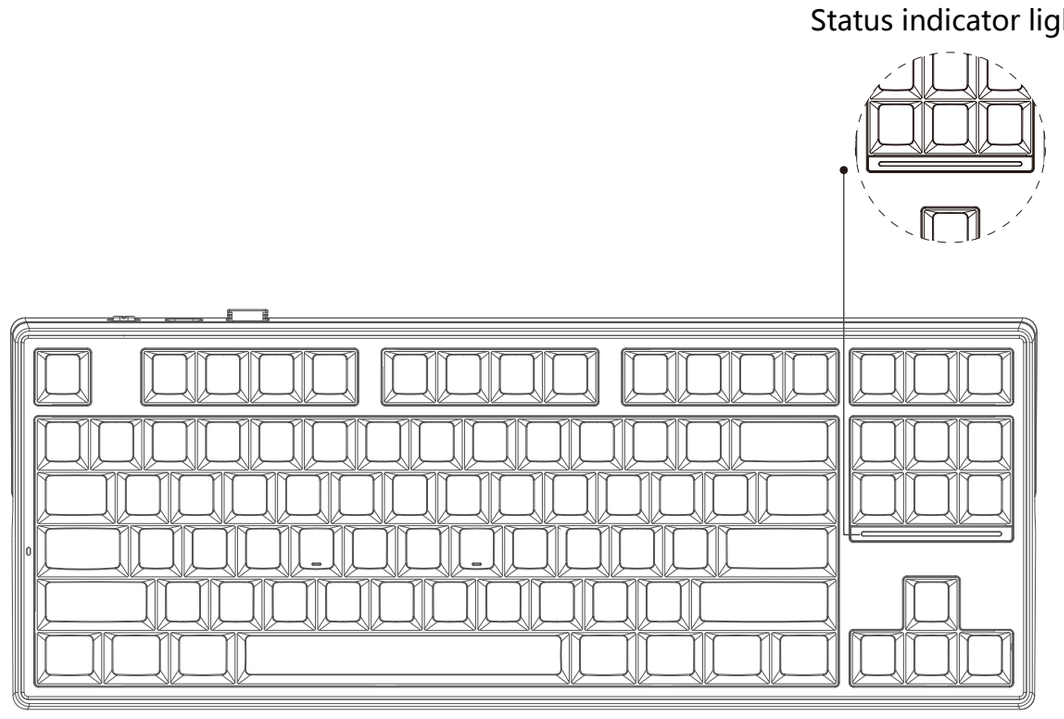


## 2. Charging Method

•In any mode, connecting the keyboard to a computer via the provided data cable will charge the keyboard.
•When the battery is low, the 【Status Indicator Light】 will turn red.
•During charging, the 【Status Indicator Light】 will flow quickly from left to right. When fully charged, the 【Status Indicator Light】 will return to its normal lighting effect.

## 3. Sleep Function

•By default, the keyboard's backlight turns off after 3 minutes, and the wire-less/2.4G connection disconnects after 30 minutes. Press any key to reconnect.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

## CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).