
MCHOSE

Z75 MECHANICAL KEYBOARD

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW

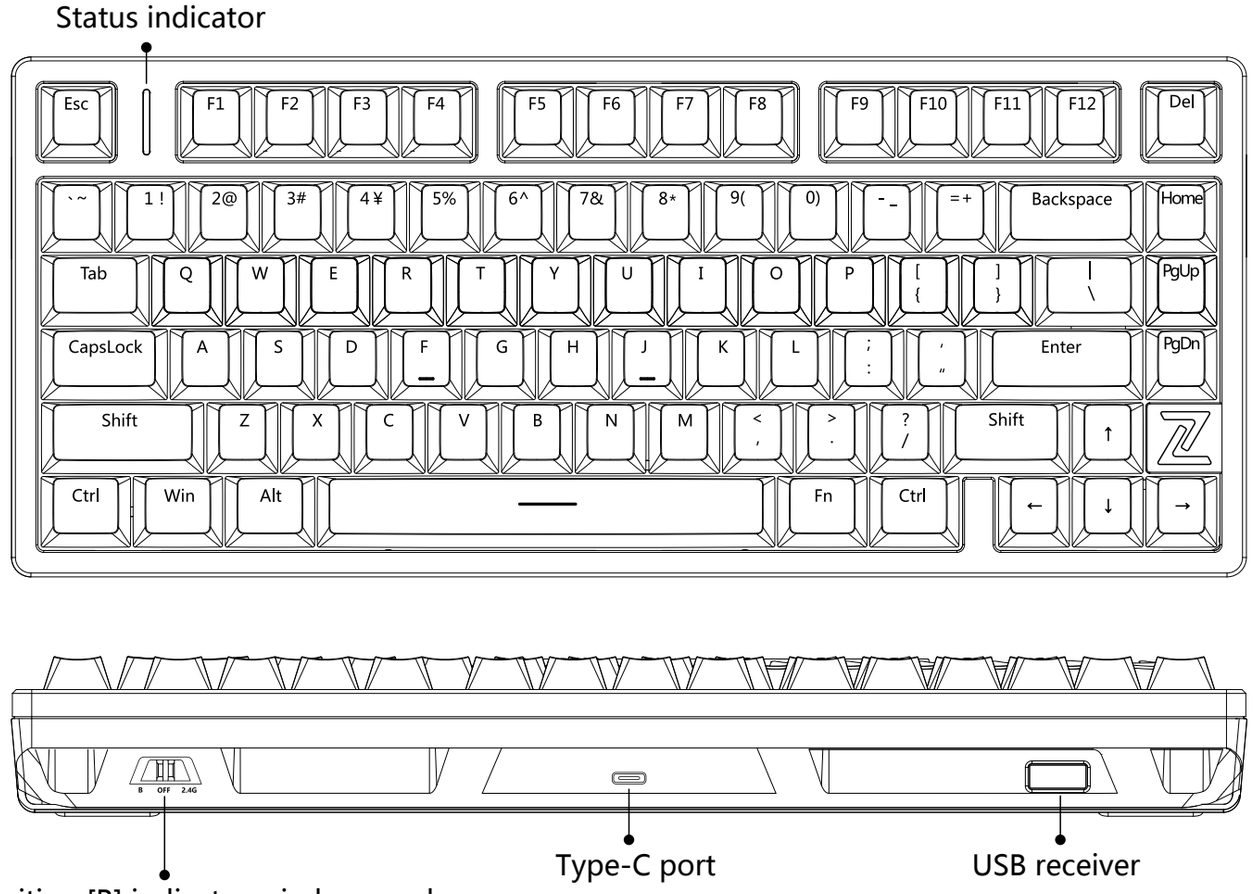


Mode Switch:
1.The left - most position [B] indicates wireless mode.
2.The middle position [OFF] indicates USB wired mode.
3.The right - most position [2.4G] indicates 2.4G mode.

CONNECTION MODE


2.4G Wireless Connection:

- Slide the mode switch to [2.4G].
- Take out the receiver from the storage slot.
- Insert the receiver into the USB port of your computer.
- Manual pairing (factory - default paired): Long - press [FN+~] until the indicator light flashes rapidly. Insert the receiver into the computer's USB port. When the connection is successful, the [~] key will light up for 2 seconds.

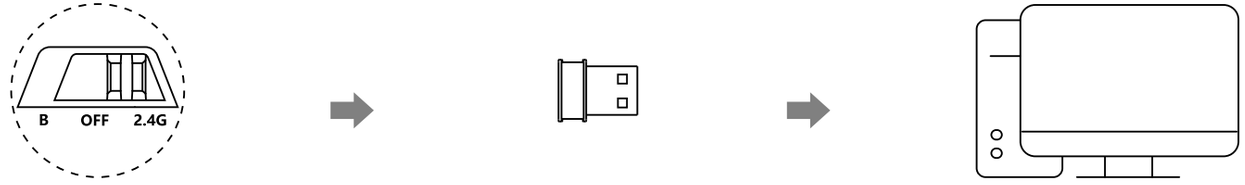


Wired Connection:

- Slide the mode switch to the [OFF] mode.
- Insert one end of the Type - C USB cable into the corresponding port of the keyboard.
- Insert the USB end of the cable into the corresponding port of the computer to start using it.

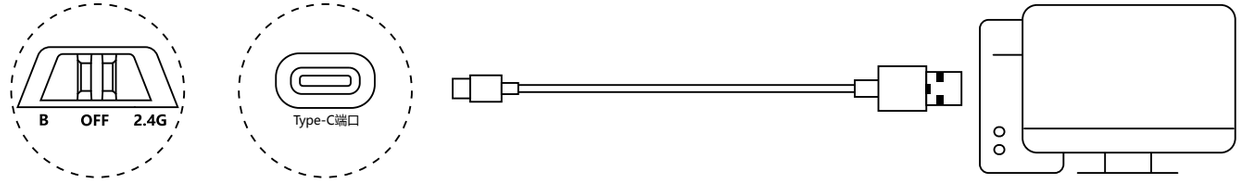

Wireless Connection:

- Slide the mode switch to the [B] mode.
- Long - press [FN+W] to start pairing. The indicator light will flash rapidly during pairing.
- Press [FN+W], [FN+E], [FN+R] to switch devices.

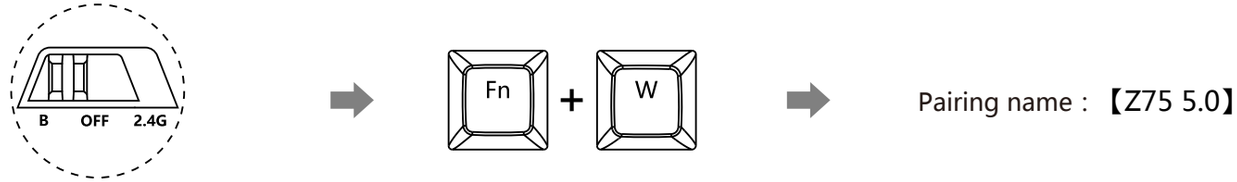

DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.


M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

FN COMBINATION KEY

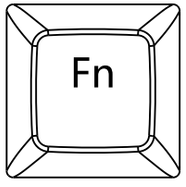


✚

Esc	Long - press for 3 seconds to restore default	Right Shift	Switch side - light mode
A	Mac system	/?	Switch side - light color
S	Windows system	,<	Side - light brightness +
=+	Backlight mode switch	.>	Side - light brightness -
-_	Backlight color switch	Win	Lock/Unlock the Windows key
↑	Backlight brightness +	B	Press and hold to check battery level
↓	Backlight brightness -	P	Prtsc
←	Backlight speed -	[{	Scroll
→	Backlight speed +	]}	Pause
Right Shift	Switch status indicator light effect	Del	Ins
Z	Switch status indicator light color	Home	End

Note: [No surround light version] There is no side light function, and the side light adjustment Fn key combination in this version is invalid.


FN MULTIMEDIA FUNCTION

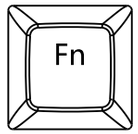

+

Win system

Key	Multimedia combination function	Multimedia function (single press)
F1	Screen brightness -	F1
F2	Screen brightness +	F2
F3	Switch window	F3
F4	File Explorer	F4
F5	Search	F5
F6	Screenshot	F6
F7	Previous track	F7
F8	Play/Pause	F8
F9	Next track	F9
F10	Mute	F10
F11	Volume -	F11
F12	Volume +	F12

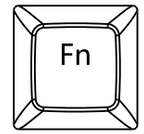

+

Mac system

Key	Multimedia combination function	Multimedia function (single press)
F1	F1	Screen brightness -
F2	F2	Screen brightness +
F3	F3	Switch window
F4	F4	Return to desktop
F5	F5	Short press for search long press for Siri
F6	F6	Screenshot
F7	F7	Previous track
F8	F8	Play/Pause
F9	F9	Next track
F10	F10	Mute
F11	F11	Volume -
F12	F12	Volume +


POWER MANAGEMENT

1. Battery Check

In wireless mode (when the USB is not inserted), hold FN + B to check the battery level. When fully charged, the number keys 1 - 0 will all show green lights. As the battery drains, the green lights gradually decrease. When the battery is low, red lights will turn on.
Release the keys to restore the lighting effect.

2. Charging Method

- Connect the keyboard to the computer via the provided USB cable to charge the keyboard. During charging, the [Status Indicator] will show a running - horse effect and return to normal lighting when fully charged.
- When the [Status Indicator] flashes red, please charge the keyboard in a timely manner.
- Note: When charging via USB, the indicator shows a running - horse effect, and at this time, the combination keys cannot be used to switch the [Status Indicator] lighting effect and color.

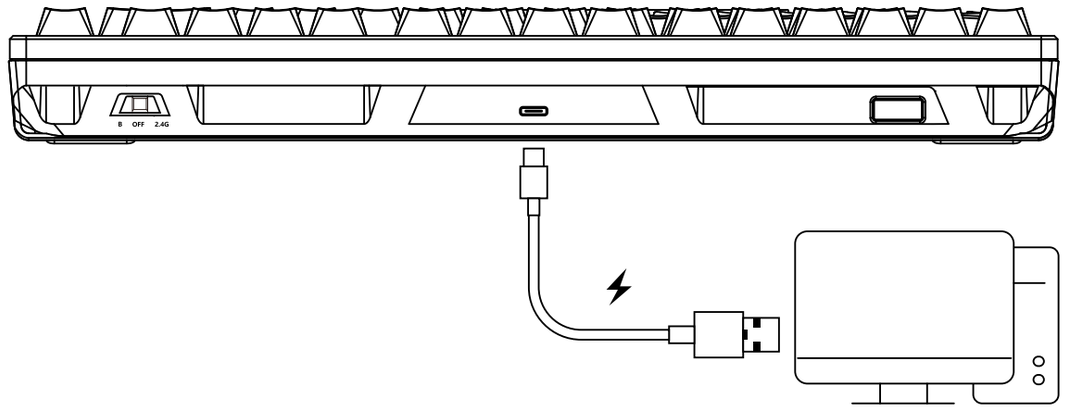

3. Sleep Function

- In wireless/2.4G mode, the keyboard automatically enters power - saving mode after one minute of inactivity. Click any key to wake it up.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).