

MCHOSE

G7 Wireless Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


PRODUCT OVERVIEW

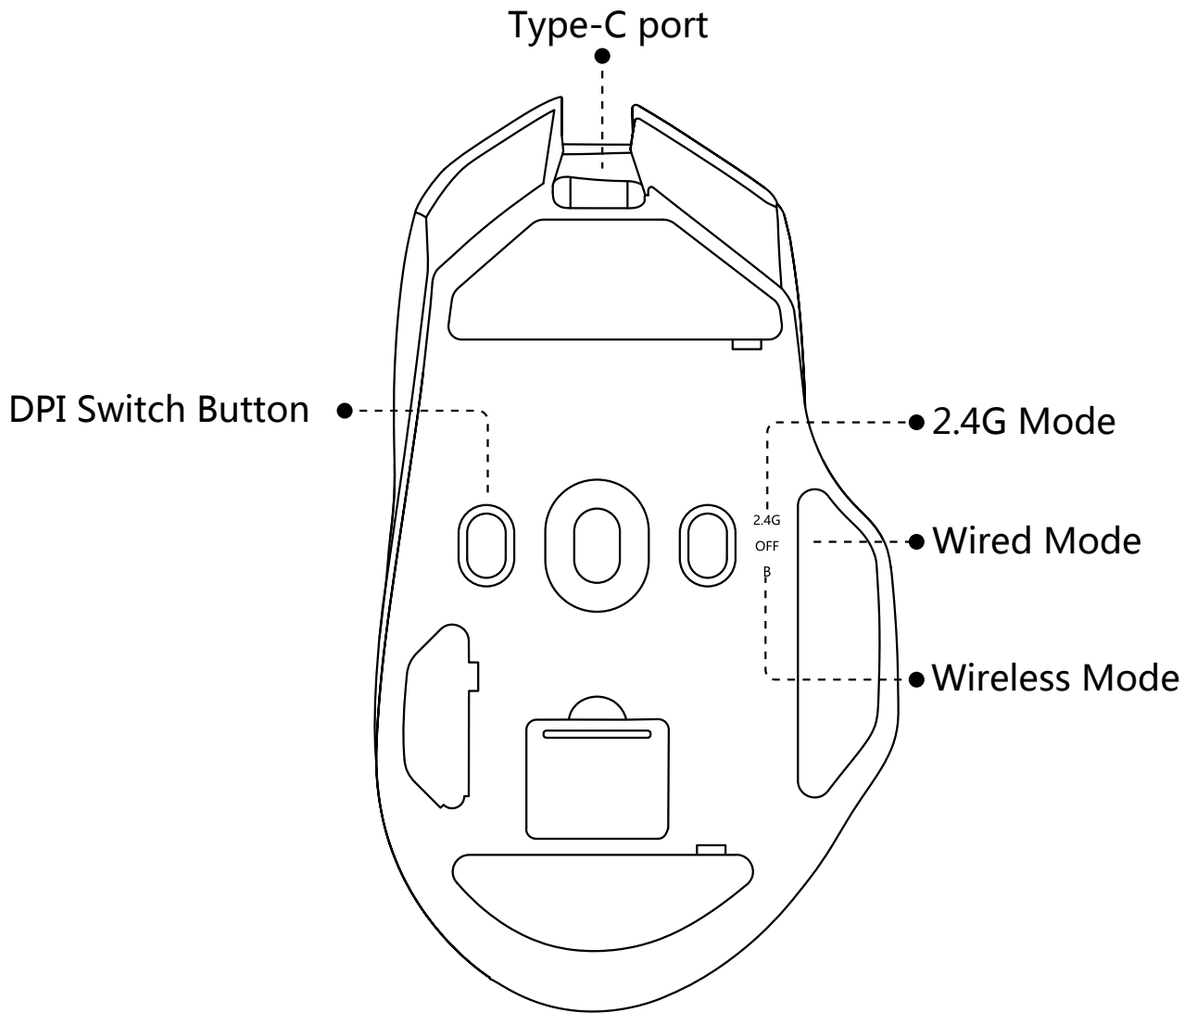

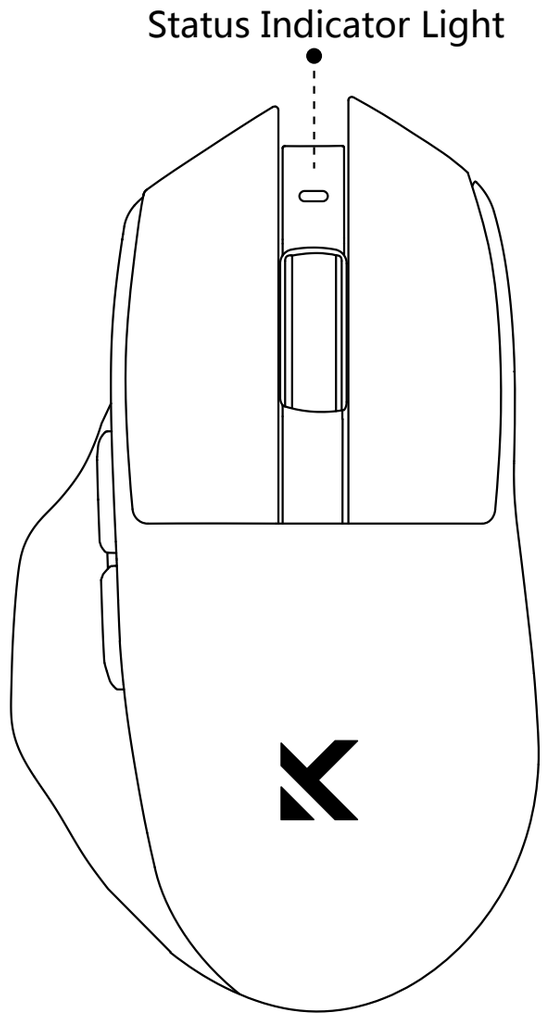


CONNECTION METHOD

For Charging / Wired Connection Use

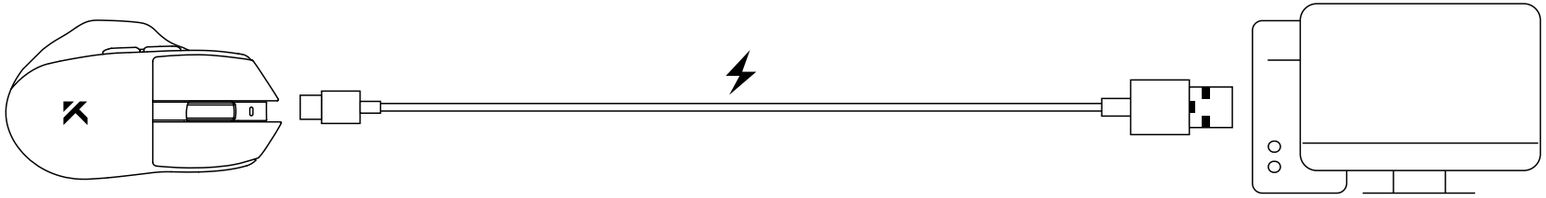


• Insert the Type-C end of the standard - equipped USB cable into the corresponding port of the mouse, and insert the USB end into the corresponding port of the computer to use it.
• In 2.4G / wireless mode, plugging in the USB cable will switch to wired mode and charge the mouse simultaneously.

For 2.4G Connection Use

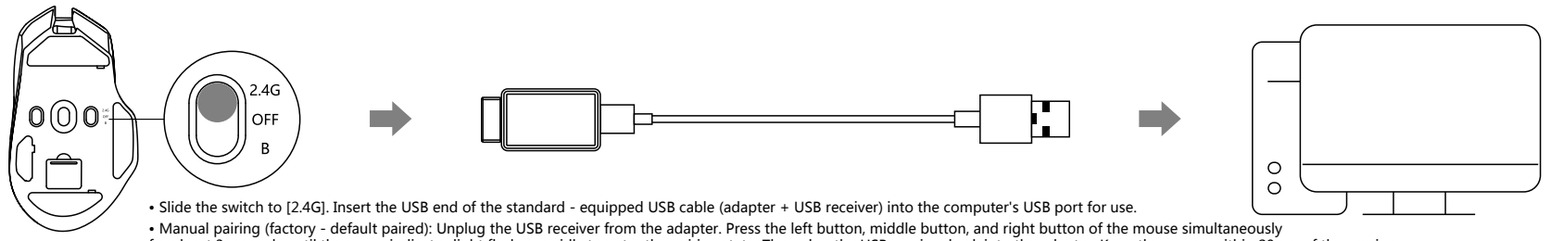

• Slide the switch to [2.4G]. Insert the USB end of the standard - equipped USB cable (adapter + USB receiver) into the computer's USB port for use.
• Manual pairing (factory - default paired): Unplug the USB receiver from the adapter. Press the left button, middle button, and right button of the mouse simultaneously for about 3 seconds until the green indicator light flashes rapidly to enter the pairing state. Then plug the USB receiver back into the adapter. Keep the mouse within 20 cm of the receiver. The indicator light will turn off upon successful connection.

For Wireless Connection Use

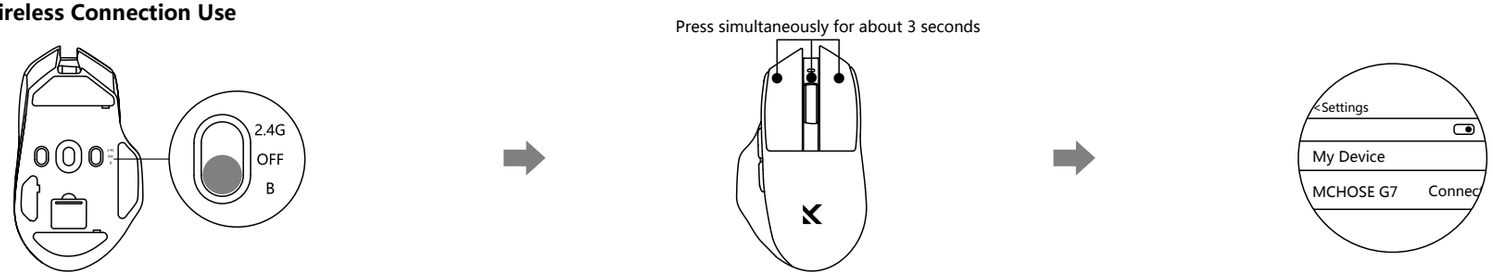

Slide the switch to [B]. Search for devices named [MCHOSE G7] / [MCHOSE G7 Pro] / [MCHOSE G7 Max] and connect. If the connection fails, press the left button, middle button, and right button of the mouse simultaneously for about 3 seconds until the indicator light flashes rapidly to enter the pairing state, then try to connect again. The indicator light will turn off after a successful connection.

DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

INDICATOR STATUS

01. DPI Adjustment

Single press the 【DPI Switch Button】 to cycle through six DPI levels, adjustable via the driver.

Level 1: Red Light **400DPI**


Level 2: Blue Light **800DPI**

Level 3: Green Light **1600DPI**

Level 4: Yellow Light **3200DPI**


Level 5: Cyan Light **6400DPI**

Level 6: Purple Light **12000DPI**

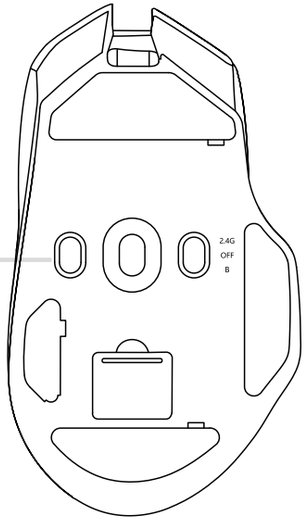

02.Battery Status Indicator

When the 【Indicator Light】 flashes red, please charge the mouse promptly.

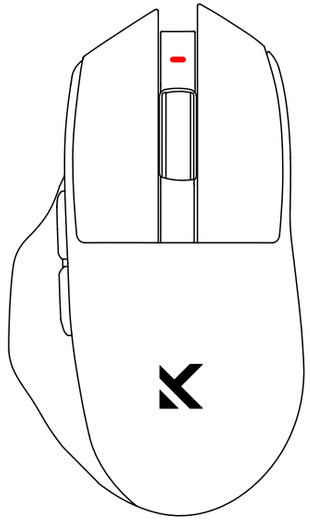

The red indicator light is flashing: Please charge immediately

Indicator light red and solid: Charging

Indicator light green and solid: Charging completed

The DPI of the sixth gear for G7 Pro and G7 Max is 26000

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).