
User's Manual


MCHOSE

# A7 Wireless Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


# PRODUCT OVERVIEW

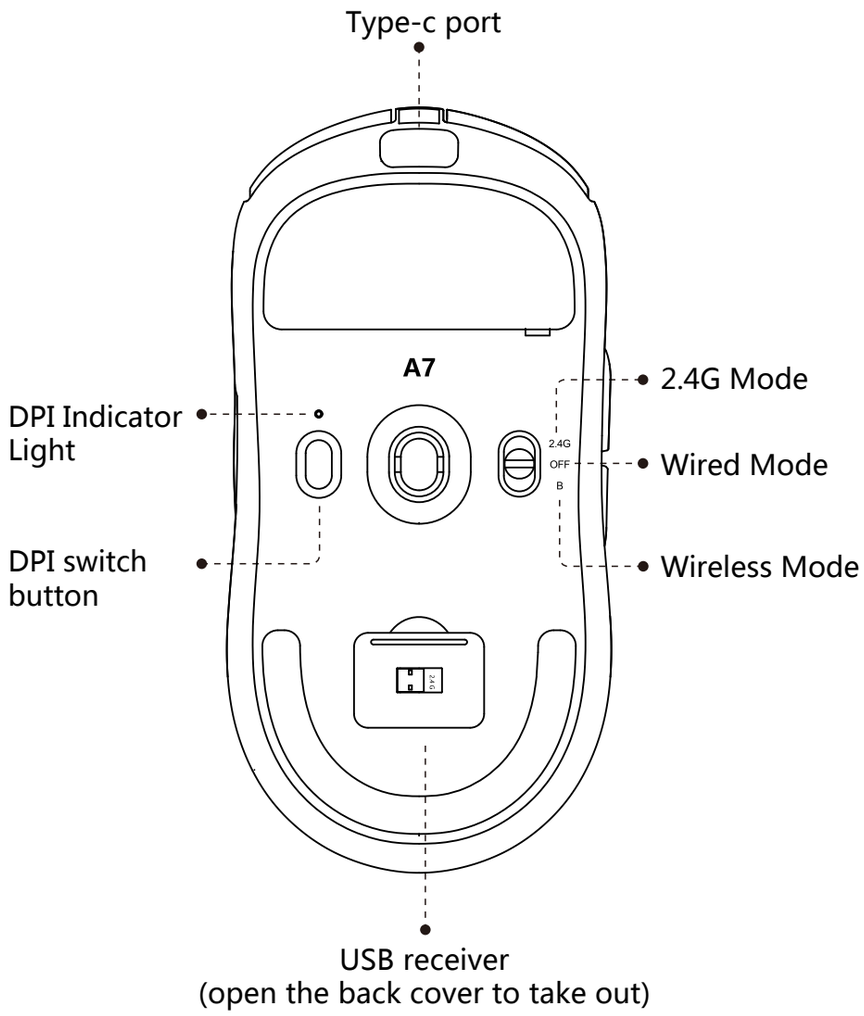

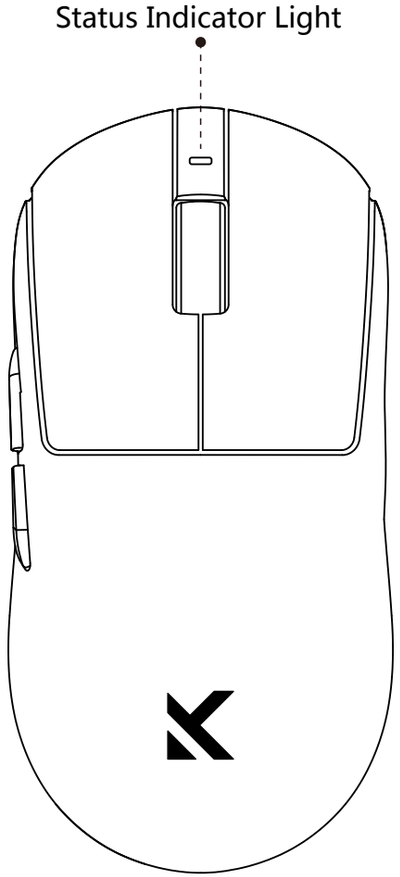
# CONNECTION METHOD

## For Charging / Wired Connection Use

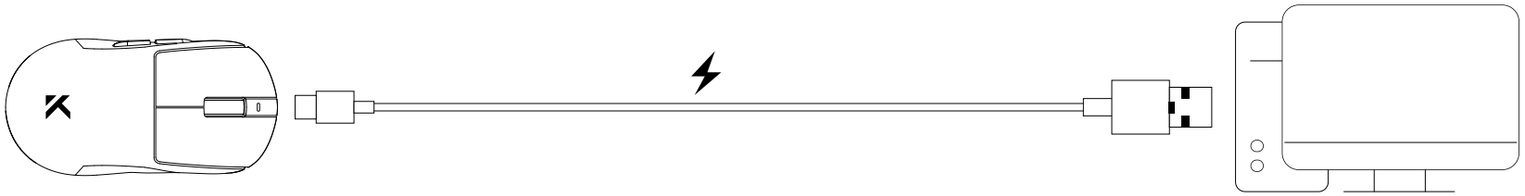


• Insert the Type-C end of the standard USB cable into the corresponding port of the mouse, and insert the USB end into the corresponding port of the computer for use.
• In 2.4G/wireless mode, plugging in the USB cable will switch to wired mode and charge the mouse simultaneously.

## For 2.4G Connection Use

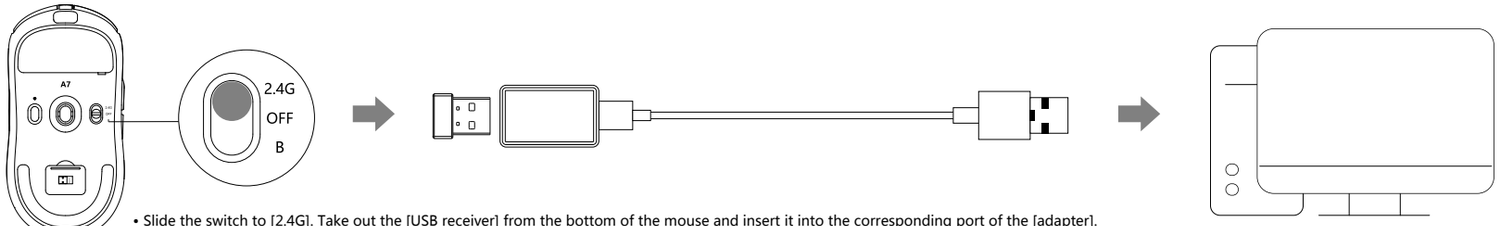


• Slide the switch to [2.4G]. Take out the [USB receiver] from the bottom of the mouse and insert it into the corresponding port of the [adapter].
Insert the Type-C end of the standard USB cable into the corresponding port of the [adapter], and insert the USB end into the USB port of the computer for use.
• Manual pairing (factory default is already paired): Unplug the USB receiver from the adapter. Press and hold the [left button + middle button + right button] of the mouse simultaneously for about 5 seconds until the green indicator light flashes rapidly to enter the pairing state. Then, insert the USB receiver back into the adapter. Keep the mouse close to the receiver (within 20 cm). The indicator light will turn off after a successful connection.

## For Wireless Connection Use

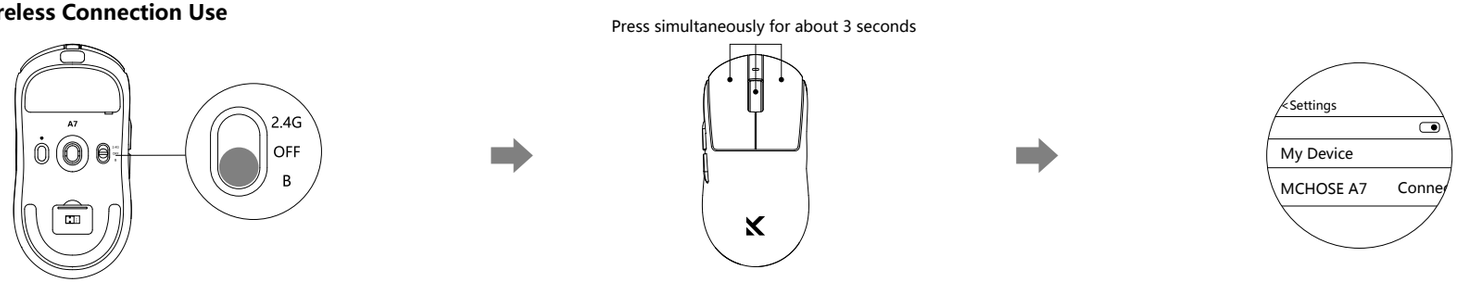


Slide the switch to [B]. Search for and connect to the devices named [MCHOSE A7] / [MCHOSE A7 Pro] / [MCHOSE A7 Ultra]. If the connection is unsuccessful,
press and hold the [left button + middle button + right button] of the mouse simultaneously for about 3 seconds until the indicator light flashes rapidly to enter the pairing state, and then try to connect again.
The indicator light will turn off after a successful connection.

## ■ DRIVER INTRODUCTION

**M HUB Web :** https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

**M HUB Driver :** https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

## DPI ADJUSTMENT

Level 1: Red Light 400DPI


Level 2: Blue Light 800DPI

Level 3: Green Light 1600DPI


Level 4: Yellow Light 3200DPI

Level 5: Cyan Light 6400DPI

Level 6: Purple Light 26000DPI

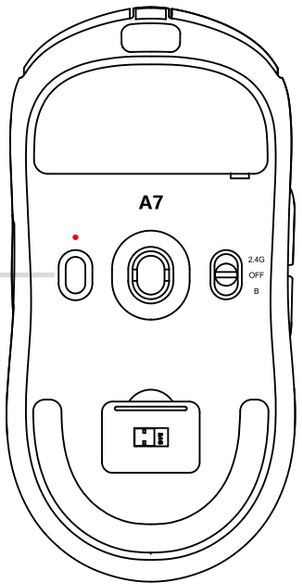


## BATTERY STATUS INDICATOR

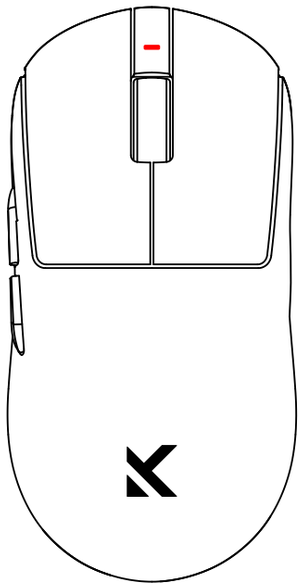

**The red indicator light is flashing:**
**Please charge immediately.**

**The red indicator light stays on constantly:**
**It is currently charging.**

**The green indicator light stays on constantly:**
**Charging is completed.**

The DPI of level 6 of A7 Ultra is 42000

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

## CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).