User's Manual


MCHOSE

A7 V2 Wireless Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

■ PRODUCT OVERVIEW



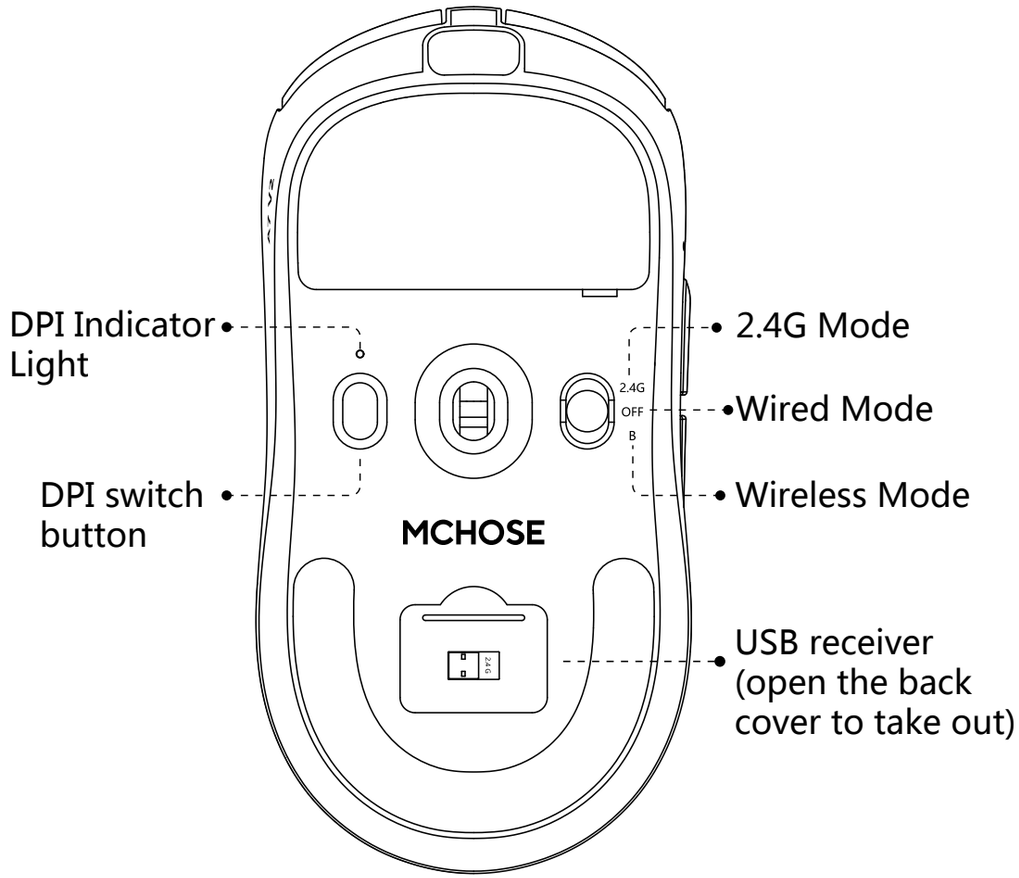

■ CONNECTION METHOD


2.4G Connection:

•Toggle the mode switch to [2.4G].

•Take out the USB receiver from the storage slot.

•Insert the receiver into the USB port of the computer.


•Manual Pairing (Paired by Default at Factory): Press and hold the mouse’ s【Left, Middle, Right buttons】 simultaneously for about 5 seconds until the indicator light flashes quickly to enter the pairing state. Insert the USB receiver into the computer’ s USB port, bring the mouse close to the receiver (within 20cm). The indicator light will turn off when the connection is successful.

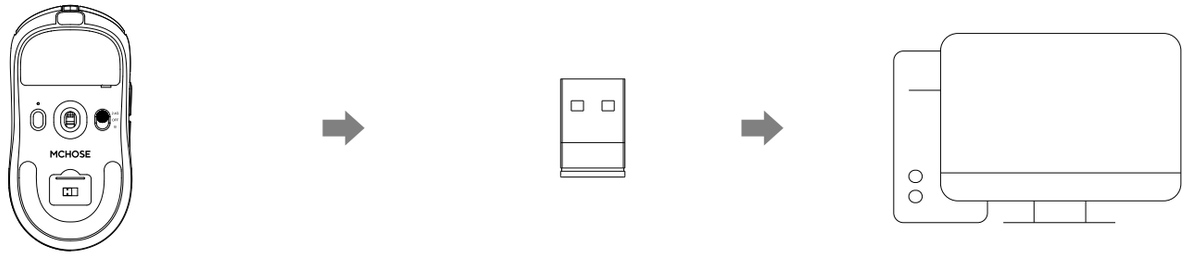

Charging/Wired Connection:


•Plug the Type-C end of the included USB cable into the corresponding port of the mouse, and plug the USB end into the corresponding port of the computer to use it.

•Once the USB cable is plugged in, it will switch to wired mode and charge the mouse at the same time.

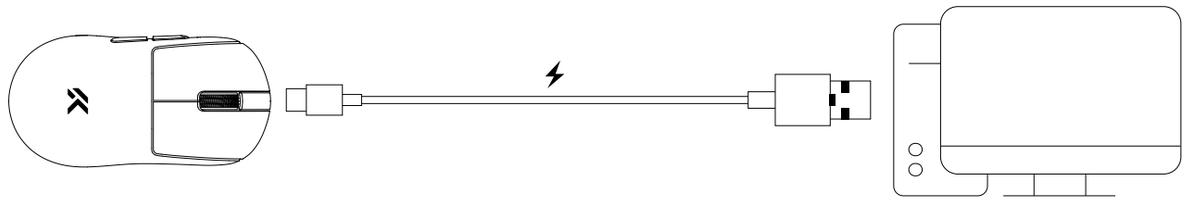

Wireless Connection:

•Toggle the switch to [B], search for and connect to the device with the pairing name【MCHOSE A7 V2】. If the connection is unsuccessful, press and hold the mouse’ s【Left + Middle + Right buttons】 simultaneously for about 5 seconds until the indicator light flashes quickly to enter the pairing state and try connecting again. The indicator light will turn off when the connection is successful.

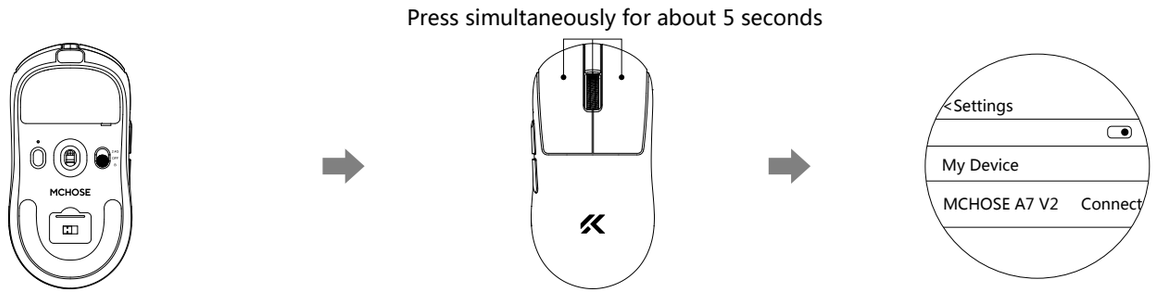

■ DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI ADJUSTMENT

Level 1: Red Light 400DPI


Level 2: Blue Light 800DPI

Level 3: Green Light 1600DPI

Level 4: Yellow Light 3200DPI


Level 5: Cyan Light 6400DPI

Level 6: Purple Light 26000DPI

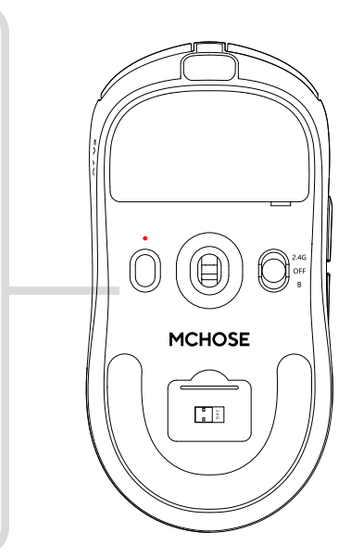

*The DPI of the 6th gear of the 3950 sensor is 42000.

BATTERY STATUS INDICATOR

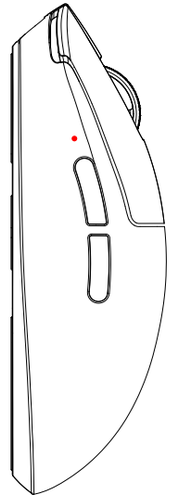

The red indicator light is flashing:
Please charge immediately.

The red indicator light stays on constantly:
It is currently charging.

The green indicator light stays on constantly:
Charging is completed.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).