MCHOSE


# Ace 68 series
# Professional - grade e - sports
# Hall Effect Magnetic Switch Keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


# PRODUCT OVERVIEW



## Ace 68

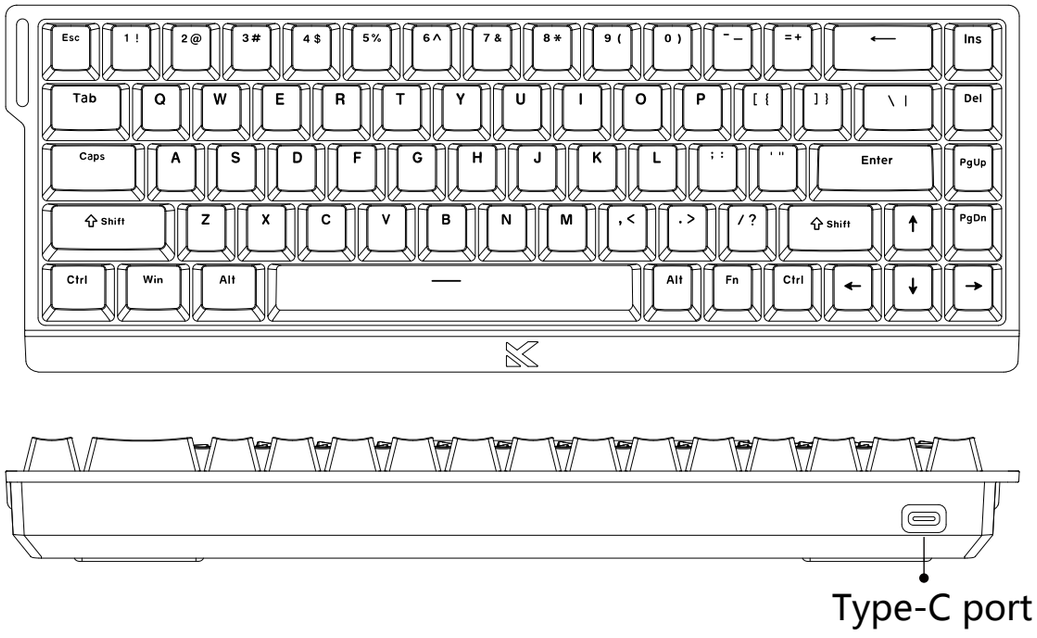


## Ace 68 Air

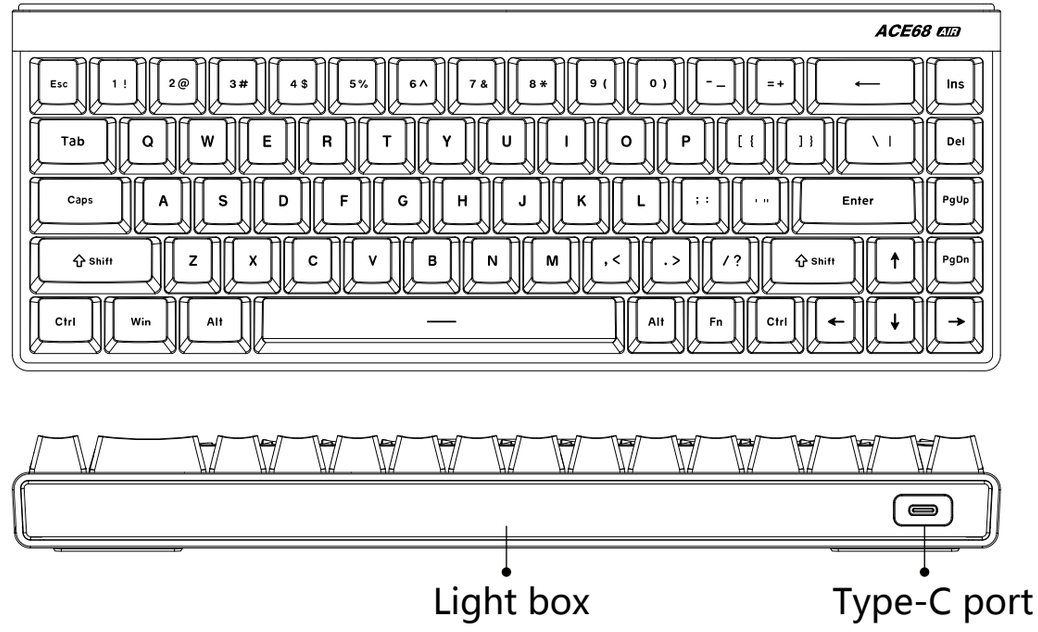

# DRIVER INTRODUCTION



**M HUB Web :** https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

**M HUB Driver :** https://www.maicong.cn

Open the URL in your browser,


Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

# LIGHTING FUNCTION




## Ace 68

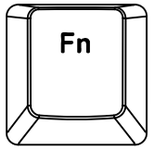


+

| | |
|---|---|
| T | Turn on/off the light |
| Y | Switch light effect color |
| U | Cycle through light effects |
| F | Light brightness - |
| G | Light brightness + |
| H | Light speed - |
| J | Light speed + |

## Ace 68 Air

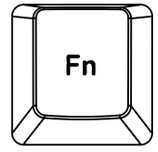



+

| | |
|---|---|
| Q | Turn on/off light box lights |
| W | Switch light box lighting modes |
| E | Light box light brightness - |
| R | Light box light brightness + |
| A | Switch light box light colors |
| T | Turn off/on keyboard LED lights |
| Y | Switch backlight colors |
| U | Switch backlight effects |
| F | Backlight brightness - |
| G | Backlight brightness + |
| H | Backlight speed - |
| J | Backlight speed + |

# FN COMBINATION KEY




## Ace 68

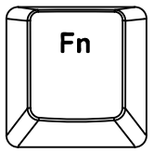


+

| | |
|---|---|
| ESC | · |
| 1! | F1 |
| 2@ | F2 |
| 3# | F3 |
| 4$ | F4 |
| 5% | F5 |
| 6^ | F6 |
| 7& | F7 |
| 8* | F8 |
| 9( | F9 |
| 0) | F10 |
| -_ | F11 |
| =+ | F12 |

## Ace 68 Air

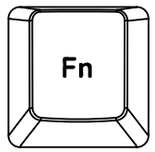



+

| | |
|---|---|
| ESC | ~ |
| 1! | F1 |
| 2@ | F2 |
| 3# | F3 |
| 4$ | F4 |
| 5% | F5 |
| 6^ | F6 |
| 7& | F7 |
| 8* | F8 |
| 9( | F9 |
| 0) | F10 |
| -_ | F11 |
| =+ | F12 |

# FN COMBINATION KEY




## Ace 68

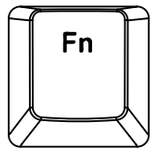


+

| | |
|---|---|
| O | Win system |
| P | Mac system |
| ]} | Pause |
| [{ | Print |
| Ins | Home |
| Del | End |
| Z | Last song |
| X | Next song |
| C | Pause/Play |
| V | Stop |
| B | Mute |
| N | Volume - |
| M | Volume + |
| Win | Lock/Unlock the Windows key |
| Space | Restore default |

## Ace 68 Air

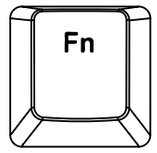


+

| | |
|---|---|
| O | Win system(default) |
| P | Mac system |
| ]} | Pause |
| [{ | Print |
| Ins | Home |
| Del | End |
| Z | Last song |
| X | Next song |
| C | Pause/Play |
| V | Stop |
| B | Mute |
| N | Volume - |
| M | Volume + |
| Win | Lock/Unlock the Windows key |
| Space | Restore default |