User's Manual


MCHOSE

# G75 V2 Custom mechanical keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

# PRODUCT OVERVIEW



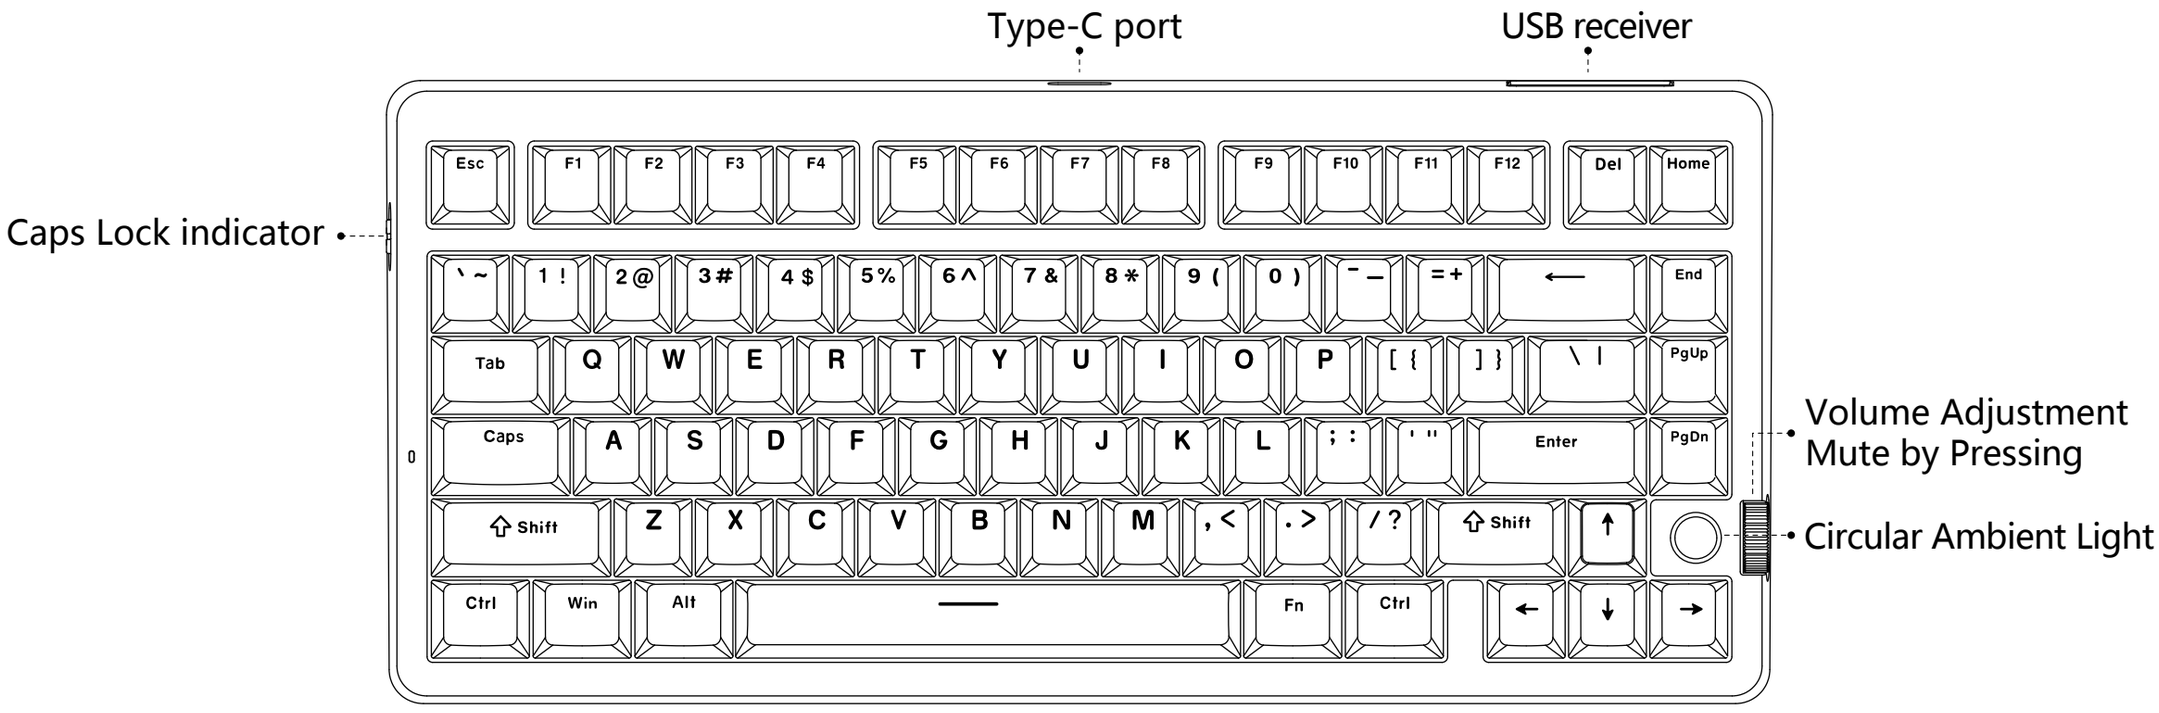


# CONNECTION MODE




## 2.4G Connection:

•Toggle the mode switch to 【2.4G】
•Take out the receiver from the storage slot
•Insert the receiver into the USB port of the computer
•Manual pairing (factory default is already paired):
Long-press 【FN + `~】 until the indicator light flashes quickly.
Insert the receiver into the computer's USB port.
When the connection is successful,
the normal light effect will be restored.

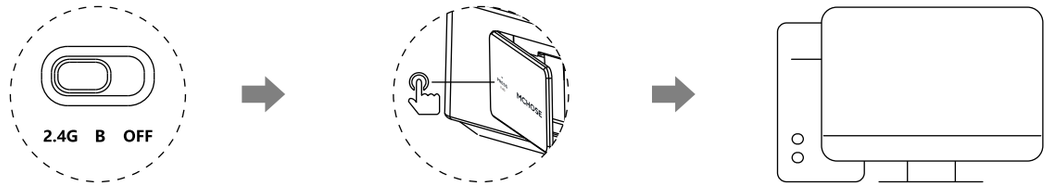



## Wired Connection:

•Toggle the mode switch to 【OFF】 mode.
•Plug the Type-C end of the USB cable into the corresponding port of the keyboard.
•Plug the USB end of the cable into the corresponding port of the computer, and it can be used.

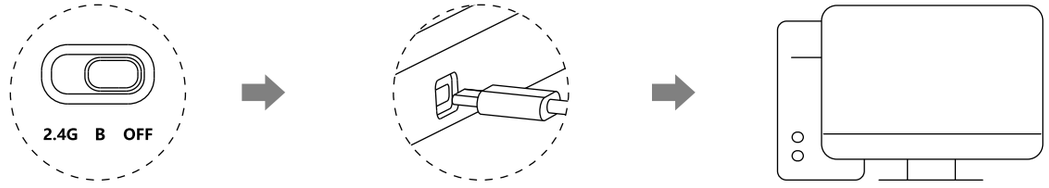


## Wireless Connection:

•Toggle the mode switch to 【B】 mode.
•Long-press 【FN + 1!】 to start pairing. The indicator light will flash quickly during pairing.
•Press 【FN + 1!】, 【FN + 2@】, or 【FN + 3#】 to switch devices.

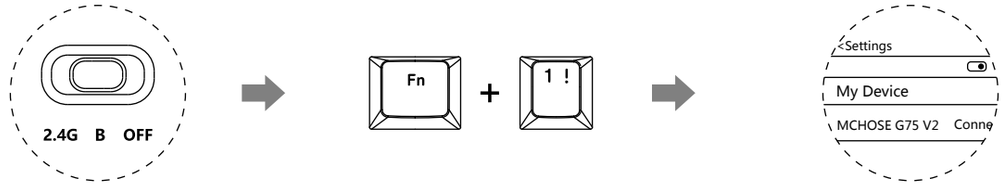

# DRIVER INTRODUCTION



**M HUB Web :** https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

**M HUB Driver :** https://www.maicong.cn


Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

# FN COMBINATION KEY



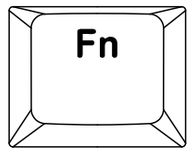



+

| | |
|---|---|
| A | Win System (Default) |
| S | Mac System |
| Win | Lock/Unlock Win Key |
| Esc | Restore Factory Settings<br>(Long press for about 3s) |
| =+ | Backlight color switch |
| ↓ | Backlight brightness - |
| ↑ | Backlight brightness + |
| ← | Backlight speed - |
| → | Backlight speed + |
| \| | Backlight mode switch |

| | |
|---|---|
| ,< | Circular Ambient Light Brightness - |
| .> | Circular Ambient Light Brightness + |
| Right Ctrl | Circular Ambient Light Speed Switch |
| /? | Circular Ambient Light Color Switch |
| B | Check Battery Level<br>(in 2.4G/Wireless Mode) |
| I | SCRLK |
| U | PRTSC |
| Right Shift | Circular Ambient Light Mode Switch |
| Left Shift | Switch Charging Status |
| O | PAUSE |

# FN COMBINATION KEY






+

| Win system | | |
|---|---|---|
| **Key** | **Multimedia combination function** | **Multimedia function (single press)** |
| F1 | Screen Brightness - | F1 |
| F2 | Screen Brightness + | F2 |
| F3 | Switch Window | F3 |
| F4 | Resource Manager | F4 |
| F5 | Homepage | F5 |
| F6 | Mailbox | F6 |
| F7 | Previous Track | F7 |
| F8 | Play/Pause | F8 |
| F9 | Next Track | F9 |
| F10 | Mute | F10 |
| F11 | Volume - | F11 |
| F12 | Volume + | F12 |

| Mac system | | |
|---|---|---|
| **Key** | **Multimedia combination function** | **Multimedia function (single press)** |
| F1 | F1 | Screen Brightness - |
| F2 | F2 | Screen Brightness + |
| F3 | F3 | Switch Window |
| F4 | F4 | Return to Desktop |
| F5 | F5 | Short Press for Voice / Long Press to Call Siri |
| F6 | F6 | Screenshot |
| F7 | F7 | Previous Track |
| F8 | F8 | Play/Pause |
| F9 | F9 | Next Track |
| F10 | F10 | Mute |
| F11 | F11 | Volume - |
| F12 | F12 | Volume + |


# POWER MANAGEMENT



## 1. Battery Level Check

In 2.4G/wireless mode (no USB inserted), press FN + B to view the keyboard’ s battery level: other backlights will turn off (and restore when you release the keys).

- Full battery: Numpad keys [1! – 0)] light up green.
- As battery depletes: The number of green-lit keys decreases.
- Low battery: Numpad keys [1! – 3#] light up red.

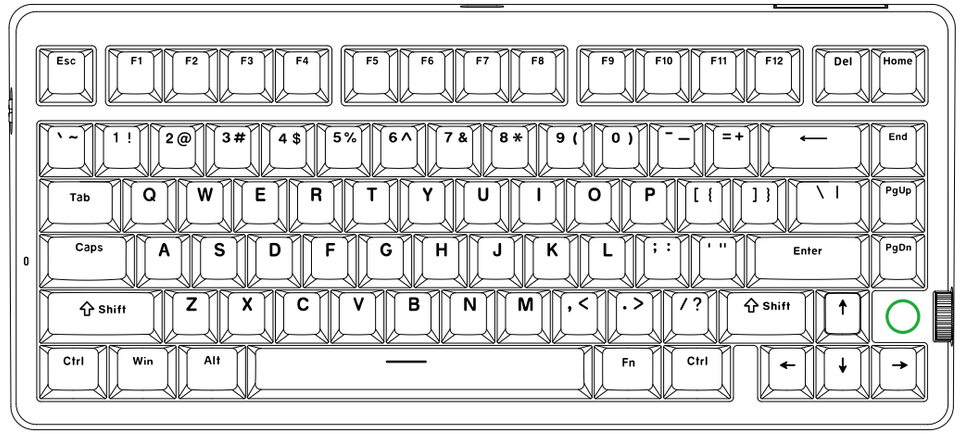


## 2. Charging Methods

- Charge the keyboard by connecting it to a computer via the included cable (works in any mode).
- To switch to charging display mode during charging: Press FN + Left Shift (solid red = charging; solid green = fully charged).
- Low battery: The circular ambient light flashes red.

## 3.Sleep Function

In wireless/2.4G mode, the keyboard automatically enters power-saving mode after 3 minutes of inactivity. Press any key to wake it up.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

## CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).