
MCHOSE

G87 V2 Tri-mode Mechanical Keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW

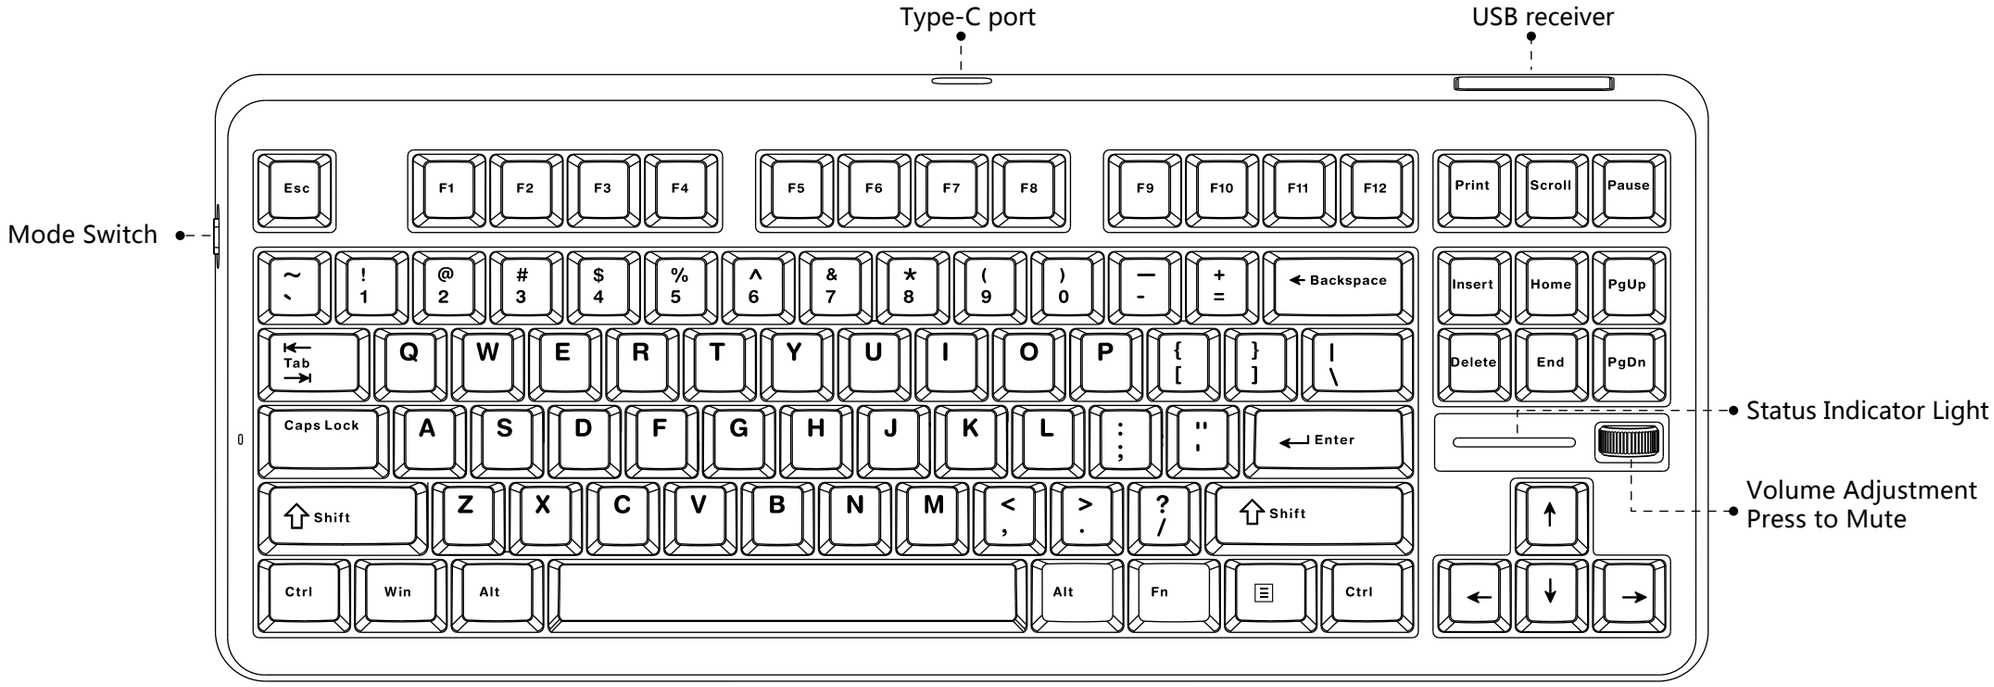

CONNECTION MODE


2.4G Connection

•Switch the mode switch to [2.4G]

•Take out the USB receiver from the storage slot

•Insert the receiver into the computer's USB port

Note: Long press [FN + ~] for about 3s to re-pair 2.4G

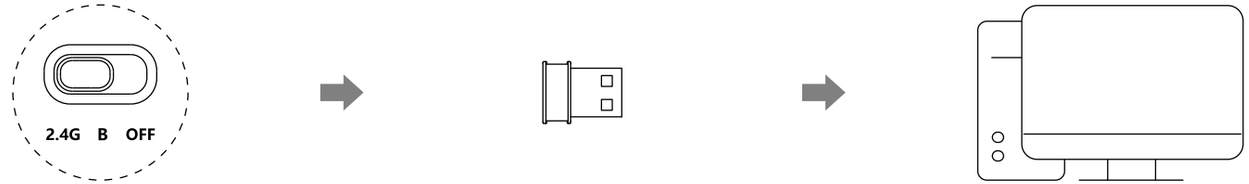


Wired Connection

•Switch the mode switch to [OFF] mode

•Insert the Type-C end of the USB cable into the corresponding port of the keyboard

•Insert the USB end of the cable into the corresponding port of the computer to use

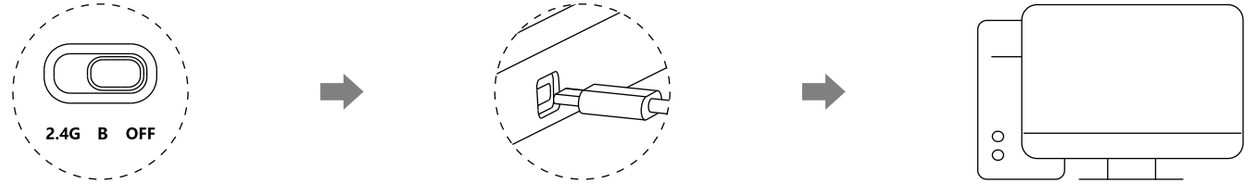


Wireless Connection

•Switch the mode switch to [B] mode

•Long press [FN+1!] to start pairing; the indicator light flashes r apidly during pairing

•Press [FN+1!], [FN+2@], or [FN+3#] to switch devices

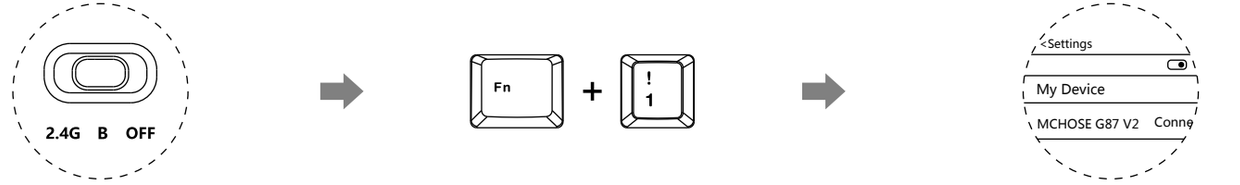

DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

FN COMBINATION KEY



+

A	Long press for about 2s to switch to Win system (default)
S	Long press for about 2s to switch to Mac system
Win	Lock/Unlock Win Key
Esc	Restore factory settings (long press for about 3s)
}]	Backlight Color Switching
P	Backlight Brightness +
{ [	Backlight Brightness -
: ;	Backlight Speed +
’ ”	Backlight Speed -

\ |	Backlight Mode Switching
R	Status Indicator Light Brightness +
T	Status Indicator Light Brightness -
F	Status Indicator Light Speed +
G	Status Indicator Light Speed -
H	Status Indicator Light Mode Switching
Y	Status Indicator Light Color Switching
Right Shift	Turn On/Off Keyboard Lights
B	Check Battery Level

FN COMBINATION KEY



+


Windows System		
Key	**Multimedia Combination Function**	**Multimedia Function (Single Press)**
F1	Screen Brightness -	F1
F2	Screen Brightness +	F2
F3	Switch Window	F3
F4	Resource Manager	F4
F5	/	F5
F6	/	F6
F7	Previous Track	F7
F8	Play/Pause	F8
F9	Next Track	F9
F10	Mute	F10
F11	Volume -	F11
F12	Volume +	F12

Mac System		
Key	**Multimedia Combination Function**	**Multimedia Function (Single Press)**
F1	F1	Screen Brightness -
F2	F2	Screen Brightness +
F3	F3	Switch Window
F4	F4	Return to Desktop
F5	F5	Short Press for Search / Long Press to Call Siri
F6	F6	Screenshot
F7	F7	Previous Track
F8	F8	Play/Pause
F9	F9	Next Track
F10	F10	Mute
F11	F11	Volume -
F12	F12	Volume +

POWER MANAGEMENT

1. Battery Check

In 2.4G / wireless mode (without USB inserted), press FN+B to display the keyboard battery level. Other backlights will turn off and resume when released. When fully charged, the number keys [1! - 0)] will all light up green. As the battery drains, the green lights gradually decrease. When the number keys [1! - 3#] are red, it indicates low battery.

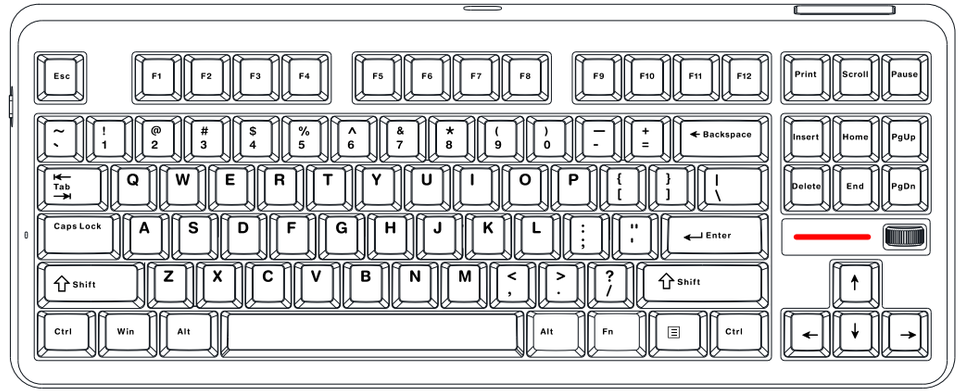

2. Charging Method

Low battery: Status indicator flashes red.
Charge the keyboard by connecting it to a computer via the included cable (works in any mode).

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).