
MCHOSE

K20 GAMING AUDIO SPEAKER

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT FUNCTION OVERVIEW



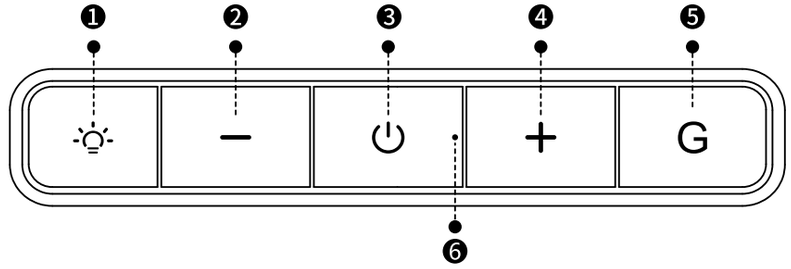

❶ Ambient Light Button
❷ Volume-
❸ Power/Mode Switch Button
❹ Volume+
❺ Multi-function Button
❻ Status indicator light
Red light: Sound card input
White light: Bluetooth input

Lighting effect mode switch x1
Cycle through lighting display areas x2
Turn lighting effects on/off 1.5s

Switch audio effect modes (Music, Game, Movie) x1
Microphone on/off x2
Reject call x2
Answer/hang up call x1

Power on/off 3s
Switch connection mode x1
Disconnect Bluetooth connection x2

Increase volume x1
Continuously increase volume >2s

Decrease volume x1
Continuously decrease volume >2s


G + Combination key
Voice prompt sound on/off 1.5s

***Friendly reminder: After turning off voice prompts, operations such as 【Switch audio effect mode】 and 【Microphone on/off】 will be accompanied by electronic sound prompts.**

Audio effect mode switch prompt sounds: "Beep" indicates "Game mode"; "Beep - beep" indicates "Movie mode"; "Beep - beep - beep" indicates "Music mode".


Microphone on/off prompt sounds: "Dong" indicates the microphone is off; "Dong - dong" indicates the microphone is on.

■USB sound card input

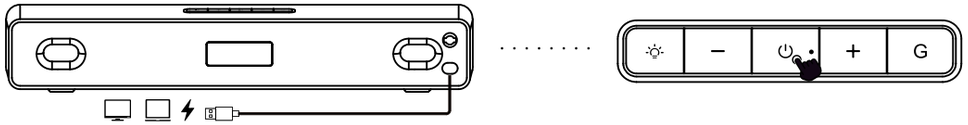

Connect the USB power cable to the computer's USB port. Click the [⏻ Power/Mode Switch Key] to switch to [Sound Card Input] mode. The red indicator light will stay on.

■Microphone installation

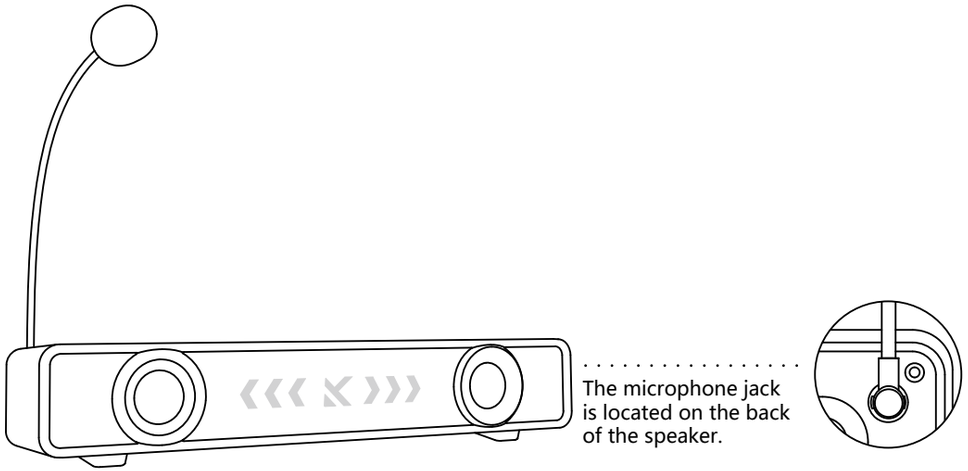

■Bluetooth input



Connect the USB power cable to the computer's USB port. Click the [⏻ Power/-Mode Switch Key] to switch to the [Bluetooth Input] mode. The white indicator light will flash. Search for the device named [MCHOSE K20]. After a successful connection, the white indicator light will stay on.

■Common Problem-solving Methods:

Can't hear sound from the speaker?

-Check if the speaker's indicator light is on. Confirm whether the current connection status of the speaker is correct based on the color of the indicator light. (Indicator light: red - sound card mode; white - Bluetooth mode; white light flashing - Bluetooth pairing status)
-Press the volume - up key of the speaker to appropriately increase the volume. At the same time, check if the volume of the computer player is turned up.
-Find the speaker icon in the lower - right corner of the computer desktop. Click to check if the current speaker device name is listed.
-Check the computer settings to confirm whether the speaker is the default playback device (Settings - Sound - Output device).

No sound from the microphone?

-Confirm whether the microphone is turned on. Try double - clicking the G key (to turn the microphone on/off).
-Unplug and replug the microphone, pushing it in firmly.
-Check the computer settings to confirm whether the microphone is the default recording device (Settings - Sound - Input device).
-Check if the computer or application software has granted the speaker permission to use the microphone (Settings - Privacy - Microphone - Enable permission).

■ DRIVER INTRODUCTION

M HUB Desktop driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

Notice: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio - frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to a circuit outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the responsible compliance party may void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

	1. It is recommended to power the speaker only through the computer's USB interface. 2. Do not use inferior or non - standard power adapters to power the speaker. 3. Do not use over - voltage or over - current power adapters to power the speaker. 4. Keep the speaker away from high - temperature equipment during use. 5. Turn off the power switch when the speaker is not in use for an extended period.