User's Manual


MCHOSE

K20 Pro GAMING SPEAKER

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT FUNCTION OVERVIEW



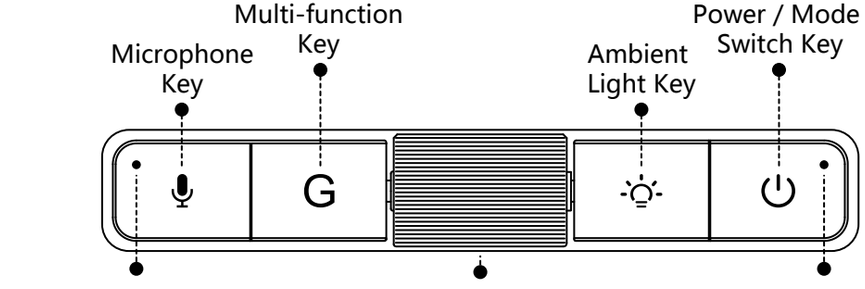

Microphone Indicator Light
Green light: Microphone On
Light off: Microphone Off

Volume Wheel
Volume + : Scroll Up
Volume - : Scroll Down
Mute : Press the Wheel

Status Indicator Light
Red Light: Sound Card Input
White Light: Bluetooth Input

- Microphone On/Off x1
- Prompt Tone On/Off 2s

- Switch Sound Mode (Music, Game, Movie) x1
- Reject Call x2
- Answer / Hang Up Call x1

- Lighting Mode Switch x1
- Cycle Lighting Display Area x2
- Lighting On/Off 1.5s


- Power On / Power Off 1.5s
- Switch Connection Mode x1
- Disconnect Bluetooth x2

***Note: After turning off the voice prompt, operations such as [Switch Sound Mode] and [Microphone On/Off] will be accompanied by electronic beeps.**

Sound Mode Switch Beep:
‘Beep’ indicates Game Mode;
‘Beep Beep’ indicates Movie Mode;
‘Beep Beep Beep’ indicates Music Mode.


Microphone On/Off Beep:
‘Dong’ indicates Microphone Off;
‘Dong Dong’ indicates Microphone On.

■USB sound card input

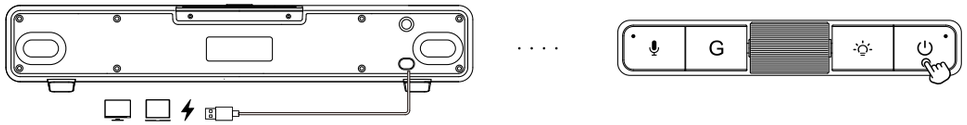

Connect the USB power cable to the computer's USB port. Click the [⏻ Power/Mode Switch Key] to switch to [Sound Card Input] mode. The red indicator light will stay on.

■Microphone installation

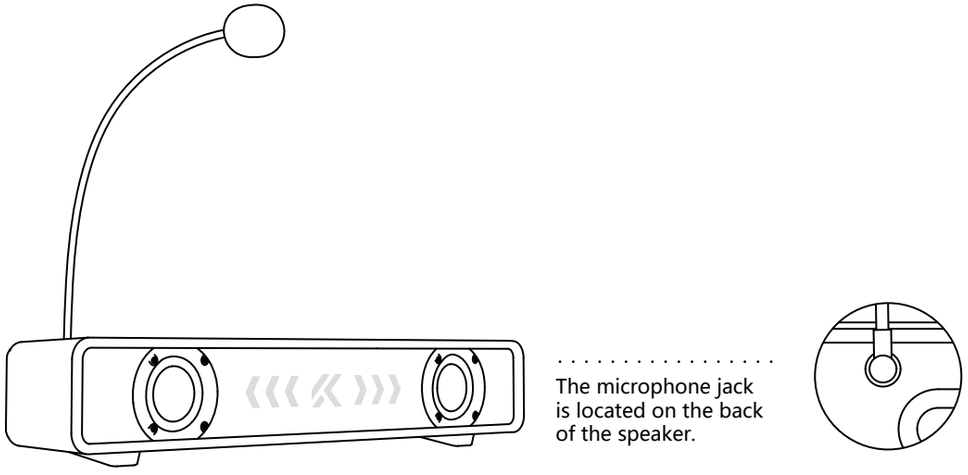

The microphone jack is located on the back of the speaker.

■Bluetooth input



Connect the USB power cable to the computer's USB port. Click the [⏻ Power/-Mode Switch Key] to switch to the [Bluetooth Input] mode. The white indicator light will flash. Search for the device named [MCHOSE K20 Pro]. After a successful connection, the white indicator light will stay on.

■Common Problem-solving Methods:

No sound from the speaker?

-Check if the speaker indicator light is on, and confirm whether the current connection status of the speaker is correct according to the color of the indicator light (Indicator light: Red light - Sound card mode; White light - Bluetooth mode; Flashing white light: Bluetooth pairing status).

-Press the volume increase button on the speaker to increase the volume appropriately, and at the same time check whether the volume of the computer player is turned up.

-Find the speaker icon in the lower right corner of the computer desktop and click to check if there is the name of the current speaker device.

-Check the computer settings to confirm whether the speaker is the default playback device (Settings - Sound - Output device).

No sound from the microphone?

-Check if the microphone button glows green; click the button to turn the microphone on or off.

-Re-plug the microphone and insert it firmly all the way.

-Check the computer settings to confirm whether the microphone is the default recording device (Settings - Sound - Input device).

-Check whether the computer or application software has enabled microphone permissions for the speaker (Settings - Privacy - Microphone - Enable permission).

■ DRIVER INTRODUCTION

M HUB Desktop driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

Notice: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio - frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), the user is encouraged to try one or more of the following measures to correct the interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the device and the receiver.
- Connect the device to a circuit outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the responsible compliance party may void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

 **Power Supply Instructions**	1. It is recommended to power the speaker only through the computer's USB interface. 2. Do not use inferior or non - standard power adapters to power the speaker. 3. Do not use over - voltage or over - current power adapters to power the speaker. 4. Keep the speaker away from high - temperature equipment during use. 5. Turn off the power switch when the speaker is not in use for an extended period.