
MCHOSE

K87 V3
Custom Mechanical Keyboard

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW

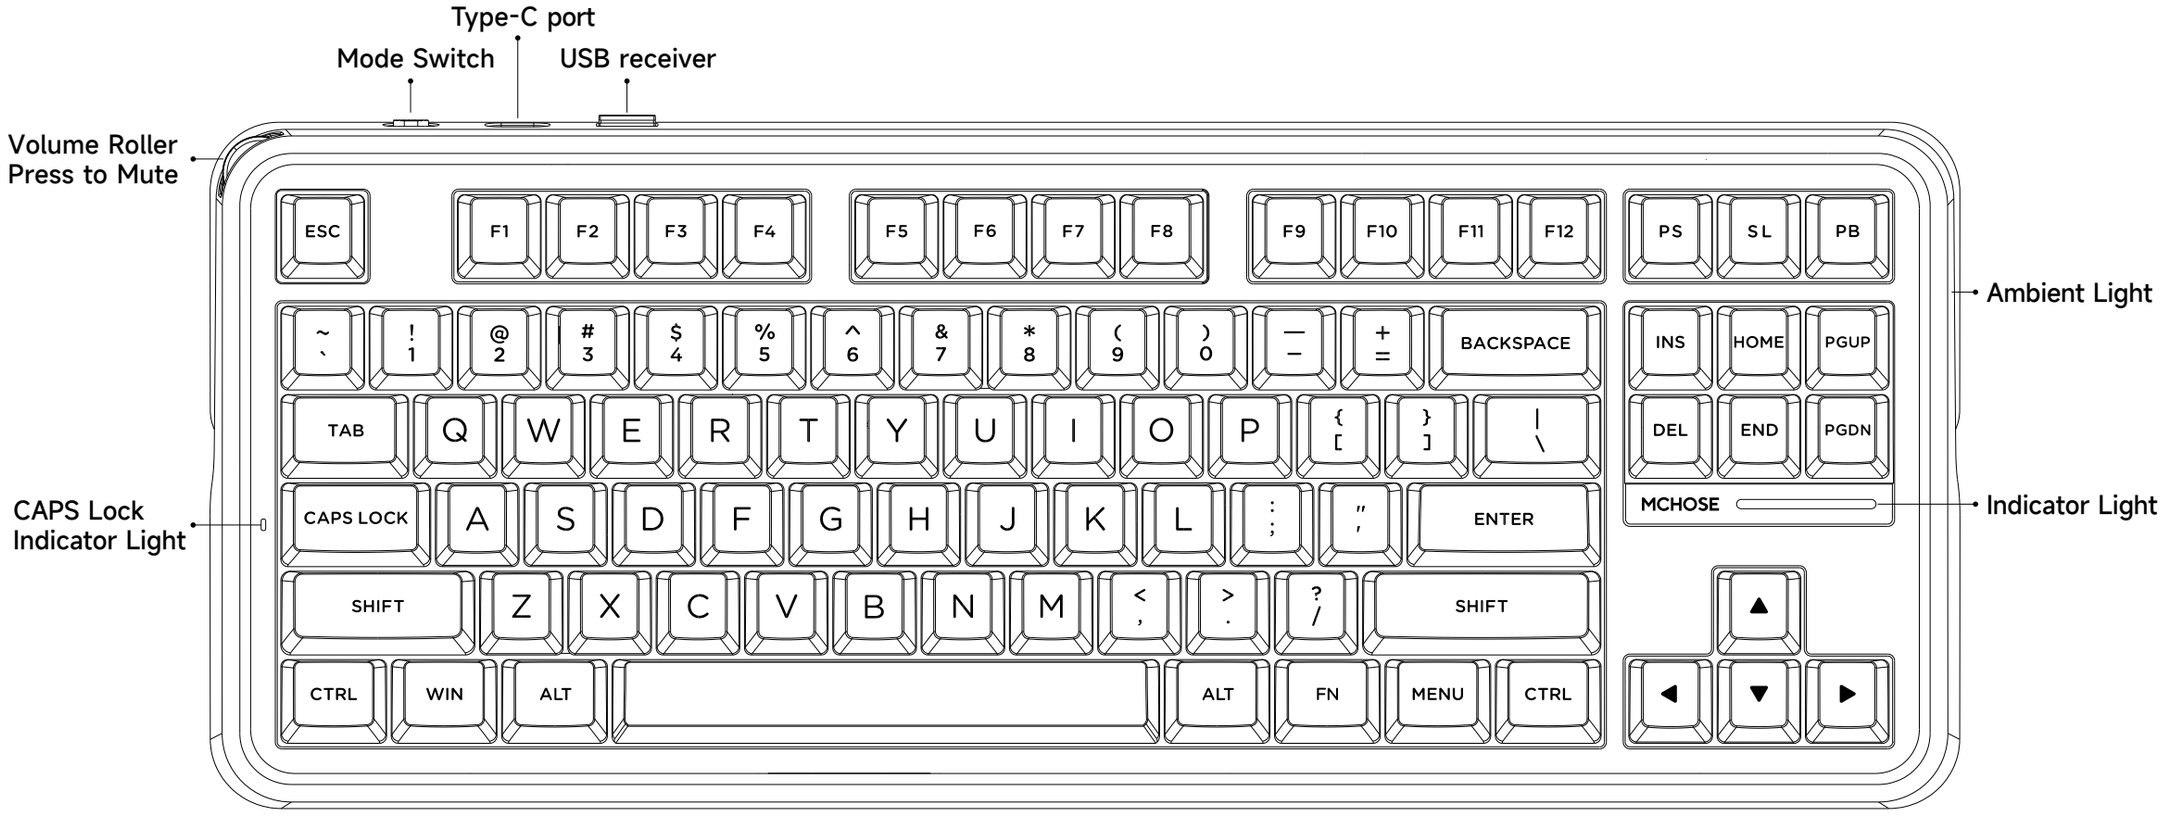


CONNECTION MODE

2.4G Connection:


- Slide the mode switch to [2.4G].
- Take the USB receiver out of the storage slot, or press to eject the USB receiver.
- Plug the receiver into a USB port on your computer.

Note: Hold down [FN+~] for approx. 3 seconds to re-pair the 2.4G channel; the Status Indicator will flash rapidly. Insert the receiver into your PC's USB port. Pairing is successful once the Status Indicator returns to normal steady state (Factory pre-paired by default).

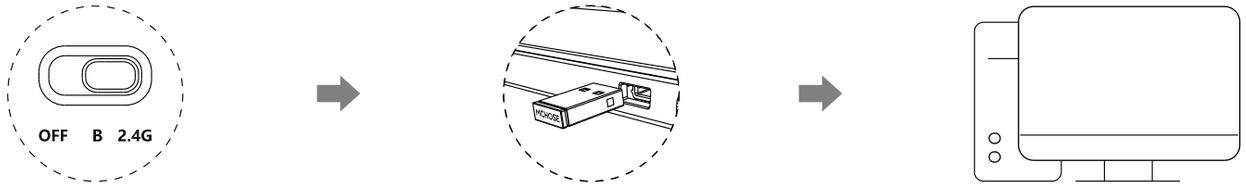


Wired Connection:

- Slide the mode switch to [OFF] mode.
- Plug the Type-C end of the USB cable into the corresponding port on the keyboard.
- Insert the standard USB end of the cable into a matching port on your computer to start using.

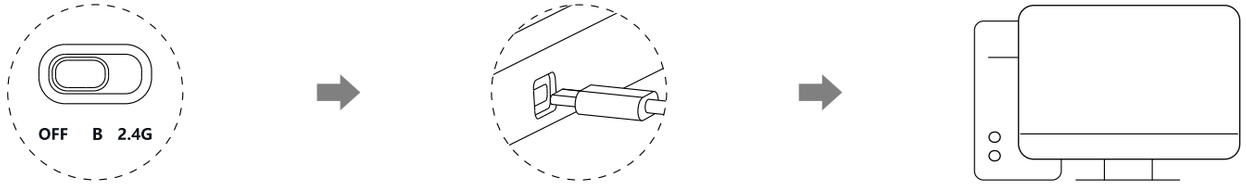

Wireless Connection:

- Slide the mode switch to [B] mode.
- Long press [FN+1!] to start pairing; the indicator flashes rapidly during pairing.
- Press [FN+1!], [FN+2@], [FN+3#] to switch between devices.

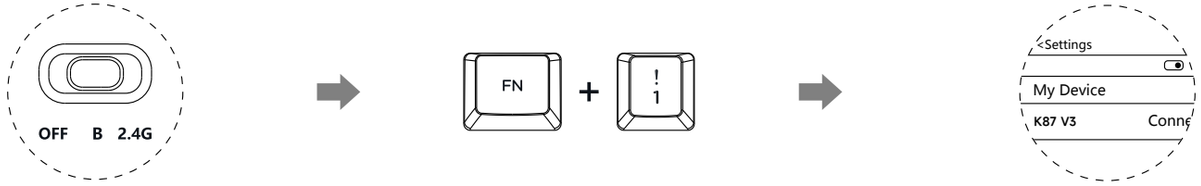

■ DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.


M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

■ FN COMBINATION KEY

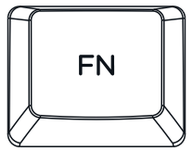

O	Hold approx. 2s to switch to Win System (Default)
P	Hold approx. 2s to switch to Mac System
] }	Cycle lighting control modes (Backlight, Indicator, Ambient Light)
[{	Switch light effect color
\ |	Switch light animation effect
Right Shift	Turn On / Turn Off Lighting
↑	Increase Light Brightness
↓	Brightness -
→	Light Speed +
←	Light Speed -
B	Check Battery
WIN	Lock / Unlock Win Key
Esc	Hold approx. 3s to Restore Default Settings
Left Shift	Toggle Charging Indicator State

Multimedia Functions



+

Win system		
Key	**Multimedia combination function**	**Multimedia function (single press)**
F1	Screen brightness -	F1
F2	Screen brightness +	F2
F3	Switch window	F3
F4	File Explorer	F4
F5	/	F5
F6	/	F6
F7	Previous track	F7
F8	Play / Pause	F8
F9	Next track	F9
F10	Mute	F10
F11	Volume -	F11
F12	Volume +	F12


Mac system		
Key	**Multimedia combination function**	**Multimedia function (single press)**
F1	F1	Display Brightness -
F2	F2	Display Brightness +
F3	F3	Window Switch
F4	F4	Show Desktop
F5	F5	Short press for Search / Long press to activate Siri
F6	F6	Screenshot
F7	F7	Prev Track
F8	F8	Play/Pause
F9	F9	Next Track
F10	F10	Mute
F11	F11	Volume -
F12	F12	Volume +

■ POWER MANAGEMENT

Battery Level Check

Under 2.4G / Wireless mode (USB cable unplugged), press FN+B to display the keyboard battery level.
Release the key to revert to default lighting effects.

- When fully charged, all number keys [1! - 0)] light up green.
- Green lights will gradually turn off as power drains.
- Red lights on number keys [1! - 2@] indicate low battery.

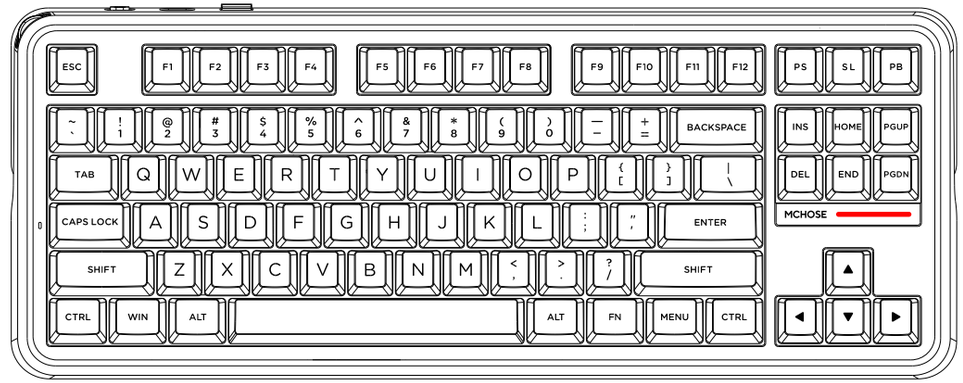

Charging Method

- Flashing red indicator light means low battery.
- The keyboard will charge when connected to a computer via the supplied data cable under any mode.
- While charging, press FN + Left Shift to switch to charging display mode. The indicator light shows a mixed-color marquee scrolling from left to right during charging.
- When fully charged, all indicator lights stay green for 10 seconds, then revert to the lighting effect active before charging.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).