
User's Manual

MCHOSE

V9 *Turbo* GAMING HEADSET

Warm Reminder: The product images shown are for illustrative purposes only;the actual product shall prevail.


PRODUCT OVERVIEW

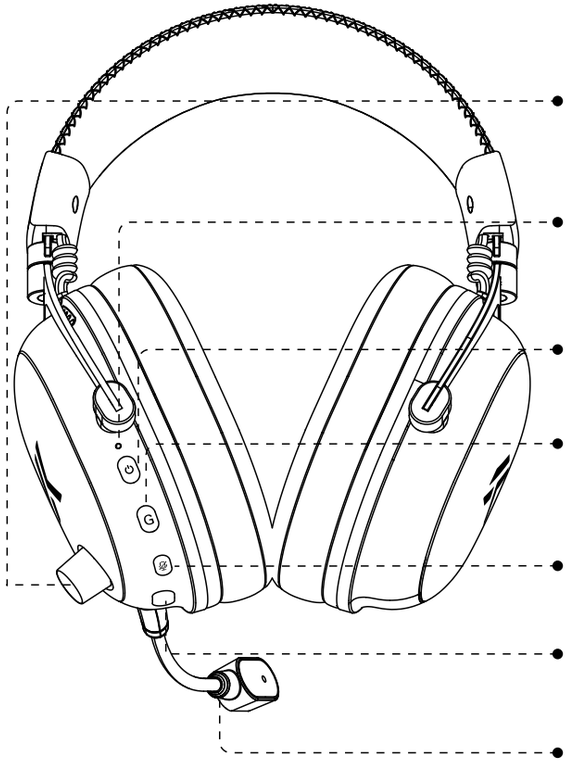

Volume Knob	Volume +: Toggle upward Volume -: Toggle downward
Status Indicator Light	Bluetooth pairing: Red and blue lights flash alternately Bluetooth connected: Blue light flashes slowly 2.4G pairing: Red and green lights flash alternately 2.4G connected: Green light flashes slowly Charging: Red light stays on; Fully charged: Green light stays on Low battery: Red light flashes slowly
Power Button	Power on/off: Press and hold for about 3s
Multifunction Button	Pause/Play: Single press Connection mode switch: Double press Sound effect switch: Press and hold for about 1.5s
Microphone Button	Microphone on/off: Single press Answer/End call: Double press Reject incoming call: Press and hold for about 1.5s
Type-C Port	
Microphone Indicator Light	Microphone on: Blue light stays on Microphone off: Blue light turns off

Wireless Charging Base Indicator Light

* Operating status: Red light stays on
  Non-operating status: Red light turns off
* Non-operating status: Red light turns off

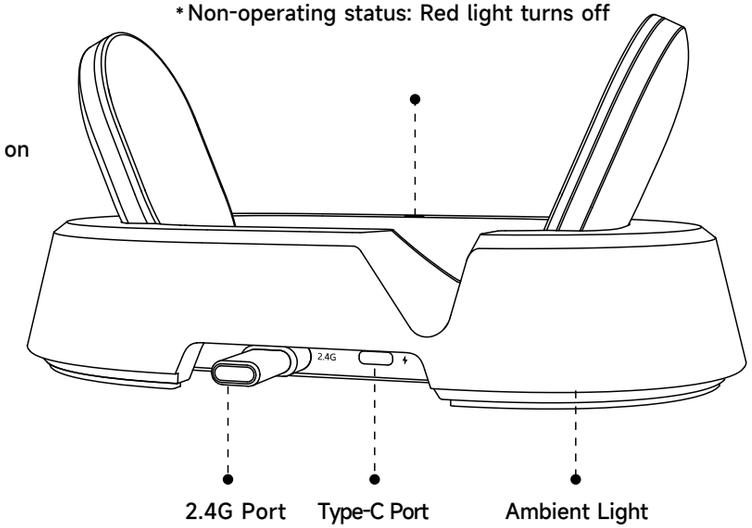


* **The red light of the wireless charging base indicator does NOT indicate the headphone's charging status. For the headphone's charging status, please refer to the headphone's status indicator.**

* **Abnormal detection includes: the headphone is not placed properly, metal foreign objects are attached to the contact surface, or insufficient power supply to the Type-C port of the wireless charging base. Please remove the headphone from the wireless charging base, resolve the abnormality, and then re-place it into the base after about 3 seconds.**


2.4G CONNECTION

Connection Method 1 (Recommended)

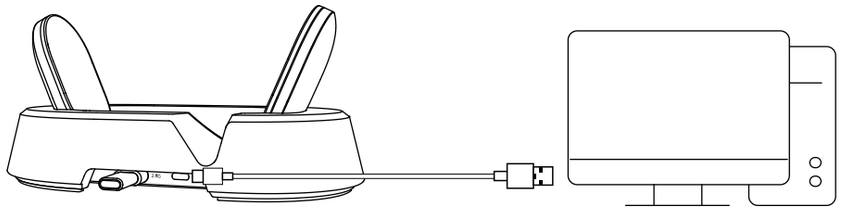

① Plug the receiver into the wireless charging base port. Plug the Type-C end of the data cable into the wireless charging base port, and plug the USB end into the computer port.

Connection Method 2

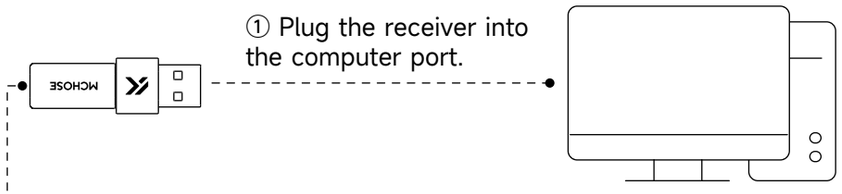



② Press and hold the ⏻ button to turn on the device.

③ Double-press the Ⓖ button to switch to 2.4G mode (the earphone will announce: "Adapter mode").

④ The earphone will automatically connect to the 2.4G receiver. At this point, the earphone's indicator light will switch to slow-flashing green.


Connected — Indicator light: Slow flashing

Disconnected — Indicator light: Red and green alternating flashing

* Receiver Binding (factory default: already bound): When the earphone is in 2.4G mode, press and hold the [Power Button] and [Microphone Button] until the indicator light flashes white 3 times. Insert the USB receiver into the computer—once the receiver's green indicator light stays on, the 2.4G re-pairing is successful.


* When binding manually, keep the earphone as close to the receiver as possible.

BLUETOOTH CONNECTION

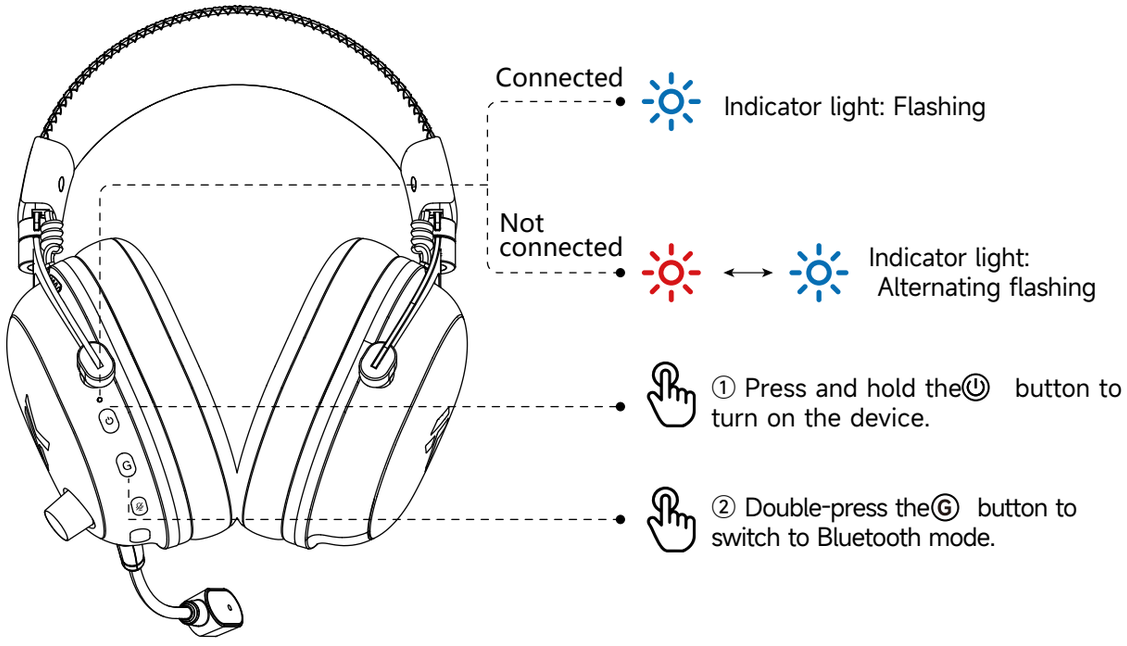

Pairing Name: MCHOSE V9 Turbo

SOUND CARD MODE

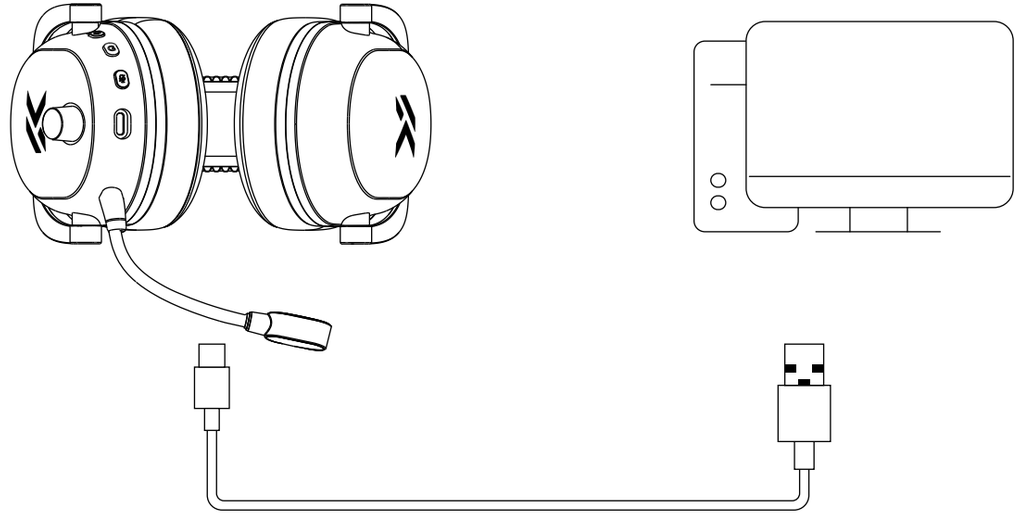


1. When the earphone is powered on, plug the data cable into the earphone and connect it to the computer—the earphone will automatically switch to sound card mode.

2. Double-press the Ⓖ button to cycle through [Adapter Mode] / [Bluetooth Mode] / [Sound Card Mode].

EARPHONE CHARGING


Wireless charging (Recommended)

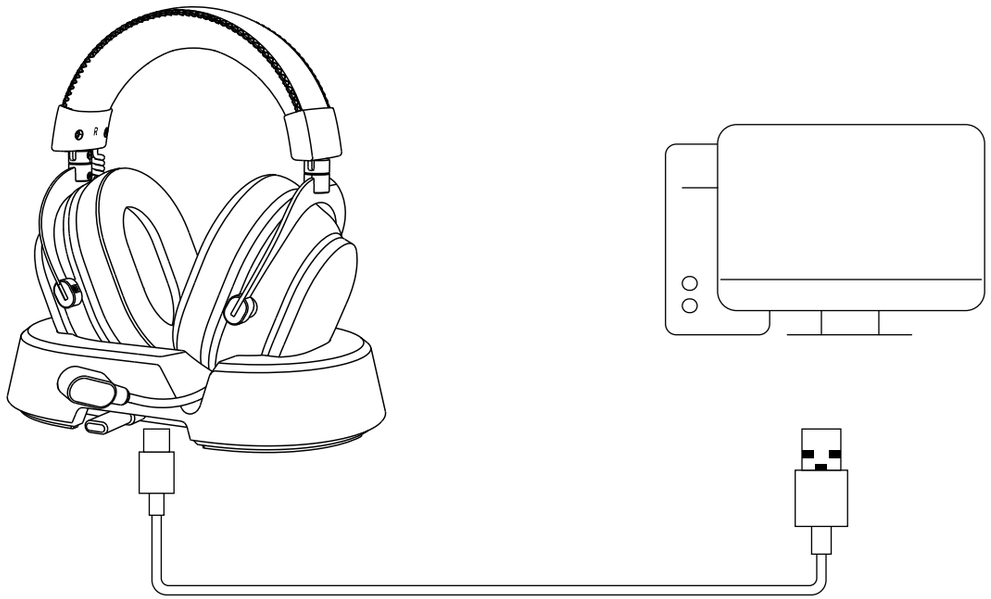

1. Plug the Type-C end of the data cable into the corresponding port of the wireless charging base, and plug the USB end into the corresponding port of the computer. Place the earphone into the wireless charging base to charge the earphone.

2. Charging: The earphone's indicator light stays solid red; Fully charged: The earphone's indicator light stays solid green.

Wired charging

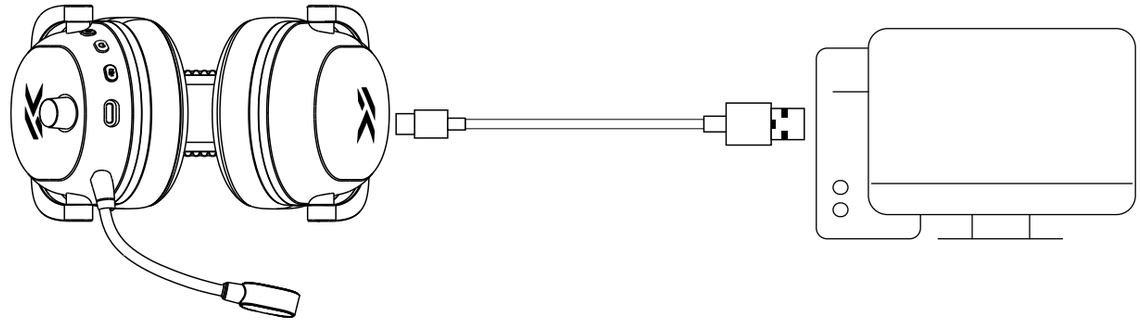

1. Plug the Type-C end of the data cable into the corresponding port of the earphone, and plug the USB end into the corresponding port of the computer to charge the earphone.

2. Low battery: The indicator light flashes slowly red; Charging: The indicator light stays solid red; Fully charged: The indicator light stays solid green.

DRIVER INTRODUCTION

M HUB Desktop driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Client]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).