
MCHOSE

X75 V2 MECHANICAL KEYBOARD

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW

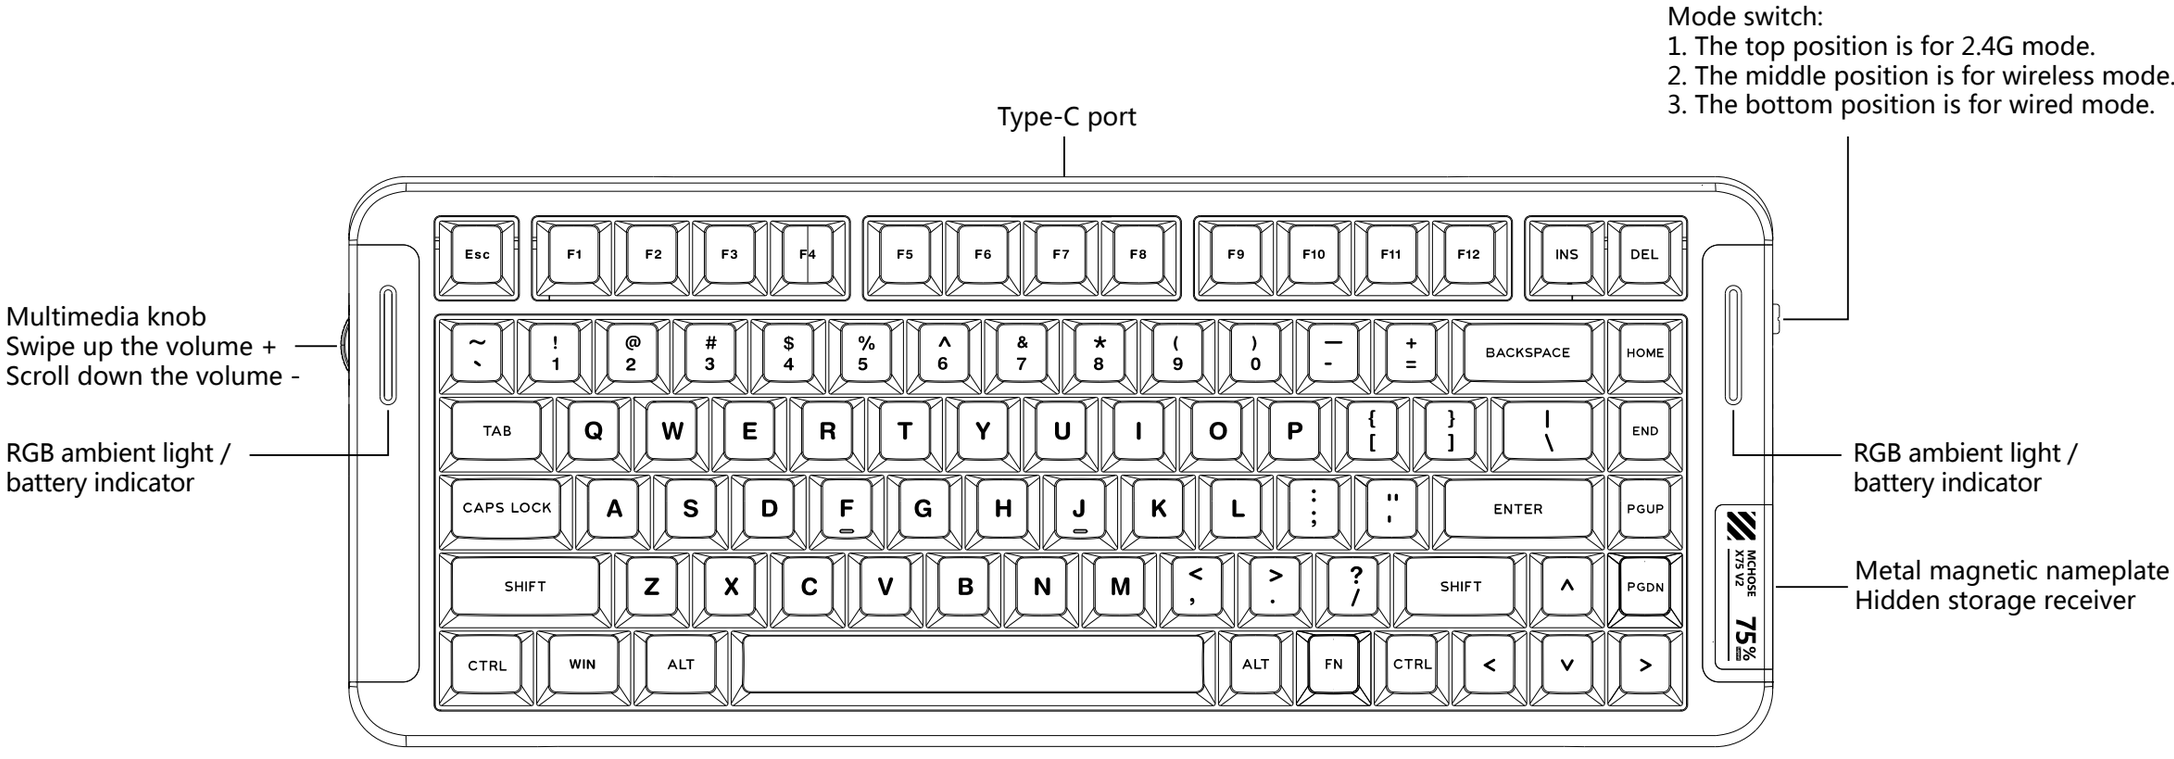


1. Indicators：
- CAPS Indicator: The CAPS key indicator differentiates between uppercase and lowercase states. It stays on when in uppercase.
- WIN Indicator: The WIN key indicator differentiates the locked state of the WIN key. It stays on when the WIN key is locked, and the WIN key cannot be used at this time.

2.Win / Mac / Android system：
- FN + Q = Android system; FN + W = Win system; FN + E = Mac mode, ALT key is Command key, FN + F1-F12 is the regular input of F1-F12.
- In the Win system, if you switch to the Mac system mode, the Win and left Alt keys will be swapped, and F1-F12 will be the multimedia key function.

CONNECTION MODE

2.4G wireless connection:

- Slide the mode switch to [2.4G].
- Take out the receiver from the storage slot.
- Insert the receiver into the USB port of your computer.
- Manual pairing (factory - default paired): Long - press [FN+`~] for 3 seconds until the indicator light flashes rapidly. Then insert the receiver into the computer's USB port. When the connection is successful, the indicator light will stay on for 2 seconds.

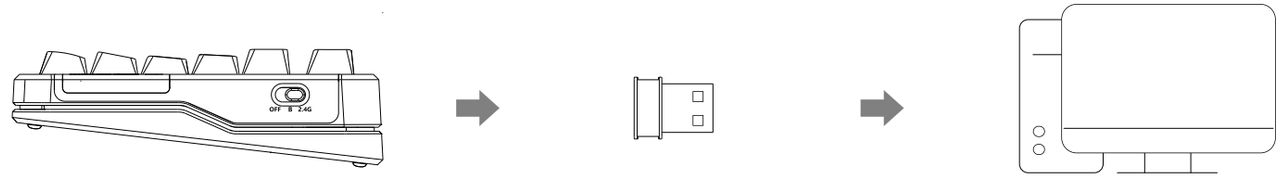

Wired connection:

- Slide the mode switch to the [OFF] mode.
- Insert one end of the Type-C USB cable into the corresponding port of the keyboard.
- Insert the USB end of the cable into the corresponding port of the computer to start using it.



Wireless connection:

- Slide the mode switch to the [B] mode.
- Long - press [FN + 1!] to start pairing. The indicator light will flash rapidly during pairing.
- Press [FN + 1!], [FN + 2@], [FN + 3#] to switch devices.



Pairing name :

【MCHOSE X75 V2 3.0】

【MCHOSE X75 V2 5.0】

DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.


M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

FN COMBINATION KEY

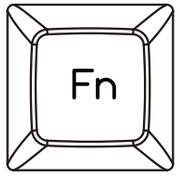

+

Lighting function	
Esc	Long - press for 3 seconds to restore default
\ |	Switch backlight mode
TAB	Switch backlight color
↑	Backlight brightness +
↓	Backlight brightness -
←	Backlight speed -
→	Backlight speed +
Right SHIFT	Switch side - light mode
Right CTRL	Cycle through side - light speeds
/?	Switch side - light color
Right ALT	Cycle through side - light brightness levels
B	Switch ambient light to battery level mode
Z	Switch ambient light color
Right SHIFT	Switch ambient light mode


FN MULTIMEDIA FUNCTION



+

Win system

Key	Multimedia combination function	Multimedia function (single press)
F1	Home	F1
F2	Mail	F2
F3	Switch Window	F3
F4	File Explorer	F4
F5	Lighting Brightness -	F5
F6	Lighting Brightness +	F6
F7	Previous Track	F7
F8	Play/Pause	F8
F9	Next Track	F9
F10	Mute	F10
F11	Volume -	F11
F12	Volume +	F12



+

Mac system / Android system

Key	Multimedia combination function	Multimedia function (single press)
F1	F1	Screen Brightness -
F2	F2	Screen Brightness +
F3	F3	Switch Window
F4	F4	Return to Desktop
F5	F5	Lighting Brightness -
F6	F6	Lighting Brightness +
F7	F7	Previous Track
F8	F8	Play/Pause
F9	F9	Next Track
F10	F10	Mute
F11	F11	Volume -
F12	F12	Volume +


POWER MANAGEMENT

1. Battery Check

- In 2.4G/wireless mode (when the USB is not inserted), you can press FN + B to display the keyboard battery level.
- As the battery drains, the green gradually decreases, and when the battery is low, it shows all - red.

When the [Status Indicator] is fully green, it indicates a high battery level.

When the [Status Indicator] is fully red, it indicates a low battery level.

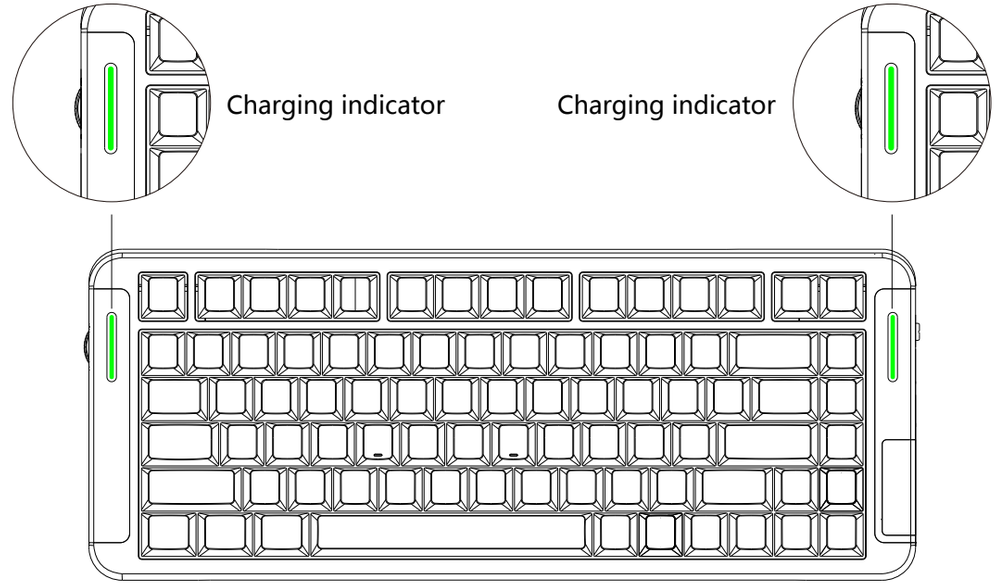

2. Charging Method

- In any mode, connecting the keyboard to a computer via the provided data cable will charge the keyboard.
- During charging, the [Charging Indicator] shows a flowing light effect. When fully charged, the [Charging Indicator] stays green.

3. Sleep Function

- In wireless/2.4G mode, the keyboard automatically enters power - saving mode after one minute of inactivity. Click any key to wake it up.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1.It is recommended to charge the keyboard only via the computer's USB port.
2.Do not use a fast - charging mobile phone charger to charge the keyboard.
3.Do not use substandard or non - compliant power adapters to charge the keyboard.
4.Do not use power adapters with over - voltage or over - current to charge the keyboard.
5.Keep away from high - temperature devices when charging.
6.Turn off the power switch when not in use for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).