

MCHOSE


A7 V2 Pro+ Wireless Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


PRODUCT OVERVIEW

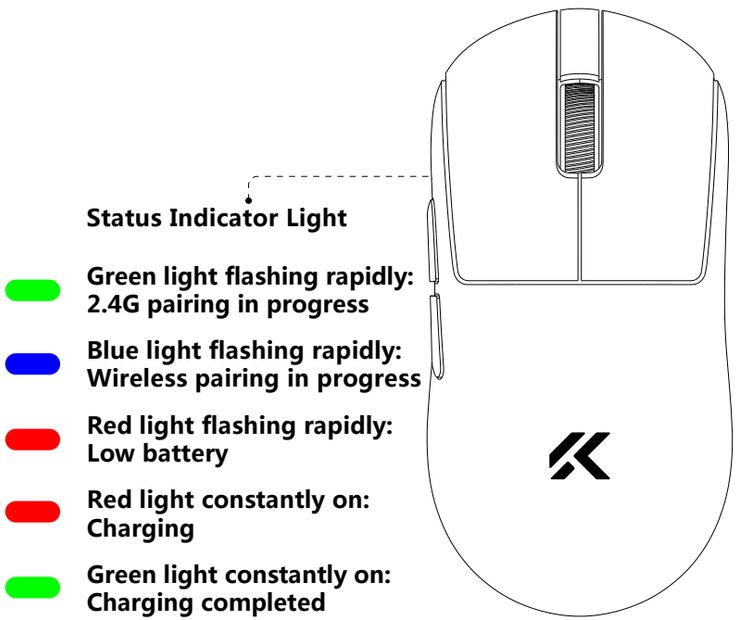

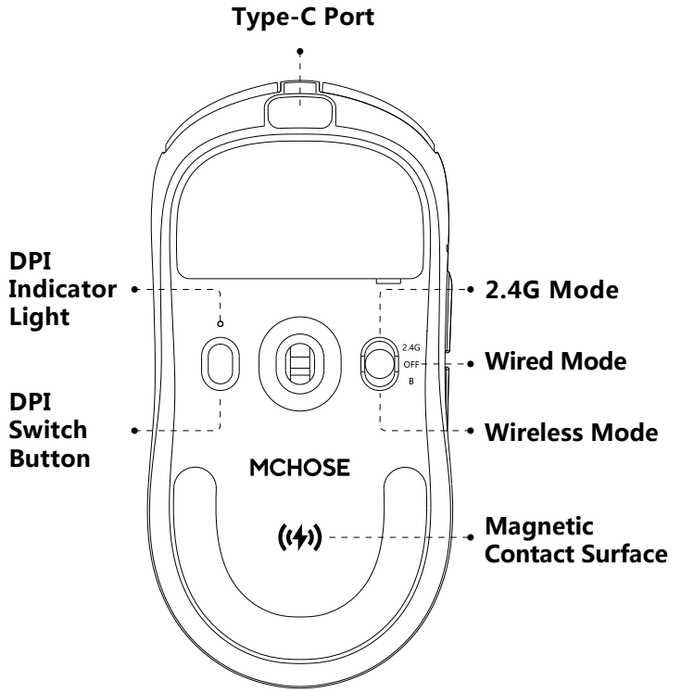

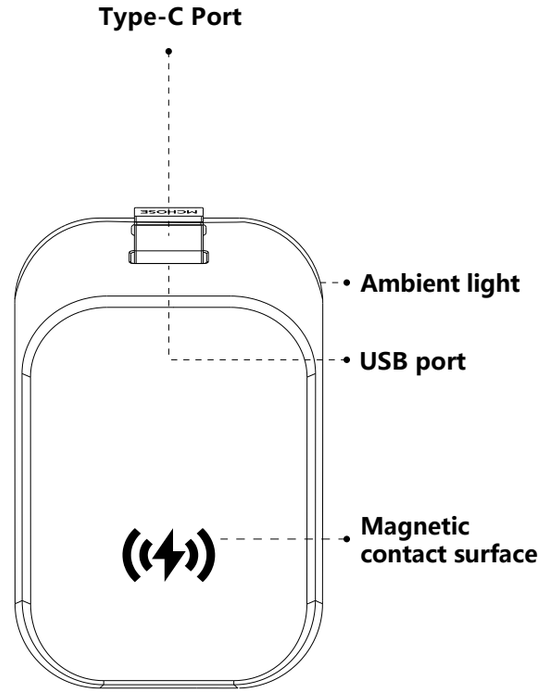


■ Charging / Wired connection use

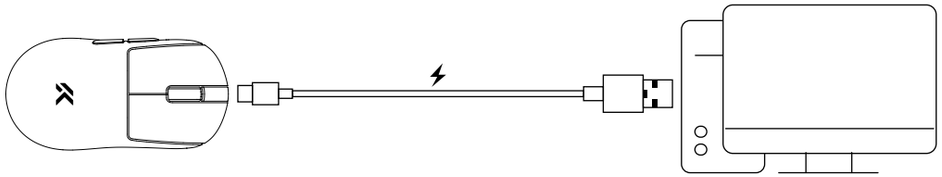

Insert the USB end of the standard USB cable into the corresponding port of the computer, and insert the Type-C end into the corresponding port of the mouse. At this time, the mouse will switch to wired mode and start charging.


■ Magnetic wireless charging base charging

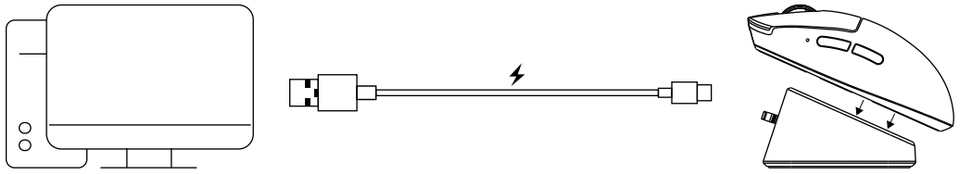

Insert the USB end of the standard USB cable into the corresponding port of the computer, and insert the Type-C end into the corresponding port of the magnetic wireless charging base. Place the mouse properly on the magnetic wireless charging base. The red light will stay on to indicate the charging state, and the green light will stay on when fully charged.

*When wired charging and wireless charging are carried out simultaneously, wired charging is the default.

■ 2.4G Connection

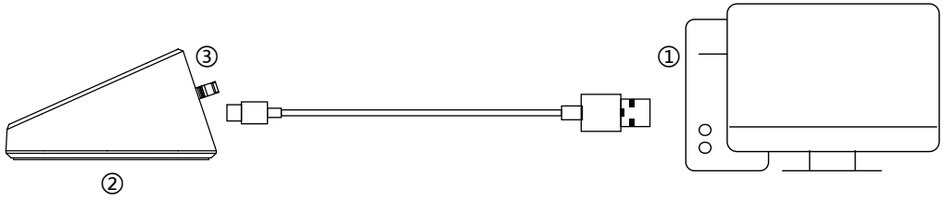

Connection Method 1 (Recommended): Use the data cable provided with this product to insert into the computer's USB 2.0/3.0 interface ①, insert the C port of the data cable into the C port ② of the magnetic wireless charging base, and insert the receiver ③ into the A port of the magnetic wireless charging base for use. Please place the receiver on the desktop after inserting it into the magnetic wireless charging base, and keep the distance between the receiver and the mouse within 30 cm.
Connection Method 2: Insert the receiver ③ into the computer's USB 2.0/3.0 interface ① for use.

*Magnetic wireless charging base: Used to ensure that the signal has no attenuation over long distances and improve stability.
*The 2.4G receiver is inserted into the magnetic wireless charging base by default when leaving the factory.

■ Wireless Connection



Switch the power switch to [B], press the mouse [Left button + Middle button + Right button] simultaneously for about 5 seconds until the indicator light flashes blue rapidly to enter the pairing state. Search for the pairing name [MCHOSE A7 V2 Pro+], and the indicator light will turn off after successful connection.

■ DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI ADJUSTMENT

Level 1: Red Light 400 DPI


Level 2: Blue Light 800 DPI

Level 3: Green Light 1600 DPI

Level 4: Yellow Light 3200 DPI

Level 5: Cyan Light 6400 DPI

Level 6: Purple Light 26000 DPI

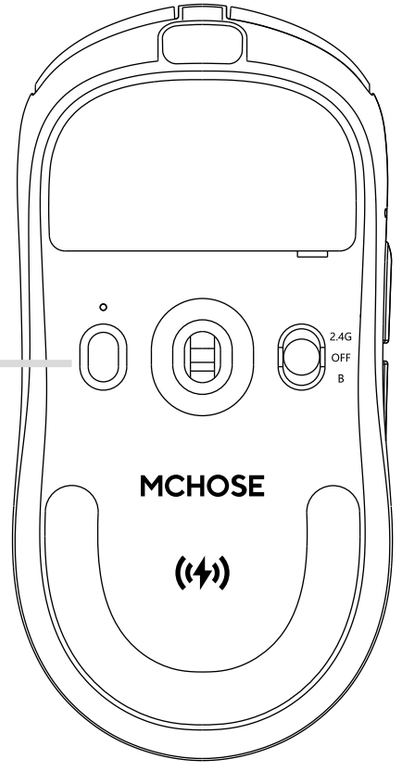


BATTERY STATUS INDICATOR

Status Indicator Light

Red light flashing rapidly:
Low battery.

Red light constantly on:
Charging.

Green light constantly on:
Charging completed.

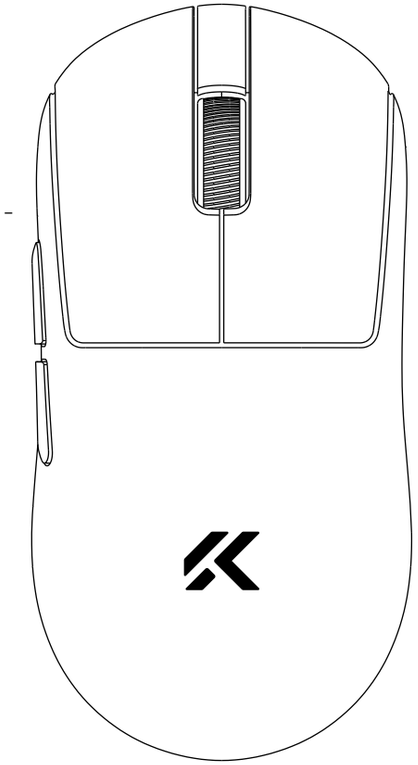

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).