MCHOSE

A7 V3 Lightweight Gaming Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.

PRODUCT OVERVIEW

Status Indicator Light


- Green light flashing quickly: 2.4G pairing in progress
- Blue light flashing quickly: Wireless pairing in progress
- Red light flashing quickly: Low battery
- Red light stays on: Charging
- Green light stays on: Charging complete



Type-C Port

DPI Indicator Light

DPI Switch Button

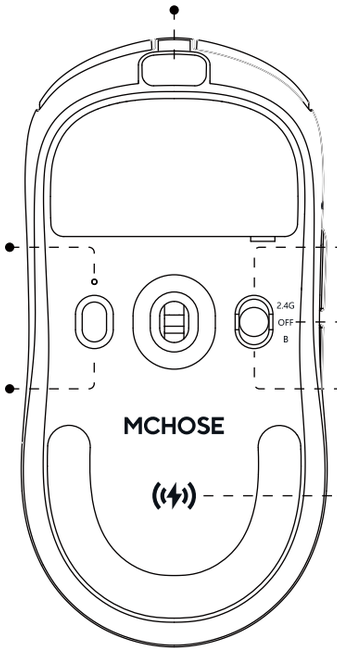


2.4G Mode

Wired Mode

Wireless Mode

Magnetic Contact Surface

Type-C Port

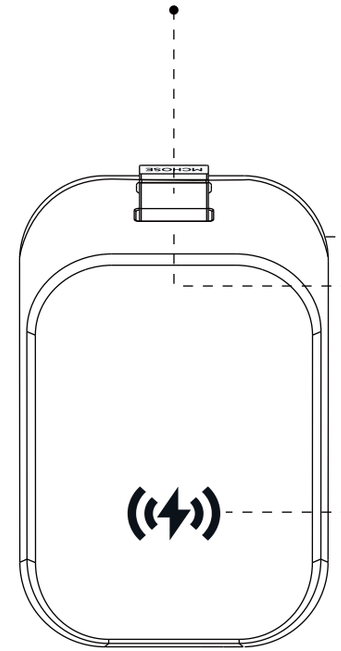


Ambient light

USB port


Magnetic contact surface

Charging / Wired connection use

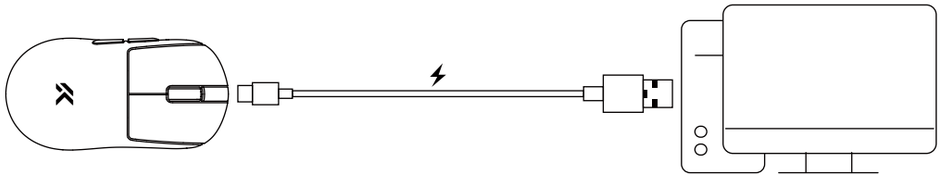

Plug the USB end of the included USB cable into the corresponding port on your computer, and the Type-C end into the corresponding port on the mouse. The mouse will switch to wired mode and start charging.


Magnetic wireless charging base charging

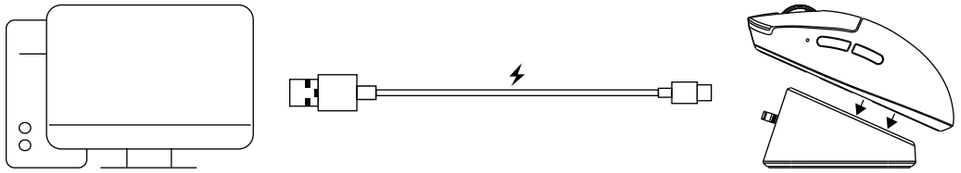

Plug the USB end of the included USB cable into your computer's corresponding port, and the Type-C end into the corresponding port of the magnetic wireless charging base. Place the mouse upright on the magnetic wireless charging base: the red indicator light will stay on to indicate charging, and will turn green when fully charged.

*If both wired and wireless charging are active simultaneously, the mouse will default to wired charging.

2.4G Connection

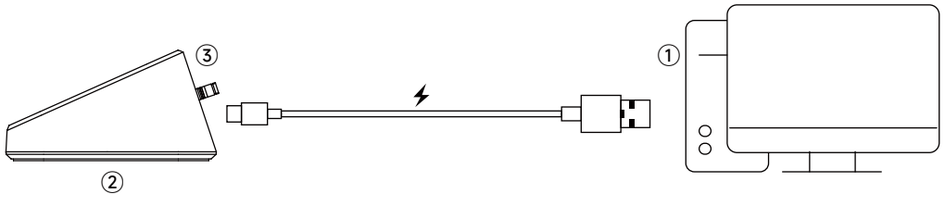


Connection Method 1 (Recommended): Plug the included data cable into your computer's USB 2.0/3.0 port ①, and the Type-C end of the cable into the Type-C port ② of the magnetic wireless charging base. Insert the receiver ③ into the USB-A port of the base. After inserting the receiver, place the base on your desk, keeping the distance between the receiver and the mouse within 30 cm.

Connection Method 2: Insert the receiver ③ directly into your computer's USB 2.0/3.0 port ①.

*Magnetic Wireless Charging Base: Ensures signal transmission without attenuation over distance, improving stability.
*The 2.4G receiver is pre-installed on the magnetic wireless charging base at the factory.

Wireless Connection

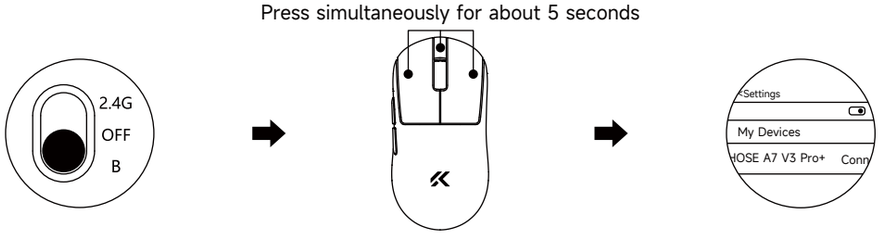

Switch the power switch to [B], then press and hold the [Left Click + Middle Click + Right Click] buttons simultaneously for about 5 seconds until the blue indicator light flashes quickly, indicating the mouse has entered pairing mode. Search for the pairing name [MCHOSE A7 V3 Pro+]. The indicator light will turn off once the connection is successful.

*Pairing name for A7 V3 Ultra+: [MCHOSE A7 V3 Ultra+]
*Pairing name for A7 V3 Pro+: [MCHOSE A7 V3 Pro+]

■ DRIVER INTRODUCTION

M HUB Web： https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver： https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI ADJUSTMENT

Level 1: Red Light 400 DPI


Level 2: Blue Light 800 DPI

Level 3: Green Light 1600 DPI

Level 4: Yellow Light 3200 DPI

Level 5: Cyan Light 6400 DPI

Level 6: Purple Light 42000 DPI

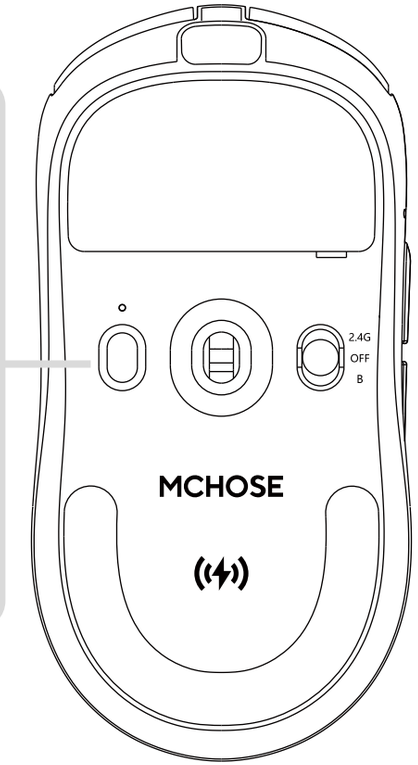


BATTERY STATUS INDICATOR

Status Indicator Light

Red light flashing rapidly:
Low battery.

Red light constantly on:
Charging.

Green light constantly on:
Charging completed.

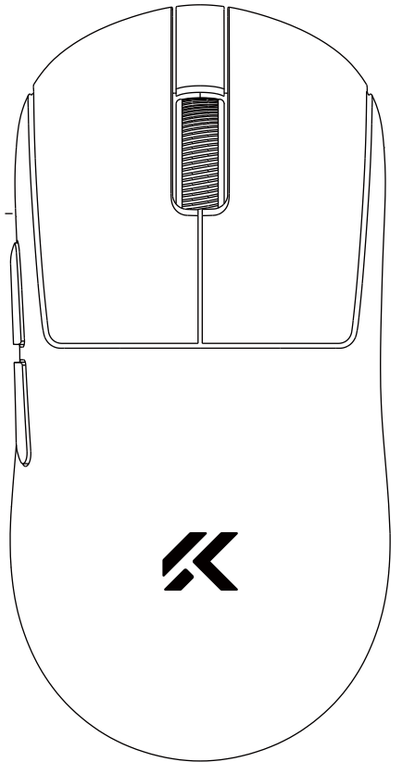

A7 V3 Ultra+: The 6th DPI level is set to 50000.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).