
MCHOSE

A7 V3 Lightweight Gaming Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


PRODUCT OVERVIEW

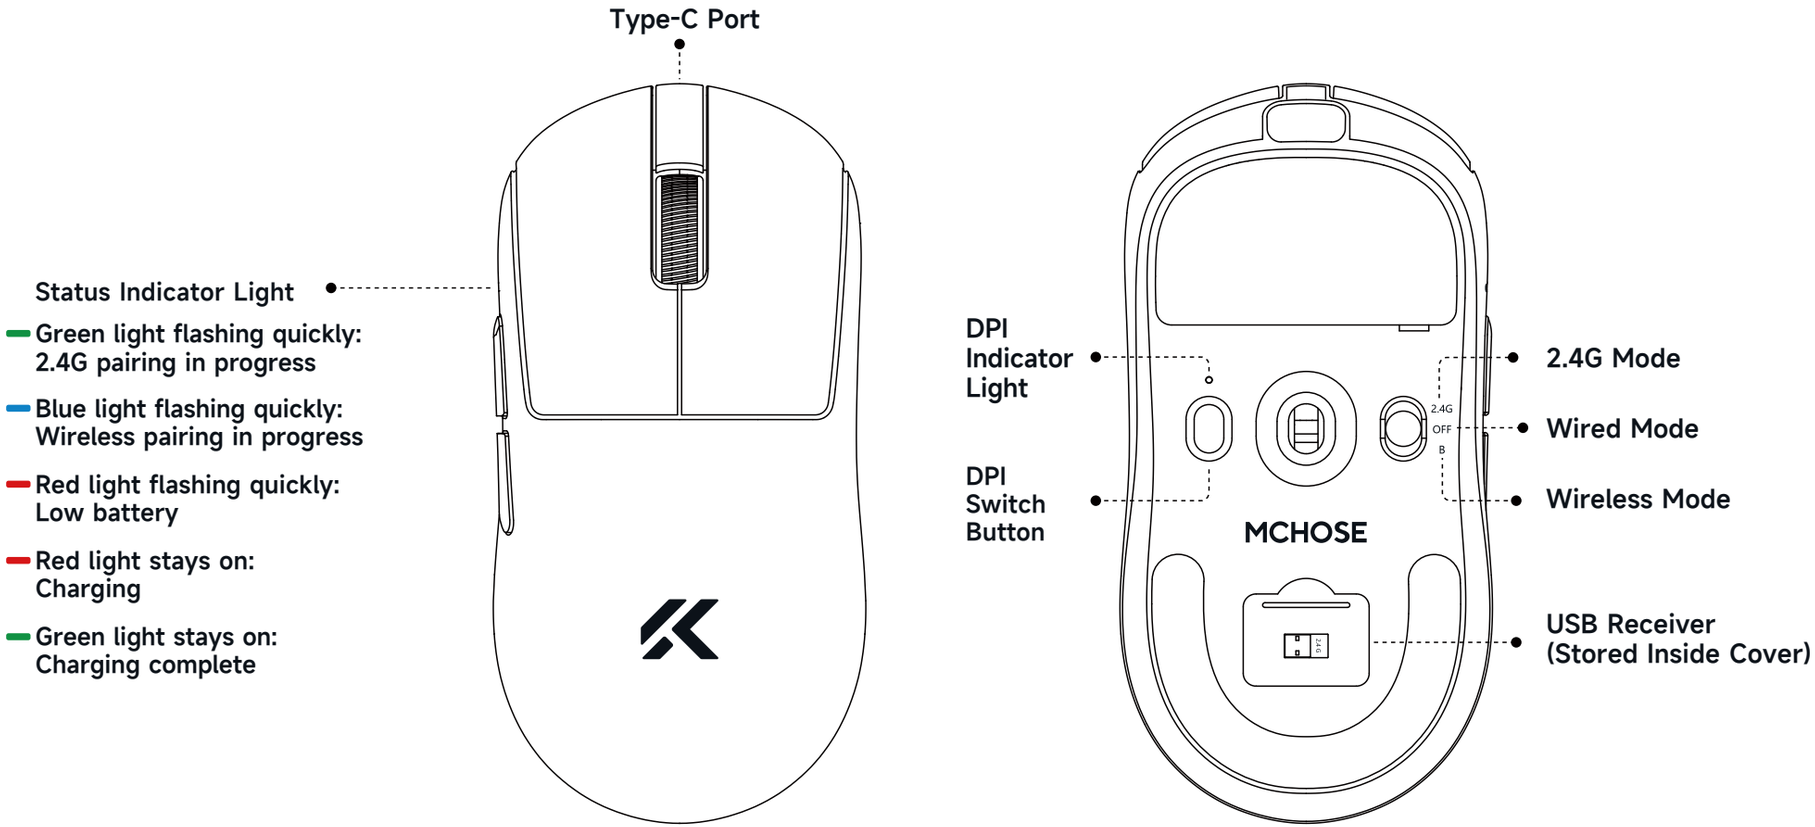

■ Connection Methods


2.4G Connection:

• Slide the mode switch to [2.4G].
• Take out the USB receiver from the storage slot.
• Plug the receiver into the computer's USB port.
• Manual pairing (pre-paired at factory): Press the mouse [Left, Middle, Right] buttons simultaneously for about 5 seconds until the indicator light flashes rapidly to enter pairing mode. Insert the USB receiver into the computer USB port, place the mouse close to the receiver (within 20cm). The indicator light will turn off once connection succeeds.

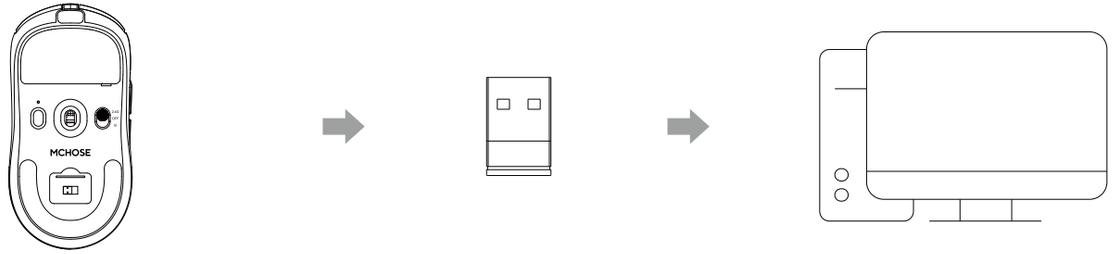


Charging / Wired Connection:

• Plug the Type-C end of the included USB cable into the matching port on the mouse, and plug the USB end into the corresponding port on your computer to start using it.
• Once the USB cable is connected, the mouse will automatically switch to wired mode and charge simultaneously.

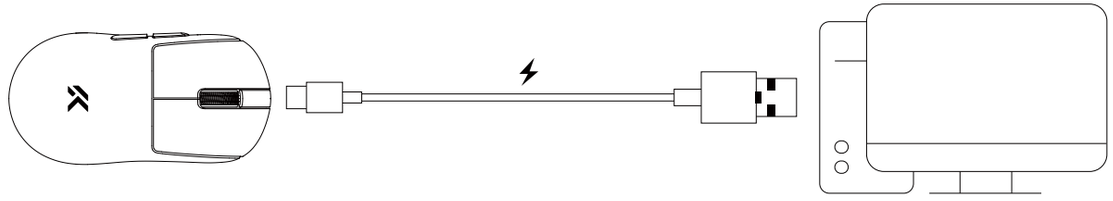

Wireless Connection:

• Slide the switch to [B], search and connect to the device named 【MCHOSE A7 V3】. If connection fails, press the mouse [Left + Middle + Right] buttons simultaneously for about 5 seconds until the indicator light flashes rapidly to enter pairing mode, then reconnect. The indicator light will turn off once paired successfully.
• Pairing name for A7 V3: 【MCHOSE A7 V3】
• Pairing name for A7 V3 Pro: 【MCHOSE A7 V3 Pro】
• Pairing name A7 V3 Ultra: 【MCHOSE A7 V3 Ultra】

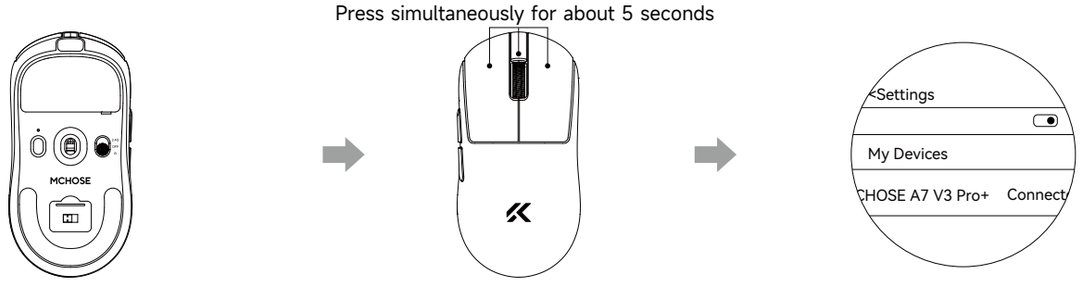

■ DRIVER INTRODUCTION

M HUB Web： https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver： https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI ADJUSTMENT

Level 1: Red Light 400 DPI


Level 2: Blue Light 800 DPI

Level 3: Green Light 1600 DPI

Level 4: Yellow Light 3200 DPI

Level 5: Cyan Light 6400 DPI


Level 6: Purple Light 26000 DPI

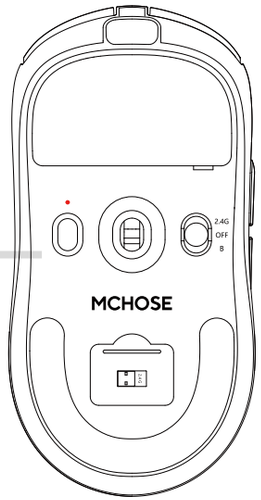

*For the 3950 sensor, the DPI value of the 6th gear is 42000.

*For the 3955 sensor, the DPI value of the 6th gear is 50000.

BATTERY STATUS INDICATOR

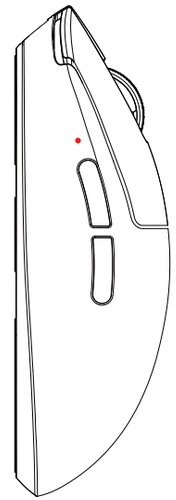

Red light flashing rapidly:
Low battery.

Red light constantly on:
Charging.

Green light constantly on:
Charging completed.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

⚠ CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).