
MCHOSE

A5 Lightweight Wireless Mouse


Warm reminder: All the pictures in this instruction manual are schematic diagrams and for reference only. Please refer to the actual product.

PRODUCT OVERVIEW

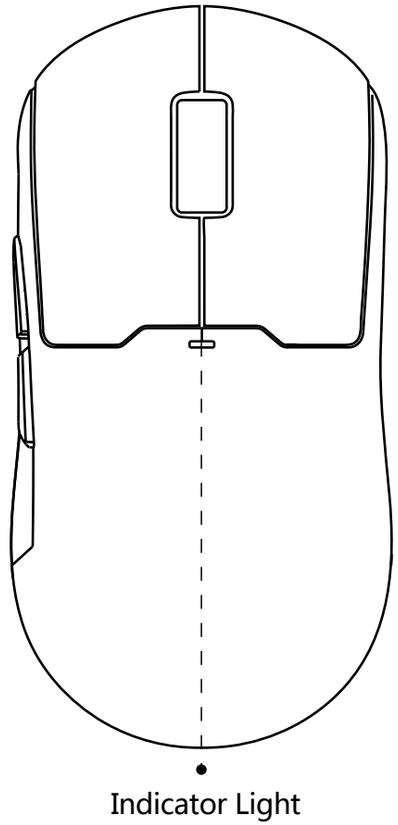


Indicator Light

DUAL-MODE VERSION

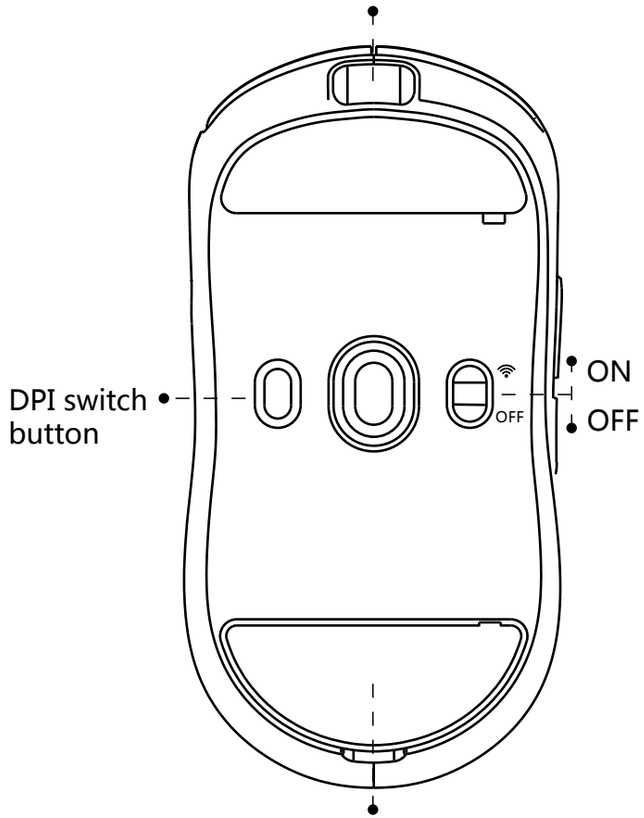

USB receiver
(open the back cover to take out)

TRIPLE-MODE VERSION

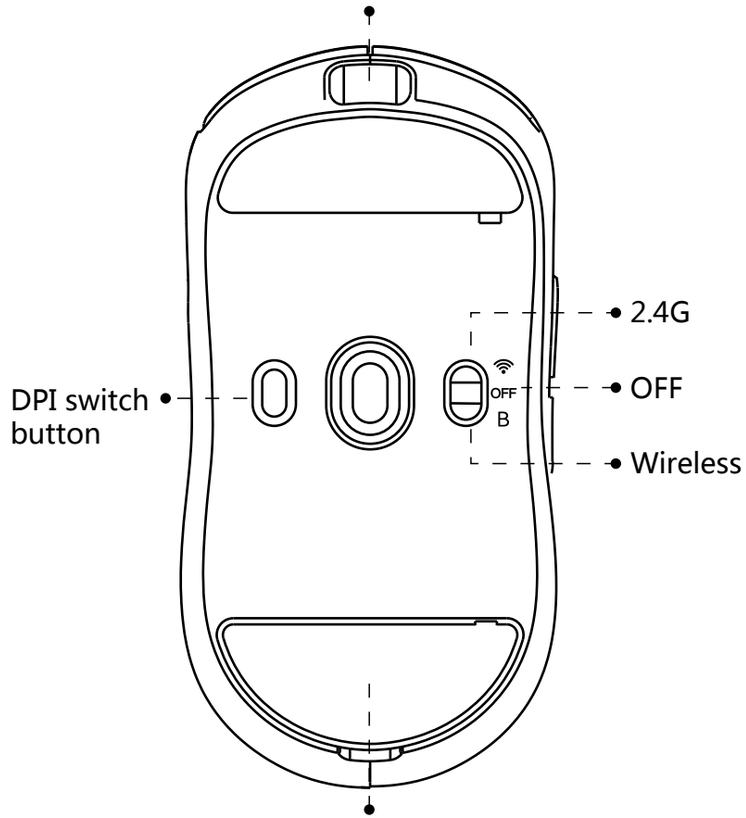


USB receiver
(open the back cover to take out)

Note: Dual-mode connection version include Mid&Low Configuration. (Mid configuration the screen printing content on the back of the mouse is /OFF; Low configuration is ON/OFF).


DUAL - MODE CONNECTION

❶ Charging / Wired Connection for Use

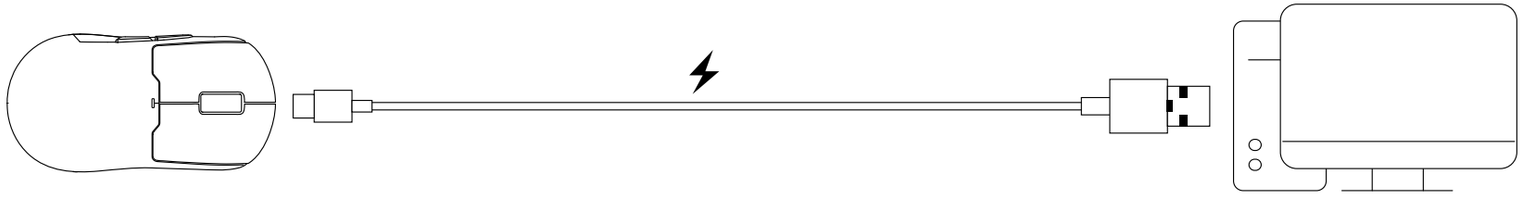

Insert the Type-C end of the standard USB cable into the corresponding port of the mouse, and insert the USB end into the corresponding port of the computer to use it.
In 2.4G/wireless mode, plugging in the USB cable will switch to wired mode and charge the mouse simultaneously.

❷ 2.4G Connection for Use

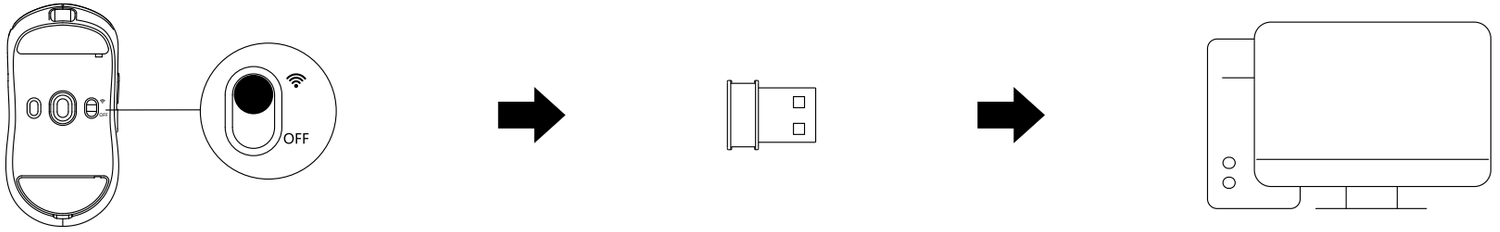


Slide the switch to 【 】. Take out the 【USB receiver】 from the bottom of the mouse or from the data cable with the 【USB receiver】 inserted.
Plug the receiver into the USB port of the computer to use it. Or extend the end of the data cable with the receiver to the desktop and plug the data cable into the USB port of the computer to use it.

Manual pairing (factory default is already paired): Press the 【left, middle, and right】 buttons of the mouse simultaneously for about 3 seconds until the indicator light flashes rapidly to enter the pairing state.
Plug the receiver into the USB port of the computer, and bring the mouse close to the receiver (within 10 cm). The indicator light will turn off after a successful connection.


TRIPLE - MODE CONNECTION

For Charging / Wired Connection Use

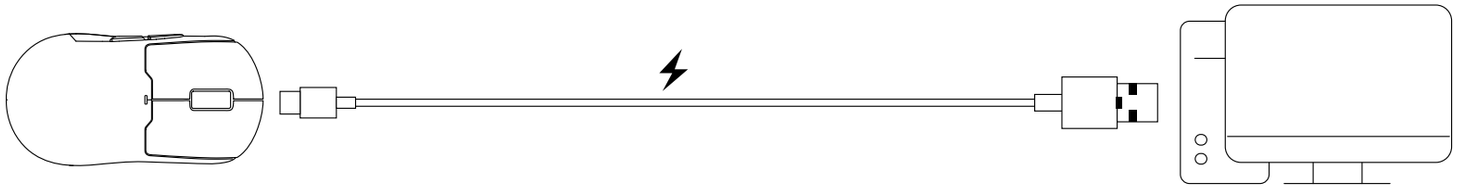

Insert the Type - C end of the standard - equipped USB cable into the corresponding port of the mouse, and insert the USB end into the corresponding port of the computer for use.
In 2.4G/wireless mode, plugging in the USB cable will switch to wired mode and charge the mouse simultaneously.

For 2.4G Connection Use

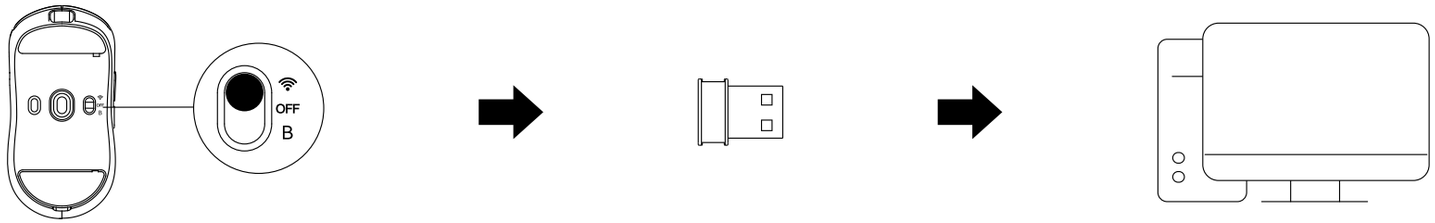


Slide the switch to 【 】. Take out the 【USB receiver】 from the bottom of the mouse or from the data cable with the 【USB receiver】 inserted.
Plug the receiver into the USB port of the computer for use. Alternatively, extend the end of the data cable with the receiver to the desktop and plug the data cable into the USB port of the computer for use.

Manual pairing (factory - default paired): Press the 【left, middle, and right】 mouse buttons simultaneously for about 3 seconds until the indicator light flashes rapidly to enter the pairing state.
Plug the receiver into the USB port of the computer, and bring the mouse close to the receiver (within 10 cm). The indicator light will turn off upon a successful connection.

For Wireless Connection Use

Press simultaneously for about 3 seconds

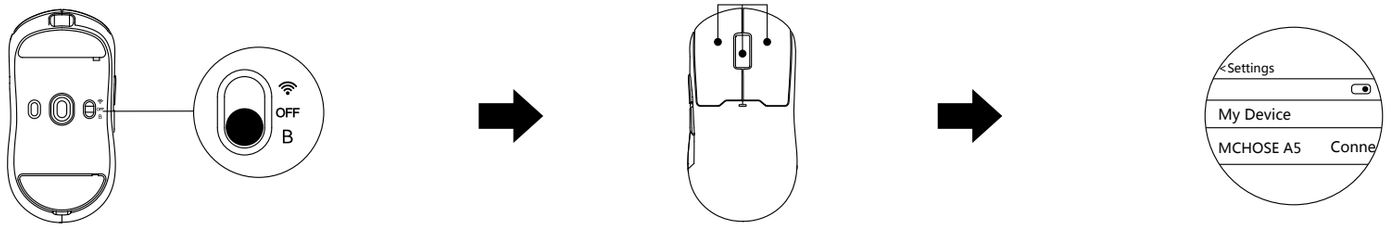

Slide the switch to 【B】, then press and hold the 【left, middle, and right】 buttons of the mouse simultaneously for about 3 seconds until the indicator light flashes rapidly.
Search for the device named 【MCHOSE A5】 and connect to it. The indicator light will turn off after a successful connection.

DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

INDICATOR STATUS

01. DPI Adjustment

Single press the 【DPI Switch Button】 to cycle through six DPI levels, adjustable via the driver.

Level 1: Red Light **400DPI**


Level 2: Blue Light **800DPI**

Level 3: Green Light **1600DPI**

Level 4: Yellow Light **3200DPI**


Level 5: Cyan Light **6400DPI**

Level 6: Purple Light **26000DPI**

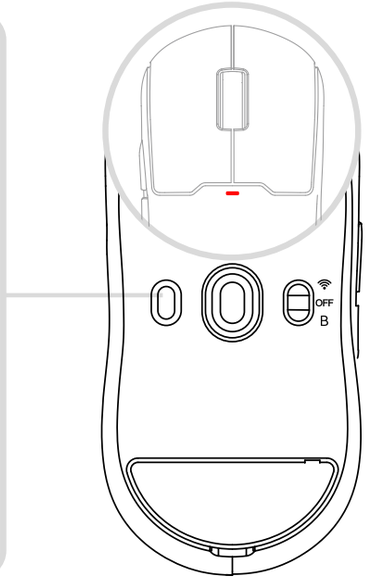

02.Battery Status Indicator

When the 【Indicator Light】 flashes red, please charge the mouse promptly.
If the mouse does not respond to charging when the battery is low, please unplug and replug the charging cable after about 30 minutes of charging.

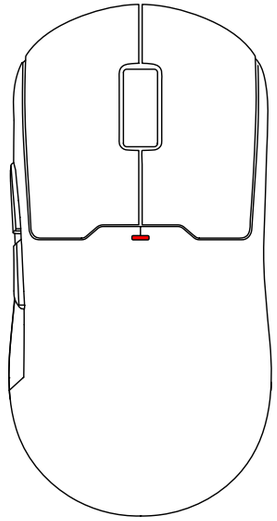

The red indicator light is flashing:
Please charge immediately.

The indicator light is flashing orange:
It is currently charging.

The indicator light is off:
Charging is completed.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).