
User's Manual


MCHOSE

A7X Ultra Wireless Mouse

Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


PRODUCT OVERVIEW

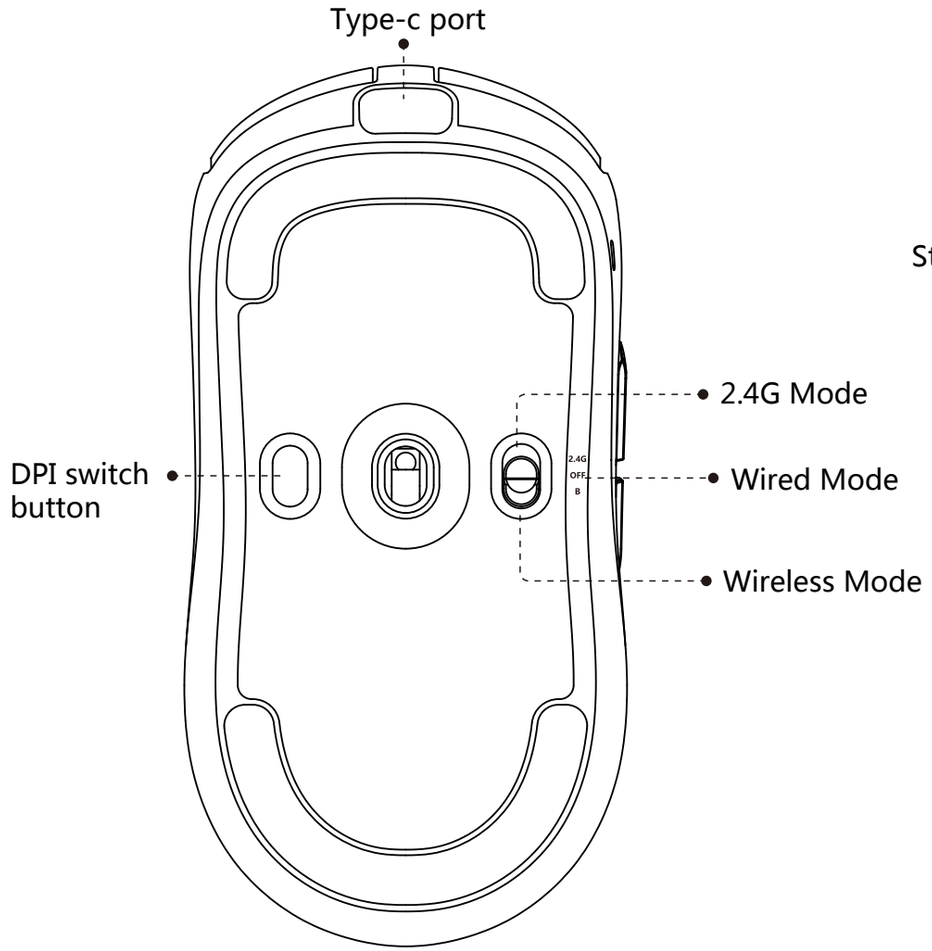

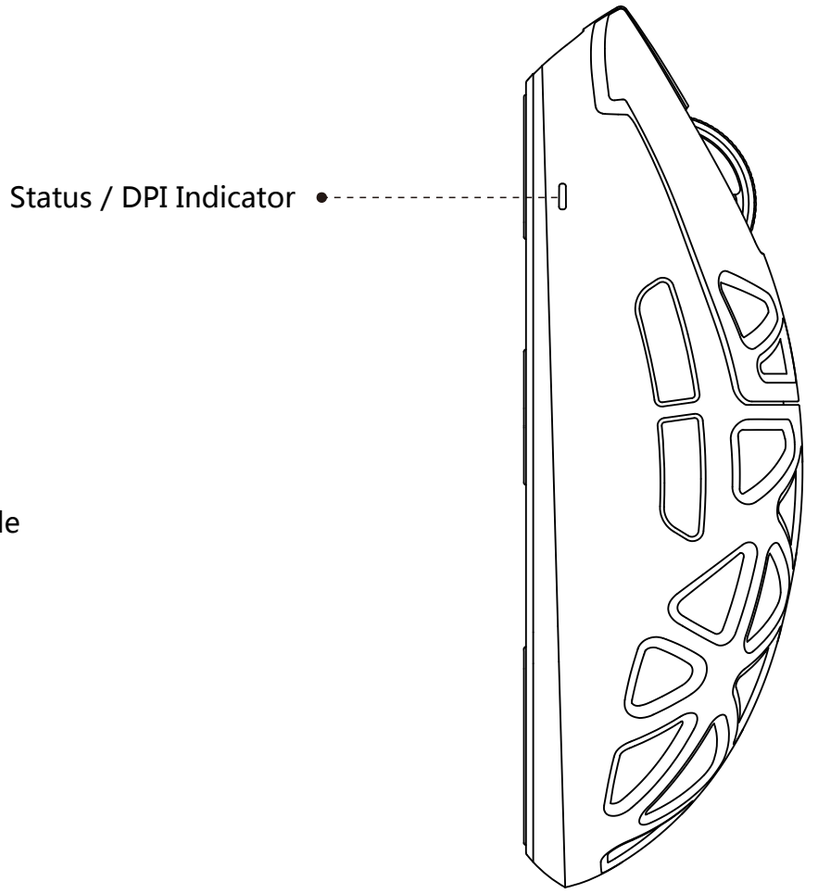


CONNECTION METHOD

For Charging / Wired Connection Use

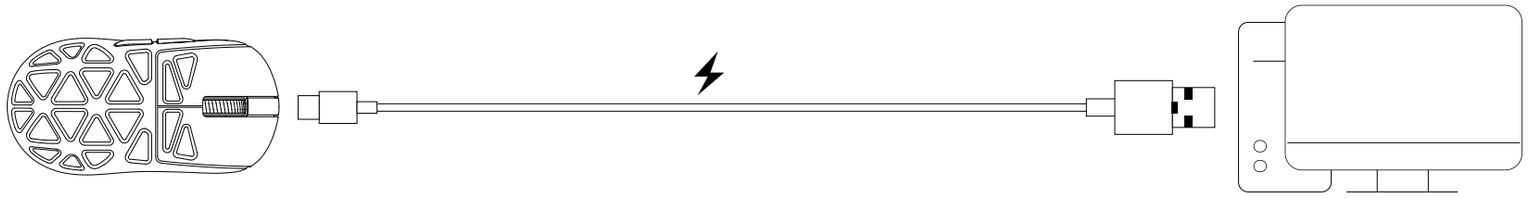


•Plug the Type-C end of the included USB cable into the corresponding port on the mouse, and the USB-A end into your computer to start using it.
•In 2.4G/wireless mode, connecting the USB cable will automatically switch the mouse to wired mode and start charging it at the same time.

For 2.4G Connection Use

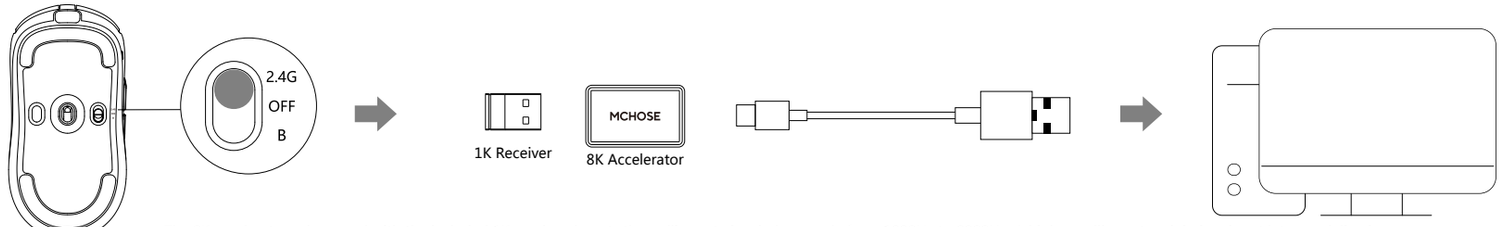

•The 8K accelerator, when used with the included 1K receiver, boosts the polling rate in wireless mode from 1000Hz to 8000Hz. A higher polling rate minimizes input latency, delivering smoother and more precise cursor movement for better aiming control.
•Switch to [2.4G] mode, then connect the included USB cable (accelerator + USB receiver) to your computer’ s USB port to use.
•Manual pairing (already paired by default): Remove the USB receiver from the adapter, then press and hold the left + middle + right buttons on the mouse for about 5 seconds until the indicator flashes green rapidly. This indicates pairing mode. Reinsert the receiver into the adapter and keep the mouse within 20 cm. The indicator will turn off once pairing is successful.

For Wireless Connection Use

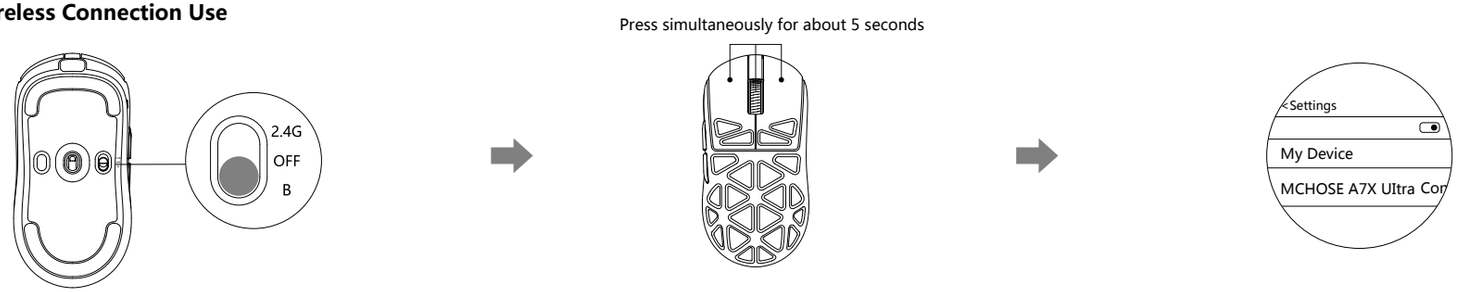

Switch to [B] mode, then search for and connect to the device named “MCHOSE A7X UItra”.
If the connection fails, press and hold the left + middle + right buttons on the mouse for about 3 seconds until the indicator light flashes rapidly to enter pairing mode.
Once successfully connected, the indicator will turn off.

■ DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI ADJUSTMENT

Level 1: Red Light 400DPI


Level 2: Blue Light 800DPI

Level 3: Green Light 1600DPI


Level 4: Yellow Light 3200DPI

Level 5: Cyan Light 6400DPI

Level 6: Purple Light 42000DPI

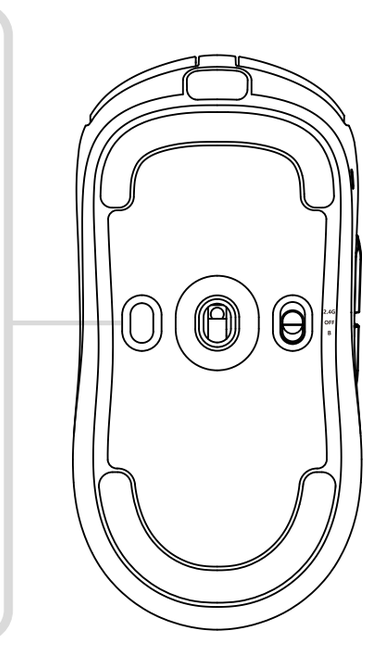

BATTERY STATUS INDICATOR

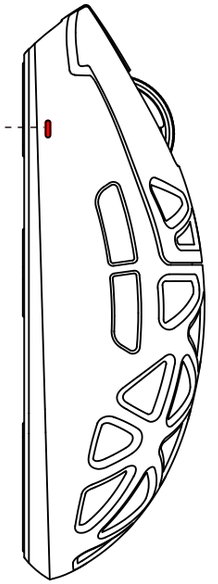

The red indicator light is flashing:
Please charge immediately.

The red indicator light stays on constantly:
It is currently charging.

The green indicator light stays on constantly:
Charging is completed.

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).