MCHOSE


K7 Ultra Flagship E - sports Mouse


Warm Reminder: The product images shown are for illustrative purposes only; the actual product shall prevail.


PRODUCT OVERVIEW

Status Indicator Lights


- Green Light Flashing Quickly: 2.4G Pairing
- Blue Light Flashing Quickly: Wireless Pairing
- Red Light Flashing Quickly: Low Battery
- Red Light Always On: Charging
- Green Light Always On: Charging Completed

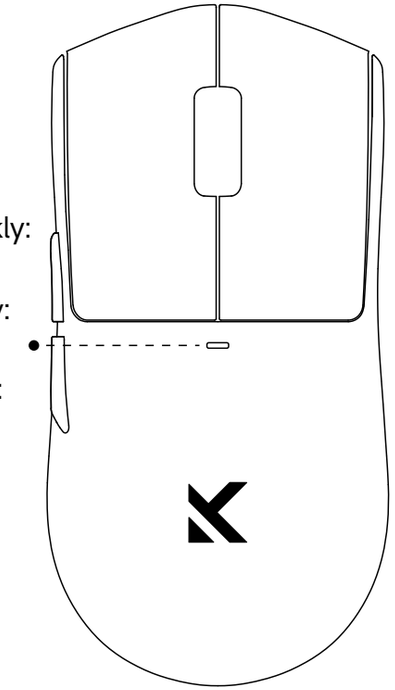

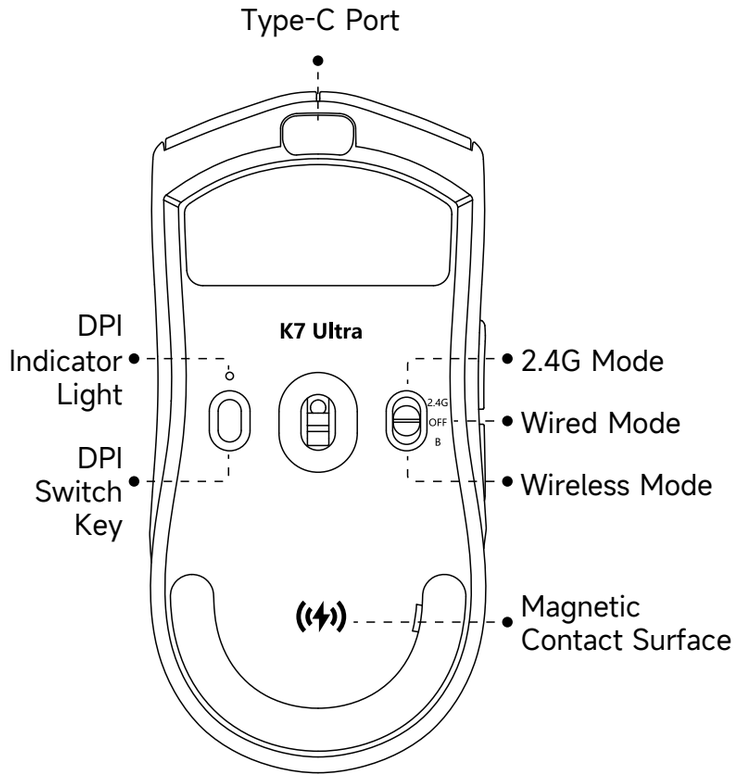

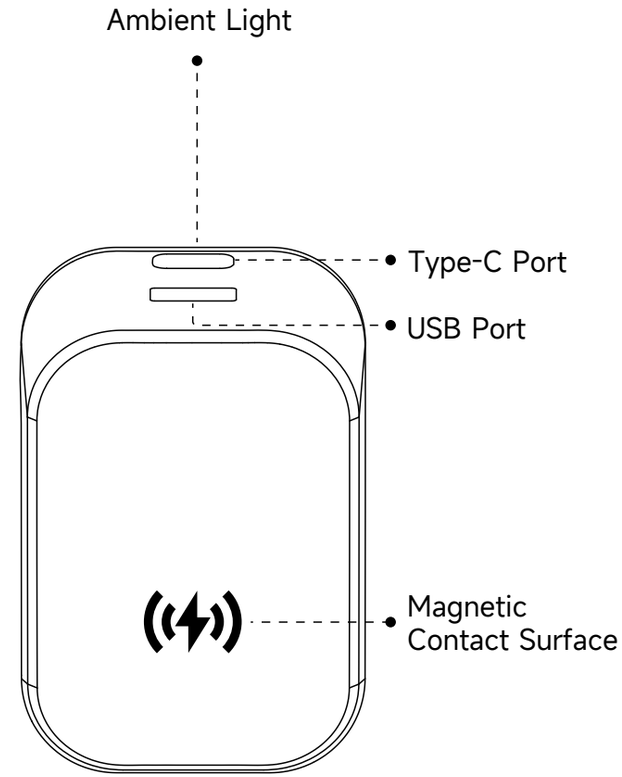


■ Charging / Wired Connection for Use

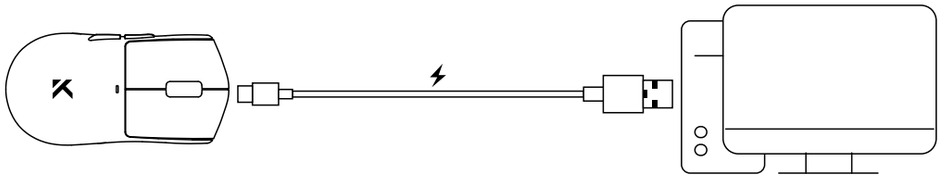

Insert the USB end of the standard - equipped USB cable into the corresponding port of the computer, and insert the Type-C end into the corresponding port of the mouse. At this point, the mouse will switch to wired mode and start charging.

■ 2.4G Connection

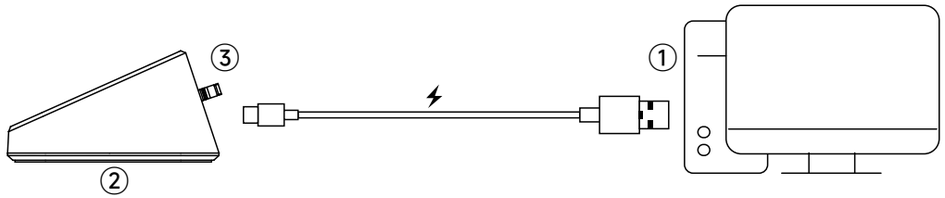


Connection Method 1 (Recommended): Use the data cable provided with this product to insert into the computer's USB 2.0/3.0 port ①. Insert the Type-C end of the data cable into the Type-C port ② of the magnetic wireless charging dock. Insert the receiver ③ into the Port A of the magnetic wireless charging dock for use. Please place the magnetic wireless charging dock with the inserted receiver on the desktop, and keep the distance between the receiver and the mouse within 30 cm.
Connection Method 2: Insert the receiver ③ into the computer's USB 2.0/3.0 or above port ① for use.

*Magnetic Wireless Charging Dock: Used to ensure no signal attenuation over long distances and improve stability.

*The 2.4G receiver is inserted into the magnetic wireless charging dock by default at the factory.

■ Magnetic Wireless Charging Dock Charging

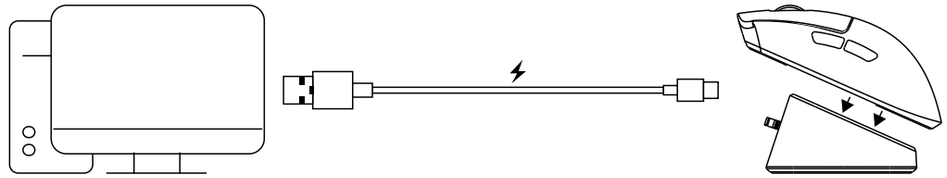


Insert the USB end of the standard USB cable into the corresponding port of the computer, and insert the Type-C end into the corresponding port of the magnetic wireless charging dock. Place the mouse on the magnetic wireless charging dock correctly. The indicator light will stay red when it enters the charging state, and turn to green when fully charged.

*When wired charging and wireless charging are performed simultaneously, wired charging is the default.

■ Wireless connection

Press simultaneously for about 3 seconds

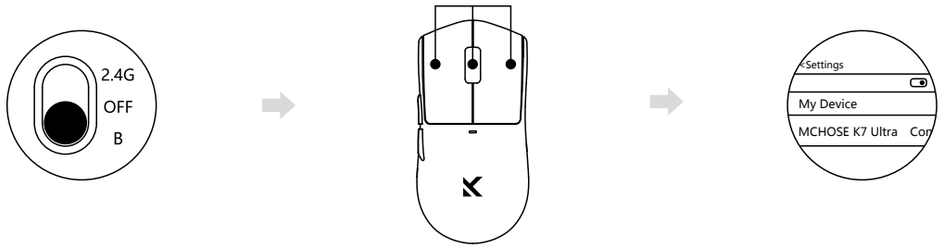

Switch the power switch to [B]. Search for the pairing name [MCHOSE K7 Ultra] and click to connect. If the connection fails, press the left button, middle button, and right button of the mouse simultaneously for about 3 seconds until the indicator light flashes rapidly to enter the pairing state, then try to connect again. The indicator light will turn off after a successful connection.

■ DRIVER INTRODUCTION

M HUB Web : https://www.mchose.com.cn

Open the URL in your browser,

Click [Enter M HUB WEB] - [Allow Browser Access], then select the corresponding product model to connect.

M HUB Driver : https://www.maicong.cn

Open the URL in your browser,

Click [Driver] - [Download M HUB Driver]

*The M HUB client driver currently only supports Windows 10 and above operating systems; Windows 7 and macOS operating systems are not supported for now.

DPI Adjustment

Level 1: Red Light 400DPI


Level 2: Blue Light 800DPI

Level 3: Green Light 1600DPI


Level 4: Yellow Light 3200DPI

Level 5: Cyan Light 6400DPI

Level 6: Purple Light 42000DPI

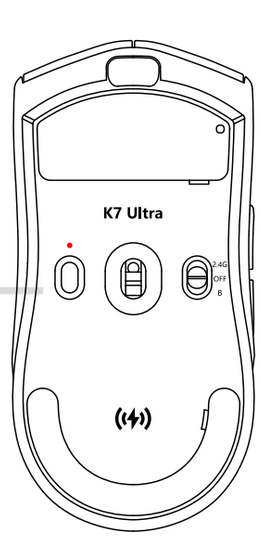

Battery Status Indicator

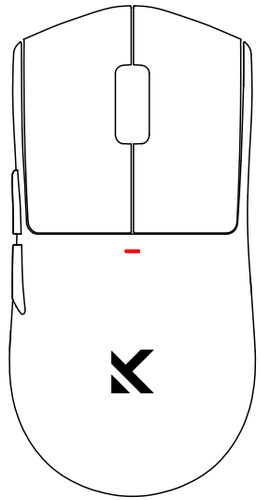

The red indicator light is flashing:
Please charge immediately

Indicator light red and solid:
Charging

Indicator light green and solid:
Charging completed

Note: This device has been tested and complies with the limits for Class B digital devices under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.
This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device off and on), we encourage the user to try one or more of the following measures to correct the interference:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the responsible party could void the user’ s authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

CHARGING INSTRUCTION

1. It is recommended to charge the mouse only via a computer USB port.
2. Avoid using substandard or non-compliant power adapters to charge the mouse.
3. Avoid using over-voltage or over-current power adapters for charging.
4. Keep the mouse away from high-temperature devices while charging.
5. Please turn off the power switch if the device will not be used for an extended period.

These charging instructions also apply to other rechargeable devices (keyboard/mouse/headphones/speakers, etc.).