A Tutorial on using the Catalina C Compiler

BASIC CONCEPTS....2

Opening a Command Window....3
Compiling your first Catalina Program....4
Compiling Multiple Files....8
Specifying Memory Models and Load Options....10
Specifying a Supported Propeller 1 Platform....14
Specifying a Supported Propeller 2 Platform....19
Specifying Options using Environment Variables....21
Loading Programs....21
Supporting Other Propeller 1 Platforms....23
Supporting Other Propeller 2 Platforms....25

ADVANCED CONCEPTS....27

Using a different Target or Target Package....27
Using an SD Card with Catalina....29
Using the SD Card to load Programs....29
Using the SD Card as a file system....30
Producing other Output Formats....31
Multi-CPU Systems....32
Introduction....32
Specifying the CPU....32
Multi-CPU Utility Programs....33
Proxy Devices....34
TriBladeProp....35
TriBladeProp Overview....35
TriBladeProp Tutorial Hardware Setup....37
TriBladeProp Tutorial Software Setup....37
TriBladeProp Tutorial Part 1 – Loading and running programs....39
TriBladeProp Tutorial Part 2 – Using proxy devices....42
Morpheus....46
Morpheus Overview....46
Morpheus Tutorial Hardware Setup....47
Morpheus Tutorial Software Setup....47
Morpheus Tutorial Part 1 – Loading and running programs....49
Morpheus Tutorial Part 2 – Using proxy devices....52

WHAT NEXT?....54

Basic Concepts

This document provides a brief tutorial to get you up and running and compiling C programs using the Catalina C compiler from the command line.

If you do mainly intend to use Catalina from within the **Geany** or **Code::Blocks** Integrated Development Environments, you may instead prefer to start with the tutorial given in the documents **Getting Started with the Catalina Geany IDE** or **Getting Started with CodeBlocks**. However, is is still recommended that you work though this tutorial once you have completed that one, because this tutorial covers some concepts not included in the **Geany** or **Code::Blocks** tutorial.

The tutorial starts out with some basic concepts, but also introduces some of the more advanced concepts, such as the different memory modes and addressing modes – however, it is not necessary to complete the whole tutorial to begin using Catalina.

If you have one of the supported platforms, you need only read up to the section **Loading Programs**. If you have a different platform you should also read the section **Supporting Other Propeller Platforms**. The advanced concepts sections can be tackled separately once you are familiar with the basic concepts.

For the sake of brevity, this document assumes you are using Catalina under Windows. If you are instead using Catalina under Linux or OSX, then while the Catalina commands and options will be identical, some of the directory names will need to be replaced with their Unix equivalents.

This document also assumes you have installed Catalina in the default directory (under Windows this is *C:\Program Files (x86)\Catalina*). It also assumes you have a Propeller 1. If instead you have a Propeller 2, most of this document is still relevant, except for the sections on XMM execution modes, and the multi-CPU and proxy driver support. Note that on the Propeller 2 you will have to explicitly add the **-p2** option to each catalina command to indicate that Catalina should produce code for the Propeller 2, not the Propeller 1 (which is the default).

If you have not installed Catalina yet, see the **Catalina Reference Manual** for instructions. You should install at least the binary release of Catalina, plus the Catalina demo programs.

If you have already installed Catalina, but to a directory other than the default directory, then all the Catalina commands and options shown will be identical – but some of the directory names will need to be changed.

Note that this document is a *compiler* tutorial, not a *programming* tutorial – it assumes you are at least slightly familiar with the C language.

Opening a Command Window

Like most compilers, Catalina is fundamentally a command-line utility. It is generally used from within a command line interpreter such as the Windows command interpreter **cmd.exe**.

If you installed Catalina using the Windows Installer package, a menu item called **Catalina Command Line** will have been created in the **Catalina** program group, and possibly also on your desktop – just select that menu entry (or desktop shortcut) and you can skip straight to the next section (titled **Compiling your first Catalina Program**).

Otherwise, you need to set up a command window manually. To do this, open the Windows Start menu, select **Run**… then type in **cmd.exe** and press **ok**.

A command window similar to the following will appear:

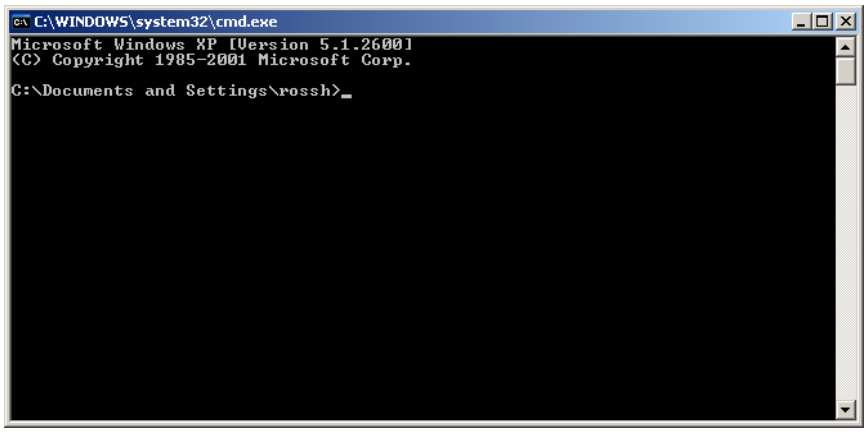

The first thing we need to do is set up the Windows path to include the path to Catalina (so that Windows can find the Catalina executables). There is a batch file provided to do this, so type in the following command:

```
"c:\Program Files (x86)\Catalina\use_catalina"
```

Note that the double quotation marks are required because the path to the main Catalina directory contains a space.

You should see a response similar to the following:

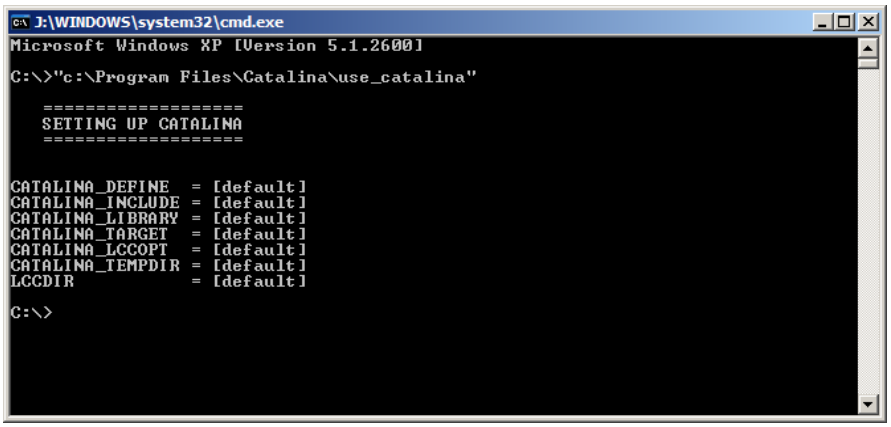

The **use_catalina** command adds the appropriate Catalina directories to the Windows path, and then displays the values of various environment variables that

Catalina uses. Initially, all these variables will have no value set (indicated by the **[default]** value shown above) – this is quite normal. The use of the environment variables is optional. Examples of their use are given later in this document, but for the moment we can simply ignore them.

If you are experienced in Windows, it is easy to create a desktop shortcut to automate this setup. Simply create a shortcut on your desktop to **cmd.exe**. Call this shortcut **Catalina**. Then right click the shortcut, and edit its properties to set the following shortcut attributes:

Target: *%windir%\system32\cmd.exe /K use_catalina*

Start in: *"C:\Program Files\Catalina"* [1]

Compiling your first Catalina Program

After opening the command window, change directory to where the Catalina demo programs are installed. This document assumes they are installed in *C:\Program Files\Catalina\demos* – in which case an appropriate command would be:

```
cd /d "c:\Program Files (x86)\Catalina\demos"
```

Now let's compile our first Catalina program. Note that you may need administrator permission to compile the files in the Catalina installation tree – an alternative is to copy the *demos* folder (or just some of the files it contains, such as *hello_world.c*) to a local directory and compile them there instead.

The first program we will attempt to compile is a version of the traditional C test program called *hello_world.c*. Initially, we'll get some errors – this is deliberate. The tutorial will then go on explain what the errors mean and how to fix them.

To invoke the Catalina compiler to compile *hello_world.c*, type:

```
catalina hello_world.c
```

If you see a message similar to the following, don't worry – it means everything is working correctly!

```
Undefined or Redefined symbols:
  printf undefined
```

However, if instead you see a message similar to this:

```
'catalina' is not recognized as an internal or external command,
operable program or batch file
```

then check that Catalina is installed correctly, that you typed the command correctly, and that you have run the **use_catalina** command – note that you need to re-execute **use_catalina** command every time you start a new command interpreter (except when using the shortcuts created during install).

If instead you see a message similar to this:

```
catalina: can't find "hello_world.c"
```

then check that you have typed the file name correctly, and that you are in the correct directory – use the **dir** command to check that the file *hello_world.c* actually exists in the current directory.

[1] Note that if you have installed Catalina to a directory other than *C:\Program Files\Catalina* you will need to explicitly set the "Start in" attribute to that directory. Also, you will need to explicitly set the **LCCDIR** environment variable before executing **use_catalina** – see the **Catalina Reference Manual** for more details. You can also set the **LCCDIR** environment variable permanently in your Windows environment variables if you prefer not to have to do this each time

Let's assume everything worked as expected – i.e. you got a message about **printf** being undefined. To understand why we get this error message, let's examine the program we just tried to compile. To do this type:

```
notepad hello_world.c
```

A window similar to the following will appear:

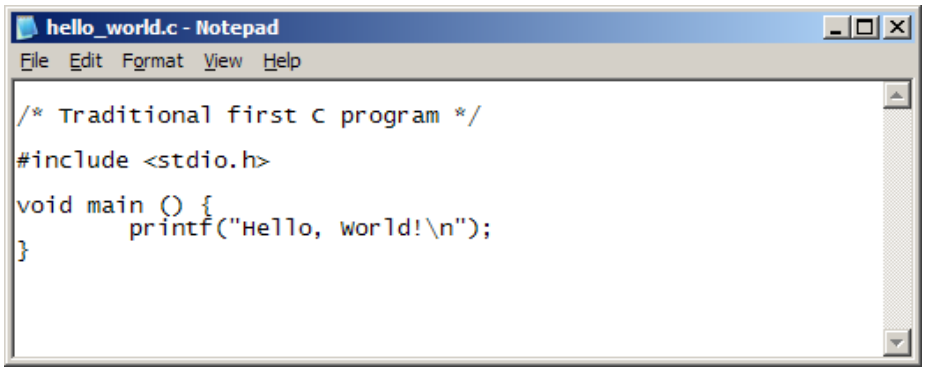

This document is not intended to be a C programming tutorial, but note that the program apparently calls a function called **printf** that does not appear to be defined anywhere within this program – this is because **printf** is a standard C library function. We need to tell Catalina to fetch this function from the appropriate library.

To tell Catalina to include library functions when compiling, we add a command-line option to our compile command. Traditionally, the standard C library is called **libc**, and including it is done by adding the command line option **-lc** to the compile command (here the **–l** mean *library*, and the **c** means to look for a library called lib***c***. Similarly, we will later use options like **–lcx**, which means look for a library called lib***cx***, **–lci**, which means look for a library called lib***ci***, or **–lmb** which means look for a library called lib***mb***)[2].

So to tell Catalina where to find **printf** when we compile our program, we will add the **–lc** option. Also, to see more information about what is going on, we will also add **–v** to indicate we want **verbose** output.

So now enter the following command:

```
catalina hello_world.c -lc -v
```

[2] Some C compilers will automatically find the standard C libraries, but when using Catalina it is necessary to explicitly specify when to include library functions, and which libraries to look in to find them. The main reason for this is that there are multiple versions of the standard libraries. For example, **libcx** is an extended version of the standard C library with additional file system support, and **libci** is a version of the standard C library without floating point support in stdio. Another example are the libraries **libm**, **libma** and **libmb** – these are all variations of the same maths library which use different number of cogs at run-time.

This time, instead of the error message you should see some information messages, similar to those shown below:

```
Catalina 3.11 Command Line

H:\Catalina_3.11\demos>catalina hello_world.c -lc -v
Catalina Compiler 3.11
verbose mode
Catalina Binder 3.11
verbose mode
Undefined or Redefined symbols:
 (none)
Compiling...
H:\Catalina_3.11\target\lmm_default.spin
|-Catalina_Common.spin
|-Catalina.spin
|-Command_Line.spin
  |-Catalina_Common.spin
  |-Catalina_CogStore.spin
    |-Catalina_Common.spin
|-Floating_Point.spin
  |-Catalina_Common.spin
|-SD_Card.spin
|-Clock.spin
|-HMI.spin
  |-Catalina_Common.spin
  |-Catalina_HMI_Plugin_PC.spin
    |-Catalina_Common.spin
    |-Catalina_CogCount.spin
      |-Catalina_Common.spin
    |-Catalina_PC_Keyboard.spin
      |-Catalina_Common.spin
    |-Catalina_PC_Text.spin
      |-Catalina_Common.spin
|-Graphics.spin
|-Proxy_IO.spin
|-Extras.spin
  |-Catalina_Common.spin
|-Catalina_LMM.spin
  |-Catalina_Common.spin
Done.
Program size is 19948 bytes

code = 13308 bytes
cnst = 144 bytes
init = 208 bytes
data = 940 bytes
file = 19948 bytes

H:\Catalina_3.11\demos>
```

Most of these messages are actually generated by **spinnaker**, which is Catalina's version of the Open Source Spin compiler, the program Catalina uses to compile the Spin startup code and the assembly language generated by the C compiler, to generate the final binary output file.

The last few lines contain statistics about the various C program segments, as well as the final program size:

```
code = 13308 bytes  - the size of the code segment,
cnst = 144 bytes    - the size of the constant data segment,
init = 208 bytes    - the size of the initialized data segment
data = 940 bytes    - the size of the uninitialized data segment
file = 1948 bytes   - the size of the final executable
```

If you omit the **–v** option, only the last few lines (segment and program sizes) will be displayed.

The binary file we just produced could be executed by a suitably configured Propeller platform – but we won't try to execute it yet, because there is more we need to learn about Catalina before we can be sure the file will execute correctly on any *particular* Propeller platform.

So first we'll carry on with some more compiler usage basics.

By the time the **spinnaker** messages appeared above, **catalina** had already done most of its work. If you want to see more information about what Catalina is actually doing at each step, there is a command line option you can use to make Catalina even more verbose: **–v –v**

To see the effect, try the command:

```
catalina hello_world.c -lc -v
```

Try it, and you can probably see why it is not a good idea to use **–v –v** all the time – the really vital information (such as if there are any undefined symbols) can easily be lost in the mass of other details. However, **–v** and **–v –v** are handy for determining things like exactly which files are being processed, or exactly which options are being passed to various components of **catalina**, or to **spinnaker**.

Compiling Multiple Files

So far, we have only compiled a program that consists of a single source file (i.e. the file *hello_world.c*). But C programs often consist of many source files. For example, there are two files called *my_prog.c* and *my_func.c* in the demo directory.

To see them, type **`notepad my_prog.c`** and then **`notepad my_func.c`**: You will see windows similar to the following:

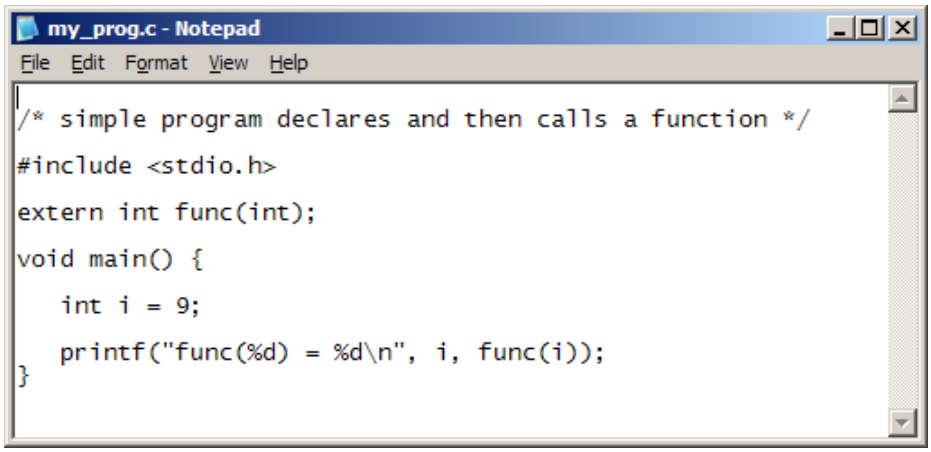

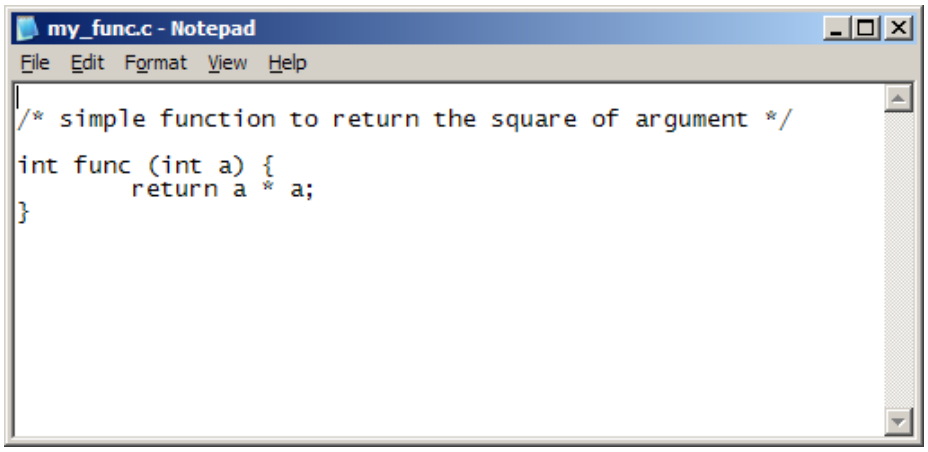

If you try compiling either one of these files separately, you will simply get errors (try it if you like – compiling *my_func.c* will generate a message about **main** being undefined, and compiling *my_prog.c* will generate a message about **func** being undefined – and also **printf** unless you include the **–lc** command line option).

To get this program to compile correctly, there are three different approaches that can be taken:

1. *Compile both the main program and function files using the same command*.

   To do this, type:

   ```
   catalina my_func.c my_prog.c -lc
   ```

   The program should compile successfully using this command.

   Note that you can specify many files (not just two) in the same command, and they can appear in any order – but one (and only one!) of the files must contain a **main** function.

2. *Compile the programs without linking, and then link them separately.*

   To do this, type:

```
catalina -c my_func.c
catalina -c my_prog.c
catalina -o my_prog my_prog.obj my_func.obj -lc
```

   The program should compile successfully using these commands. The first two commands compile their respective C programs but do not attempt to link them together (this is what the **–c** option means). There is no checking done at this point for any undefined symbols. The outputs of these two commands are "obj" files – which are in fact not binary files, but are assembly language files (Catalina is different to traditional compilers in this respect) that require further processing.

   The final command does no compilation - instead it just links the two previously generated object files together, and also links the result with the standard library and generates the final program binary. The object files can be deleted once the program has been built.

3. *Create a library containing the function, and then tell Catalina to use this library when compiling the main program*.

   The commands to create librates are a little more complex, and are usually not worthwhile for a program that consists of only a small number of files – but if you have many files it is often worth going to the extra effort to create a library.

   Each library requires its own subdirectory, which must be named **lib***name* – in this case let's assume we want to refer to the library using the name **x**. To do this we must create a subdirectory called **libx**, as follows:

```
mkdir libx
```

   Now enter the subdirectory. While not strictly necessary, this makes the next few command much simpler to type (and also simpler to explain). To do this, enter:

```
cd libx
```

   Now compile the file *my_func.c* from the parent directory, adding the **–S** command-line option. The **–S** option (note that this is a *capital* S) tells Catalina to compile the program, but not to try to link it or generate an executable output file – it will just leave the result as an assembly language file (with a **.s** extension).

   The command to use is therefore:

```
catalina -S ..\my_func.c
```

   This produces a file called *my_func.s*. If you had other functions to add to the library, you would use a similar command for each function.

   The last step in creating the library is to create a library index. The compiler expects each library to have an index called *catalina.index* – this allows symbols within the library to be located and resolved by the Catalina Binder without having to laboriously re-process each file in the library every time.

   The Catalina Binder (which is normally invoked silently for you by Catalina) is also the tool you use to do library management. To create an index of all symbols imported or exported by all the assembly language files in the current directory, enter the following command:

```
catbind -i -e *.s -o catalina.index
```

   Now your library is complete. Go back to the parent directory:

```
cd ..
```

We are now ready to compile the main program, specifying that Catalina should look in the library we have just created to find a definition for any unresolved symbols – which we do by adding the option **–lx** to the Catalina command. So enter the command:

```
catalina my_prog.c -lc -lx
```

The program should now compile without errors.

One final note - if the symbol **func** was one that was defined *both* in **libc** *and* in **libx**, Catalina would report that the symbol was being ***re***defined. Catalina makes no assumptions about which definition of the symbol you actually want – the compilation simply fails in all such cases, and you have to decide yourself which library you want to include.

Specifying Memory Models and Load Options

So far, every program we have compiled has resulted in a Catalina program that could be loaded and executed on just about any Propeller 1 with a 5Mhz clock. In each case the C program, the libraries, and all the necessary start-up and run-time code are combined into a single executable that can either be loaded into the Propeller using the normal tools, or programmed into a 32K external EEPROM connected to the Propeller (to be loaded into the Propeller automatically by the Propeller on boot - just like a SPIN program).

However, Catalina supports several different types of memory model, and several different methods of loading/executing programs.

The memory models supported are:

TINY This model is supported on the Propeller 1 and Propeller 2. This is Catalina's default model. **TINY** programs can be up to 32kb in size on the Propeller 1, or 512kb on the Propeller 2. This model corresponds to the normal Parallax mode used for SPIN or PASM programs.

TINY programs can be programmed into EEPROM, or loaded using *any* program loader, including the Parallax **Propeller Tool**, the Parallax **Propellant** loader, Catalina's **Catalyst** SD card loader or Catalina's **Payload** serial loader.

All the programs we have compiled to this point have resulted in TINY programs.

COMPACT This model is supported on the Propeller 1 and Propeller 2. **COMPACT** programs can be up to 32kb in size on the Propeller 1, or 512kb on the Propeller 2. This model generates very compact C programs that use a hybrid of LMM and interpreted code.

TINY programs can be loaded using the Parallax **Propeller Tool**, the Parallax **Propellant** loader, or Catalina's **Payload** serial loader. They can be programmed into EEPROM as EMM programs or loaded onto SD CARD as SMM programs.

SMALL This model is supported on the Propeller 1 that have external memory or an EEPROM larger than 32kb available. SMALL programs can have code segments up to 16Mb in XMM RAM, but all data segments, the

stack and the heap space must fit into the normal Propeller 32kb of Hub RAM.

SMALL programs can be loaded into EEPROM, or they can be loaded with Catalyst or Payload.

LARGE This model is supported on the Propeller 1 that have external memory available. **LARGE** programs can have code and data segments and heap space up to a total of 16Mb in XMM RAM – the 32kb Hub RAM is used only for stack space.

LARGE programs can be loaded into EEPROM, or they can be loaded with Catalyst or Payload.

NATIVE This model is supported on the Propeller 2 only. **NATIVE** programs use the new Propeller 2 Hub execution mode. Such programs can be up to 512kb in size. The NATIVE mode can only be used in conjunction with the **-p2** option, which tells Catalina to compile programs for the P2.

Currently, the Propeller 1 platforms with supported XMM RAM include the DracBlade, RamBlade, TriBladeProp (CPU #1 or CPU #2), Morpheus (CPU #1 or CPU #2), the Hydra and Hybrid (using the HX512 Xtreme SRAM card), the C3, and Propellers using the FlashPoint SuperQuad and RamPage modules. On other Propeller 1 platforms, Catalina can only be used to compile TINY programs (or SMALL programs on Propeller 1 platforms with an EEPROM larger than 32kb).

The Propeller 1 load options are:

EEPROM COMPACT and TINY programs do not *need* any special processing to be executed from EEPROM, but there is a special loader that allows them to be loaded in two phases, allowing such program to make more effective use of the Propeller Hub RAM. For SMALL or LARGE programs to be executed from EEPROM, they *must* be compiled with a special Catalina target that knows how to load the XMM portion of the program from EEPROM to XMM RAM. The “special” Catalina targets are loaded into the *first* 32K of the EEPROM. The program is then loaded into the EEPROM starting at 32kb. The target loads all the plugins and drivers, and then loads the Catalina C program for execution –the advantage of using the special target (even for TINY programs) is that provided you have an EEPROM of at least 64Kb connected to your propeller, the C program code does not need to share the same 32kb space as the target code – allowing for larger C programs to be loaded and executed.

SDCARD The Catalyst program is Catalina’s SD Card Loader. COMPACT, TINY, SMALL and LARGE programs do not *need* any special processing to be able to be loaded by Catalyst – but for COMPACT and TINY programs there is a special loader that that allows them to be loaded in two phases, allowing such program to make more effective use of the Propeller Hub RAM. Like the special EEPROM loader, the SDCARD loader divides programs into several sections – the first 32kb contains the target, which sets up the execution environment for the program (by loading all the plugins and drivers etc). Then the *second 32kb* of the file contains the application program. Finally, the actual kernel is loaded

from the last 2kb of the file. This means all program files compiled with the SDCARD loader option are exactly 66kb in size.

FLASH SMALL and LARGE programs that are to be executed out of SPI Flash RAM require a special load process, and so they must also use a special Catalina target. Both the Catalyst and the Payload loaders know how to load and run FLASH programs.

The Propeller 2 has no special load options, but it does have FLASH loader support, which must be invoked using a special payload script. For example, to load the program *hello.bin* into Flash, you would use a command like:

```
flash_payload hello.bin -z -b230400
```

Note that you must have any SD card removed, and the FLASH microswitch set to OFF to load a program to FLASH, but then set the FLASH microswitch to ON to run it (this may also require a re-boot).

You select whether you want your program compiled as a **COMPACT**, **TINY**, **SMALL** or **LARGE** program, and also whether to use the **EEPROM**, **SDCARD** or **FLASH** loader by defining these symbols on the command line. Defining symbols is done using the command line option **-C**. Some examples are given below.

The default when no symbols are defined (which is what we have done so far) is for programs to be compiled using the **TINY** memory model, and to use a target compatible with the standard Parallax loader (as well as Catalina's own loaders).

Below are examples of all the possible combinations of memory model and loader option:

TINY

To compile a TINY program that can be loaded with Catalyst, Payload (or any other serial load program) or which can be programmed into EEPROM:

```
catalina hello_world.c -lc
```

To compile a TINY program that uses the special EEPROM loader:

```
catalina hello_world.c -lc -C EEPROM
```

To compile a TINY program that uses the special SDCARD loader, to be loaded using Catalyst:

```
catalina hello_world.c -lc -C SDCCARD
```

Note that you can also include the **-C TINY** option – but it is not necessary as this is the default.

SMALL

To compile a SMALL program that uses a loader compatible with Catalyst and Payload:

```
catalina hello_world.c -lc -C SMALL
```

To compile a SMALL program that can be programmed into EEPROM:

```
catalina hello_world.c -lc -C SMALL -C EEPROM
```

To compile a SMALL program that can be loaded and executed from FLASH:

```
catalina hello_world.c -lc -C SMALL -C FLASH
```

LARGE

To compile a LARGE program that uses a loader compatible with Catalyst and Payload:

```
catalina hello_world.c -lc -C LARGE
```

To compile a SMALL program that can be programmed into EEPROM:

```
catalina hello_world.c -lc -C LARGE -C EEPROM
```

To compile a SMALL program that can be loaded and executed from FLASH:

```
catalina hello_world.c -lc -C LARGE -C FLASH
```

COMPACT

To compile a COMPACT program that can be loaded with Payload (or any other serial load program):

```
catalina hello_world.c -lc -C COMPACT
```

To compile a COMPACT program that uses the special EEPROM loader:

```
catalina hello_world.c -lc C COMPACT -C EEPROM
```

To compile a COMPACT program that uses the special SDCARD loader, to be loaded using Catalyst:

```
catalina hello_world.c -lc C COMPACT -C SDCCARD
```

NATIVE

To compile a NATIVE program that can be loaded with Catalyst, Payload (or any other serial load program) on the Propeller 2, or which can be programmed into FLASH:

```
catalina -p2 hello_world.c -lc
```

You will find a complete summary of all Catalina command line options, including all the symbols that affect the compilation process, in the document **Catalina Command Summary**. It may be worth printing this out and keeping it handy!

Specifying a Supported Propeller 1 Platform

So far, we have just been compiling programs but not specifying anything about the particular Propeller hardware we have. How do we do that?

Behind the scenes on each compile, Catalina has been adding in the run-time support infrastructure required to make each compiled program a self-contained executable. But so far, all programs have been compiled only for a default Propeller platform (which is the CUSTOM platform, suitable for just about any Propeller 1 with a 5Mhz clock).

If you have a Hydra. Hybrid, or another platform that does not have a 5Mhz clock, then a bit more work needs to be done to make sure the programs are correctly configured for *your particular* propeller platform.

Recall that when programming in SPIN (or PASM) you also need to specify things such as clock frequency, and the I/O base pins (or pin groups) for device drivers to use. You need to do much the same in C – but with Catalina it is done by selecting appropriate *target* - and then further configuring that target by using various command line options to specify the *platform*.

Catalina *targets* achieve the same result as setting the various constants such as **_clkfreq** and **_xinfreq** in SPIN – plus a lot more. A Catalina target not only sets these basic values, it also loads and initializes all the device drivers and other support infrastructure (such as floating point libraries or a real-time clock) that the C program will need - so that when the program starts executing it has a well-defined environment in which to do so. In SPIN, you have to set all this up for yourself each time – but not with Catalina!

The most important characteristics of each Catalina target are the Propeller hardware configuration parameters it defines, the device drivers it loads, and the type of kernel it uses to execute the Catalina program.

Since we have so far not been specifying any particular target or platform to use, Catalina has been using a *default* target when generating executables, and configuring that target for the default CUSTOM platform. Specifically, we have so far mostly been using the *lmm_default* target - which (if no further options are specified) does the following:

- Sets the clock speed, and I/O pin configurations for the Hydra.
- Loads a serial driver for output.
- Loads a serial driver for input.
- Loads a HMI driver (to manage the text output and keyboard input)
- Loads the LMM Kernel

But there are some programs - such as the *test_time.c* demo program - that also need other drivers (in this case a real-time clock) which are not loaded by the default target.

To support such programs we can either explicitly request Catalina to use a target that loads necessary drivers, or to request Catalina to enable the real-time clock in the default target.

The targets provided with Catalina are described in detail the **Catalina Reference Manual** - in this particular case we will compile the program to use the predefined default target (CUSTOM) and simply enable the real-time clock support. To do this,

we define the special symbol **CLOCK** on the Catalina command line. Defining symbols on the command line is done using the **-C** option, so we would enter a command like:

```
catalina test_time.c -lc -C CLOCK
```

This will generally work on any Propeller 1 with a 5Mh clock. If you intend to execute the program on a platform that uses a different clock speed (such as the **HYDRA** or **HYBRID**) you may also need to define other symbols. For example, to compile the program for the HYDRA we would define an additional symbol, using a command such as:

```
catalina test_time.c -lc -C CLOCK -C HYDRA
```

Catalina has build in support for many common Propeller 1 platforms, including the **HYDRA**, the **HYBRID**, the Parallax **DEMO** board, and the **TRIBLADEPROP**, **RAMBLADE**, **RAMBLADE3**, **MORPHEUS**, **ASC**, **C3** or **QUICKSTART** boards. It also supports Propellers using the **SUPERQUAD, RAMPAGE**, **HX512**, **RP2** or **PMC** XMM Add-on boards.

Here is a list of symbols that can be defined on the command line which affect the configuration of the default Propeller 1 target package (note that some symbols only apply to specific targets, or memory modes):

HYDRA	use HYDRA pin definitions, drivers and XMM functions
HYBRID	use HYBRID pin definitions, drivers and XMM functions
DEMO	use DEMO board pin definitions and drivers (this platform has no XMM support)
DRACBLADE	use DRACBLADE pin definitions, drivers and XMM functions
RAMBLADE	use RAMBLADE pin definitions, drivers and XMM functions
RAMBLADE3	use RAMBLADE3 pin definitions, drivers and XMM functions
TRIBLADEPROP	use TRIBLADEPROP pin definitions, drivers and XMM functions
MORPHEUS	use MORPHEUS pin definitions, drivers and XMM functions
ASC	use ASC board pin definitions and drivers (this platform has no XMM support)
QUICKSTART	use QUICKSTART board pin definitions and drivers (this platform has no XMM support)
C3	use C3 pin definitions, drivers and XMM functions
SUPERQUAD	use SUPERQUAD pin definitions, drivers and XMM functions
RAMPAGE	use RAMPAGE pin definitions, drivers and XMM functions
RP2	use RAMPAGE 2 pin definitions, drivers and XMM functions

PMC	use PROPELLER MEMORY CARD pin definitions, drivers and XMM functions
PP	use PROPELLER PLATFORM pin definitions, drivers and XMM functions
CUSTOM	use a user-customized set of pin definitions, drivers and XMM functions (if applicable)
CPU_1	on the TRIBLADEPROP, this means to use CPU #1 pin definitions and XMM functions – if not specified, CPU #2 XMM functions are used by default
CPU_2	on the TRIBLADEPROP or MORPHEUS, this means to use CPU #2 pin definitions and XMM functions (this is also the default)
CPU_3	on the TRIBLADEPROP, this means to use CPU #3 pin definitions and devices.
ALTERNATE	use the alternate LMM Kernel (the alternate kernel is slightly smaller in size but does not include any floating point support).
TINY	compile an LMM program to use the TINY memory model
SMALL	compile an XMM program to use the SMALL memory model
LARGE	compile an XMM program to use the LARGE memory model
COMPACT	compile a CMM program to use the COMPACT memory model
SDCARD	use the SDCARD two-phase loader
EEPROM	use the EEPROM two-phase loader
FLASH	use an SPI FLASH loader
HIRES_VGA	load a High Resolution VGA driver (not supported on the HYBRID or RAMBLADE)
LORES_VGA	load a Low Resolution VGA driver (not supported on the HYDRA, RAMBLADE or MORPHEUS)
VGA	(same as **LORES_VGA**)
HIRES_TV	load a High Resolution TV driver (not supported on MORPHEUS or RAMBLADE)
LORES_TV	load a Low Resolution TV driver (not supported on MORPHEUS or RAMBLADE)
TV	(same as **LORES_TV**)
NTSC	use NTSC mode (TV drivers only)
NO_INTERLACE	use non-interlace mode (TV drivers only)

PC	load a PC terminal emulator HMI plugin with screen and keyboard support
PROPTERMINAL	load a PropTerminal HMI plugin with screen, keyboard and mouse support.
TTY	load a simple serial HMI plugin with screen and keyboard support (no proxy support).
VGA_640	load a VGA HMI plugin with resolution of 640 x 480.
VGA_800	load a VGA HMI plugin with resolution of 800 x 600.
VGA_1024	load a VGA HMI plugin with resolution of 1024 x 768.
HIRES_VGA	same as VGA_1024
LORES_VGA	same as VGA_640
VGA	same as VGA_640
COLOR _1	use a color depth of 1 bit.
COLOR _4	use a color depth of 4 bits.
COLOR _8	use a color depth of 8 bits.
COLOR _24	use a color depth of 24 bits.
MONO	same as COLOR_1.
NO_KEYBOARD	do not load the keyboard code and one of the USB drivers
NO_MOUSE	do not load the mouse code and one of the USB drivers
P2_REV_A	use instructions supported by the P2 Rev A chip (required for Rev A chips by some HMI drivers).
MHZ_200	use a clock frequency of 200 Mhz (required for High resolution VGA).
MHZ_260	use a clock frequency of 260 Mhz (required for High resolution VGA using 4 bit or 8 bit color).
CR_ON_LF	Translate CR to CR LF on output
NO_CR_TO_LF	Disable translation of CR to LF on input
NON_ANSI_HMI	Disable ANSI compliance in HMI (revert to prior behavior)
CLOCK	load a Real-Time Clock plugin
SD	load the SD plugin (this is not usually required, since it is implied by the **–lcx** and **–lcix** options)
NO_FP	do not load any Floating Point plugins (even if implied by other options)
NO_FLOAT	same as **NO_FP**
NO_HMI	do not load any HMI plugin (even if implied by other options)

NO_MOUSE	do not start a mouse driver (even if one is loaded)
NO_KEYBOARD	do not start a keyboard driver (even if one is loaded)
NO_SCREEN	do not start a screen driver (even if one is loaded)
PROXY_SD	See the **Proxy Devices** section later in this document
PROXY_SCREEN	See the **Proxy Devices** section later in this document
PROXY_MOUSE	See the **Proxy Devices** section later in this document
PROXY_KEYBOARD	See the **Proxy Devices** section later in this document
CACHED_1K	Use a 1K cache for XMM access
CACHED_2K	Use a 2K cache for XMM access
CACHED_4K	Use a 4K cache for XMM access
CACHED_8K	Use a 8K cache for XMM access
CACHED	Same as **CACHED_8K**
GAMEPAD	Include the Gamepad driver
DISABLE_REBOOT	Disable the automatic reboot if the program exits from the main() function – useful if you are using the TV or VGA driver and want the screen output to remain when the program exits
VGA_640	Use 640 x 480 resolution (virtual graphics only)
VGA_800	Use 800 x 600 resolution (virtual graphics only)
VGA_1024	Use 1024 x 768 resolution (virtual graphics only)
VGA_1152	Use 1152 x 864 resolution (virtual graphics only)
VGA_2_COLOR	Use 2 color mode (1 bit color depth, virtual graphics)
VGA_4_COLOR	Use 4 color mode (2 bit color depth, virtual graphics)
DOUBLE_BUFFER	Smoother graphics (CGI or virtual graphics only)

Specifying a Supported Propeller 2 Platform

So far, we have just been compiling programs but not specifying anything about the particular Propeller hardware we have. How do we do that on the Propeller 2?

Behind the scenes on each compile, Catalina has been adding in the run-time support infrastructure required to make each compiled program a self-contained executable. But so far, all programs have been compiled only for a default Propeller platform (which is essentially the P2_EVAL platform).

If you have a Propeller 2 platform, then a bit more work needs to be done to make sure the programs are correctly configured for *your particular* propeller platform.

Recall that when programming in SPIN (or PASM) you also need to specify things such as clock frequency, and the I/O base pins (or pin groups) for device drivers to use. You need to do much the same in C – but with Catalina it is done by selecting appropriate *target* - and then further configuring that target by using various command line options to specify the *platform*.

Catalina *targets* achieve the same result as setting the various constants such as clock frequency and mode – plus a lot more. A Catalina target not only sets these basic values, it also loads and initializes all the device drivers and other support infrastructure (such as floating point libraries or a real-time clock) that the C program will need - so that when the program starts executing it has a well-defined environment in which to do so. In SPIN, you have to set all this up for yourself each time – but not with Catalina!

The most important characteristics of each Catalina target are the Propeller hardware configuration parameters it defines, the device drivers it loads, and the type of kernel it uses to execute the Catalina program.

Since we have so far not been specifying any particular target or platform to use, Catalina has been using a *default* target when generating executables, and configuring that target for the default CUSTOM platform. Specifically, we have so far mostly been using the *lmm_default* target - which (if no further options are specified) does the following:

- Sets the clock speed, and I/O pin configurations for the P2)EVAL.
- Loads a serial driver for output.
- Loads a serial driver for input.
- Loads a HMI driver (to manage the text output and keyboard input)
- Loads the LMM Kernel

But there are some programs - such as the *test_time.c* demo program - that also need other drivers (in this case a real-time clock) which are not loaded by the default target.

To support such programs we can either explicitly request Catalina to use a target that loads necessary drivers, or to request Catalina to enable the real-time clock in the default target.

The targets provided with Catalina are described in detail the **Catalina Reference Manual** - in this particular case we will compile the program to use the predefined default target (**P2_EVAL**) and simply enable the real-time clock support. To do this, we define the special symbol **CLOCK** on the Catalina command line. Defining

symbols on the command line is done using the **-C** option, so we would enter a command like:

```
catalina -p2 test_time.c -lc -C CLOCK
```

This will work on the **P2_EVAL** board. To compile the program for the **P2D2** we would define an additional symbol, using a command such as:

```
catalina -p2 test_time.c -lc -C CLOCK -C P2D2
```

Catalina has build in support for several Propeller 2 Platforms, including the **P2_EVAL** and the **P2D2**.

Here is a list of symbols that can be defined on the command line which affect the configuration of the default Propeller 2 target package (note that some symbols only apply to specific targets, or memory modes):

P2_EVAL	use P2_EVAL pin definitions, drivers and default values
P2_D2	use P2D2 pin definitions, drivers and default values
P2_CUSTOM	use a user-customized set of pin definitions, drivers and default values (if applicable)
TINY	compile an LMM program to use the TINY memory model
COMPACT	compile a CMM program to use the COMPACT memory model
NATIVE	compile an NMM program to use the NATIVE memory model
TTY	load a simple serial HMI plugin with screen and keyboard support (no proxy support).
CR_ON_LF	Translate CR to CR LF on output
NO_CR_TO_LF	Disable translation of CR to LF on input
CLOCK	load a Real-Time Clock plugin
SD	load the SD plugin (this is not usually required, since it is implied by the **–lcx** and **–lcix** options)
NO_FP	do not load any Floating Point plugins (even if implied by other options)
NO_FLOAT	same as **NO_FP**
NO_HMI	do not load any HMI plugin (even if implied by other options)
DISABLE_REBOOT	Disable the automatic reboot if the program exits from the main() function – useful if you are using the TV or VGA driver and want the screen output to remain when the program exits

Specifying Options using Environment Variables

You can specify multiple symbols on the command line, but remember to specify **-C** before each one. For example, to compile a program for the Hybrid using a high-resolution TV driver in NTSC mode with clock support you would use a command like:

```
catalina test_time.c -lc -C HYBRID -C HIRES_TV -C NTSC -C CLOCK
```

Because using multiple symbols to specify the configuration of the target is so common, there is a better way to specify them if you intend using the same configuration for many compilations – set the **CATALINA_DEFINE** environment variable, as follows:

```
set CATALINA_DEFINE=HYBRID HIRES_TV NTSC CLOCK
```

Then a command such as:

```
catalina test_time.c -lc
```

has the same effect as specifying all the symbols using **-C** options on the command line (note that the **-C** option should not be specified for symbols defined using the environment variable).

Knowing what the current setting of the various Catalina environment variables is can be very important. To display the current settings, use the command **catalina_env** – in the above case you would see output like:

```
CATALINA_DEFINE  = HYBRID HIRES_TV NTSC CLOCK
CATALINA_INCLUDE = [default]
CATALINA_LIBRARY = [default]
CATALINA_TARGET  = [default]
CATALINA_LCCOPT  = [default]
CATALINA_TMPDIR  = [default]
LCCDIR           = [default]
```

To unset an environment variable, you can use the unset command:

```
unset CATALINA_DEFINE
```

More details on the use of environment variables is given in the **Catalina Reference Manual**.

Note that some of Catalina's build scripts (e.g. the **build_all** script in the *utilities* directory) need to set up very specific configurations before compiling some of the utility programs, and therefore these scripts check to see if the **CATALINA_DEFINE** variable is set - if so, they refuse to run, because the settings could interfere with the operation of the script. To run these scripts, first unset the **CATALINA_DEFINE** variable, and then specify the target on the command line – e.g:

```
build_all HYBRID
```

Loading Programs

For **LMM, CMM** or **NATIVE** programs, the simplest way to load a program (assuming your platform has a suitable serial or USB interface, and it is connected to your PC, and the Propeller is powered up) is to use the Payload serial loader. Just enter a command like:

```
payload hello_world
```

Payload will locate the Propeller automatically. On the Propeller 1 you can also load programs into EEPROM, by including the **–e** command line option:

```
payload hello_world -e
```

Before we can load **XMM** programs on the Propeller 1, we must first build some Catalina utilities for the platform we want to load. To do this, go to the Catalina *utilities* directory, and enter the following command:

```
build_utilities
```

This is an interactive batch program which will ask you questions about the Propeller platform you intend to run the programs on. Once this process is complete, you can then return to your program folder and use the Payload program, but this time also specify that Payload should use the XMM loader utility you just built:

```
payload XMM hello_world
```

Supporting Other Propeller 1 Platforms

For other Propeller 1 platforms (i.e. any propeller platform not mentioned in the previous sections), you can editing the Catalina common configuration, which is stored in the file *C:\Program Files\Catalina\target\Catalina_Common.spin* – this file includes platform-specific include files which contain the definition of the clock frequency and the base pin/pin group definitions for each Catalina platform. There is one symbol, (**CUSTOM**) and a set of related files (*Custom_DEF.inc*, *Custom_CFG.inc*, *Custom_HMI.inc*) that can be modified to suit *any* Propeller platform.

The file *Custom_DEF.inc* is a normal text file that can be edited using notepad. This file will look something like this:

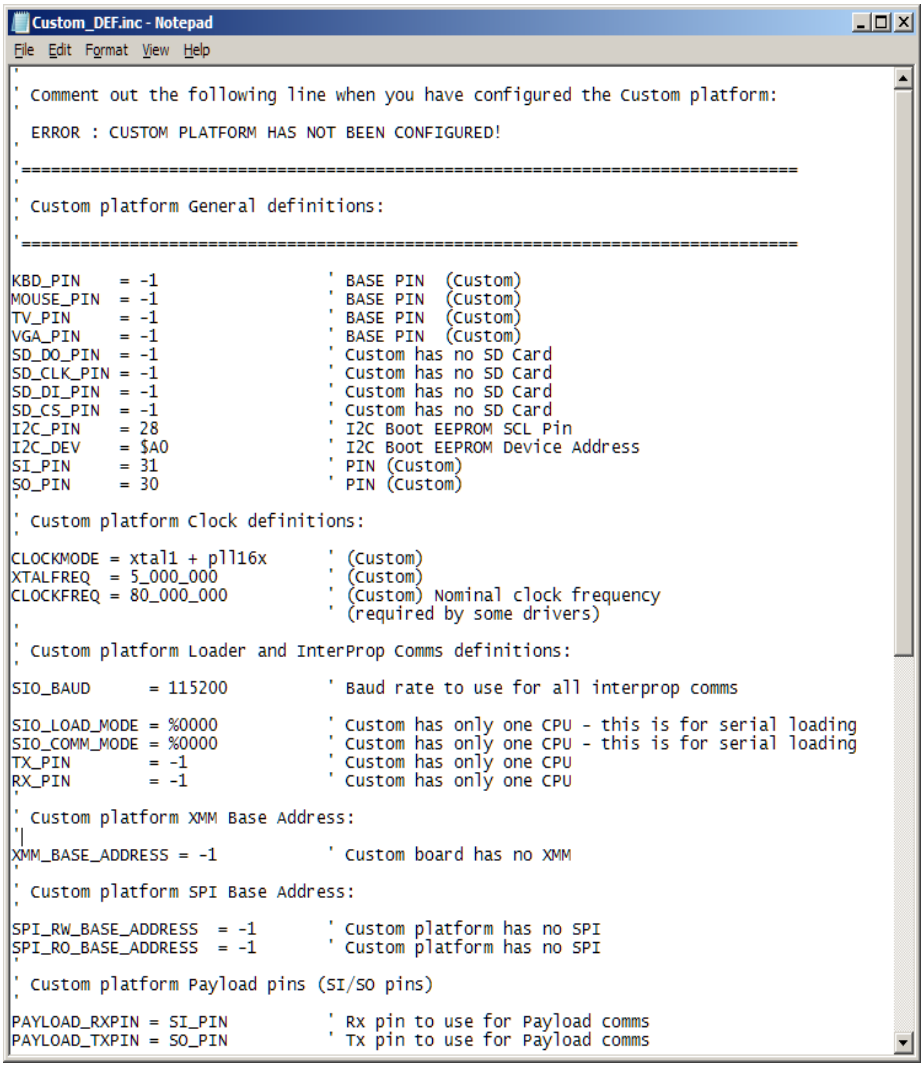

```
Custom_DEF.inc - Notepad
File  Edit  Format  View  Help
'
' Comment out the following line when you have configured the Custom platform:
'
  ERROR : CUSTOM PLATFORM HAS NOT BEEN CONFIGURED!
'
'==============================================================================
'
' Custom platform General definitions:
'
'==============================================================================

KBD_PIN     = -1                  ' BASE PIN  (Custom)
MOUSE_PIN   = -1                  ' BASE PIN  (Custom)
TV_PIN      = -1                  ' BASE PIN  (Custom)
VGA_PIN     = -1                  ' BASE PIN  (Custom)
SD_DO_PIN   = -1                  ' Custom has no SD Card
SD_CLK_PIN  = -1                  ' Custom has no SD Card
SD_DI_PIN   = -1                  ' Custom has no SD Card
SD_CS_PIN   = -1                  ' Custom has no SD Card
I2C_PIN     = 28                  ' I2C Boot EEPROM SCL Pin
I2C_DEV     = $A0                 ' I2C Boot EEPROM Device Address
SI_PIN      = 31                  ' PIN (Custom)
SO_PIN      = 30                  ' PIN (Custom)
'
' Custom platform Clock definitions:
'
CLOCKMODE = xtal1 + pll16x        ' (Custom)
XTALFREQ  = 5_000_000             ' (Custom)
CLOCKFREQ = 80_000_000            ' (Custom) Nominal clock frequency
                                  ' (required by some drivers)
'
' Custom platform Loader and InterProp Comms definitions:
'
SIO_BAUD      = 115200            ' Baud rate to use for all interprop comms

SIO_LOAD_MODE = %0000             ' Custom has only one CPU - this is for serial loading
SIO_COMM_MODE = %0000             ' Custom has only one CPU - this is for serial loading
TX_PIN        = -1                ' Custom has only one CPU
RX_PIN        = -1                ' Custom has only one CPU
'
' Custom platform XMM Base Address:
'
XMM_BASE_ADDRESS = -1             ' Custom board has no XMM
'
' Custom platform SPI Base Address:
'
SPI_RW_BASE_ADDRESS  = -1         ' Custom platform has no SPI
SPI_RO_BASE_ADDRESS  = -1         ' Custom platform has no SPI
'
' Custom platform Payload pins (SI/SO pins)
'
PAYLOAD_RXPIN = SI_PIN            ' Rx pin to use for Payload comms
PAYLOAD_TXPIN = SO_PIN            ' Tx pin to use for Payload comms
```

You will generally need to modify the various **PIN** numbers, and the **CLOCKMODE** and **XTALFREQ** to suit your platform. It is unusual to have to modify anything else in this file. You should comment out the **ERROR** line once you have configured the custom platform.

Once the custom platform has been configured, you use it by defining the **CUSTOM** symbol on the command line (e.g. by using **-C CUSTOM**).

By default, the **CUSTOM** platform is configured to support only one CPU, no SD card and no XMM RAM. If you are careful to always specify only combinations of options that are actually supported by your platform, then there is no need to edit any of the other target files. However, if your platform does not support all possible HMI options (e.g. it has no VGA output) then you may also choose to edit the *Custom_HMI.inc* file.

If your Propeller platform is unusual or unique, or has additional hardware that requires additional drivers, then you may need to develop your own dedicated targets. However, it is suggested that you base them on the default targets provided, using the symbols described above to select similar options (where appropriate).

Apart from the default targets, Catalina also provides various debug targets. Using the debug targets is beyond the scope of this tutorial – for details refer to the **Catalina Reference Manual**.

Supporting Other Propeller 2 Platforms

For other Propeller 2 platforms (i.e. any propeller platform not mentioned in the previous sections), you can editing the Catalina common configuration, which is stored in the file *C:\Program Files\Catalina\target_p2\Catalina_platforms.inc* – this file includes platform-specific definitions of the clock frequency and the base pin/pin group definitions for each Catalina platform. There is one symbol, (**P2_CUSTOM**) that is predefined and intended to be modified to suit *any* Propeller platform.

The file *Catalina_platforms.inc* is a normal text file that can be edited using notepad. This file will look something like this:

Catalina_platforms.inc - Notepad

File Edit Format View Help

```
CON

#if defined(P2_EVAL)
'------------------------------ P2_EVAL constants --------------------------

' clock configuration constants

_XTALFREQ = 20_000_000  ' crystal frequency
_XDIV     = 4           '\ crystal divider            to give 5.0MHz
_XMUL     = 72          '| crystal / div * mul        to give 360MHz
_XDIVP    = 2           '/ crystal / div * mul / divp  to give 180MHz
_XOSC     = %01         ' %00=OFF, %01=OSC, %10=15pF, %11=30pF
_XSEL     = %11         ' %00=rcfast, %01=rcslow, %10=XI, %11=PLL
_XPLL     = 1           ' 0= PLL off, 1=PLL on

'NOTE: The final clock frequency is actually set in Catalina_Constants.inc
'      as _XTALFREQ / _XDIV * _XMUL / _XDIVP - i.e. in this case 180Mhz

' serial constants

_RX_PIN    = 63
_TX_PIN    = 62
_BAUDRATE  = 230400

' BlackCat Debugger I/O constants

#define _BLACKCAT_RX_PIN  50
#define _BLACKCAT_TX_PIN  52

_BLACKCAT_MODE    = %0000
_BLACKCAT_BAUD    = 115200
_BLACKCAT_SIZE    = 5*4    ' 5 longs

' SD Card constants

_SD_CK     = 61         'pin SD Card clock
_SD_CS     = 60         'pin SD Card select
_SD_DI     = 59         'pin SD Card MOSI
_SD_DO     = 58         'pin SD Card MISO

' 2 Port Serial constants

_RX1_PIN   = _RX_PIN
_TX1_PIN   = _TX_PIN
_RX1_MODE  = %0000_0000_000_0000000000000_00_11111_0 ' async rx mode, true input, input
enabled for smart input
_TX1_MODE  = %0000_0000_000_0000000000000_01_11110_0 ' async tx mode, true output, output
enabled for smart output
_BAUDRATE1 = _BAUDRATE
_RX2_PIN   = 57
_TX2_PIN   = 56
_RX2_MODE  = %0000_0000_000_0000000000000_00_11111_0 ' async rx mode, true input, input
```

You will generally need to modify the various **PIN** numbers, and the various **CLOCK** constants to suit your platform. It is unusual to have to modify anything else in this file. Generally, you would modify the section surrounded by **#elif defined (P2_CUSTOM)** … **else** guards

Once the custom platform has been configured, you use it by defining the **P2_CUSTOM** symbol on the command line (e.g. by using **-C P2_CUSTOM**).

If your Propeller platform is unusual or unique, or has additional hardware that requires additional drivers, then you may need to develop your own dedicated

targets. However, it is suggested that you base them on the default targets provided, using the symbols described above to select similar options (where appropriate).

Apart from the default targets, Catalina also provides various debug targets. Using the debug targets is beyond the scope of this tutorial – for details refer to the **Catalina Reference Manual**.

Advanced Concepts

Using a different Target or Target Package

So far we have only used one target package, and one propeller target (the default ones in each case). Since we can specify so many propeller target configuration options on the command line, we may never need to use a different target package. But it can be useful in some circumstances – e.g. to develop dedicated targets for a specific platform or application.

By default, Catalina compiler expects the target package to be in a directory called *target* (e.g. *C:\Program Files\Catalina\target*). However, there are two ways we can override this – by using command line options, or by using environment variables.

A target package can be any directory, and can be specified by using the **–T** option on the command line – note that this option requires a *capital*-T to be specified - the lower case option **–t** is used to choose individual targets *within* the target package, while the upper case option **–T** is used to choose a different target pacjage.

Suppose we wanted to develop a new Catalina target – we might choose to do so by first copying the default target package to a new directory – say *C:\My_Package* – and we would then want to specify that Catalina should use the new target package in place of the default one. This can be one using the **–T** command line option:

```
catalina hello_world.c -lc -TC:\My_Package
```

Note that Catalina requires file and path names specified on the command line that contain spaces to be enclosed in double quotes – e.g.:

```
catalina hello_world.c -lc -T"C:\Program Files\My_Package"
```

The only problem with this approach is that the appropriate **–T** option has to be specified on each and every compilation. If you intend to do many such compilations, you can specify this using the **CATALINA_TARGET** environment variable:

```
set CATALINA_TARGET=C:\My_Package
```

Then a command such as:

```
catalina hello_world.c -lc
```

has the same effect as specifying the **–T** option on the command line. For this reason, knowing what the current setting of the various Catalina environment variables is can be very important. To display the current settings, use the command **catalina_env** – in the above case you might see output like:

```
CATALINA_DEFINE  = [default]
CATALINA_INCLUDE = [default]
CATALINA_LIBRARY = [default]
CATALINA_TARGET  = C:\My_Target
CATALINA_LCCOPT  = [default]
CATALINA_TMPDIR  = [default]
LCCDIR           = [default]
```

More details on environment variables is given in the **Catalina Reference Manual**.

Catalina provides three target packages for the Propeller 1 – *target*, *basic* and *minimal:*

target This is the standard Catalina Propeller 1 target package, which supports all platforms, all memory models, all loaders and plugins.

basic This is a smaller Propeller 1 target package, intended to support only a single platform, and only the basic plugins required for ANSI compliance. However, it supports all memory models and loaders. This target package is intended as the place to start when developing a target for an application that need only run on a single specific Propeller platform – particularly one that required unusual configuration, or unusual driver support. The basic target platform does not include support for any HMI drivers, so it is also suitable where either no such drivers are required (e.g. in a deeply embedded application) or where very specific or highly customized HMI drivers need to be developed.

minimal This is a very trivial Propeller 1 target package. It supports only a single platform, a single memory model (LMM), a single plugin and the serial loader. This target package is intended to be used to demonstrate adding plugins to Catalina. See the document **Getting Started with Plugins** for more details.

Catalina provides one target packages for the Propeller 2 – *target_p2:*

target_p2 This is the standard Catalina Propeller 2 target package, which supports all Propeller 2 platforms and plugins.

Note that on the Propeller 2, Catalina automatically adds the *_p2* suffix to the target name (and also to the library names) when the **-p2** command line option is used. This means that you still specify the target as just *target*, not as *target_p2*, and library names as just (for example) **-lc** for **libc_p2** – you don't need to say **-lc_p2**.

Using an SD Card with Catalina

If you have a Propeller platform that has an SD Card, you can use it in two ways:

- As a way of loading programs into the Propeller.
- As a file system for Catalina programs to use.

The two uses are completely independent – a program may be loaded from an SD Card but not thereafter access the SD Card at all, or a program may be loaded from EEPROM but then access the SD Card as a file system. Of course, a single program may also do both.

Using the SD Card to load Programs

The *catalyst* subdirectory contains the **Catalyst** SD Loader program that can be used to load both normal SPIN programs and Catalina programs from an SD Card.

Programs that fit into the normal 32k of the Propeller Hub RAM (such as Catalina LMM programs) require no special handling[3].

To compile Catalyst, use the batch provided in the *catalyst* subdirectory (there is a *build_all.bat* file provided, or a *build_morpheus.bat* file for the Morpheus platform). See the **README.TXT** and **CATALYST.TXT** files in this folder for more details. For example, to build Catalyst for the Hybrid you might use a command like:

```
build_all HYBRID
```

or, for the TriBladeProp

```
build_all TRIBLADEPROP CPU_2 PC VT100
```

or, for the P2_EVAL

```
build_all P2_EVAL TTY VT100
```

The compilation process puts all the output files into the *catalyst\bin* subdirectory.

Then download the resulting *catalyst.bin* program to your platform – normally, you would have this program permanently loaded into EEPROM. For example:

```
payload -e bin\catalyst.bin
```

Catalyst is not itself a Catalina program, but it does configure itself using the Pin and Clock definitions in the *Catalina_Common.spin* file – so if Catalina works on your platform, Catalyst should work also (provided you have an SD card, of course!).

On startup, Catalyst prompts you to enter command, which can be the name of a file to load, plus any parameters the program expects at run time. Refer to the **Catalyst Reference Manual** for more details.

To compile a Propeller 1 XMM program to be loaded by Catalyst is relatively straightforward – for example, a command similar to the following can be used:

```
catalina hello_world.c -lc -C SMALL
```

The output of this will be a file called *hello_world.binary* – but note that Catalyst can only use DOS 8.3 type file names, so when this file is copied to the root directory of the SD Card it must be renamed to something like *HELLO.BIN*. Then the SD Card can be inserted onto the Propeller platform and the program can be loaded using command `HELLO`.

Finally, note that if you remove and re-insert the SD Card at any time, you will need to restart the Catalyst Loader program.

[3] Actually, the program must fit into 31kb – Catalyst itself needs 1kb to perform the load from SD Card.

Using the SD Card as a file system

Catalina programs can also use the SD Card as a file system, using all the standard C functions defined in *stdio* (e.g. **fopen**, **fclose**, **fseek**, **fprintf**, **fscanf**, **fputc**, **fgetc** etc).

Catalina supports read/write access to SD cards formatted as FAT16 or FAT32 volumes.[4] Files can be read or written into the root directory or into subdirectories. Up to 20 files can be opened simultaneously (actually 17, since **stdin**, **stdout** and **stderr** each consume a file handle whether explicitly opened or not).

Because the ANSI C library functions required to support file system access are quite large, Catalina supports several different versions[5] of the standard C library:

libc : this version only provides support for **stdin**, **stdout** & **stderr**

libci : this version only provides integer-only support for **stdin**, **stdout** & **stderr**

libcx : this version provides SD Card file system support.

libcix : this version provides integer-only SD Card file system support.

The library to use is specified using either the **–lc**, **–lci**, **–lcx** or **–lcix** command line option when compiling the C program.

To support SD Card access, Catalina needs to load an SD card support driver – but this is done automatically by Catalina if the program is linked with the **–lcx** or **–lcix** version of the C library.

For an example on using the SD Card as a file system, see the *test_stdio_fs.c* demo program. To compile this program, use a command such as:

```
catalina test_stdio_fs.c -lcx -C SMALL
```

Catalina will automatically load the SD card driver in this case because the **–lcx** library was used (in place of the normal **–lc** library).

The output of this will be a file called *test_stdio_fs.binary* – but the Catalyst Loader can only use DOS 8.3 type file names, so this file must be renamed when it is copied to the root directory of the SD Card (e.g. to *TEST_FS.BIN*). Then the SD Card can be inserted onto the Propeller platform and the program can be loaded using the Catalyst Loader. The *test_stdio_fs.c* program prompts for a file name and then displays the chosen file on the screen (so choose a text file!). It then prompts for another file name and writes 1000 lines of text to that file. Then it loops – so you can enter the name of the file just written and it will be displayed.

Note that it is typically only possible to use the SD Card file system from an XMM program on the Propeller 1 – this is because the ANSI C file system support is so complex that programs which use it cannot usually fit within 32kb of Hub RAM. However, such programs COULD be given direct access to the SD Card – this would require a dedicated target to be created specifically for this purpose. However, on the Propeller 2, which has 512kb of Hub RAM, any TINY, COMPACT or NATIVE mode program can access the SD Card.

---

4 Only a sector size of 512 bytes is supported.

5 Actually, there are twice this many – there are special versions of each library required to support the large addressing mode. The small and tiny addressing modes both use the same library since the difference is implemented in the Kernel. However, the choice between small and large library versions is made automatically by the Catalina binder.

Finally, note that if you remove and re-insert the SD Card at any time, you will need to restart any program that accesses the SD card.

Producing other Output Formats

Catalina can be used to generate executable files in formats other than the standard eeprom or binary formats.

Catalina incorporates a utility called **srecord**, which can be invoked as the final step of compilation process. This utility is capable of generating almost any binary output format you might need, including Motorola s-records and Intel Hex records.

Catalina does not invoke the formatting utility unless specifically requested – by default it just leaves its output in the eeprom or binary format.

To request Catalina to convert this binary or eeprom output to another format you use the **–F***format* and **–B***size* command line options.

The **–F***format* option is used to request that the **srecord** format utility be invoked, and also to specify the output format - e.g:

–F Motorola

–F Intel_Hex_16

–F Intel

The resulting formatted output file will be named with the requested *format* as the file suffix.

The **-B** flag is optional – it can be used to control byte swapping in the formatted output if required. Note that this flag only affects the formatted output – it does not affect the normal .binary or .eeprom output. You can byte swap within words (**-B2**) byte swap within longs (**-B4**). This allows formatted output files to be generated for use with program loaders or other utilities that expect big-endian or little-endian executables.

The **-M** flag must still be used to set the maximum size of the output files – for example, to produce an Intel_Hex_16 formatted output file for a program that might be up to 512kb long, and also to byte swap within each word, a command such as the following would be used:

```
catalina hello_world.c -o hello –lc –M 512k -C SMALL –F Intel –B2
```

The resulting formatted output file would be called *hello.Intel* (note that a .binary file would also be produced called *hello.binary*).

Note that if you ask Catalina to produce a binary output, the final formatted output will only be as large as it needs to be to contain the program (and the target). If, however, you ask Catalina to produce an eeprom output, the final formatted output will be as large as it needs to be to initialize the entire eeprom – including space not used by the Catalina program.

For more details on the formatting utility, see the documentation in the folder *C:\ Program Files\Catalina\source\srecord*

Multi-CPU Systems

Introduction

Catalina supports multi-CPU Propeller 1 systems (such as the **TRIBLADEPROP** or **MORPEHEUS**) in two main ways:

By providing a set of "proxy" drivers. These drivers allow programs running on one CPU to have access to a device (e.g. screen, keyboard, mouse or SD card) physically connected to another CPU. The client CPU runs the proxy drivers and the server CPU (i.e. the one with the actual physical devices) runs a special proxy server program which services device requests from the client. The communication between the client and the server uses serial communications between the two CPUs. The proxy drivers are as close as possible in functionality to the ordinary drivers, and can usually be used without any C code changes. The main difference is that their performance will typically be slower because the proxy driver has to communicate serially with the real driver running on the other CPU to perform each driver function.
By providing a set of utilities that allows one CPU to control another CPU – i.e. to reset or load programs into that CPU. Programs can be loaded into RAM or EEPROM (if the target CPU has a boot EEPROM attached).
For more details on Catalina's support for Multi-CPU systems, refer to the Catalina Reference Manual. This section just contains a brief tutorial-style introduction.

Specifying the CPU

The first problem that arises when using Catalina on multi-Prop system is how to specify the CPU on which the Catalina program is intended to run?

In a multi-CPU system, each CPU typically has a different set of capabilities – after all, one of the main reasons for having multiple CPUs is because it is not usually possible to support all the desired input and output devices on a single Propeller chip – you simply run out of pins!

This means that it is typical in multi-CPU systems that some CPUs have VGA or TV outputs, while others have keyboard or mouse inputs. Or one CPU may have an SD card while another has XMM memory.

Catalina identifies each CPU in a multi-CPU system with the symbols **CPU_1**, **CPU_2**, **CPU_3** etc[6].

To avoid confusion, these symbols should ***always*** be specified on the command line for each compilation in a multi-CPU system – even when they are not strictly necessary (e.g. because the program being compiled makes no use of the devices that differ between the CPUs).

In these tutorials we will also sometimes adopt the convention that each resulting executable has an extension of **.1**, **.2** or **.3** to indicate the CPU on which it is intended to run when loaded on an SD card.

For example:

```
catalina hello_world.c -lc -o hello_world_1 -C MORPHEUS -C CPU_1 -C PC
```

[6] Currently, only the symbols for CPUs 1, 2 and 3 are ever used – but these are just symbols, so adding for more is not difficult. The purpose of the symbols is to support the use of conditional compilation in the various Catalina target files and utility programs.

```
catalina hello_world.c -lc -o hello_world_2 -C MORPHEUS -C CPU_2
```

The above commands will generate two binary output files – *hello_world_1.binary* and *hello_world_2.binary*. The *hello_world_1.binary* program will use the PC terminal device driver for its output, while *hello_world_2.binary* will use the built-in VGA display on Morpheus CPU #2 for output.

However, when we copy these programs to an SD card (which requires 8.3 file names), we might elect to rename them as *hello.1* and *hello.2* so as more easily distinguish between them, since they will only run successfully on the CPU for which they were compiled.

Following these simple rules may save much head-scratching, cursing and confusion later – particularly when you start using Catalina's proxy device capabilities, which allow programs running on one CPU to access the devices running on another.

Multi-CPU Utility Programs

The next problem is how to load the Catalina program into one the CPU on which it is meant to run?

In some multi-CPU systems, each CPU has its own serial connection to a PC – and SPIN, PASM and Catalina LMM programs can be downloaded from the PC using the normal Propeller tools. But this method doesn't work for Catalina XMM programs.

On a single CPU system, Catalina XMM programs are usually loaded from an SD card, or from EEPROM – but in multi-CPU systems some of the CPUs may have neither SD Cards nor EEPROMs. However, in these systems there is nearly always a couple of pins on each of the CPUs that are tied together to allow for inter-CPU communications – and Catalina can use these pins to establish serial communications capability between the various CPUs, allowing once CPU to be used to load XMM programs into another CPU via a simple serial protocol. Catalina needs two shared pins between the CPUs to do this, and can also make use of another common feature of multi-CPU systems – a shared pin that allows one CPU to reset another.

Catalina provides four utility programs to allow one CPU to load/manage another CPU:

Catalyst in multi-CPU systems, the Catalyst SD Loader can be on the CPU that has an SD card attached, but as well as loading programs into the local CPU, it can also be used to load programs off the SD card and into another CPU.

Generic SIO Loader this program must be run on a CPU to receive programs loaded from Catalyst (but isn't this a "chicken and egg" problem – i.e. how do we get this program loaded – especially if the CPU doesn't have an EEPROM? Well, see the **CPU_n_Boot** program below).

CPU_n_Boot this program uses the built-in program load capabilities of the Propeller (the same ones that the Parallax Propeller tools use) to load a boot loader program into *another* CPU using serial communications. The program that this program loads is the **Generic SIO Loader** described above – so once you execute *this* program, you can then use **Catalyst** to load *any other* program.

CPU_n_Reset this program simply resets another CPU – this is handy if the CPU has stopped responding for some reason.

Catalyst is build using the scripts in the catalyst subdirectory (as described earlier), and it includes building the utilities. For the multi-CPU platforms, both Catalyst and the utilities can be compiled by using the Catalyst script. For example:

```
cd catalyst
build_all TRIBLADEPROP CPU_2 PC VT100
```

For other platforms, you should compile just the utilities separately. For example:

```
cd utilities
build_all HYBRID
```

The binary programs that are generated are named for the CPU on which they are intended to be executed as well as the CPU they affect. For example, the program to load the boot loader into CPU #1, but which is intended to be run on CPU #2 will be named *CPU_1_Boot_2.binary.* If adopting the conventions described earlier, this program would be named something like *boot2.1* when copied to an SD Card.

More details on these utility programs are given in the **Catalina Reference Manual**.

Proxy Devices

What do you do if your multi-CPU system does not have all the devices you want on the same CPU?

In multi-Prop systems it is rare for each CPU to have a full complement of all the common I/O devices that you might like to use in a C program – like a TV or VGA outputs, a keyboard or mouse inputs, or an SD card interface. Often the very purpose of using multiple CPUs is to support special hardware (such as XMM memory) that requires so many pins that a single Propeller CPU would not be able to support both that hardware and the common I/O devices.

This means that it is common for the keyboard, mouse, TV/VGA and SD card devices to be spread over two or more CPUs. If you want to use them all from one program, you need some way of accessing the devices remotely.

To do this, Catalina provides “proxy” device drivers, and a “proxy” server. Proxy device drivers are included for the following devices:

- screen (TV or VGA)
- mouse
- keyboard
- SD card

These devices are used much like ordinary devices, but are activated when the following symbols are defined on the Catalina command line:

```
PROXY_SCREEN
PROXY_MOUSE
PROXY_KEYBOARD
PROXY_SD
```

Here is a trivial example of compiling a program to use a proxy screen driver:

```
catalina hello_world.c -C CPU_1 -C PROXY_SCREEN
```

This command tells Catalina that this program is intended to run on CPU #1, but that it will use a proxy screen device that is physically connected to another CPU.

When we run this program on CPU #1, it will send any text output requests to a server program on another CPU. On that CPU, we must simultaneously run a server that knows how to process such proxy device requests (in this case, by accessing the local display device).

Catalina provides a special utility program, called the **Generic Proxy Server**, which knows how to act as proxy for *any* or *all* proxied devices. We tell it what devices it should act as proxy for (and the appropriate real drivers to use) when we compile the server.

Note that proxy devices can usually be used on any CPU in a multi-CPU system. For example, in a multi-CPU system, CPU #1 might have an input for a keyboard, while CPU #2 might have a VGA display output. By using proxy devices, a Catalina C program that requires both keyboard and VGA can be run on *either* CPU.

Here are example commands to compile the same program to run on the two CPUs:

```
catalina test_suite.c –o client_2 -C CPU_2 -C PROXY_KEYBOARD
catalina test_suite.c –o client_1 -C CPU_1 -C PROXY_SCREEN
```

Each program will require its own **Generic Proxy Server**, which will have to be compiled slightly differently, and then executed on the other CPU to provide access to the proxy device. The Generic Proxy Server is a SPIN/PASM program, not a C program, so it must be compiled with **spinnaker**, not **catalina**. Here are the commands required to build the proxy servers to match the above programs:

```
spinnaker -p -a Generic_Proxy_Server -o server_1 -L ..\target –b -C
CPU_1 -C NO_SCREEN
```

and

```
spinnaker -p -a Generic_Proxy_Server -o server_2 -L ..\target –b D
CPU_2 -C NO_KEYBOARD -C NO_MOUSE
```

Note that in a multi-CPU system, there can currently only be one *client* program and one proxy *server* – a proxy server cannot simultaneously serve multiple clients (this capability may be added in a future release).

Also note that the capabilities of the proxy devices does not necessarily include *all* the capabilities of same device when used locally – in particular, the screen devices generally do not currently support cursor, scroll or color functions when used as proxy devices – these capabilities will be added in a future release. At the moment, if you need to use these functions, run your program on the CPU that has direct local access to the screen device, and proxy the other devices you need (such as keyboard, mouse or SD card).

Actual examples of using proxy devices are given in the tutorials for each of the supported multi-CPU systems, below.

TriBladeProp

TriBladeProp Overview

The standard Catalina Support Package supports the TriBladeProp multi-CPU platform. However, not all Catalina targets and options are applicable to all the CPUs. Details of the TriBladeProp CPU configurations are given in the file *README.TriBladeProp* in the Catalina *target* directory. Here is a brief summary:

CPU #1 Supported by all LMM, EMM and XMM targets with all options. Note that for XMM programs to build correctly, both the **TRIBLADEPROP** option and the **CPU_1** option ***must*** be specified.

The SD Card on CPU #2 can be used indirectly by specifying the **PROXY_SD** option, and running a suitably configured proxy server on CPU #2. For more details on using proxy devices, see the Catalina Reference Manual.

CPU #2 Supported by the all LMM, EMM and XMM targets. Note that for XMM programs to build correctly, both the **TRIBLADEPROP** option and the **CPU_2** option must be specified. The following options are supported directly:

ALTERNATE

EEPROM

NO_HMI

PC

PROPTERMINAL

CLOCK

NO_FP (or **NO_FLOAT**)

Note that no local screen, keyboard or mouse options are supported. However, the HMI devices on CPU #1 can be used indirectly by specifying the **PROXY_SCREEN**, **PROXY_KEYBOARD** or **PROXY_MOUSE** options, and running a suitable configured proxy server on CPU #1. For more details on using proxy devices, see the **Catalina Reference Manual**, or part 2 of the tutorial.

CPU #3 Supported by all the LMM and EMM targets. Even though it is not strictly required, both the **TRIBLADEPROP** option and the **CPU_3** option should be specified. Only the following options are supported:

ALTERNATE

NO_HMI

PC

PROPTERMINAL

CLOCK

NO_FP (or **NO_FLOAT**)

Note that no local screen, keyboard or mouse options are supported. However, the HMI devices on CPU #1 can be used indirectly by specifying the **PROXY_SCREEN**, **PROXY_KEYBOARD** or **PROXY_MOUSE** options, and running a suitable configured proxy server on CPU #1. For more details on using proxy devices, see the **Catalina Reference Manual**, or part 2 of the tutorial.

The SD Card on CPU #2 can be used indirectly by specifying the **PROXY_SD** option, and running a suitably configured proxy server on

CPU #2. For more details on using proxy devices, see the Catalina Reference Manual.

For more details on the meaning of the options, see the Catalina Reference Manual.

If you want to use the SD Card as a file system from a C program (which is possible directly from CPU #2, or using a proxy driver from CPU #1) remember to specify the **-lcx** option instead of the usual **-lc** option when compiling. The **libcx** library includes full file system support, whereas the standard **libc** library does not - if you forget to do this the program will compile and run, but will be unable to access any files on the SD Card.

TriBladeProp Tutorial Hardware Setup

This tutorial assumes the TriBladeProp is configured as follows. If your TriBladeProp is configured differently, some parts of the tutorial may have to be skipped.

CPU #1 configured for TV output, with the mouse and keyboard on pins P8 - P12. TV, keyboard and mouse connected. Jumpers installed on LK11 and LK12 as described in the document *README.TriBladeProp* in the *utilities* directory. Configured for XMM with 512K SRAM installed. EEPROM installed. Jumpers installed on LK1 and LK2.

CPU #2 configured for XMM with 1Mb SRAM installed. SD Card installed. The 4 pin Prop Plug jumper cable installed from J92 to J21 (i.e. from the USB Prop Plug to CPU #2).

CPU #3 Links LK3, LK4, LK5 installed (A1 to B1 in each case). Pin P24 (available on J33) connected to the spare LED on Blade #3.[7]

With this configuration, we will mostly use a PC terminal package (such as the Parallax Serial Terminal) to communicate with CPU #2.

We will use the SD Card on CPU #2 to load programs to that CPU, and the serial communications loader to load programs from CPU #2 to CPU #1 and CPU #3.

We will see some program output on the TV, and use the keyboard and mouse connected to CPU #1. We will also use targets on CPU #2 that send outputs to a terminal emulator running on the PC.

We will boot CPU #3 from CPU #2, and load and execute a program on CPU #3 that flashes a single LED.

We will show programs running on all CPU simultaneously.

This section assumes you are running Catalina under Windows - if you are running under Linux, some of the pathnames may differ.

TriBladeProp Tutorial Software Setup

1. Make sure no Catalina environment variables are set (use **catalina_env** to check) and unset any that are not set to default.
2. Prepare a LED Test Program for CPU #3. The following program (*test_3.c*) is a simple variant of the normal *test_leds.c* program designed to flash the LED of the TriBladeProp CPU #3 (which must be connected to pin 24, available on

[7] Catalina supports either CPU #1 or CPU #2 being used as a proxy server. CPU #3 is not currently supported as a proxy server since it does not have a direct connection to any of the devices supported by a proxy server.

J23). This program is supplied in the *demos* folder, and will be used by default:

```
#include <catalina_cog.h>
void main() {

   unsigned count;
   unsigned mask   = 0x01000000; // bit 24
   unsigned on_off = 0x01000000;

   _dira(mask, mask);
   _outa(mask, on_off);
   count = cnt();

   while (1) {
      _outa(mask, on_off);
      count += 100000000;
      _waitcnt(count);
      on_off ^= mask;
   }
}
```

3. Enter the *catalyst* directory and execute the following command:

   ```
   build_all TRIBLADEPROP CPU_2 PC
   ```

   If you get an error, make sure you have correctly executed the **use_catalina** script in the main Catalina directory.

4. Enter the *utilities* directory and execute the following command:

   ```
   build_all TRIBLADEPROP
   ```

5. Enter the *demos* directory and build the demo programs by executing the following command:

   ```
   build_tribladeprop_demos
   ```

   Note that just using the normal *build_all.bat* script will not build programs correctly for the various CPUs of the TriBladeProp – it will only build programs for a single CPU.

6. Prepare a Micro SD Card and copy the following programs into the root directory. Since Catalina can only use short file names, the following name mapping is recommended:

   From the *catalyst* directory, copy all files in the bin folder to the SD card - there is no script to do this – just copy all files to the SD card root directory using a command such as (assuming x: is the drive in which the SD card appears):

   ```
   cd catalyst
   copy bin\*.* x:
   ```

   From the *utilities* directory, enter the following command (assuming x: is the drive in which the SD card appears):

   ```
   cd utilities
   copy_triblade_utilities x:
   ```

   This will copy (and rename) the following files:

   ```
   CPU_1_Boot_2.binary      ->   BOOT1.2
   CPU_3_Boot_2.binary      ->   BOOT3.2
   CPU_1_Reset_2.binary     ->   RESET1.2
   CPU_3_Reset_2.binary     ->   RESET3.2
   ```

From the *demos* directory, enter the following command (assuming x: is the drive in which the SD card appears):

```
cd demos
copy_triblade_demos x:
```

This will copy (and rename) the following files:

```
othello_1.binary          ->   OTHELLO.1
startrek_1.binary         ->   STARTREK.1
othello_pc_2.binary       ->   OTHELLO.2
test_suite_pc_2.binary    ->   TEST.2
test_fs_2.binary          ->   TEST_FS.2
startrek_2.binary         ->   STARTREK.2
test_3.binary             ->   TEST.3
```

In case the name mapping convention is not obvious, we are using the extension of the file to indicate the CPU on which the program is intended to be executed - so *RESET3.2* means the program will reset CPU #3, but it must be executed on CPU #2.

The Micro SD Card should then be inserted into the TriBladeProp.

7. Connect the TriBladeProp to the PC via the onboard PropPlug USB port.
8. Using the Payload loader, download the compiled catalyst binary (*catalyst.bin*) from the *catalyst\bin* directory and program it into the EEPROM of CPU #2. Assuming the TriBladeProp is already connected to the PC, you can do this using a command like:

```
cd catalyst
payload -e bin\catalyst.bin
```

Note that if your TriBladeProp has no EEPROM on CPU #2 you can still do the tutorial - but you will need to download the *catalyst.bin* program again to CPU #2 after each step.

9. Make sure you have a TV, keyboard and mouse connected to CPU #1, and a USB cable connecting your PC to CPU #2.

Finally, we're ready to go!

TriBladeProp Tutorial Part 1 – Loading and running programs

1. On the PC, start the Parallax Serial Terminal. You may need to configure the appropriate serial port to use. The baud rate should be 115200. Note also that whenever the window loses focus, you may need to explicitly re-enable the terminal emulator again.
2. Power on the TriBladeProp. If it is already on, then using the Parallax Serial Terminal you can toggle the DTR signal as a means of resetting the Propeller, so do that instead. If everything is working correctly, you should see a display like:

```
Catalyst v3.6
>
```

3. This is the main Catalyst prompt. At this prompt, you can do one of two things:
   (a) Enter a command – try entering **dir** and pressing return. The contents of the root directory SD Card will be displayed, showing the programs we have copied to the SD Card – e.g:

```
Directory of Volume TRIBLADE
```

```
------------ ------------ ------------
CATALYST.TXT CATALYST.BIN MV.BIN
CP.BIN       LS.BIN       RM.BIN
RMDIR.BIN    MKDIR.BIN    HELP.XVI
VI.BIN       PCOM.BIN     PINT.BIN
HELLO.PAS    ROMAN.PAS    STARTREK.PAS
BASICS.PAS   MATCH.PAS    STARTREK.P5
BASICS.P5    JZIP.BIN     ZORK1.DAT
ZORK2.DAT    ZORK3.DAT    DBASIC.BIN
STARTREK.BAS UT-TREK.BAS  TREK15.BAS
ELIZA.BAS    SST.BIN      SST.DOC
LUA.BIN      LUAC.BIN     HELLO.LUA
FACT.LUA     SORT.LUA     FIB.LUA
OTHELLO.1    STARTREK.1   OTHELLO.2
TEST.2       TEST_FS.2    STARTREK.2
LISP.2       TEST.3       BOOT1.2
BOOT3.2      RESET1.2     RESET3.2
```

(b) Select a CPU to load a program into. Press *SHIFT+n* for CPU #n - i.e:

SHIFT+1 (i.e. "!") for CPU #1

SHIFT+2 (i.e. "@") for CPU #2

SHIFT+3 (i.e. "#") for CPU #3.

SHIFT+0 (i.e. ")") to return to the default

When a CPU is selected the prompt will change to indicate the currently selected CPU.

4. Now let's load our first program. We will start by loading a program into CPU #2. If CPU #2 is not selected (as shown by the prompt), select it by entering the single character "**@**" at the Catalyst prompt, and verify that the prompt changes to indicate CPU #2. Then type in the file name *OTHELLO.2*. Press Enter and you should see the opening few lines of the program displayed in the terminal emulator:

```
REVERSI
You can go first on the first game, then we will take turns.
   You will be white - (O)
   I will be black   - (@).
Select a square for your move by typing a digit for the row
and a letter for the column with no spaces between.

Good luck!  Press Enter to start.
```

OTHELLO is compiled to use the PC HMI plugin, so the output of the program is sent to the terminal emulator, and your keystrokes in the terminal emulator are sent back to the program. You can therefore play Othello using the terminal emulator.

When you are finished playing – or you just want to proceed with the demo - you can toggle DTR to reset CPU #2 and return to the Catalyst prompt.

5. Now let's try loading a program into another CPU. We'll use CPU #1, and assume that CPU has no EEPROM - so first we have to load the companion load program. There is a program we can load into CPU #2 that knows how to load the companion program into another CPU - for CPU #1, this is *BOOT1.2* To execute this, make sure CPU #2 is selected (not CPU #1) then type in the

file name *BOOT1.2* and press enter. You will see output similar to that shown below:

```
Catalyst v3.6
> boot1.2
€p€€€€p€ppp€€pppp€p€pppppp€€€pppp€€p€p€€€pppp€€€€p€€p€€p€pppp€€p€€€p€€€pp
€pp€€p€pp€pp€€p€€ppp€p€p€p€ppp€pp€p€pp€p€€ppppppppp€€pp€pppp€ppp€p€€€€€€
pp€€€€€€ppppp€p€€p€p€p€€p€€€€€p€€€€pppp€pppppp€pp€€€€pp€€€p€€pp€€€€€pp€p
€€€€€
Catalyst v3.6
>
```

If for some reason you don't see this, then go to step 7 to see what you can do about it. Then return here and try again.

The reason for the gobbledygook shown above between the Catalyst prompts is that CPU #2 is using the serial link to download the companion load program to CPU #1 - and this is the same serial link that the terminal emulator uses. Once the load is completed and the Catalyst prompt is shown, we can download a Catalina program to CPU #1.

First, we need to select CPU #1 in the Catalyst - to do this, type the single character "**!**" - the prompt should change to indicate CPU #1. Then type in the file name *STARTREK.1* and press ENTER. You should see lines of numbers displayed on the TV (each line indicates one record has been loaded to CPU #1) and then the program should start up, displaying the usual Super Star Trek opening lines.

The full sequence of what just happened is that the *STARTREK.1* program has been read from the SD Card by the Catalyst program on CPU #2, downloaded across the serial connection from CPU #2 to CPU #1, and the companion loader in CPU #1 has read the records and loaded them into XMM RAM as they arrived, then restarted itself. The target that the program was compiled with knows how to load the program back from XMM RAM and start it executing.

The terminal emulator should return to the normal prompt when the load is completed.

6. Next, let's try loading a program on CPU #3. Note while we do this that CPU #1 is still happily busy playing Super Star Trek. First, ensure CPU #2 is selected by entering the single character "**@**" at the Catalyst prompt, and verifying that CPU #2 is indicated - recall that to load the companion loader, we execute a program on CPU #2, not on CPU #3 (which doesn't yet know how to load such a program). The program we will execute on CPU #2 is *BOOT3.2* - type this file name in and press ENTER.

   You should see a screen of gobbledygook similar to that shown above when we did this for CPU #1. When complete, the Catalyst prompt will return. If for some reason you don't see this, then go to step 7 before returning here and trying again.

   Assuming the companion loader was loaded correctly, next we select that we want to download a program to CPU #3 by entering the single character "**#**" at the Catalyst prompt (and verifying the now indicates CPU #3).

   Next, execute download the program to CPU #3. The program we will load is the LED test program *TEST.3* - type in this file name and press ENTER. You

should see the LED on CPU #3 flash every couple of seconds. If you do not, check you correctly have the LED wired to P24 of the CPU #3 Propeller chip.

7. There are many things that can go wrong during the load process – the wrong CPU can be specified, the wrong file can be loaded, the file may have been compiled with the wrong options etc. Also, it is possible that the CPU is already executing some program that interferes somehow with the load process - for instance, anything that uses the serial I/O pins.

   This may even be caused by a program executing on one of the other CPUs.

   In such cases, it is useful to be able to reset the CPU and then try again (the only other alternative being to cycle the power to the whole TriBladeProp).

   Two programs are provided for this purpose - *RESET1.2* and *RESET3.2* will reset the CPU #1 and CPU #3 propellers (respectively).

   Recall that (by convention) the **.2** suffix indicates that these programs should be executed on CPU #2. Let's try it - we will reset CPU #3.

   First, ensure CPU #2 is selected by entering the single character "**@**" at the Catalyst prompt, and verifying that CPU #2 is indicated. Then type in the filename *RESET3.2* and press ENTER. If the LED test program was executing, it should now stop.

   Then you can try loading the companion loader again (e.g. by typing in *BOOT3.2* and pressing ENTER.)

   Finally, it is worth noting that the whole process is much easier if the SD Load program is permanently loaded into the EEPROM of CPU #2, and the companion serial load program is permanently loaded into the EEPROMS of CPU #1 and #3.

That's the end of part 1 of this tutorial. Try compiling and loading some of the other demo programs, recompiling them for different targets on different CPUs. When you are ready to learn about using proxy devices, come back to part 2 of this tutorial.

TriBladeProp Tutorial Part 2 – Using proxy devices

Because all CPUs on the TriBladeProp shares the same I/O pins – and these are the pins normally used to communicate with the PC, loading programs that use proxy drivers is a little complex on the TriBladeProp.

Before proceeding with this tutorial, please review again the hardware setup of the TriBladeProp – taking particular note of the following:

- The 4 pin Prop Plug jumper cable must be installed from J92 to J21 (i.e. from the USB Prop Plug to CPU #2).
- To enable CPU #2 to communicate with CPU #1, the two optional links LK1 and LK2 are installed on that Blade #1. In this tutorial we will need to remove and re-install these jumpers as part of the load process.

When you are sure you are familiar with the TriBladeProp configuration (in particular you have identified LK1 and LK2 correctly), then proceed with the tutorial:

1. To build the programs we will use in this tutorial, enter the *demos* directory, and execute the following command:

```
build_tribladeprop_proxy_demos
```

This will build two different pairs of proxy client and proxy server programs that demonstrate the use of various proxy devices. Examine the file if you like as examples of how each client and server is built – but this tutorial is mainly about how to execute programs that demonstrate the use of proxy devices.

2. Remove the Micro SD card from the TriBladeProp and insert it into your PC SD card reader/writer. Execute the following command in the *demos* directory (assuming x: is the driver in which the SD card appears):

```
copy_tribladeprop_proxy_demos x:
```

Then insert the SD card back into the TriBladeProp.

3. We will assume that **Catalyst** has been loaded into the EEPROM of CPU #2. If this is not the case, you will need to load it manually each time using Payload or the Parallax Propeller tool.

   We will execute in turn each of the proxy client/server test program pairs.

4. The first test program runs a simple Catalina test suite on CPU #2, using the TV display and keyboard from CPU #1. Here are the steps required to run it:

   a. Using the PC terminal emulator connected to CPU #2, reset the CPU by toggling the DTR signal. you should see the usual Catalyst prompt:

   ```
   Catalyst v3.6
   >
   ```

   b. Now let's prepare to load our test program into CPU #1. First we have to load the companion load program. To do this, make sure CPU #2 is selected (not CPU #1) by entering a single character "**@**" at the prompt, and verifying that CPU #2 is indicated, Then type in the file name *BOOT1.2* and press enter. When that completes, the Catalyst prompt should return:

   ```
   Catalyst v3.6
   >
   CPU 2>
   ```

   c. We will first load the server program into CPU #1. Ensure CPU #1 is selected by entering a single character "**!**" at the prompt, and verifying that CPU #1 is indicated. Then type in the command **T1_S_1** and press ENTER (the name stands for *Test 1 Server for CPU #1*).

   d. When that program has finished loading, you should see a blank screen on the TV display. Now that the server is running, it will be attempting to use the same pins for inter-CPU I/O that we need to use to load the client program – so before we can go any further we need to temporarily isolate CPU #1 by removing LK1 and LK2. Do this now.

   e. When we have done this, the Catalyst program running on CPU #2 can be used again (you may need to press enter several times in the terminal emulator window to return to the program load prompt).

   f. Ensure CPU #2 is selected by entering a single character "**@**" at the prompt, and verifying that CPU #2 is indicated. Then type in the command **T1_C_2** and press ENTER (the name stands for *Test 1 Client for CPU #2*).

g. Now both the client and server are running – but before they can communicate, we need to re-install the links on LK1 and LK2. Do this now.

h. When the programs can communicates, you should see the program display some text on the TV display and then pause, waiting for some input. Now press a key on the keyboard connected to CPU #1 – the program running on CPU #2 should receive the key stroke and continue.

   Note that while the proxy client and server are communicating, you may see various rubbish characters appear on the PC terminal emulators. This is normal, and is because the inter-CPU communications uses the same Propeller pins as the normal PC serial communications. Temporarily disable the PC terminal emulators if you find it distracting.

Now CPU #2 can be used to run all the usual Catalina programs that require user interaction – using the keyboard, mouse and screen on CPU #1!

5. The second test program uses the SD card. It is run using similar steps as in test 1, above – but this time we will first load the *client* on to CPU #1, and then the *server* onto CPU #2, since we want to be able to access the SD card on CPU #2 from CPU #1. One additional set-up step is also required before we begin – a simple text file to be read should be copied to the root directory of the SD Card prior to running this test. Any text file will do, but we will assume it is called *README.TXT*.

   The steps to load the program are as follows:

   a. Using the PC terminal emulator connected to CPU #2, reset the CPU by toggling the DTR signal. If this does not reset the CPU it will probably be because the previous demo program is still running and using the PC to CPU communications pins. In this case, since the demo program will just run forever, the only recourse is to power-cycle the whole TriBladeProp. When you have successfully reset the CPU, you should see the usual Generic SD Card loader display:

```
Catalyst v3.6
>
```

   b. Now let's prepare to load the second test program into CPU #1. First we have to load the companion load program. To do this, make sure CPU #2 is selected (not CPU #1) by entering a single character "**@**" at the prompt, and verifying that CPU #2 is indicated, Then type in the file name *BOOT1.2* and press enter. When that completes, then the Generic SD Card loader prompt should return:

```
Catalyst v3.6
>
```

   c. We will first load the client program into CPU #1. Ensure CPU #1 is selected by entering a single character "**!**" at the prompt, and verifying that CPU #1 is indicated. Then type in the command **T2_C_1** and press ENTER (the name stands for *Test 1 Client for CPU #1*).

   d. When that program has finished loading, you may see some lines of text appear on the TV display, including a request for a file name to

read. Do not enter a file name yet – we need to load the server program on CPU #2 first.

e. Now that the client is running, it will be attempting to use the same pins for inter-CPU I/O that we need to use to load the server program – so before we can go any further we need to temporarily isolate CPU #1 by removing LK1 and LK2. Do this now.

f. When we have done this, the Catalyst program running on CPU #2 can be used again (you may need to press enter several times in the terminal emulator window to return to the program load prompt).

g. Ensure CPU #2 is selected by entering a single character "**@**" at the prompt, and verifying that CPU #2 is indicated. Then type in the command *T2_S_2* and press ENTER (the name stands for *Test 2 Server for CPU #2*).

h. Now both the client and server are running – but before they can communicate, we need to re-install the links on LK1 and LK2. Do this now.

i. Now that the programs can communicate, you can enter a file name on the keyboard connected to CPU #1 – the program running on that CPU #1 should attempt read the file from the SD Card on CPU #2. Type in the name of the file to read – e.g. *README.TXT*.

   Note that while the proxy client and server are communicating, you may see various rubbish characters appear on the PC terminal emulators. This is normal, and is because the inter-CPU communications uses the same Propeller pins as the normal PC serial communications. Temporarily disable the PC terminal emulators if you find it distracting.

   When the read is complete, the program will ask for a filename to write. Enter something like *WRITEME.TXT*. Catalina will write about a thousand lines of text to this file (Note that this can take a minute or so – it depends partly on the write speed of the SD card), and then ask you to enter a filename to read again. This time, enter *WRITEME.TXT* and the program will display the file it just created.

Now CPU #1 can run all the usual Catalina programs that require file system support - using the SD card installed on CPU #2!

That's the end of part 2 of this tutorial. Try compiling and loading some of the other demo programs using proxy devices. However, please be aware that using proxy devices changes the number of cogs required to run the program (it may increase it or decrease it) and therefore some programs will run out of cogs unless. To avoid using cogs unnecessarily, you should always use the **NO_SCREEN**, **NO_KEYBOARD** or **NO_MOUSE** and **NO_FLOAT** options to prevent cogs being wasted on devices or other plugins you do not need.

Morpheus

Morpheus Overview

The standard Catalina Support Package supports the Morpheus multi-CPU platform. However, not all Catalina targets and options are applicable to all the CPUs. Details of the Morpheus CPU configurations are given in the file *README.Morpheus* in the Catalina *target* directory. Here is a brief summary:

CPU #1 Supported by all LMM, EMM and XMM targets. Note that for XMM programs to build correctly, both the **MORPHEUS** option and the **CPU_1** option ***must*** be specified. The following options are supported directly:

ALTERNATE

EEPROM

NO_HMI

PC

PROPTERMINAL

CLOCK

NO_FP (or **NO_FLOAT**)

Note that no local screen options are supported. However, the VGA display on CPU #2 can be used indirectly by specifying the **PROXY_SCREEN** option, and running a suitably configured proxy server on CPU #2. For more details on using proxy devices, see the Catalina Reference Manual.

CPU #2 Supported by the all LMM, EMM and XMM targets. Note that for XMM programs to build correctly, both the **TRIBLADEPROP** option and the **CPU_2** option must be specified. Only the following options are supported directly:

ALTERNATE

EEPROM

NO_HMI

PC

PROPTERMINAL

CLOCK

NO_FP (or **NO_FLOAT**)

HIRES_VGA

Note that no local keyboard or mouse options are supported. However, the HMI devices on CPU #1 can be used indirectly by specifying the **PROXY_SCREEN**, **PROXY_KEYBOARD** or **PROXY_MOUSE** options, and running a suitable configured proxy server on CPU #1. The SD card on CPU #1 can be used by specifying the **PROXY_SD** option. For more details on using proxy devices, see the **Catalina Reference Manual**, or part 2 of the tutorial.

For more details on the meaning of the options, see the Catalina Reference Manual.

If you want to use the SD Card as a file system from a C program (which is possible directly from CPU #1, or using a proxy driver from CPU #2) remember to specify the **-lcx** option instead of the usual **-lc** option when compiling. The **libcx** library includes full file system support, whereas the standard **libc** library does not - if you forget to do this the program will compile and run, but will be unable to access any files on the SD Card.

Note that the Catalina Real-Time Clock package does not use the Morpheus hardware RTC. A separate driver will be created for that in a subsequent release – this will be compatible with the existing software-based Real-time clock plugin, and may also be supported by a proxy driver to allow access from all CPUs.

Morpheus Tutorial Hardware Setup

This tutorial assumes Morpheus is configured as follows. If your system is configured differently, some parts of the tutorial may have to be skipped.

CPU #1 Keyboard and mouse connected. USB PropPlug installed. SD card installed in the MEM+ SD card interface slot.

CPU #2 VGA display connected. At least 1Mb XMM SRAM installed. Either a USB PropPlug installed, or an RS-232 serial cable installed on the MEM+ expansion board.

With this configuration, we will mostly use a PC terminal package (such as the Parallax Serial Terminal) to communicate with CPU #1. Occasionally we will use another PC terminal package to communicate with CPU #2.

We will use the SD Card on CPU #1 to load programs to that CPU, and the serial communications loader to load programs from CPU #1 to CPU #2.

We will see some program output on the VGA display connected to CPU #2, and others that use the keyboard and mouse connected to CPU #1.

We will boot CPU #2 from CPU #1.

We will show programs running on both CPUs simultaneously, sending output to two terminal emulators running on the PC.

This section assumes you are running Catalina under Windows - if you are running under Linux, some of the pathnames may differ.

Morpheus Tutorial Software Setup

1. Make sure no Catalina environment variables are set (use **catalina_env** to check) and unset any that are not set to default.
2. Enter the *catalyst* directory and execute the following command:

   ```
   build_morpheus
   ```

   If you get an error, make sure you have correctly executed the **use_catalina** script in the main Catalina directory.
3. Enter the *utilities* directory and execute the following command:

   ```
   build_all MORPHEUS
   ```
4. Enter the *demos* directory and build the demo programs by executing the following command:

```
build_morpheus_demos
```

Note that just using the normal *build_all,bat* script will not build programs correctly for the various CPUs of the Morpheus – it will only build programs for a single CPU.

5. Prepare a Micro SD Card and copy the following programs into the root directory. Since Catalina can only use short file names, the following name mapping is recommended:

   From the *catalyst* directory, copy all files in the bin folder to the SD card - there is no script to do this – just copy all files to the SD card root directory using a command such as (assuming x: is the drive in which the SD card appears):

   ```
   cd catalyst
   copy bin\*.* x:
   ```

   From the *utilities* directory, enter the following command (assuming x: is the drive in which the SD card appears):

   ```
   cd utilities
   copy_morpheus_utilities x:
   ```

   This will copy (and rename) the following files:

   ```
   CPU_2_Boot_1.binary      ->   BOOT2.1
   CPU_2_Reset_1.binary     ->   RESET2.1
   ```

   From the *demos* directory, enter the following command (assuming x: is the drive in which the SD card appears):

   ```
   cd demos
   copy_morpheus_demos x:
   ```

   This will copy (and rename) the following files:

   ```
   othello_pc_1.binary      ->   OTHELLO.1
   test_fs_pc_1.binary      ->   TEST_FS.1
   startrek_pc_2.binary     ->   STARTREK.2
   test_suite_pc_2.binary   ->   TEST.2
   ```

   Again, in case the name mapping convention is not obvious, we are using the extension of the file to indicate the CPU on which the program is intended to be executed - so *RESET2.1* means the program will reset CPU #2, but it must be executed on CPU #1.

   The Micro SD Card should then be inserted into Morpheus.

6. Connect Morpheus CPU #2 to the PC via a PropPlug USB port, and Morpheus CPU #1 to the PC via a PropPlug USB port (or the RS-232 port on the MEM+ board).

7. Using the Payload loader, download the compiled catalyst binary (*catalyst.bin*) from the *catalyst\bin* directory and program it into the EEPROM of CPU #1. Assuming Morpheus is already connected to the PC, you can do this using a command like:

   ```
   cd catalyst
   payload -e bin\catalyst.bin
   ```

   Note that if your Morpheus has no EEPROM on CPU #1 you can still do the tutorial - but you will need to download the *catalyst.bin* program again to CPU #1 after each step.

8. Make sure you have a VGA monitor, keyboard and mouse connected to the Morpheus.

Finally, we're ready to go!

Morpheus Tutorial Part 1 – Loading and running programs

1. On the PC, start an instance of the Parallax Serial Terminal on CPU #1. You may need to configure the appropriate serial port to use. The baud rate should be 115200. Note also that whenever the window loses focus, you may need to explicitly re-enable the terminal emulator again.
2. Power on the Morpheus. If it is already on, then using the Parallax Serial Terminal you can toggle the DTR signal as a means of resetting the Propeller, so do that instead. If everything is working correctly, you should see a display like:

```
Catalyst v3.6
>
```

   (a) Enter a command – try entering **dir** and pressing return. The contents of the root directory SD Card will be displayed, showing the programs we have copied to the SD Card – e.g:

```
Directory of Volume MORPHEUS
------------ ------------ ------------
CATALYST.TXT CATALYST.BIN MV.BIN
CP.BIN       LS.BIN       RM.BIN
RMDIR.BIN    MKDIR.BIN    HELP.XVI
VI.BIN       PCOM.BIN     PINT.BIN
HELLO.PAS    ROMAN.PAS    STARTREK.PAS
BASICS.PAS   MATCH.PAS    STARTREK.P5
BASICS.P5    JZIP.BIN     ZORK1.DAT
ZORK2.DAT    ZORK3.DAT    DBASIC.BIN
STARTREK.BAS UT-TREK.BAS  TREK15.BAS
ELIZA.BAS    SST.BIN      SST.DOC
LUA.BIN      LUAC.BIN     HELLO.LUA
FACT.LUA     SORT.LUA     FIB.LUA
OTHELLO.1    STARTREK.1   OTHELLO.2
TEST.2       TEST_FS.1    STARTREK.2
LISP.2       TEST.3       BOOT1.2
BOOT3.2      RESET1.2     RESET3.2
```

   (b) Select a CPU to load a program into. Press *SHIFT+n* for CPU #n - i.e:

   SHIFT+1 (i.e. "!") for CPU #1

   SHIFT+2 (i.e. "@") for CPU #2

   SHIFT+0 (i.e. ")") to return to the default

   When a CPU is selected the prompt will change to indicate the currently selected CPU.

3. Now let's load our first program. We will start by loading a program into CPU #1. If CPU #1 is not selected (as shown by the prompt), select it by entering the single character "**!**" at the Catalyst prompt, and verify that the prompt changes to indicate CPU #1. Then type in the file name *OTHELLO.1*. Press Enter and you should see the opening few lines of the program displayed in the terminal emulator:

```
REVERSI
You can go first on the first game, then we will take turns.
```

```
   You will be white - (O)
   I will be black   - (@).
Select a square for your move by typing a digit for the row
and a letter for the column with no spaces between.

Good luck!  Press Enter to start.
```

OTHELLO is compiled to use the PC HMI plugin, so the output of the program is sent to the terminal emulator, and your keystrokes in the terminal emulator are sent back to the program. You can therefore play Othello using the terminal emulator.

When you are finished playing – or you just want to proceed with the demo - you can toggle DTR to reset CPU #1 and return to the Catalyst prompt.

4. Now let's try loading a program into CPU #2. On the PC, start an instance of the Parallax Serial Terminal on CPU #2 (in addition to the one on CPU #1). You may need to configure the appropriate serial port to use. The baud rate should be 115200. Note also that whenever the window loses focus, you may need to explicitly re-enable the terminal emulator again.

   We'll assume that CPU #2 has no EEPROM - so first we have to load the companion load program each time. There is a program we can load into CPU #1 that knows how to load the companion program into another CPU - for CPU #2, this is *BOOT2.1* To execute this, make sure CPU #1 is selected (not CPU #2) then type in the file name *BOOT2.1* and press enter. You will see output on CPU #1 similar to that shown below:

```
Catalyst v3.6
> boot2.1

€þ@#X     ←- may be some gobbledygook here

Catalyst v3.6
>
```

   If for some reason you don't see this, then go to step 6 (below) to see what you can do about it. Then return here and try again.

   On the terminal emulator connected to CPU #2 you may see output similar to this:

```
ÿ€þ€€€€þ€þþþ€€þþþþ€þ€þþþþþ€€€þþþ€€þ€þ€€€þþþþ€€€€þ€€þ€€þ€þþþþ€€þ€€€þ
þþ€€þþ€€€þ€þþ€þþ€€þ€€þþþ€þ€þ€þ€þþþ€þþ€þ€þþ€þ€€þþþþþþþ€€þþ€þþþþ€þþþ€
þ€€þþþ€€€€€€€þþþþþ€þ€€þ€þ€þ€€þ€€€€€€þ€€€€þþþ€þþþþþþ€þþ€€€€þþ€€€€þ€€€þ€
```

   The reason for the gobbledygook is that CPU #1 is using the serial link to download the companion load program to CPU #2 - and this is the same serial link that the terminal emulator uses.

   Now that the serial load program is running on CPU #2, we can download a Catalina program to that CPU.

   First, we need to select CPU #2 in Catalyst - to do this, go to the terminal emulator connected to CPU #1 and type the single character "**@**" - the prompt should change to indicate CPU #2. Then type in the file name *STARTREK.2* and press ENTER. You should see lines of numbers displayed on the screen connected to CPU #2 (each line indicates one record has been loaded to CPU #2) and then the program should start up, displaying the usual Super Star Trek opening lines in the terminal emulator screen connected to CPU #2. You

can now play Super Star Trek in the terminal emulator window connected to CPU#2.

The full sequence of what just happened is that the *STARTREK.2* program has been read from the SD Card by the Catalyst program on CPU #1, downloaded across the serial connection from CPU #1 to the companion loader program in CPU #2, and the companion loader has read each record and loaded them into XMM RAM as they arrived, then restarted itself. The target that the program was compiled with, which knows how to load the program back from XMM RAM and start it executing, sending its output to the PC terminal emulator.

The reason you don't see gobbledygook on the terminal when *this* program is downloading is that Catalyst reverses the normal TX/RX pins (one or the other of the programs has to do this, and by having Catalyst do it we prevent cluttering up the terminal - the reason we can't do this when loading the companion serial loader is that the load mechanism used there hard codes the pins it uses - that loader is essentially using the built-in Propeller boot process).

The terminal emulator should return to the normal prompt when the load is completed.

5. Next, let's try loading a program on CPU #1 again. Note while we do this that CPU #2 is still happily busy playing Super Star Trek. First, ensure CPU #1 is selected by entering the single character "**!**" at the Catalyst prompt, and verifying that CPU #1 is indicated. The program we will execute on CPU #1 is *OTHELLO.1* again - type this file name in and press ENTER.

   The Othello opening lines should be displayed in the terminal emulator connected to CPU #1. Now you can play Othello and star trek at the same time!

6. There are many things that can go wrong during the load process – the wrong CPU can be specified, the wrong file can be loaded, the file may have been compiled with the wrong options etc. Also, it is possible that the CPU is already executing some program that interferes somehow with the load process - for instance, anything that uses the serial I/O pins.

   This may even be caused by a program executing on one of the other CPUs.

   In such cases, it is useful to be able to reset the CPU and then try again (the only other alternative being to cycle the power to the whole Morpheus platform).

   A program is provided for this purpose – *RESET2.1* will reset the CPU #2 when executed on CPU #1.

   First, reset CPU #1 by toggling DTR, and when the Catalyst prompt is displayed, ensure CPU #1 is selected by entering the single character "**!**" at the prompt, and verifying that CPU #1 is indicated. Then type in the file name *RESET2.1* and press ENTER. If the star trek program was still executing on CPU #2, it should now stop (you may not see any difference on the terminal emulator, but try typing a key).

Then you can try loading the companion loader again (e.g. by typing in *BOOT2.1* and pressing ENTER.)

Finally, it is worth noting that the whole process is much easier if the SD Load program is permanently loaded into the EEPROM of CPU #1, and the companion SIO load program is permanently loaded into the EEPROM of CPU #2.

That's the end of part 1 of this tutorial. Try compiling and loading some of the other demo programs, recompiling them for different targets on different CPUs. At this point, for any program that requires user interaction you will be limited to using the PC (or PROPTERMINAL) HMI options on both CPU #1 and CPU #2 – although programs that only produce output can be executed on CPU #2 using the High Resolution VGA display. When you are ready to learn about using proxy devices, which will allow the use of both the input devices on CPU #1 and the output devices on CPU #2 simultaneously, come back to part 2 of this tutorial.

Morpheus Tutorial Part 2 – Using proxy devices

1. To build the programs we will use in this tutorial, enter the *demos* directory, and execute the following command:

   ```
   build_morpheus_proxy_demos
   ```

   This will build two different pairs of proxy client and proxy server programs that demonstrate the use of various proxy devices. Examine the file if you like as examples of how each client and server is built – but this tutorial is mainly about how to execute programs that demonstrate the use of proxy devices.

2. Remove the Micro SD card from the Morpheus and insert it into your PC SD card reader/writer. Execute the following command in the *demos* directory (assuming x: is the driver in which the SD card appears):

   ```
   copy_morpheus_proxy_demos x:
   ```

   Then insert the SD card back into the Morpheus.

3. We will assume that **Catalyst** has been loaded into the EEPROM of CPU #1. and that the **Generic SIO Loader** has been loaded into the EEPROM of CPU #2. If this is not the case, you will need to load them manually each time prior to loading CPU #2, either using the Parallax Propeller tool, or with Payload, or using the *BOOT2.1* program (as described in part 1 of this tutorial).

   We will execute in turn each of the proxy client/server test program pairs.

4. The first test program runs a simple Catalina test suite on CPU #2, using the local VGA display for output, but using the keyboard from CPU #1. Here are the steps to run it:

   a. Using the PC terminal emulator connected to CPU #1, reset the CPU by toggling the DTR signal. Using the PC terminal emulator connected to CPU #2, do the same for that CPU.

      On CPU #1 you should see the usual Generic SD Card loader display:

      ```
      Catalyst v3.6
      >
      ```

   b. We will first load the client program into CPU #2. Ensure CPU #2 is selected by entering a single character "**@**" at the Catalyst prompt, and

verifying that CPU #2 is indicated. Then type in the command **T1_C_2** and press ENTER (the name stands for *Test 1 Client for CPU #2*).

c. When that has finished loading, you should see a couple of lines of text displayed on the VGA screen. The program won't continue until we press a key, which we can't do until we get the proxy server running. When the SD prompt has returned, ensure CPU #1 is selected by entering a single character "**!**" at the prompt, and verifying that CPU #1 is indicated. Then type in the command **T1_S_1** and press ENTER (the name stands for *Test 1 Server for CPU #1*).

d. Now press a key on the keyboard connected to CPU #1 (not the PC keyboard!) – the program running on CPU #2 should receive the key stroke and continue.

   Note that while the proxy client and server are communicating, you may see various gobbledygook characters appear on the PC terminal emulators. This is normal, and is because the inter-CPU proxy communications uses the same Propeller pins as the normal PC serial communications. Temporarily disable the PC terminal emulators if you find it distracting.

5. The second test program runs a simple terminal emulation program that uses both the keyboard and mouse. It is run using exactly the same steps as for test program 1 above – but in this case first load the programs **T2_C_2** to CPU #2 first, and then load **T2_S_1** to CPU #1. With these programs running you can use both the keyboard and mouse connected to CPU #1 (not the PC keyboard and mouse!) for the program executing on CPU #2.

   Now CPU #2 can be used to run all the usual Catalina programs that require user interaction – using the keyboard or mouse on CPU #1!

6. The third test program uses the keyboard, mouse *and* the SD card. It is run using exactly the same steps as the tests, above – but it requires one additional set-up step first – a simple text file (any small text file will do) should be copied to the root directory of the SD Card. We will assume it is called ***README.TXT.***

   Then we load the programs - load **T3_C_2** to CPU #2 first, and then **T3_S_1** to CPU #1.

   When the program is started, it requests a file name to read. Enter the file name *README.TXT* using the keyboard connected to CPU #1 (not the PC keyboard) and the program will read the file off the SD card and display it on the screen.

   When that is complete, it will ask for a file name to write. Enter something like *WRITEME.TXT*. Catalina will write a thousand lines of text to this file (Note that this can take 30 seconds or so, depending on the write speed of the SD card), and then ask you to enter a file name to read again. This time, enter *WRITEME.TXT* and the program will display the file it just created.

   Now CPU #2 can run all the usual Catalina programs that require file system support - using the SD card installed on CPU #1!

7. The fourth test program is similar to the first test program – except that this time we will run the *client* on CPU #1, and the *server* on CPU #2 – i.e. we proxy the screen device to CPU #1 instead of the keyboard device to CPU #2.

   To do this, the steps are much the same as usual, except the commands to use are **T4_S_2** and **T4_C_1** - load **T4_S_2** to CPU #2 first, and then **T4_C_1** to CPU #1. Note that the proxy server and client must be loaded in the opposite order to the first three tests – i.e. in this test the server is loaded first (onto CPU #2) and then the client is loaded (onto CPU #1).

   Now CPU #1 can run all the usual Catalina programs that require screen output as well as mouse or keyboard input and/or SD card access - using the VGA display installed on CPU #2!

That's the end of part 2 of this tutorial. Try compiling and loading some of the other demo programs using proxy devices. However, please be aware that using proxy devices changes the number of cogs required to run the program (it may either increase it or decrease it) and therefore some programs will run out of cogs. To avoid using cogs unnecessarily, you should always use the **NO_SCREEN**, **NO_KEYBOARD** or **NO_MOUSE** and **NO_FLOAT** options to prevent cogs being wasted on devices (or other plugins) that you do not need.

What next?

This is the conclusion of this tutorial. However, there are many programs in the demo folder that you can experiment with. You can compile them all by using the batch file *build_all.bat* in the demos subdirectory, or you can try building each one individually – perhaps specifying different command line options to see what effect each one has.

Also, there is more information on Catalina, including more information on the different targets Catalina provides and additional command line options in the **Catalina Reference Manual**.

Happy Landings!