



How to Set up Sounding System MW41 Software

Vaisala pre-installed computer

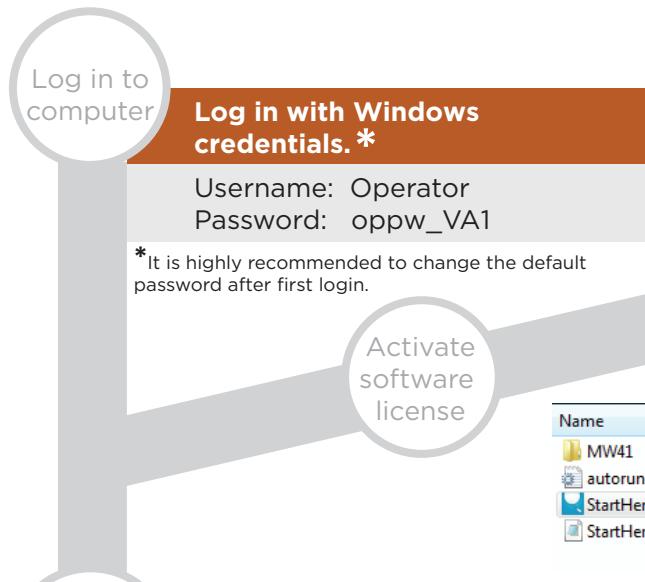



Other computer

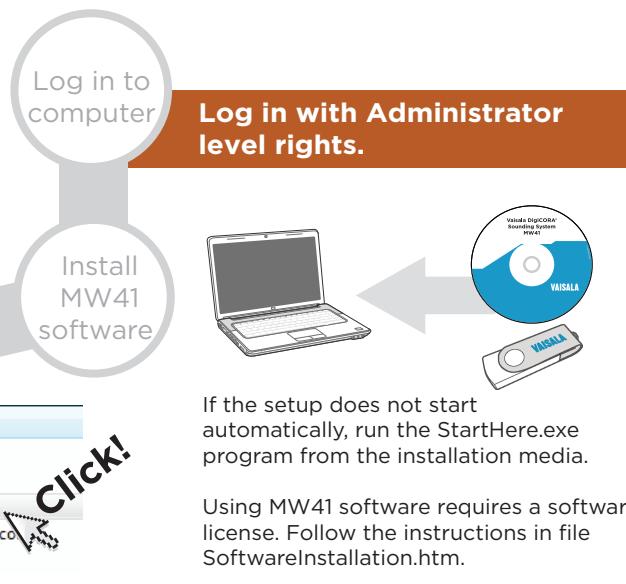

Log in to MW41

Configure

**Start
Sounding**

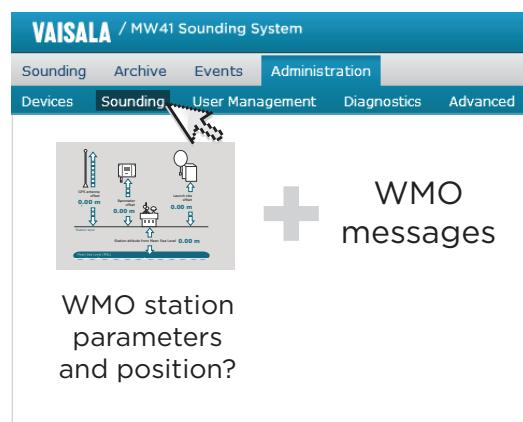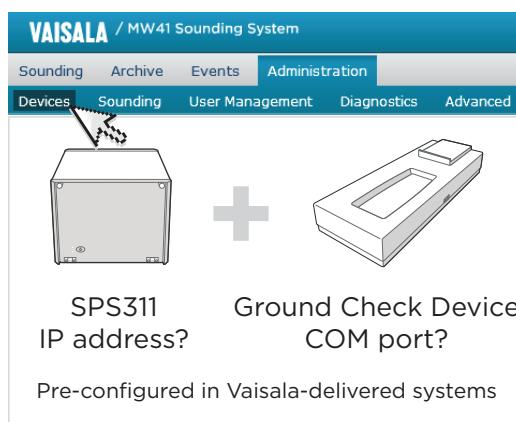

To start a sounding, go to Sounding - Radiosonde selection.

For a normal sounding operation, you need MW41 Operator rights. Log in with the credentials given by User Administrator and change your password, if prompted.

For complete installation instructions, see Sounding System MW41 Getting Started Guide.
MW41 user documentation is available on the installation media and in C:\Program Files (x86)\Vaisala\MW41\manuals.

Cabling Diagram for Sounding System MW41

