



5/2 pilot valve

Symbol

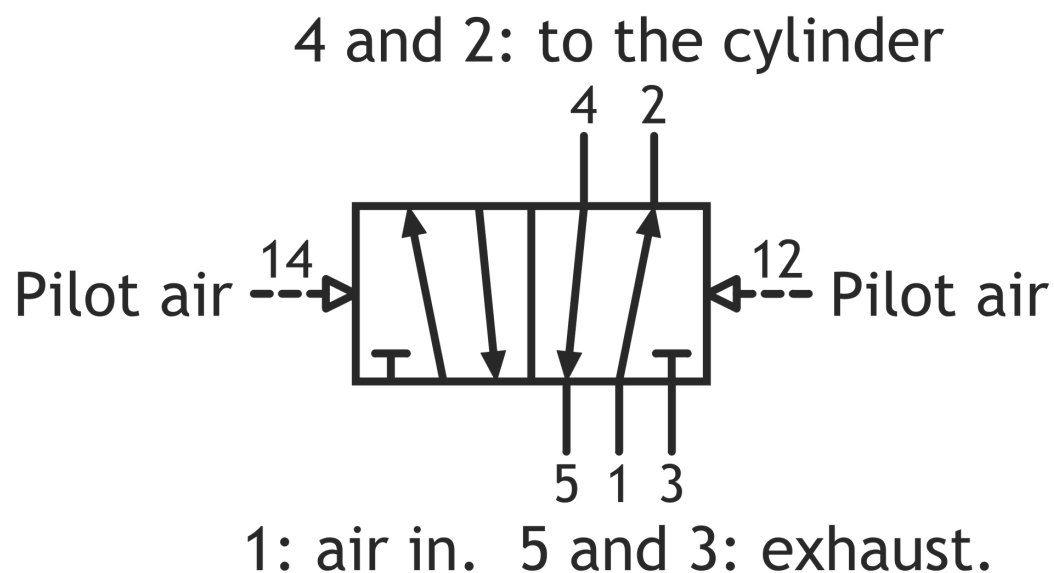

On the kit

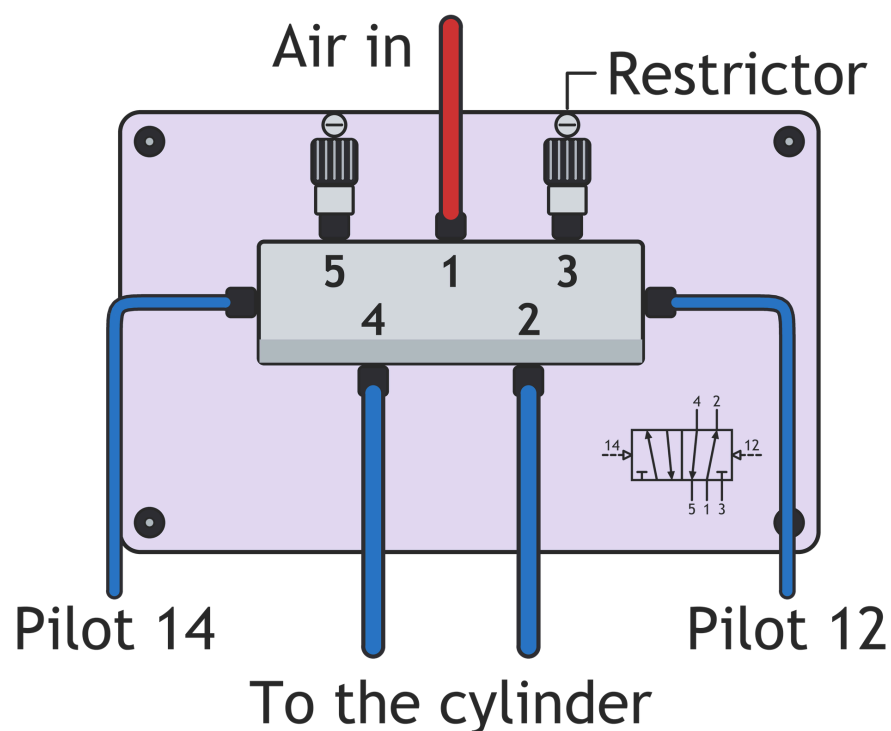

What it does

Pilot air at 14: air flows from port 1 to port 4.

Pilot air at 12: air flows from port 1 to port 2.

With no pilot air, the valve stays where it was put.

Key words

5/2 valve

A valve with 5 ports and 2 positions.

Pilot air

Air that works a valve, not a cylinder.

Pilot line

A dashed line on a diagram. It carries pilot air.

Port 14 and 12

Air at 14 sends main air out of 4. Air at 12 sends it out of 2.