


INFRARED PATIO HEATER INSTALLATION PRE-CHECKS

- Avoid Equipment Failure.**
- Avoid property damage, injury or death.**

Observe these basic guidelines when installing your heater.
Consult Manual for full installation instructions.

OBSERVE CLEARANCES TO COMBUSTIBLES


Do Not Violate Clearances to Combustibles!

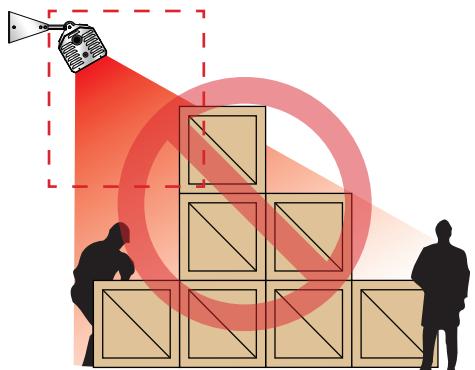

Failure to observe stated clearances to combustibles will result in a fire hazard. Failure to properly denote hazard may also result in a future hazard.

Observe Published Clearance to Combustibles

WARNING
POST CLEARANCE
LIMIT SAFETY SIGNS

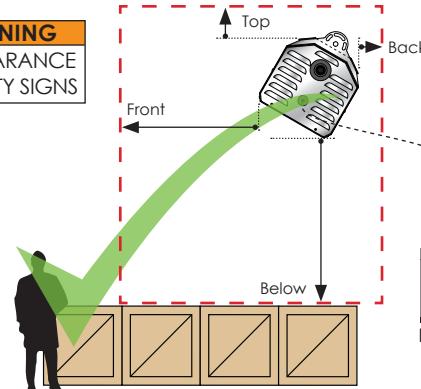

Always observe the stated clearances to combustibles. Post signs as required by ANSI or NFPA. Consult manual.


OBSERVE MINIMUM VENTILATION RATES

Do Not Install in INDOOR Residential Applications!



Failure to observe this warning may result in injury or death.


Install in Approved Applications Only!

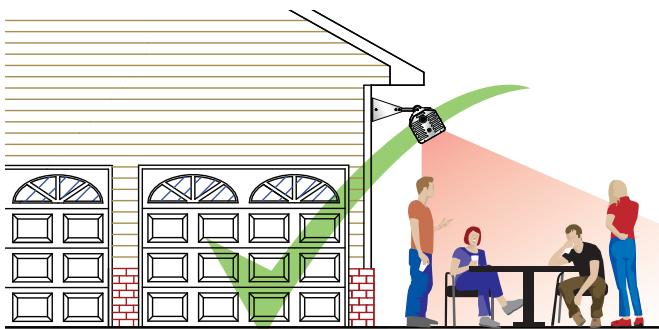

High intensity patio heaters are certified for outdoor residential and commercial or industrial applications with adequate ventilation only.


OBSERVE PROPER GAS TYPES AND PRESSURES

Do Not Apply Improper Gas Types or Pressures!

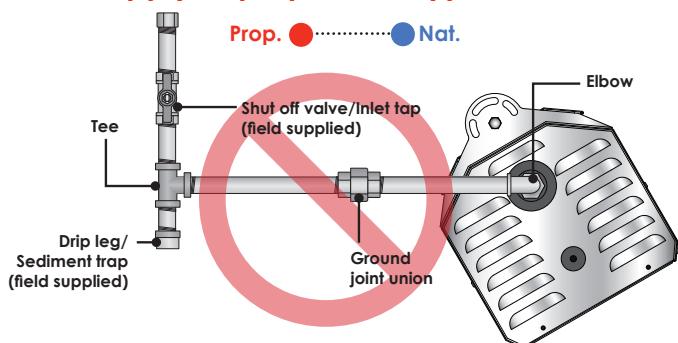

The use of improper gas or improper pressure will result in a fire hazard or improper operation.

Apply Required Gas Type and Pressures!

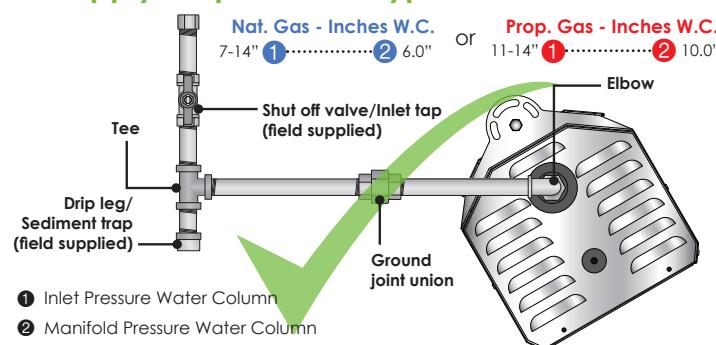


Provide proper gas type (as denoted on rating label) and observe minimum and maximum pressures.

NOTICE: Do not attempt to convert heater by altering the gas orifice(s). Proper conversions require valve, orifice and proper labeling. Contact factory for conversion assistance.


OBSERVE PROPER APPLICATION GUIDELINES

Do Not Install Without Adequate Ventilation!

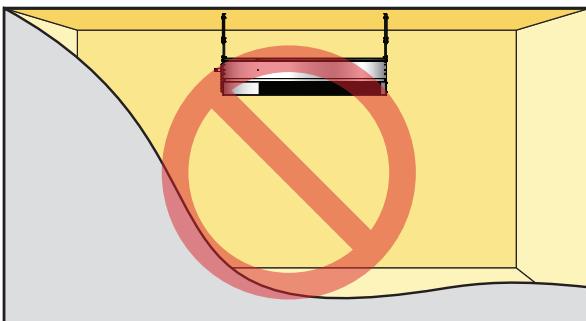

Failure to observe minimum ventilation rates will result in condensation and increased carbon monoxide rates.

Provide Sufficient Ventilation!

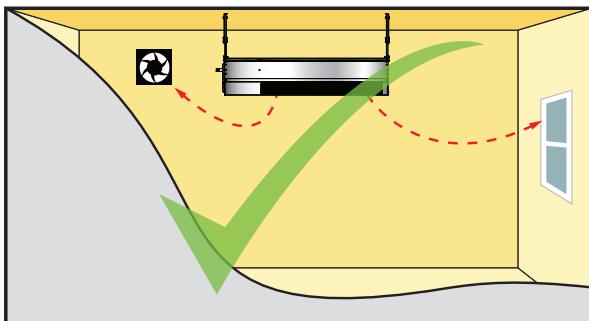

Provide natural or mechanical means to supply and exhaust 4.0 CFM per 1000 BTU/h of gas input.


OBSERVE PROPER MOUNTING ANGLES

Do Not Mount on Angles Exceeding 30° from Horizontal!



Failure to properly mount heater will result in damaged controls.


Observe Proper Mounting Angles!

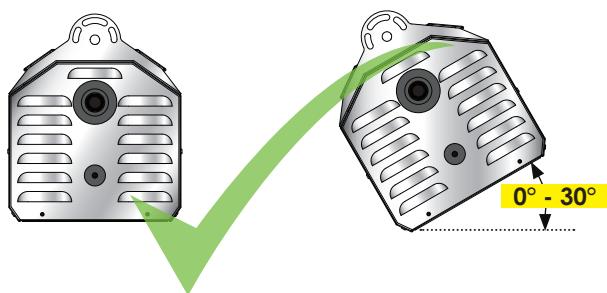

Heater **must be** mounted level end to end and at a **0-30°** angle from horizontal.


OBSERVE TEMPERATURE SENSITIVE ITEMS & COMFORT CONDITIONS

Do Not Place Heater(s) too Close to Temperature Sensitive Items

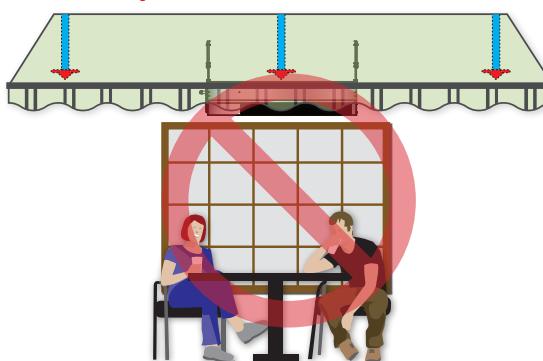

Certain items such as awnings, fabrics, sprinkler heads, insulation or table tops may require the heater to be mounted at a distance in excess of the published clearances to combustibles.

Carefully Consider All Design Factors

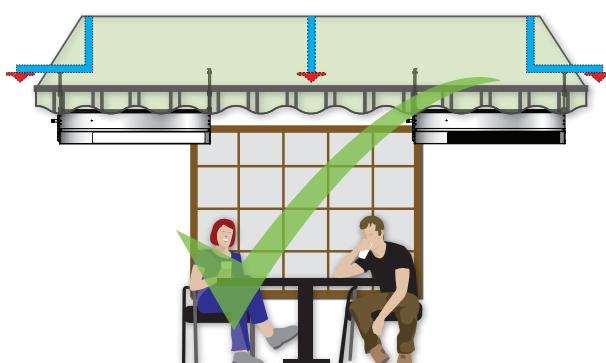

Strategically place heater(s) in optimal position to avoid potential hazards and to maximize comfort conditions.



This precheck sheet is not designed to act as a replacement to the installation manual.



Read and understand the DSC Series Installation, Operation, Maintenance & Parts Manual thoroughly before installing or servicing this equipment.