

Troubleshooting Guide QTS

Continued on page below.

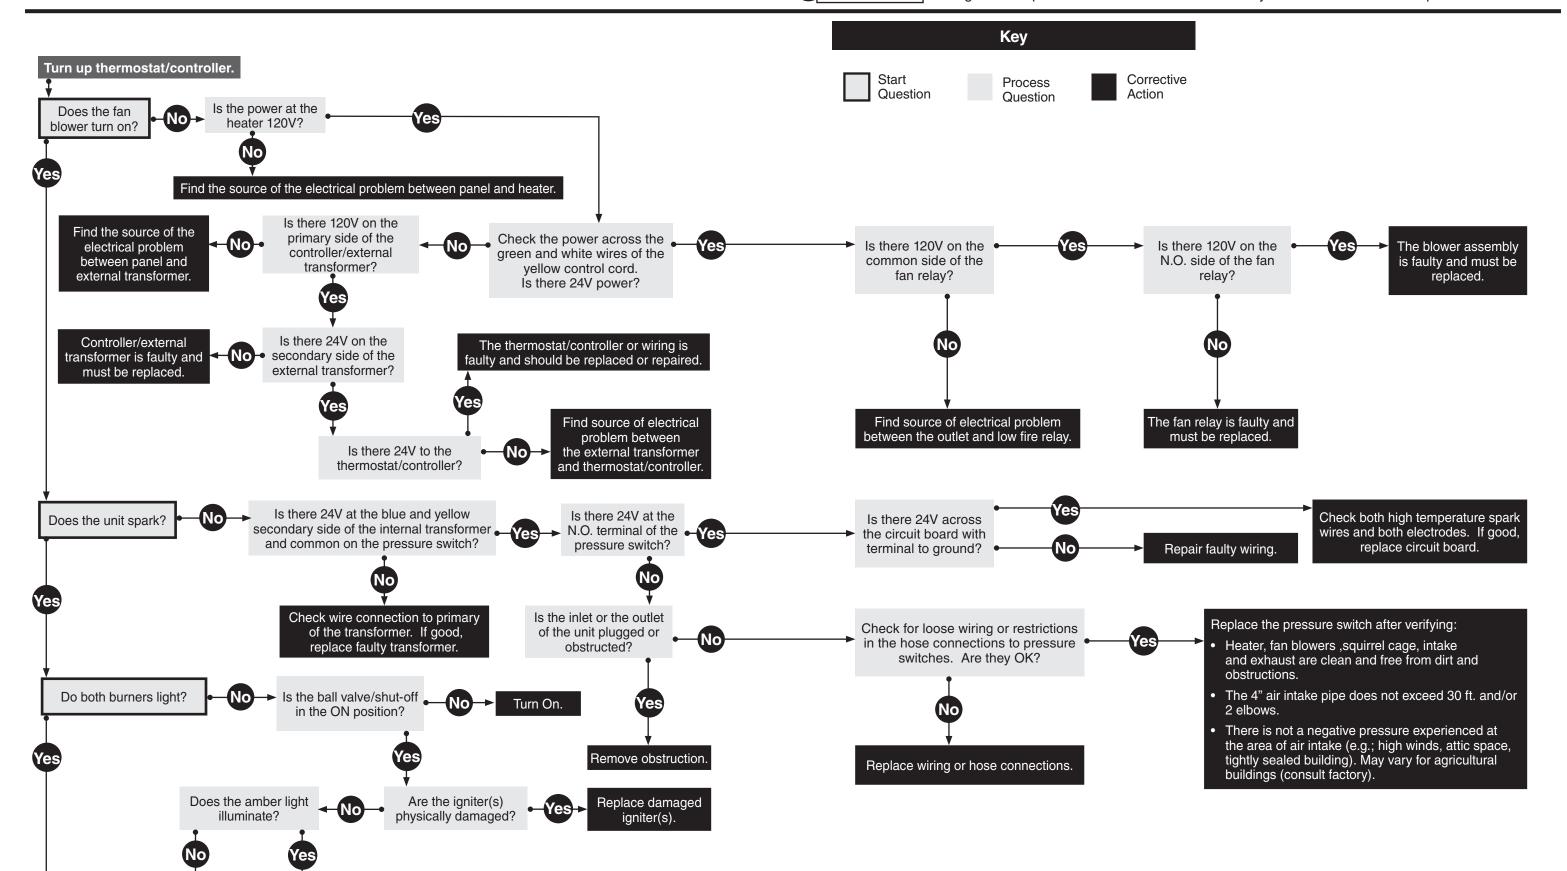

Bypassing any switch is intended for testing purposes only. Do not leave switch bypassed during normal operation or the heater's built-in safety mechanisms will be compromised.

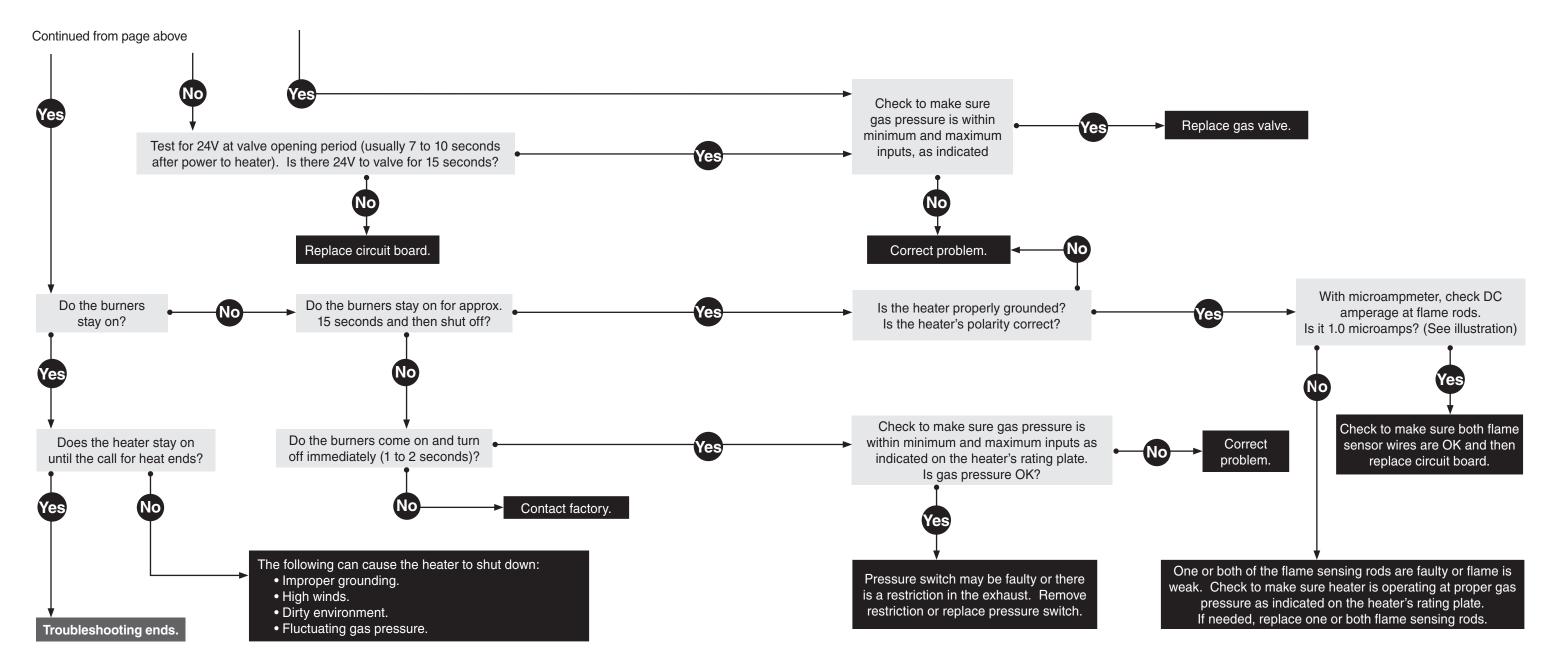



Diagnostic Indicator

<u>LED</u>	MODE
1 Flash	Start up.
O Flackes	Flome Ne coll

2 Flashes Flame. No call for heat.

3 Flashes Ignition lockout.
4 Flashes Valve relay lockout.

