

2007 Mazda MX-5 Miata Sport

2007 ACCESSORIES & BODY, CAB Exterior Trim - MX-5 Miata


1W	Signal GND	GND	Under any condition: Inspect for continuity to GND.		Continuity detected	wiring harness
1X	IG1	ENGINE 15 A fuse	IG ON		B+	Related wiring harness
			When the ignition switch is not in the ON position.		1.0 or less	
2A	Power supply	Main fuse block	Under any condition		B+	Related wiring harness
2B	Power supply	Main fuse block	Under any condition		B+	Related wiring harness
2C	Indicator light output signal	Power retractable hardtop Indicator light (hazard warning switch)	Ignition switch is turned to the ON position	Illuminated	1.0 or less	- Hazard switch - Related wiring harness
				Not illuminated	B+	
2D	-	-	-		-	-
2E	Power GND	GND	Under any condition: Inspect for continuity to GND.		Continuity detected	Related wiring harness
2F	Power GND	GND	Under any condition: Inspect for continuity to GND.		Continuity detected	Related wiring harness
3A	Roof motor control (open)	Roof motor (RH)	Ignition switch is turned to the ON position	Roof panel open operation	B+	- Roof motor (RH) - Related wiring harness
				Roof panel close operation	1.0 or less (1)	
				Other	approx. 2	
3B	-	-	-		-	-
3C	-	-	-		-	-
3D	Roof motor control (close)	Roof motor (LH)	Ignition switch is turned to the ON position	Roof panel open operation	1.0 or less (1)	
				Roof panel close operation	B+	
				Other	approx. 2	-
3E	Deck panel motor control (close)	Deck panel motor (RH)	Ignition switch is turned to the ON position	Deck panel open operation	1.0 or less (1)	- Deck panel motor (RH) - Related wiring harness
				Deck panel close operation	B+	
				Other	approx. 2	

2007 Mazda MX-5 Miata Sport

2007 ACCESSORIES & BODY, CAB Exterior Trim - MX-5 Miata

3F	Deck panel open position sensor input signal	Deck panel limit switch	Ignition switch is turned to the ON position	When the deck panel is fully open.	1.0 or less	• Deck panel limit switch • Related wiring harness
				When the deck panel is not fully open.	B+	
3G	-	-	-	-	-	-
3H	Deck panel motor control (open)	Deck panel motor (LH)	Ignition switch is turned to the ON position	Deck panel open operation	B+	• Deck panel motor (LH) • Related wiring harness
				Deck panel close operation	1.0 or less (1)	
				Other	approx. 2	
3I	Roof motor control (close)	Roof motor (RH)	Ignition switch is turned to the ON position	Roof panel open operation	1.0 or less (1)	• Roof motor (RH) • Related wiring harness
				Roof panel close operation	B+	
				Other	approx. 2	
3J	-	-	-	-	-	-
3K	-	-	-	-	-	-
3L	Roof motor control (open)	Roof motor (LH)	Ignition switch is turned to the ON position	Roof panel open operation	B+	• Roof motor (LH) • Related wiring harness
				Roof panel close operation	1.0 or less (1)	
				Other	approx. 2	
3M	Deck panel motor control (open)	Deck panel motor (RH)	Ignition switch is turned to the ON position	Deck panel open operation	B+	• Deck panel motor (RH) • Related wiring harness
				Deck panel close operation	1.0 or less (1)	
				Other	approx. 2	
3N	-	-	-	-	-	-
3O	Deck panel close position sensor input signal	Deck panel limit switch	Ignition switch is turned to the ON position	Except closed position	1.0 or less	• Deck panel limit switch • Related wiring harness
				Closed position	B+	
3P	Deck panel motor control (close)	Deck panel motor (LH)	Ignition switch is turned to the ON position	Deck panel open operation	1.0 or less (1)	• Deck panel motor (LH) • Related wiring harness
				Deck panel close operation	B+	
				Other	approx. 2	

(1) (1) :The voltage increases during operation speed control of the roof and deck panel.

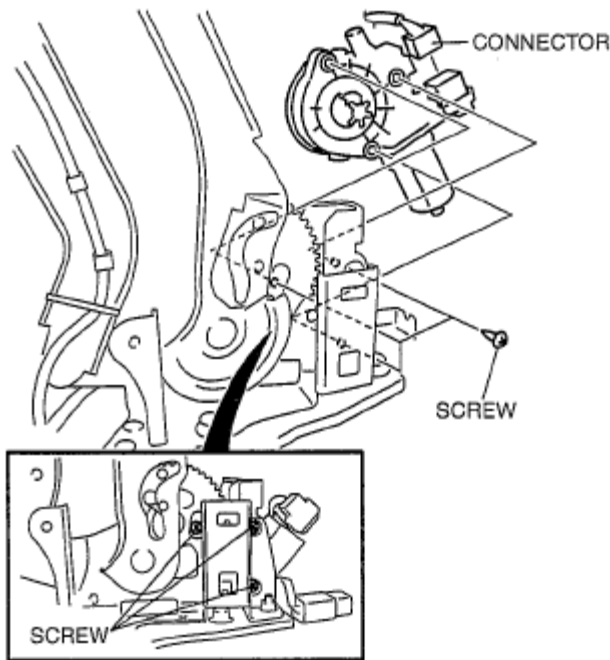

amxuuw000001


Fig. 82: Identifying Deck Panel Motor Components
Courtesy of MAZDA MOTORS CORP.

DECK PANEL MOTOR INSPECTION

1. Apply battery positive voltage and connect the ground to deck panel motor terminals A and E, and then inspect the deck panel motor operation.
 - If the deck panel motor does not operate as indicated in the table, replace it.


CAUTION:

- If the deck panel motor temperature is high, the motor may not rotate due to the motor internal PTC function. Leave it untouched for about 3 min to cool it down, then reinspect.

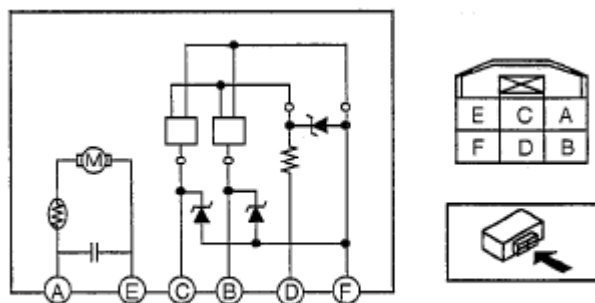

amxuuw000062

Fig. 83: Identifying Deck Panel Motor Terminals With Circuit Diagram
Courtesy of MAZDA MOTORS CORP.

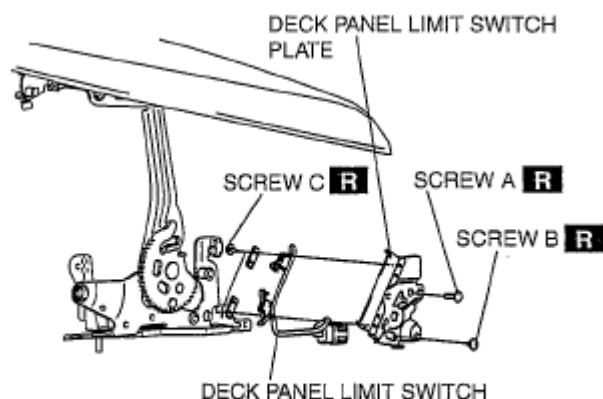


amxuuw0000623

Fig. 84: Identifying Deck Panel Limit Switch Components
Courtesy of MAZDA MOTORS CORP.

DECK PANEL LIMIT SWITCH INSPECTION

1. Verify that the continuity between the deck panel limit switch terminals is as indicated in the table.
 - If not as indicated in the table, replace the deck panel link (RH).

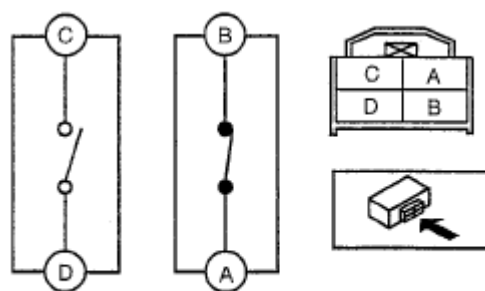

amxuuw000006

Fig. 85: Deck Panel Limit Switch Continuity Chart
Courtesy of MAZDA MOTORS CORP.

○—○ : Continuity

Switch position		Terminal			
		A	B	C	D
DECK PANEL CLOSE POSITION SWITCH	ROD PUSHED				
	NORMAL CONDITUION	○—○			
DECK PANEL OPEN POSITION SWITCH	ROD PUSHED			○—○	
	NORMAL CONDITUION				

amxuww000063

Fig. 86: Identifying Deck Panel Limit Switch Terminals With Circuit Diagram
 Courtesy of MAZDA MOTORS CORP.

REAR DECK WEATHERSTRIP REMOVAL

1. Fully open the deck panel.
2. Remove the quarter trim. (See [QUARTER TRIM REMOVAL/INSTALLATION](#) .)
3. Remove the cab-side weatherstrip. (See [CONVERTIBLE TOP DISASSEMBLY/ASSEMBLY](#).)
4. Remove the fasteners.
5. Remove the rear deck weatherstrip.

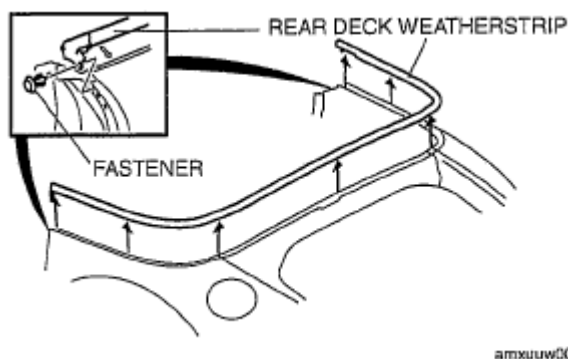


Fig. 87: Identifying Rear Deck Weatherstrip And Fastener
 Courtesy of MAZDA MOTORS CORP.

REAR DECK WEATHERSTRIP INSTALLATION

1. Align the deck flange with the weatherstrip marking, and insert. (1)
2. Peel off the tape backing of the butylene tape, align it to the molded part at the tip of the rear deck weatherstrip and press, then attach the fasteners. (2)
3. Install the rear deck weatherstrip. (3)
4. Install the cab-side weatherstrip. (See [CONVERTIBLE TOP DISASSEMBLY/ASSEMBLY](#).)
5. Install the quarter trim. (See [QUARTER TRIM REMOVAL/INSTALLATION](#) .)