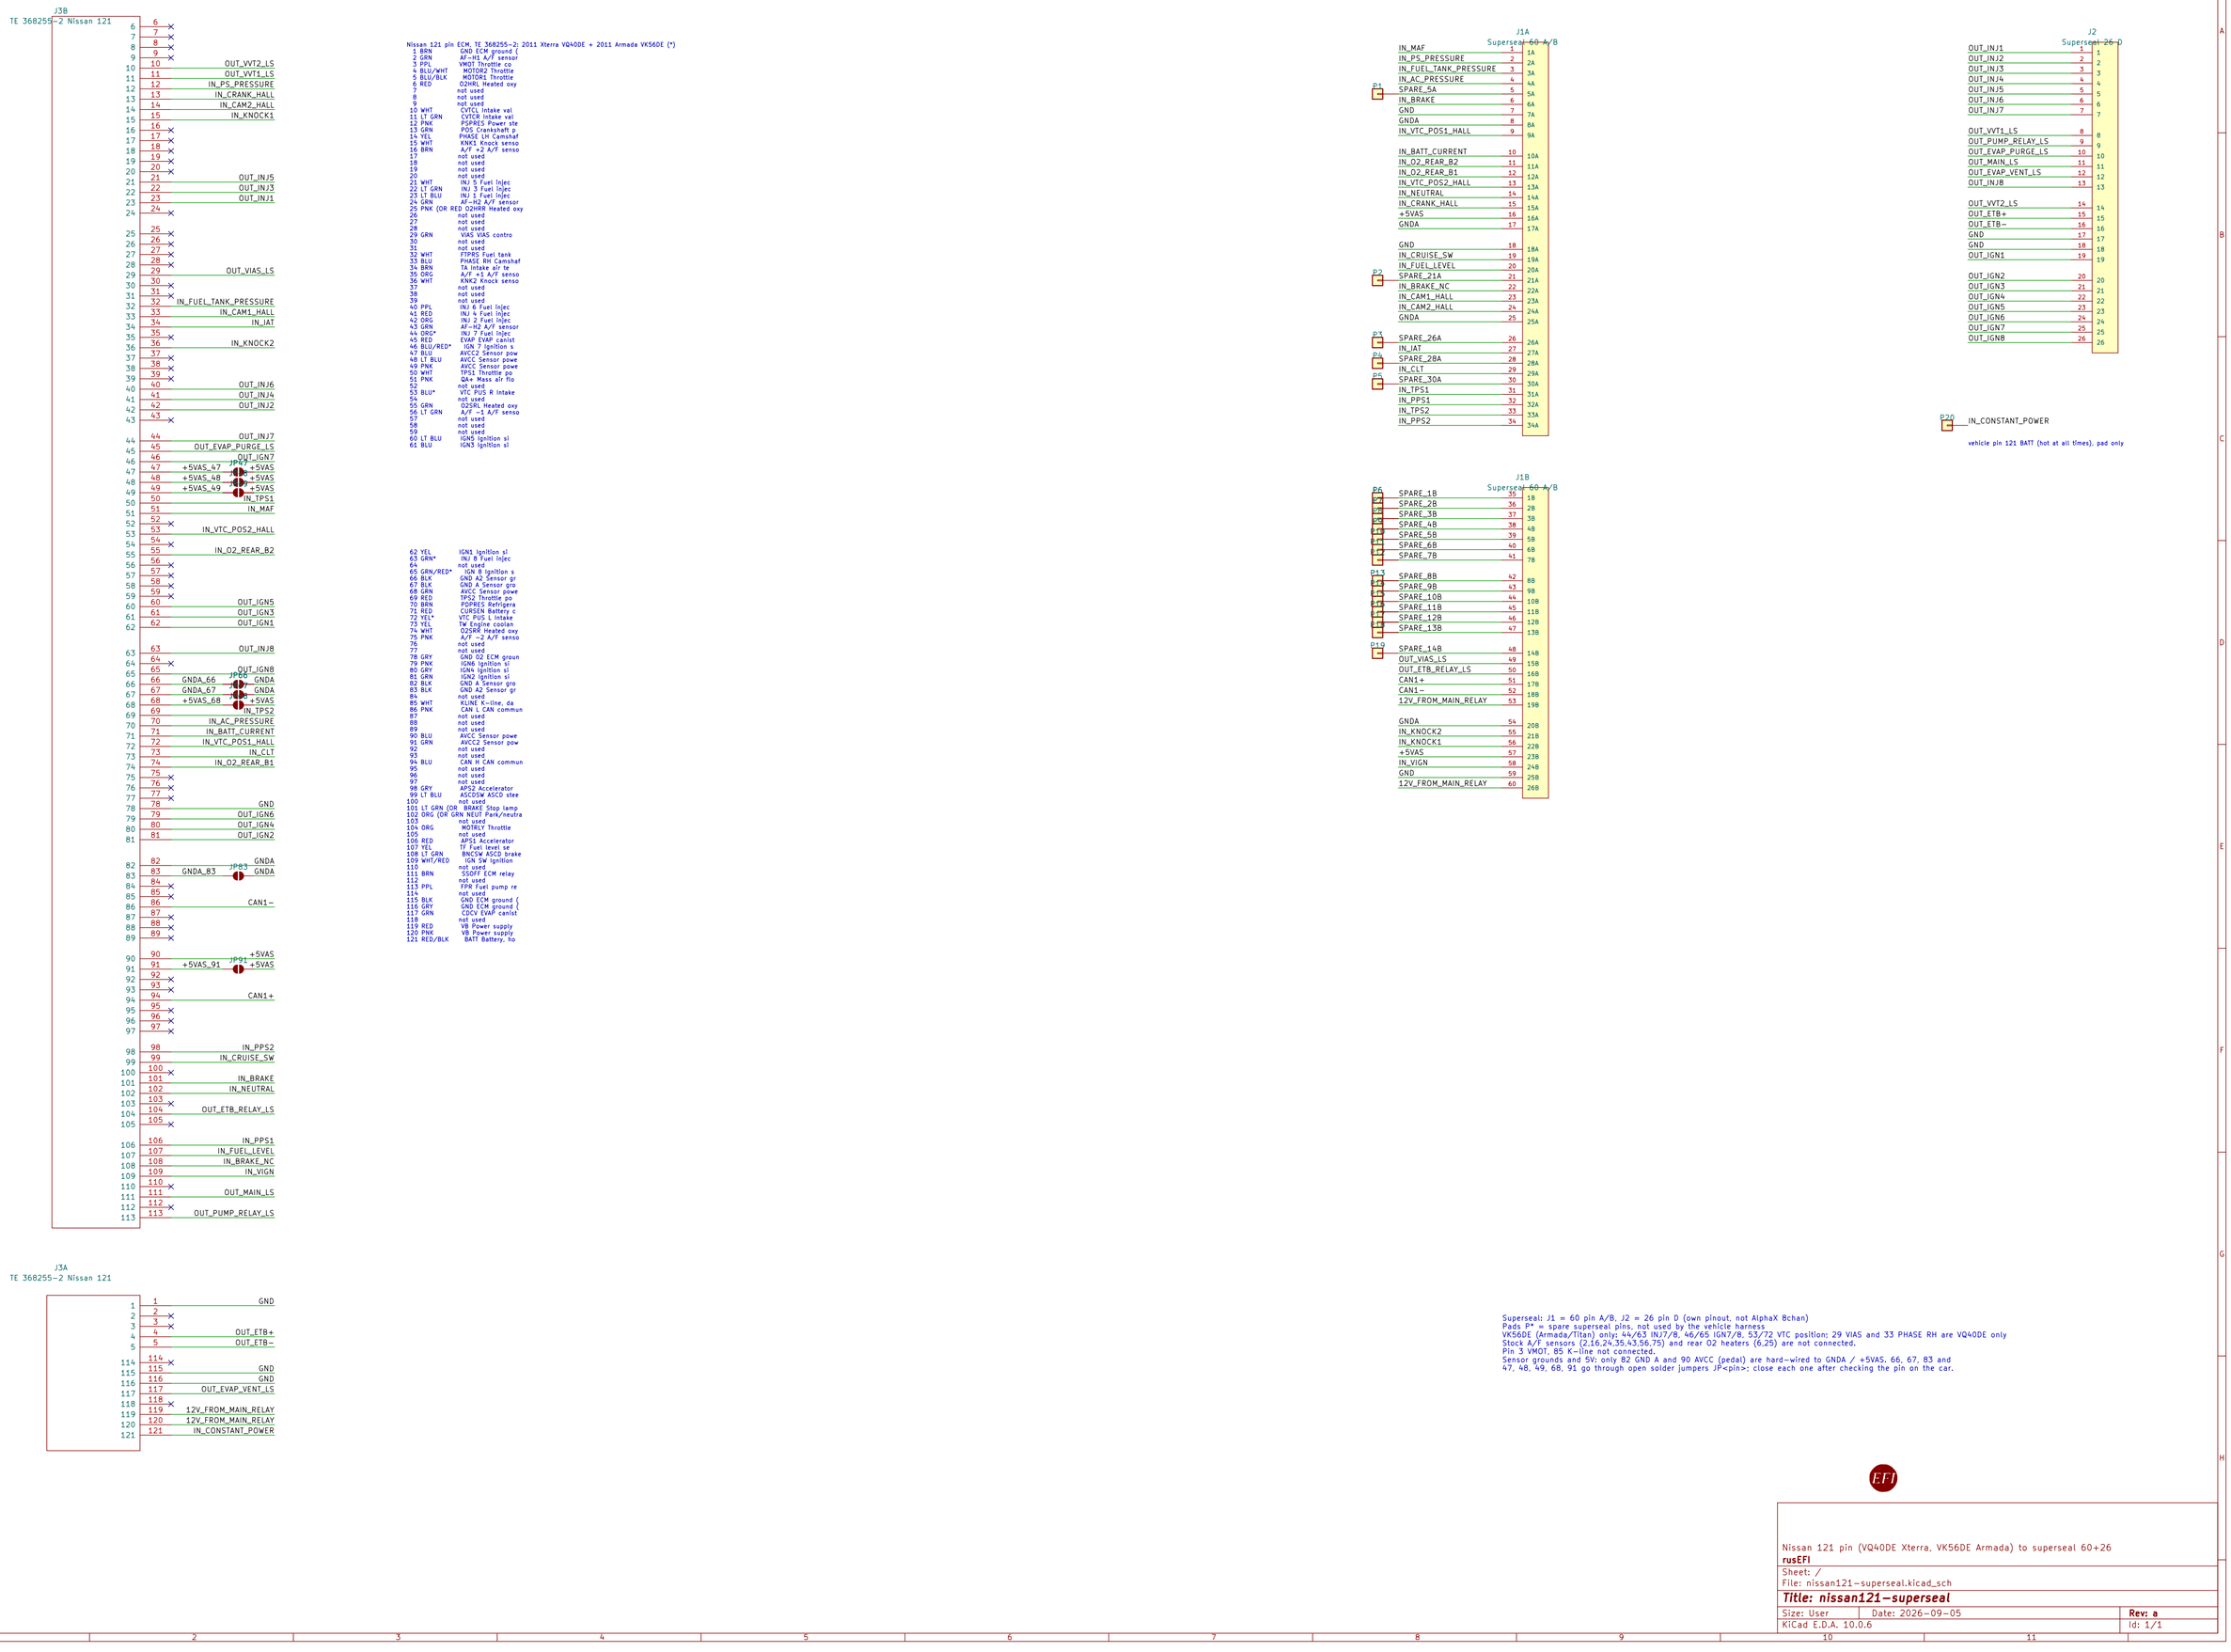

J3B
TE 368255-2 Nissan 121
6 7 8 9 10 OUT_VVT2_LS
11 OUT_VVT1_LS
12 IN_PS_PRESSURE
13 IN_CRANK_HALL
14 IN_CAM2_HALL
15 IN_KNOCK1
16 17 18 19 20 21 OUT_INJ5
22 OUT_INJ3
23 OUT_INJ1
24 25 26 27 28 29 OUT_VIAS_LS
30 31 32 IN_FUEL_TANK_PRESSURE
33 IN_CAM1_HALL
34 IN_IAT
35 36 IN_KNOCK2
37 38 39 40 OUT_INJ6
41 OUT_INJ4
42 OUT_INJ2
43 44 OUT_INJ7
45 OUT_EVAP_PURGE_LS
46 OUT_IGN7
47 +5VAS_47 JP47 +5VAS
48 +5VAS_48 +5VAS
49 +5VAS_49 +5VAS
50 IN_TPS1
51 IN_MAF
52 53 IN_VTC_POS2_HALL
54 55 IN_O2_REAR_B2
56 57 58 59 60 OUT_IGN5
61 OUT_IGN3
62 OUT_IGN1
63 OUT_INJ8
64 65 OUT_IGN8
66 GNDA_66 JP66 GNDA
67 GNDA_67 GNDA
68 +5VAS_68 +5VAS
69 IN_TPS2
70 IN_AC_PRESSURE
71 IN_BATT_CURRENT
72 IN_VTC_POS1_HALL
73 IN_CLT
74 IN_O2_REAR_B1
75 76 77 78 GND
79 OUT_IGN6
80 OUT_IGN4
81 OUT_IGN2
82 GNDA
83 GNDA_83 JP83 GNDA
84 85 86 CAN1−
87 88 89 90 +5VAS
91 +5VAS_91 JP91 +5VAS
92 93 94 CAN1+
95 96 97 98 IN_PPS2
99 IN_CRUISE_SW
100 101 IN_BRAKE
102 IN_NEUTRAL
103 104 OUT_ETB_RELAY_LS
105 106 IN_PPS1
107 IN_FUEL_LEVEL
108 IN_BRAKE_NC
109 IN_VIGN
110 111 OUT_MAIN_LS
112 113 OUT_PUMP_RELAY_LS
J3A
TE 368255-2 Nissan 121
1 GND
2 3 4 OUT_ETB+
5 OUT_ETB−
114 115 GND
116 GND
117 OUT_EVAP_VENT_LS
118 119 12V_FROM_MAIN_RELAY
120 12V_FROM_MAIN_RELAY
121 IN_CONSTANT_POWER
Nissan 121 pin ECM, TE 368255-2; 2011 Xterra VQ40DE + 2011 Armada VK56DE (*)
1 BRN GND ECM ground (
2 GRN AF-H1 A/F sensor
3 PPL VMOT Throttle co
4 BLU/WHT MOTOR2 Throttle
5 BLU/BLK MOTOR1 Throttle
6 RED O2HRL Heated oxy
7 not used
8 not used
9 not used
10 WHT CVTCL intake val
11 LT GRN CVTCR intake val
12 PNK PSPRES Power ste
13 GRN POS Crankshaft p
14 YEL PHASE LH Camshaf
15 WHT KNK1 Knock senso
16 BRN A/F +2 A/F senso
17 not used
18 not used
19 not used
20 not used
21 WHT INJ 5 Fuel Injec
22 LT GRN INJ 3 Fuel Injec
23 LT BLU INJ 1 Fuel Injec
24 GRN AF-H2 A/F sensor
25 PNK (OR RED O2HRR Heated oxy
26 not used
27 not used
28 not used
29 GRN VIAS VIAS contro
30 not used
31 not used
32 WHT FTPRS Fuel tanke
33 BLU PHASE RH Camshaf
34 BRN TA intake air te
35 ORG A/F +1 A/F senso
36 WHT KNK2 Knock senso
37 not used
38 not used
39 not used
40 PPL INJ 6 Fuel Injec
41 RED INJ 4 Fuel Injec
42 ORG INJ 2 Fuel Injec
43 GRN AF-H2 A/F sensor
44 ORG* INJ 7 Fuel Injec
45 RED EVAP EVAP canist
46 BLU/RED* IGN 7 Ignition s
47 BLU AVCC2 Sensor pow
48 LT BLU AVCC Sensor powe
49 PNK AVCC Sensor powe
50 WHT TPS1 Throttle po
51 PNK QA+ Mass air flo
52 not used
53 BLU* VTC PUS R intake
54 not used
55 GRN O2SRL Heated oxy
56 LT GRN A/F −1 A/F senso
57 not used
58 not used
59 not used
60 LT BLU IGN5 Ignition sl
61 BLU IGN3 Ignition sl
62 YEL IGN1 Ignition sl
63 GRN* INJ 8 Fuel Injec
64 not used
65 GRN/RED* IGN 8 Ignition s
66 BLK GND A2 Sensor gr
67 BLK GND A Sensor gro
68 GRN AVCC Sensor powe
69 RED TPS2 Throttle po
70 BRN PDPRES Refrigera
71 RED CURSEN Battery c
72 YEL* VTC PUS L intake
73 YEL TW Engine coolan
74 WHT O2SRR Heated oxy
75 PNK A/F −2 A/F senso
76 not used
77 not used
78 GRY GND O2 ECM groun
79 PNK IGN6 Ignition sl
80 GRY IGN4 Ignition sl
81 GRN IGN2 Ignition sl
82 BLK GND A Sensor gro
83 BLK GND A2 Sensor gr
84 not used
85 WHT KLINE K-line, da
86 PNK CAN L CAN commun
87 not used
88 not used
89 not used
90 BLU AVCC Sensor powe
91 GRN AVCC2 Sensor pow
92 not used
93 not used
94 BLU CAN H CAN commun
95 not used
96 not used
97 not used
98 GRY APS2 Accelerator
99 LT BLU ASCDSW ASCD stee
100 not used
101 LT GRN (OR BRAKE Stop lamp
102 ORG (OR GRN NEUT Park/neutra
103 not used
104 ORG MOTRLY Throttle
105 not used
106 RED APS1 Accelerator
107 YEL TF Fuel level se
108 LT GRN BNCSW ASCD brake
109 WHT/RED IGN SW Ignition
110 not used
111 BRN SSOFF ECM relay
112 not used
113 PPL FPR Fuel pump re
114 not used
115 BLK GND ECM ground (
116 GRY GND ECM ground (
117 GRN CDCV EVAP canist
118 not used
119 RED VB Power supply
120 PNK VB Power supply
121 RED/BLK BATT Battery, ho
J1A
Superseal 60 A/B
P1 IN_MAF 1A
IN_PS_PRESSURE 2A
IN_FUEL_TANK_PRESSURE 3A
IN_AC_PRESSURE 4A
SPARE_5A 5A
IN_BRAKE 6A
GND 7A
GNDA 8A
IN_VTC_POS1_HALL 9A
IN_BATT_CURRENT 10A
IN_O2_REAR_B2 11A
IN_O2_REAR_B1 12A
IN_VTC_POS2_HALL 13A
IN_NEUTRAL 14A
IN_CRANK_HALL 15A
+5VAS 16A
GNDA 17A
GND 18A
IN_CRUISE_SW 19A
IN_FUEL_LEVEL 20A
P2 SPARE_21A 21A
IN_BRAKE_NC 22A
IN_CAM1_HALL 23A
IN_CAM2_HALL 24A
GNDA 25A
P3 SPARE_26A 26A
P4 IN_IAT 27A
SPARE_28A 28A
P5 IN_CLT 29A
SPARE_30A 30A
IN_TPS1 31A
IN_PPS1 32A
IN_TPS2 33A
IN_PPS2 34A
J1B
Superseal 60 A/B
P6 SPARE_1B 35
P7 SPARE_2B 36
P8 SPARE_3B 37
P9 SPARE_4B 38
P10 SPARE_5B 39
P11 SPARE_6B 40
P12 SPARE_7B 41
P13 SPARE_8B 42
P14 SPARE_9B 43
P15 SPARE_10B 44
P16 SPARE_11B 45
P17 SPARE_12B 46
P18 SPARE_13B 47
P19 SPARE_14B 48
OUT_VIAS_LS 49
OUT_ETB_RELAY_LS 50
CAN1+ 51
CAN1− 52
12V_FROM_MAIN_RELAY 53
GNDA 54
IN_KNOCK2 55
IN_KNOCK1 56
+5VAS 57
IN_VIGN 58
GND 59
12V_FROM_MAIN_RELAY 60
J2
Superseal 26 D
OUT_INJ1 1
OUT_INJ2 2
OUT_INJ3 3
OUT_INJ4 4
OUT_INJ5 5
OUT_INJ6 6
OUT_INJ7 7
OUT_VVT1_LS 8
OUT_PUMP_RELAY_LS 9
OUT_EVAP_PURGE_LS 10
OUT_MAIN_LS 11
OUT_EVAP_VENT_LS 12
OUT_INJB 13
OUT_VVT2_LS 14
OUT_ETB+ 15
OUT_ETB− 16
GND 17
GND 18
OUT_IGN1 19
OUT_IGN2 20
OUT_IGN3 21
OUT_IGN4 22
OUT_IGN5 23
OUT_IGN6 24
OUT_IGN7 25
OUT_IGNB 26
P20 IN_CONSTANT_POWER
vehicle pin 121 BATT (hot at all times), pad only
Superseal: J1 = 60 pin A/B, J2 = 26 pin D (own pinout, not AlphaX Bchan)
Pads P* = spare superseal pins, not used by the vehicle harness
VK56DE (Armada/Titan) only: 44/63 INJ7/8, 46/65 IGN7/8, 53/72 VTC position: 29 VIAS and 33 PHASE RH are VQ40DE only
Stock A/F sensors (2,16,24,35,43,56,75) and rear O2 heaters (6,25) are not connected.
Pin 3 VMOT, 85 K-line not connected.
Sensor grounds and 5V: only 82 GND A and 90 AVCC (pedal) are hard-wired to GNDA / +5VAS. 66, 67, 83 and
47, 48, 49, 68, 91 go through open solder jumpers JP<pin>: close each one after checking the pin on the car.
EFI
Nissan 121 pin (VQ40DE Xterra, VK56DE Armada) to superseal 60+26
rusEFI
Sheet: /
File: nissan121-superseal.kicad_sch
Title: nissan121-superseal
Size: User
Date: 2026-09-05
Rev: a
KiCad E.D.A. 10.0.6
Id: 1/1