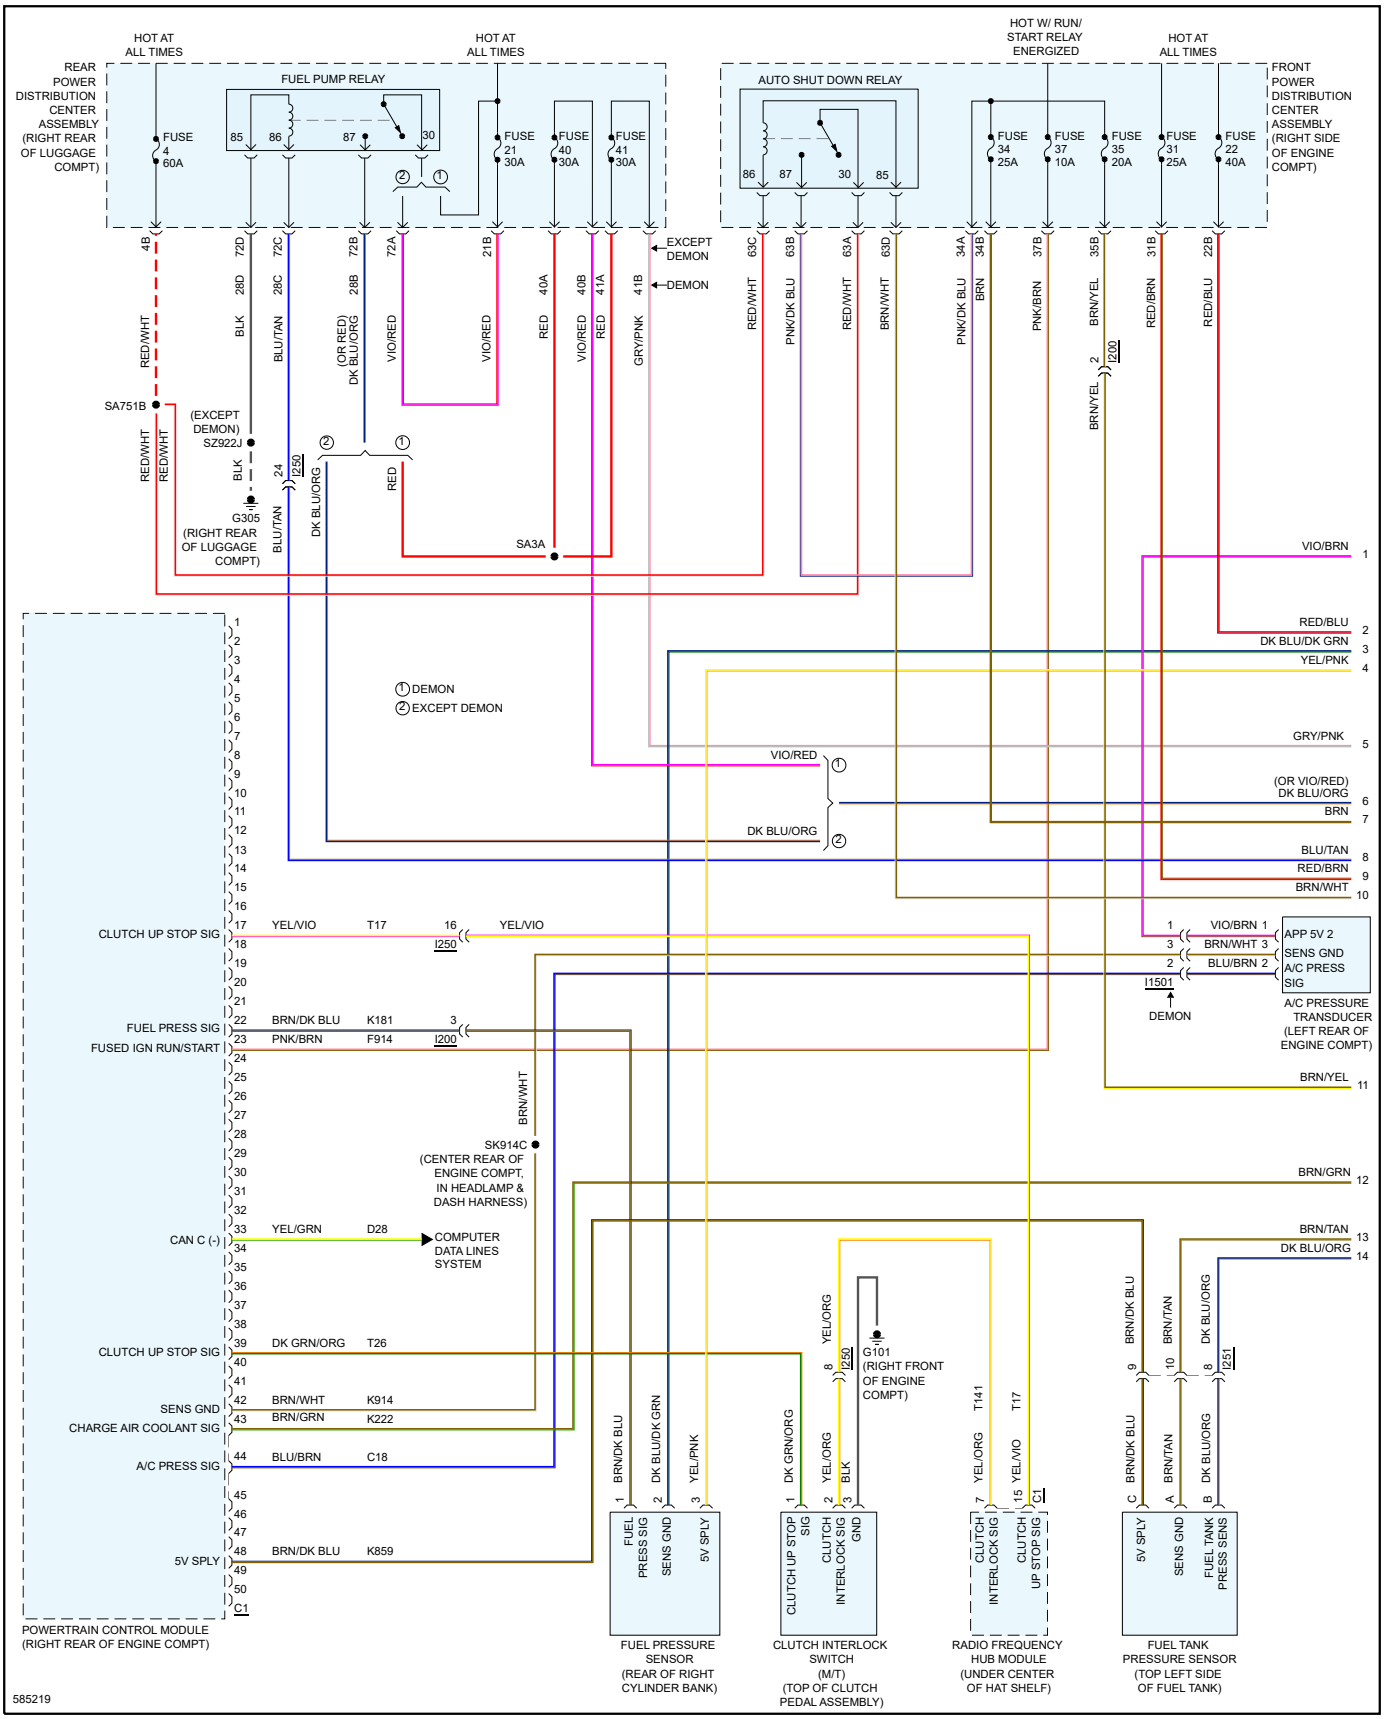
2018 Dodge Challenger RWD V8-6.2L SC

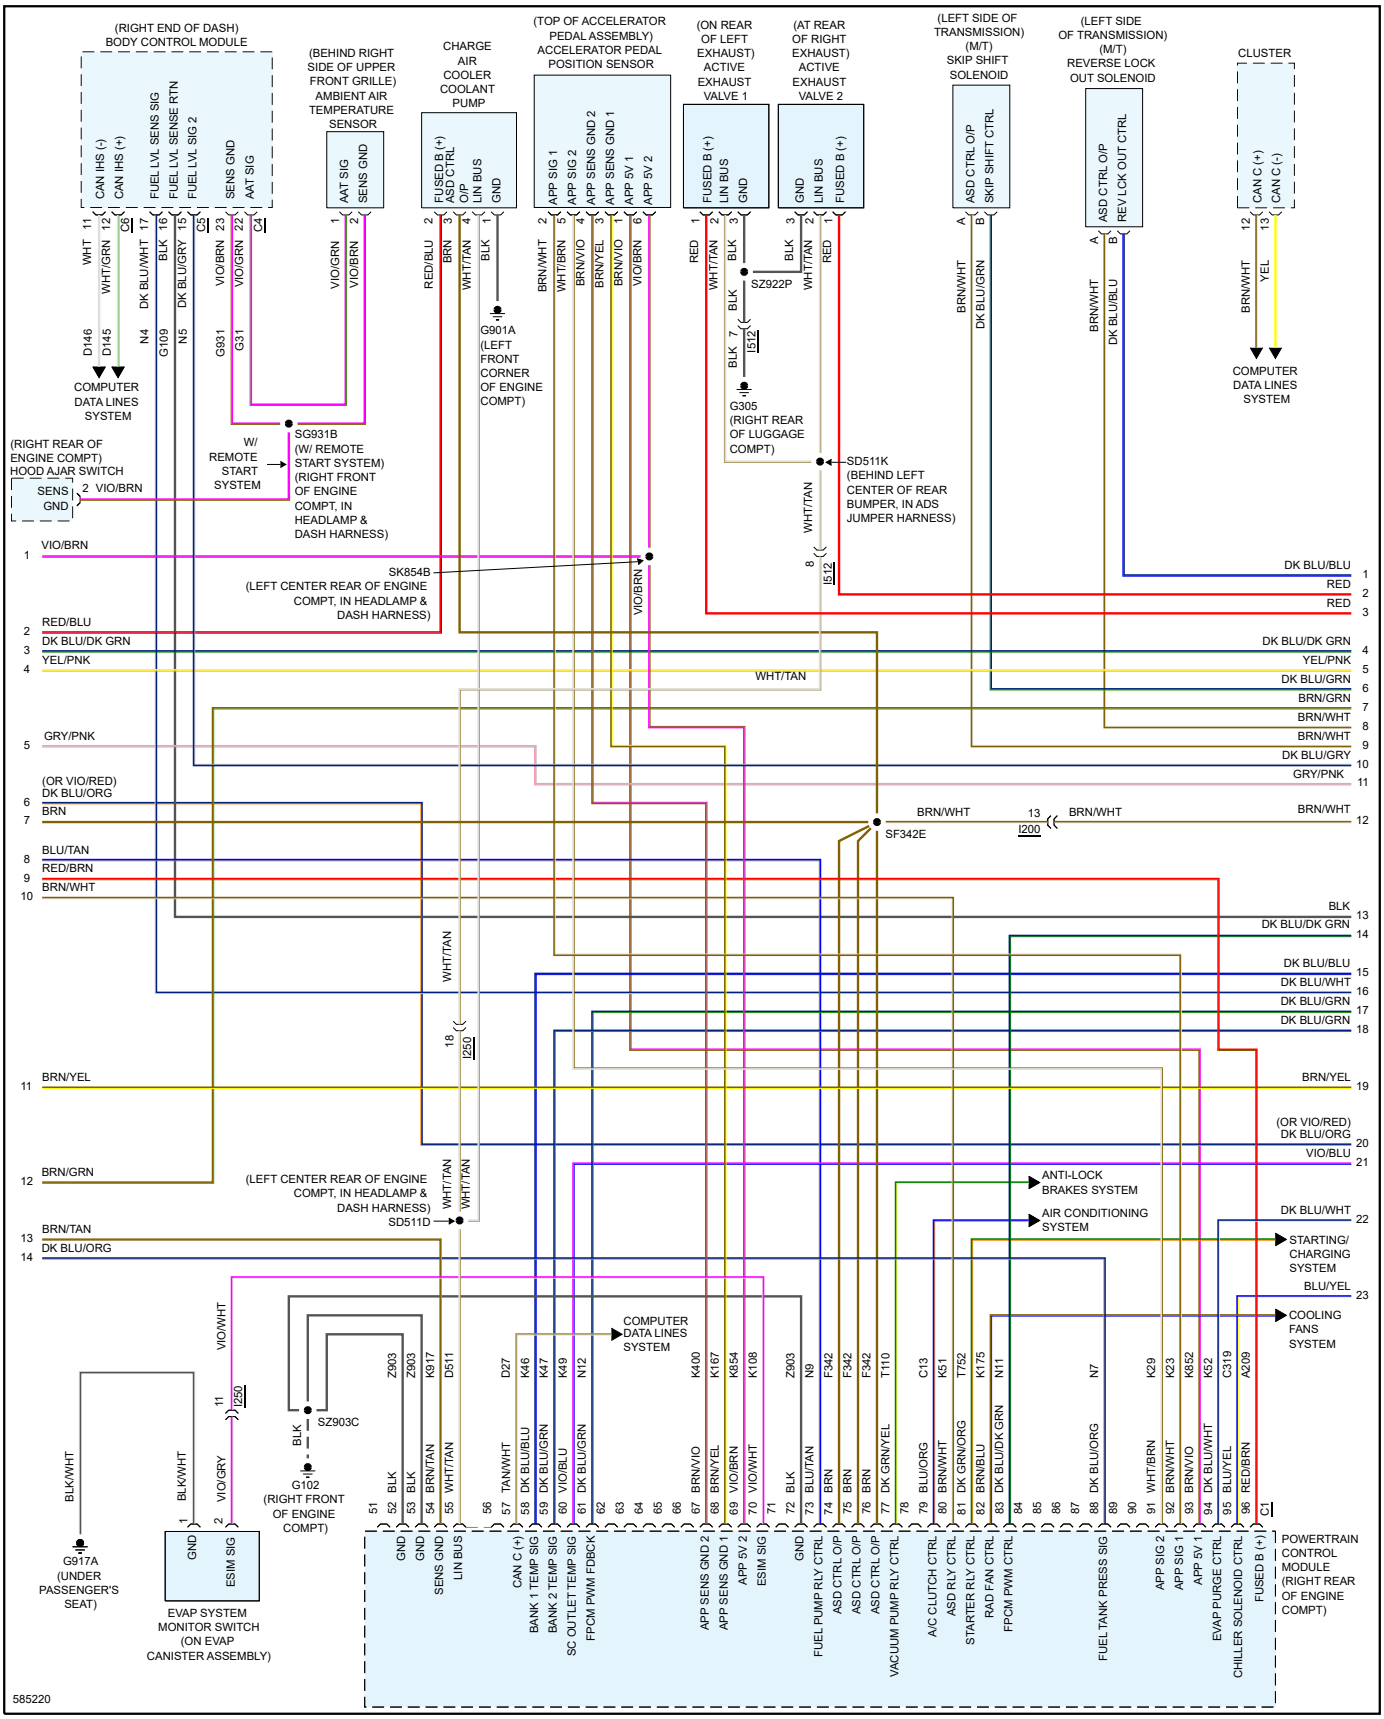
Vehicle > Powertrain Management > Diagrams > Electrical - Interactive Color (Non OE)

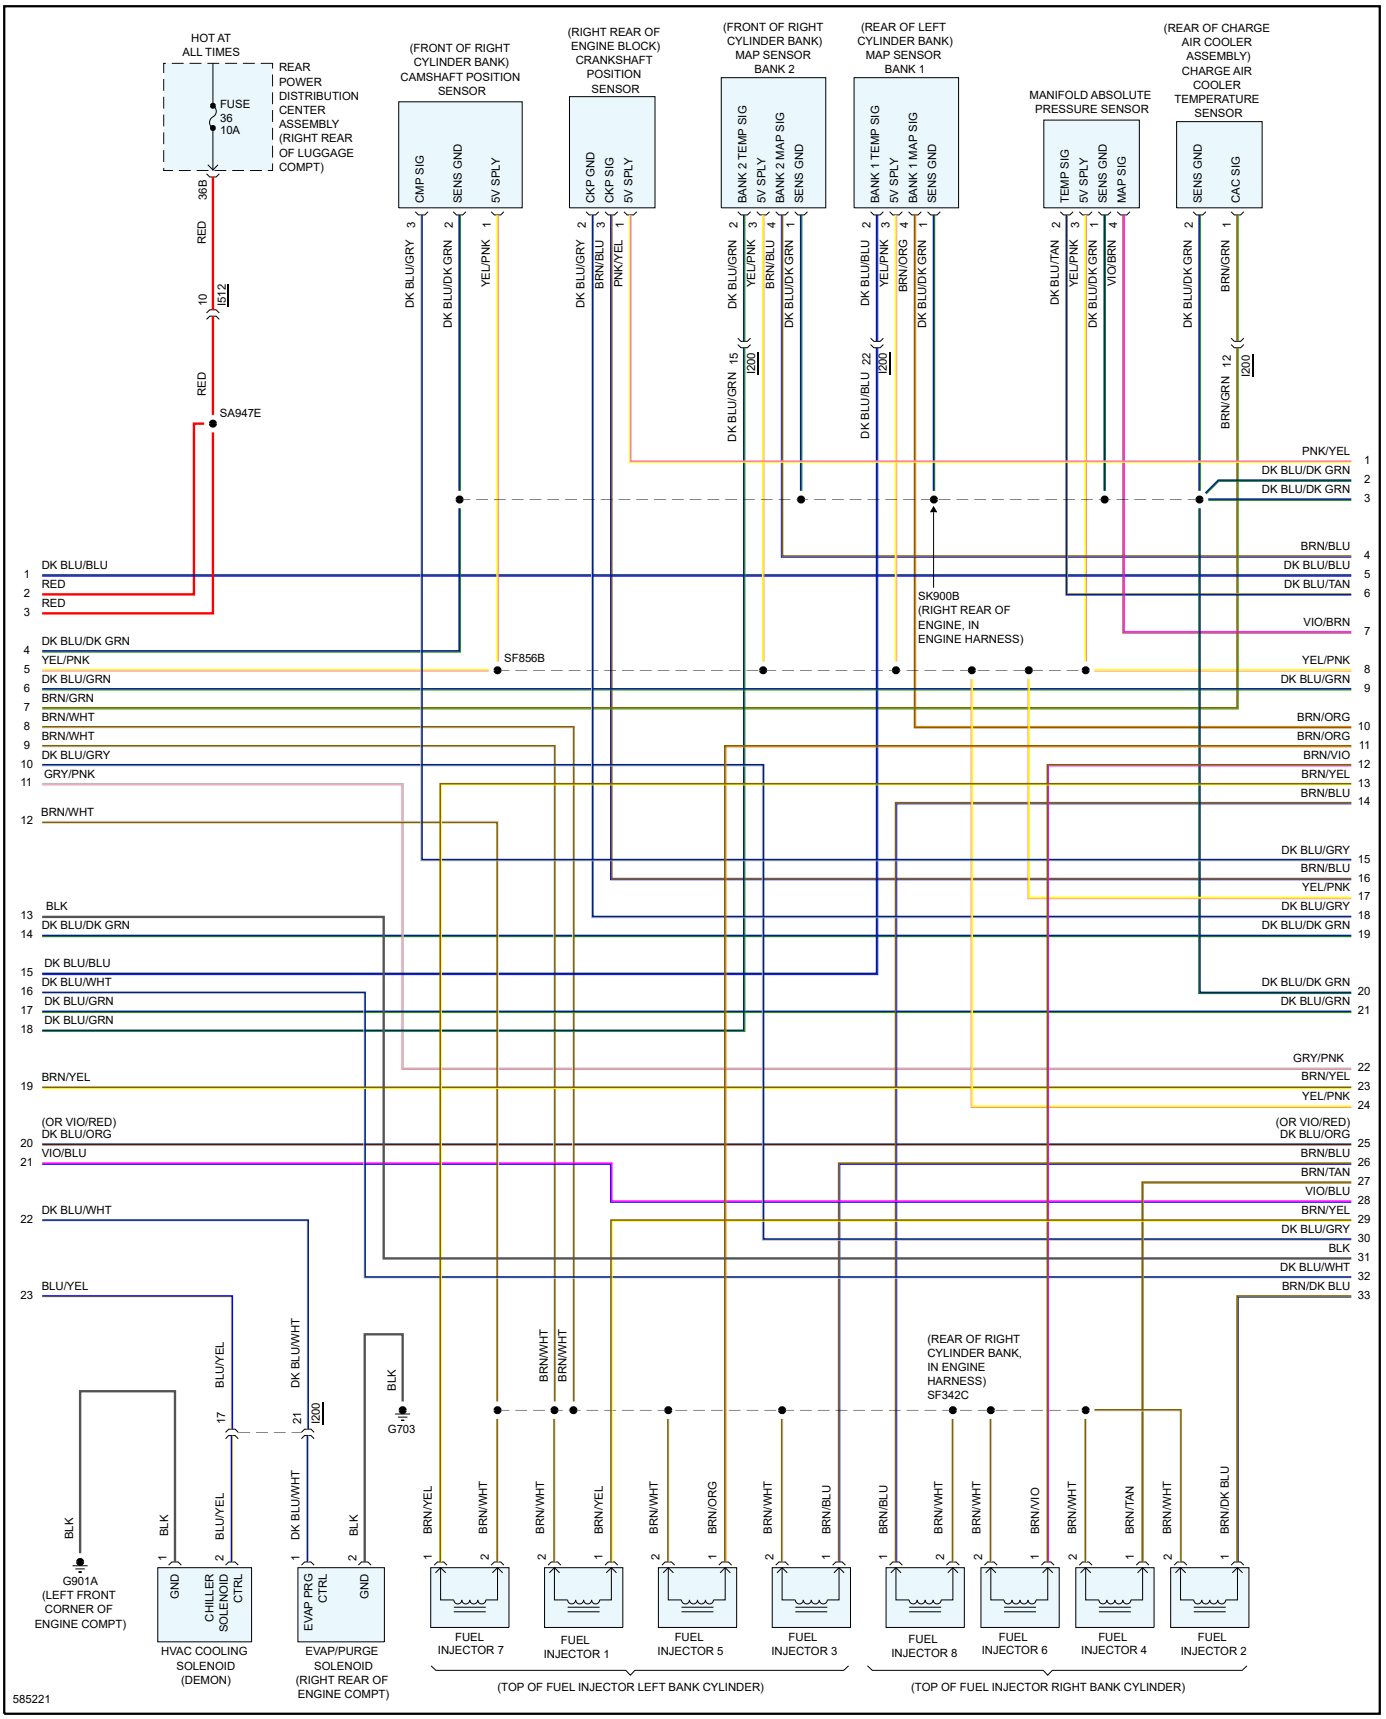
ENGINE CONTROLS

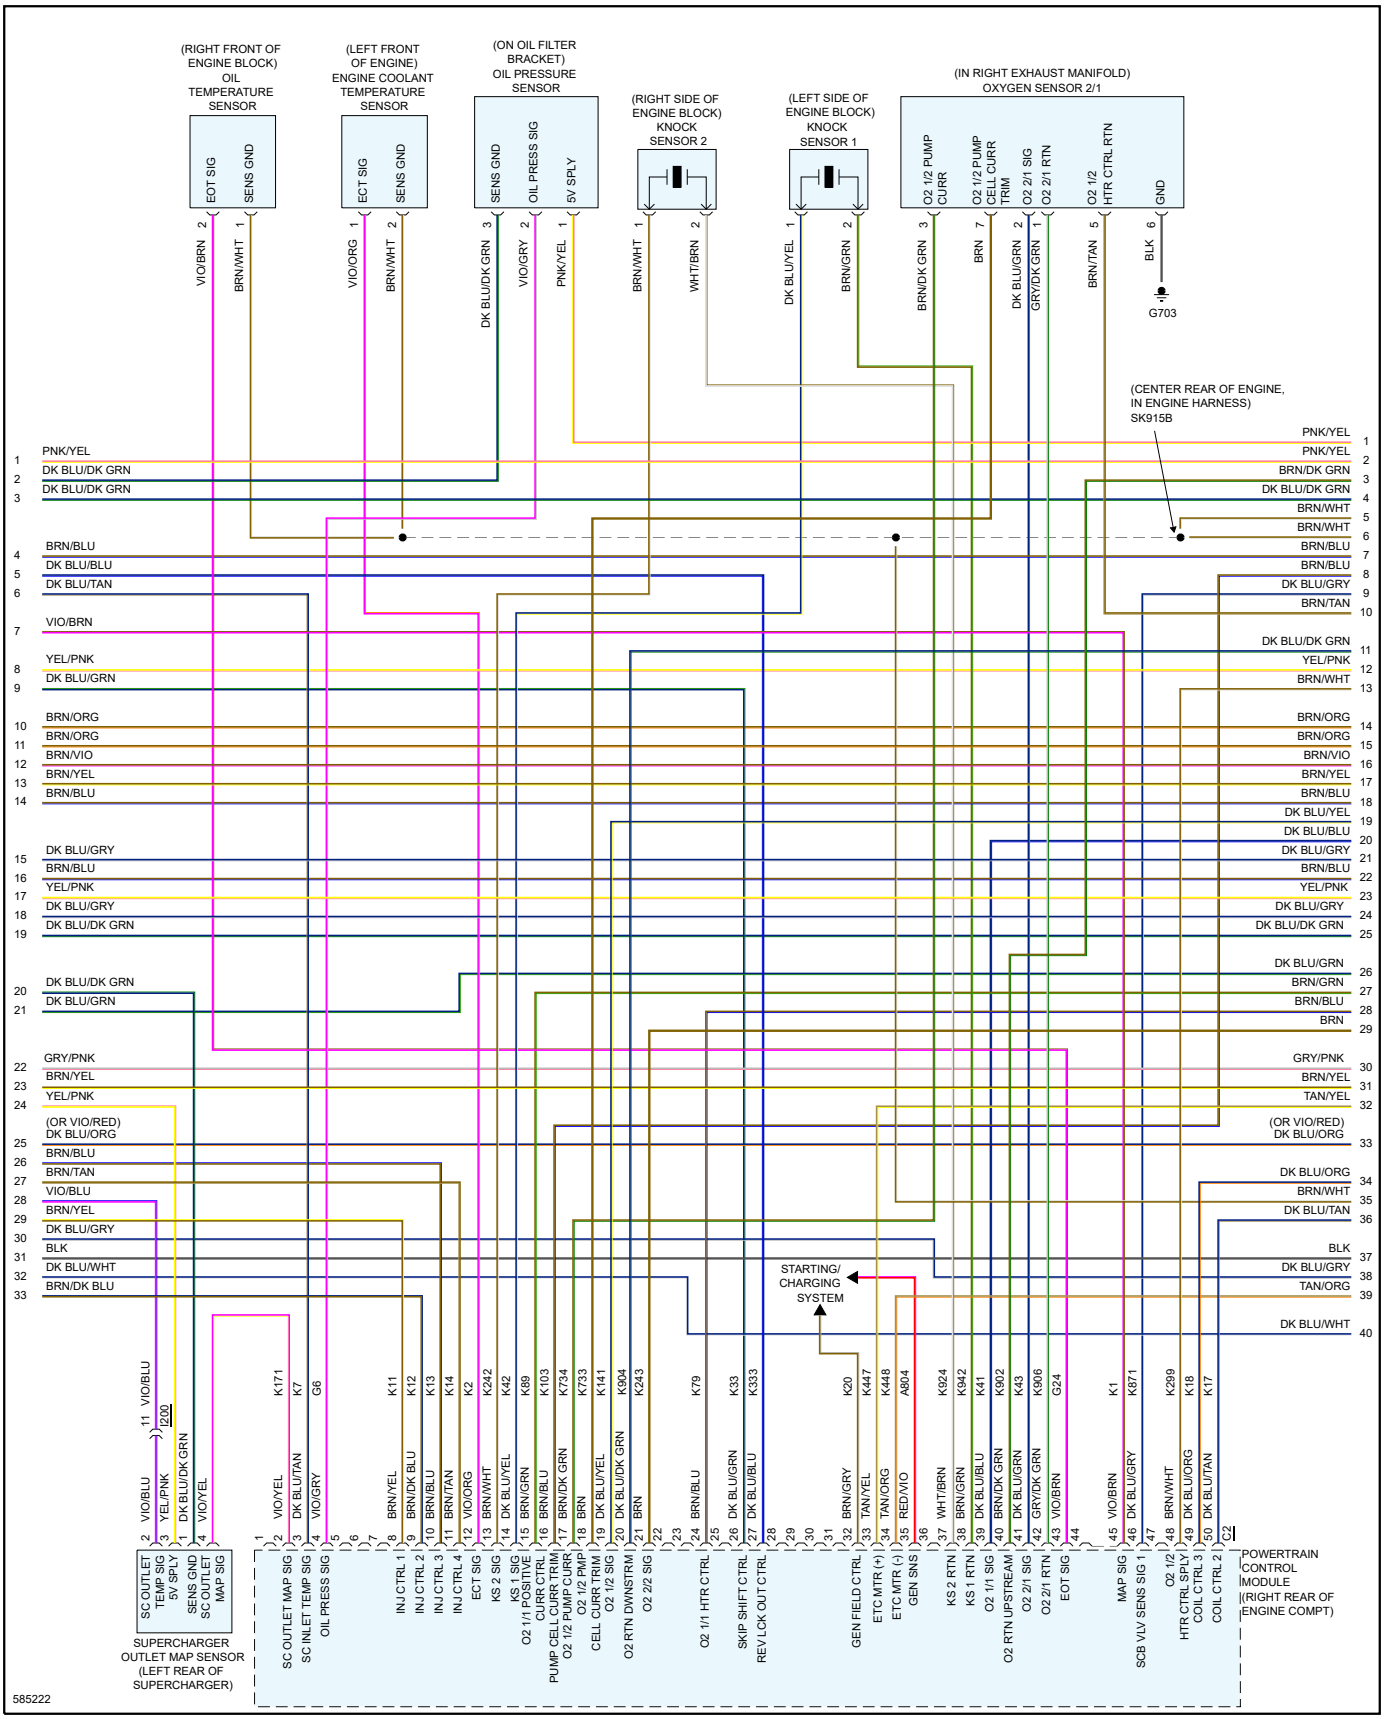
Engine Controls

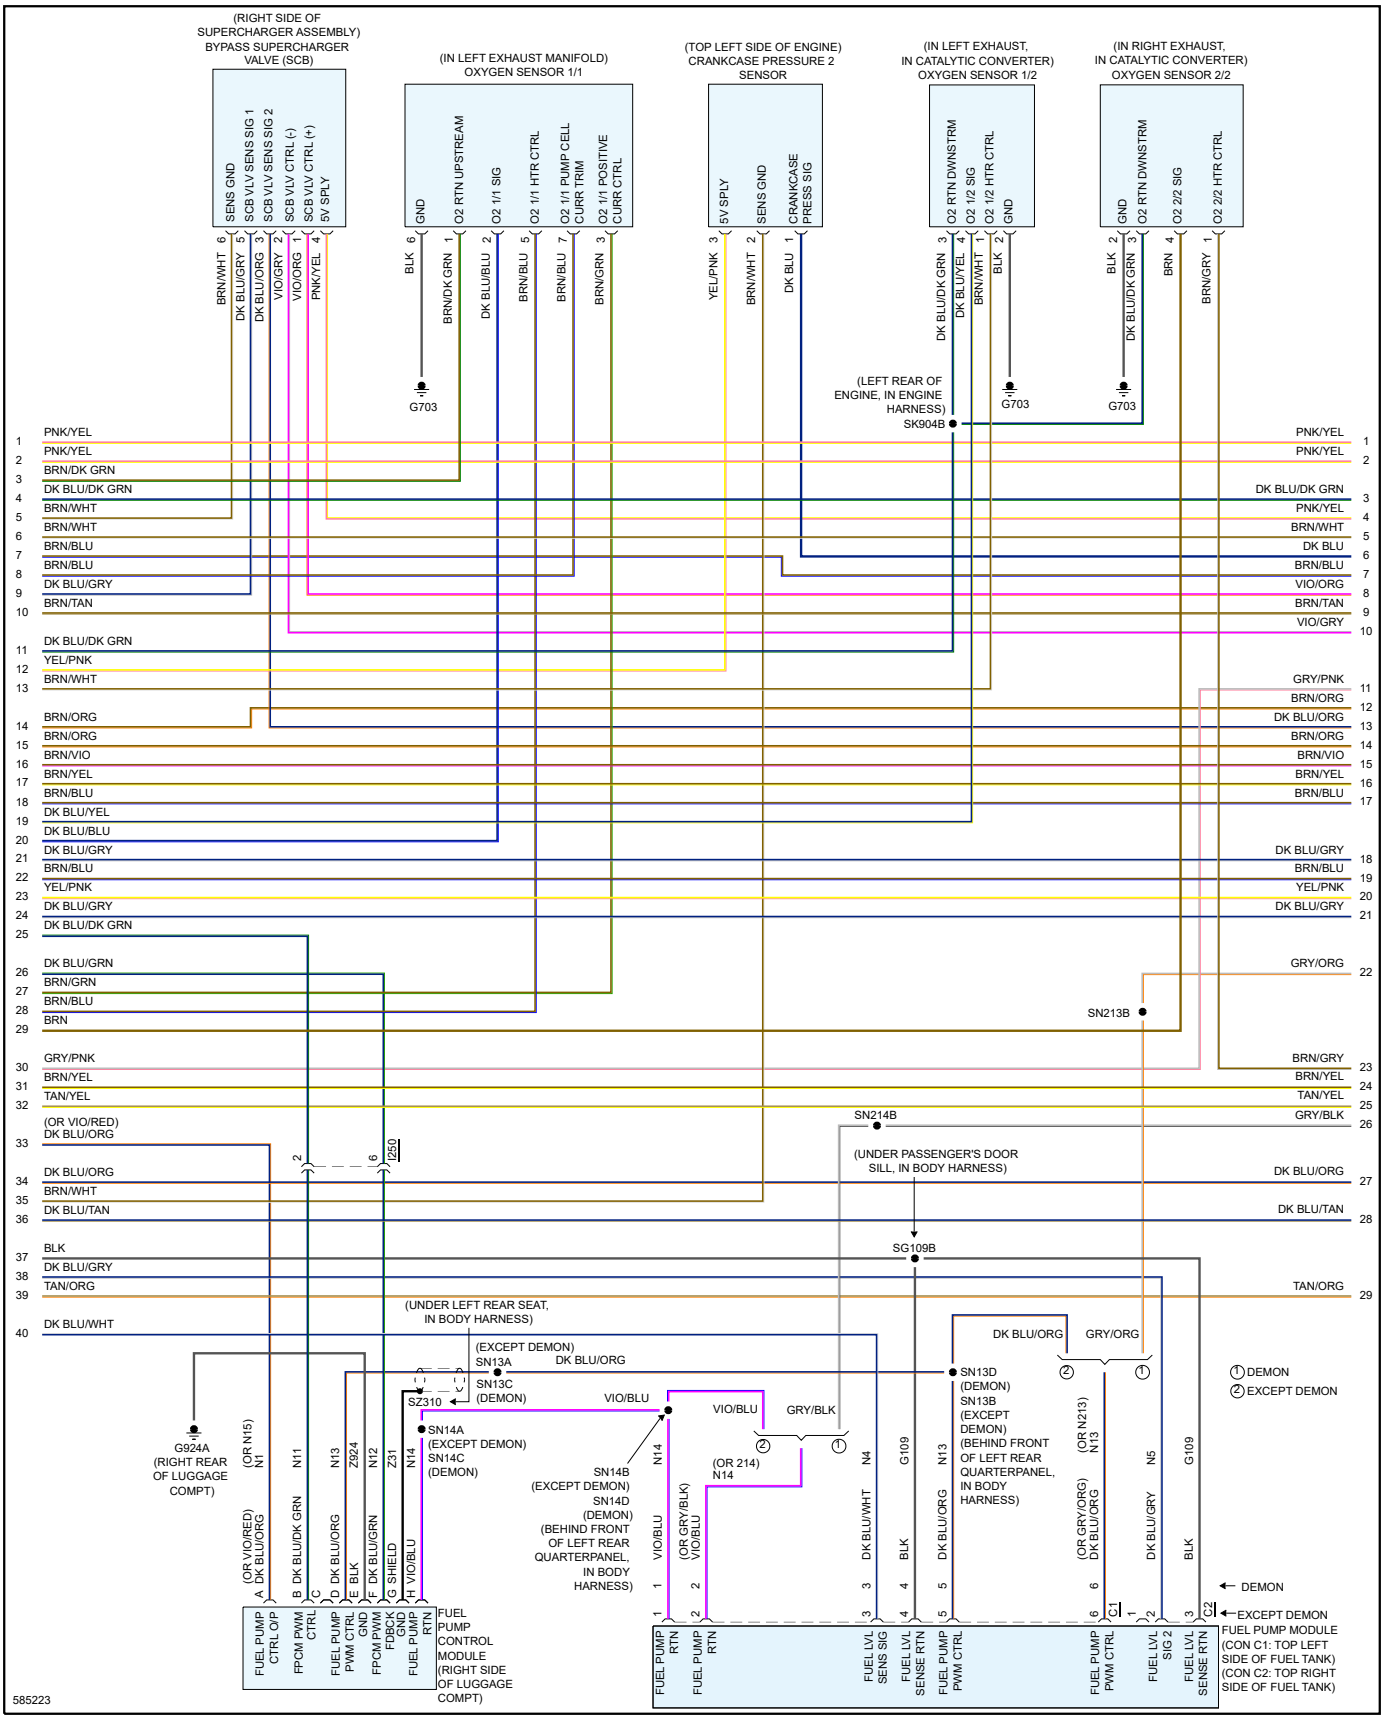
Page 1 of 6

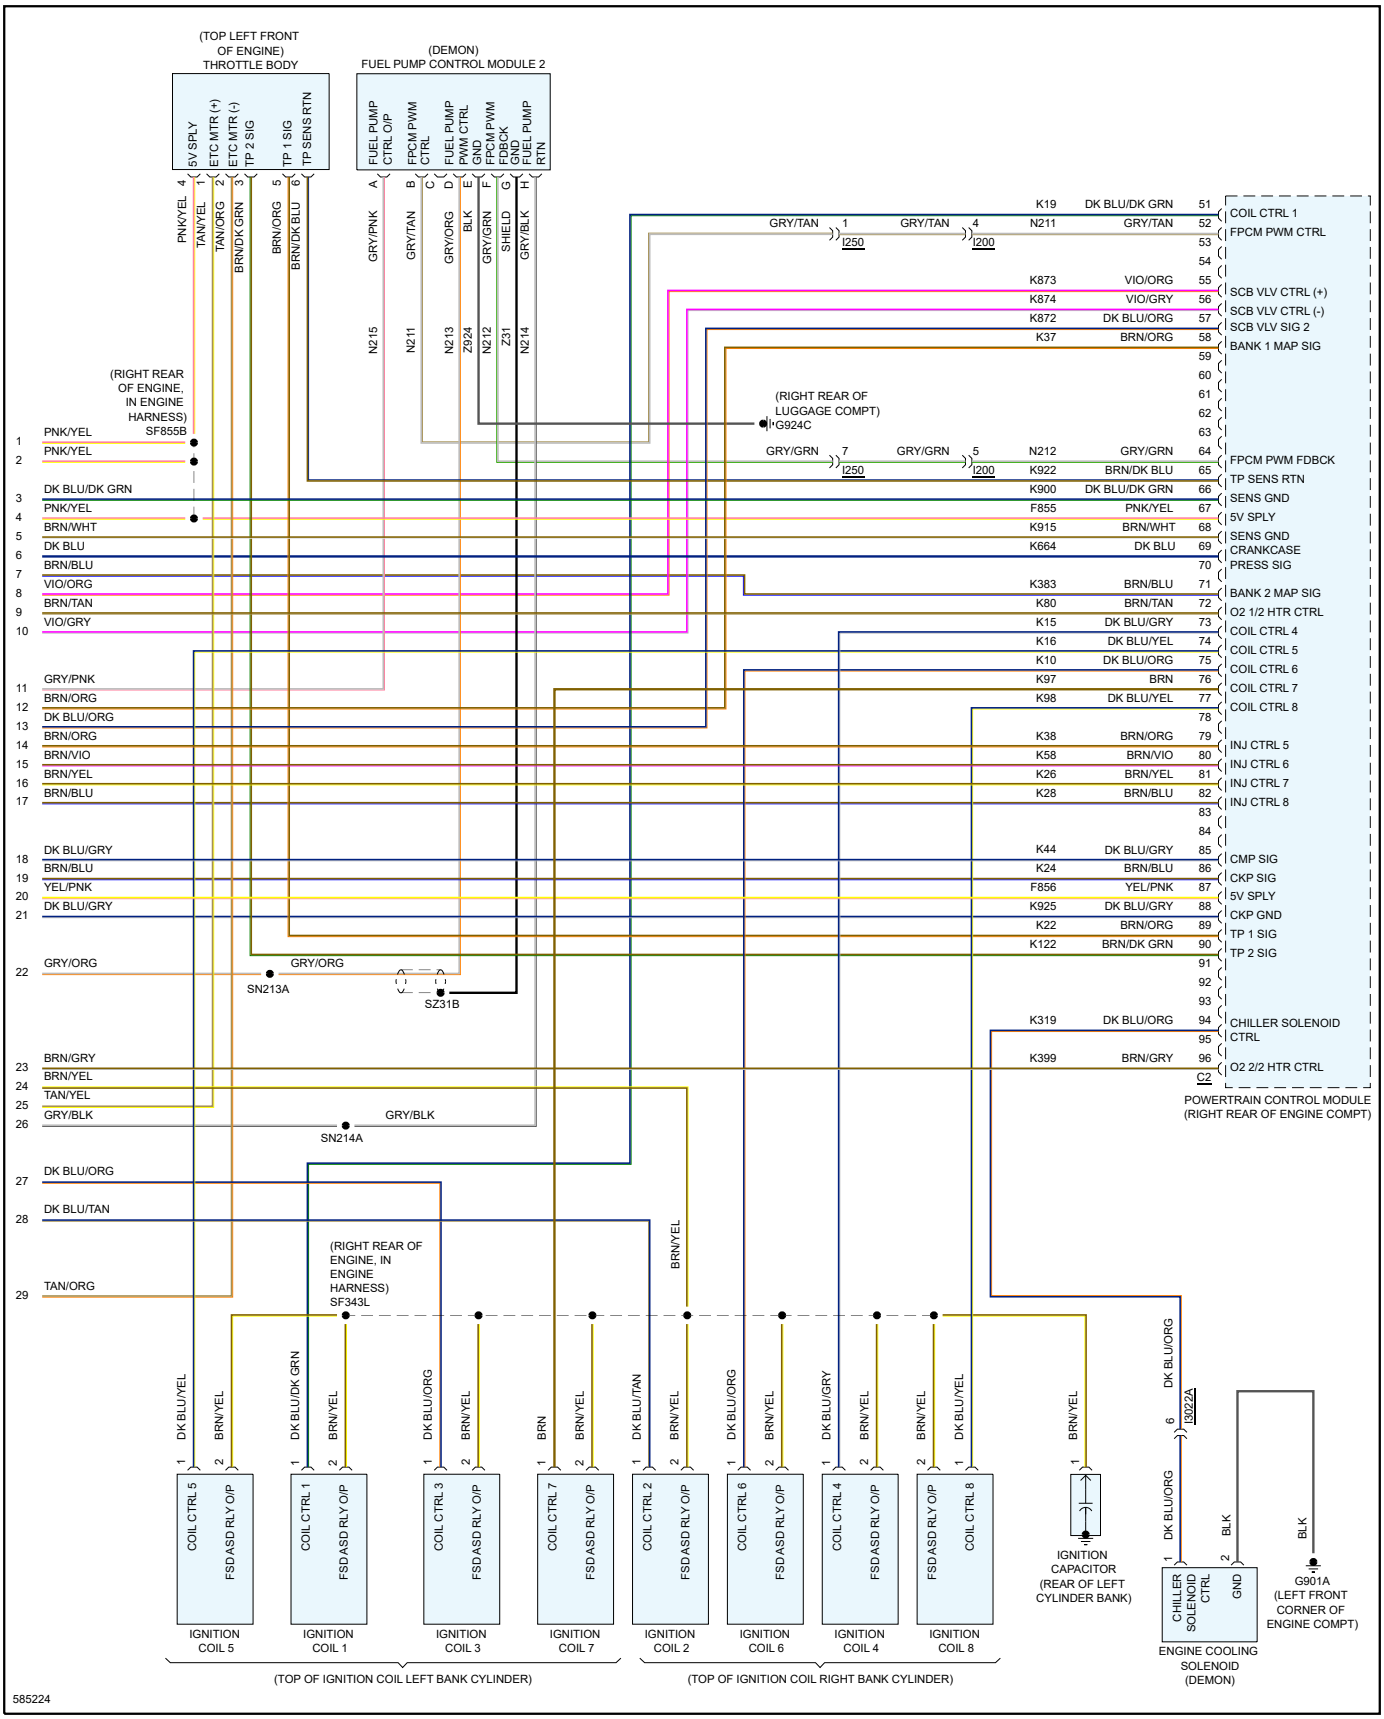

HOT AT ALL TIMES
HOT AT ALL TIMES
HOT W/ RUN/ START RELAY ENERGIZED
HOT AT ALL TIMES
REAR POWER DISTRIBUTION CENTER ASSEMBLY (RIGHT REAR OF LUGGAGE COMPT)
FUEL PUMP RELAY
AUTO SHUT DOWN RELAY
FRONT POWER DISTRIBUTION CENTER ASSEMBLY (RIGHT SIDE OF ENGINE COMPT)
FUSE 4 60A
FUSE 21 30A
FUSE 40 30A
FUSE 41 30A
FUSE 34 25A
FUSE 37 10A
FUSE 35 20A
FUSE 31 25A
FUSE 22 40A
EXCEPT DEMON
DEMON
SA751B
(EXCEPT DEMON) SZ922J
G305 (RIGHT REAR OF LUGGAGE COMPT)
SA3A
DEMON
EXCEPT DEMON
VIO/BRN
RED/BLU
DK BLU/DK GRN
YEL/PNK
GRY/PNK
(OR VIO/RED) DK BLU/ORG
BRN
BLU/TAN
RED/BRN
BRN/WHT
BRN/YEL
APP 5V
SENS GND
A/C PRESS SIG
A/C PRESSURE TRANSDUCER (LEFT REAR OF ENGINE COMPT)
CLUTCH UP STOP SIG
FUEL PRESS SIG
FUSED IGN RUN/START
SK914C (CENTER REAR OF ENGINE COMPT, IN HEADLAMP & DASH HARNESS)
CAN C (-)
COMPUTER DATA LINES SYSTEM
SENS GND
CHARGE AIR COOLANT SIG
A/C PRESS SIG
5V SPLY
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
G101 (RIGHT FRONT OF ENGINE COMPT)
FUEL PRESSURE SENSOR (REAR OF RIGHT CYLINDER BANK)
CLUTCH INTERLOCK SWITCH (M/T) (TOP OF CLUTCH PEDAL ASSEMBLY)
RADIO FREQUENCY HUB MODULE (UNDER CENTER OF HAT SHELF)
FUEL TANK PRESSURE SENSOR (TOP LEFT SIDE OF FUEL TANK)
585219


(RIGHT END OF DASH) BODY CONTROL MODULE
CAN IHS (-)
CAN IHS (+)
FUEL LVL SENS SIG
FUEL LVL SENSE RTN
FUEL LVL SIG 2
SENS GND
AAT SIG
(BEHIND RIGHT SIDE OF UPPER FRONT GRILLE) AMBIENT AIR TEMPERATURE SENSOR
AAT SIG
SENS GND
CHARGE AIR COOLER COOLANT PUMP
FUSED B (+)
ASD CTRL O/P
LIN BUS
GND
(TOP OF ACCELERATOR PEDAL ASSEMBLY) ACCELERATOR PEDAL POSITION SENSOR
APP SIG 1
APP SIG 2
APP SENS GND 2
APP SENS GND 1
APP 5V 1
APP 5V 2
(ON REAR OF LEFT EXHAUST) ACTIVE EXHAUST VALVE 1
FUSED B (+)
LIN BUS
GND
(AT REAR OF RIGHT EXHAUST) ACTIVE EXHAUST VALVE 2
GND
LIN BUS
FUSED B (+)
(LEFT SIDE OF TRANSMISSION) (M/T) SKIP SHIFT SOLENOID
ASD CTRL O/P
SKIP SHIFT CTRL
(LEFT SIDE OF TRANSMISSION) (M/T) REVERSE LOCK OUT SOLENOID
ASD CTRL O/P
REV LCK OUT CTRL
CLUSTER
CAN C (+)
CAN C (-)
COMPUTER DATA LINES SYSTEM
G901A (LEFT FRONT CORNER OF ENGINE COMPT)
SZ922P
G305 (RIGHT REAR OF LUGGAGE COMPT)
SD511K (BEHIND LEFT CENTER OF REAR BUMPER, IN ADS JUMPER HARNESS)
SG931B (W/ REMOTE START SYSTEM) (RIGHT FRONT OF ENGINE COMPT, IN HEADLAMP & DASH HARNESS)
W/ REMOTE START SYSTEM
(RIGHT REAR OF ENGINE COMPT) HOOD AJAR SWITCH
SENS GND
SK854B (LEFT CENTER REAR OF ENGINE COMPT, IN HEADLAMP & DASH HARNESS)
SF342E
SD511D (LEFT CENTER REAR OF ENGINE COMPT, IN HEADLAMP & DASH HARNESS)
SZ903C
G102 (RIGHT FRONT OF ENGINE COMPT)
G917A (UNDER PASSENGER'S SEAT)
EVAP SYSTEM MONITOR SWITCH (ON EVAP CANISTER ASSEMBLY)
ANTI-LOCK BRAKES SYSTEM
AIR CONDITIONING SYSTEM
STARTING/ CHARGING SYSTEM
COOLING FANS SYSTEM
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
585220


HOT AT ALL TIMES
REAR POWER DISTRIBUTION CENTER ASSEMBLY (RIGHT REAR OF LUGGAGE COMPT)
FUSE 36 10A
SA947E
(FRONT OF RIGHT CYLINDER BANK) CAMSHAFT POSITION SENSOR
(RIGHT REAR OF ENGINE BLOCK) CRANKSHAFT POSITION SENSOR
(FRONT OF RIGHT CYLINDER BANK) MAP SENSOR BANK 2
(REAR OF LEFT CYLINDER BANK) MAP SENSOR BANK 1
MANIFOLD ABSOLUTE PRESSURE SENSOR
(REAR OF CHARGE AIR COOLER ASSEMBLY) CHARGE AIR COOLER TEMPERATURE SENSOR
SF856B
SK900B (RIGHT REAR OF ENGINE, IN ENGINE HARNESS)
(REAR OF RIGHT CYLINDER BANK, IN ENGINE HARNESS) SF342C
G901A (LEFT FRONT CORNER OF ENGINE COMPT)
G703
HVAC COOLING SOLENOID (DEMON)
EVAP/PURGE SOLENOID (RIGHT REAR OF ENGINE COMPT)
FUEL INJECTOR 7
FUEL INJECTOR 1
FUEL INJECTOR 5
FUEL INJECTOR 3
FUEL INJECTOR 8
FUEL INJECTOR 6
FUEL INJECTOR 4
FUEL INJECTOR 2
(TOP OF FUEL INJECTOR LEFT BANK CYLINDER)
(TOP OF FUEL INJECTOR RIGHT BANK CYLINDER)
585221


(RIGHT FRONT OF ENGINE BLOCK) OIL TEMPERATURE SENSOR
EOT SIG
SENS GND
(LEFT FRONT OF ENGINE) ENGINE COOLANT TEMPERATURE SENSOR
ECT SIG
SENS GND
(ON OIL FILTER BRACKET) OIL PRESSURE SENSOR
SENS GND
OIL PRESS SIG
5V SPLY
(RIGHT SIDE OF ENGINE BLOCK) KNOCK SENSOR 2
(LEFT SIDE OF ENGINE BLOCK) KNOCK SENSOR 1
(IN RIGHT EXHAUST MANIFOLD) OXYGEN SENSOR 2/1
O2 1/2 PUMP CURR
O2 1/2 PUMP CELL CURR TRIM
O2 2/1 SIG
O2 2/1 RTN
O2 1/2 HTR CTRL RTN
GND
G703
(CENTER REAR OF ENGINE, IN ENGINE HARNESS) SK915B
STARTING/ CHARGING SYSTEM
SUPERCHARGER OUTLET MAP SENSOR (LEFT REAR OF SUPERCHARGER)
SC OUTLET TEMP SIG
5V SPLY
SENS GND
SC OUTLET MAP SIG
SC OUTLET MAP SIG
SC INLET TEMP SIG
OIL PRESS SIG
INJ CTRL 1
INJ CTRL 2
INJ CTRL 3
INJ CTRL 4
ECT SIG
KS 2 SIG
KS 1 SIG
O2 1/1 POSITIVE CURR CTRL
PUMP CELL CURR TRIM
O2 1/2 PUMP CURR
O2 1/2 PMP
CELL CURR TRIM
O2 1/2 SIG
O2 RTN DWNSTRM
O2 2/2 SIG
O2 1/1 HTR CTRL
SK/P SHIFT CTRL
REV LCK OUT CTRL
GEN FIELD CTRL
ETC MTR (+)
ETC MTR (-)
GEN SNS
KS 2 RTN
KS 1 RTN
O2 1/1 SIG
O2 RTN UPSTREAM
O2 2/1 SIG
O2 2/1 RTN
EOT SIG
MAP SIG
SCB VLV SENS SIG 1
O2 1/2 HTR CTRL SPLY
COIL CTRL 3
COIL CTRL 2
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
585222


(RIGHT SIDE OF SUPERCHARGER ASSEMBLY) BYPASS SUPERCHARGER VALVE (SCB)
SENS GND
SCB VLV SENS SIG 1
SCB VLV SENS SIG 2
SCB VLV CTRL (-)
SCB VLV CTRL (+)
5V SPLY
(IN LEFT EXHAUST MANIFOLD) OXYGEN SENSOR 1/1
GND
O2 RTN UPSTREAM
O2 1/1 SIG
O2 1/1 HTR CTRL
O2 1/1 PUMP CELL CURR TRIM
O2 1/1 POSITIVE CURR CTRL
(TOP LEFT SIDE OF ENGINE) CRANKCASE PRESSURE 2 SENSOR
5V SPLY
SENS GND
CRANKCASE PRESS SIG
(IN LEFT EXHAUST, IN CATALYTIC CONVERTER) OXYGEN SENSOR 1/2
O2 RTN DWNSTRM
O2 1/2 SIG
O2 1/2 HTR CTRL
GND
(IN RIGHT EXHAUST, IN CATALYTIC CONVERTER) OXYGEN SENSOR 2/2
GND
O2 RTN DWNSTRM
O2 2/2 SIG
O2 2/2 HTR CTRL
G703
(LEFT REAR OF ENGINE, IN ENGINE HARNESS)
SK904B
SN213B
SN214B
(UNDER PASSENGER'S DOOR SILL, IN BODY HARNESS)
SG109B
(UNDER LEFT REAR SEAT, IN BODY HARNESS)
(EXCEPT DEMON)
SN13A
SN13C (DEMON)
SZ310
SN14A (EXCEPT DEMON) SN14C (DEMON)
SN14B (EXCEPT DEMON) SN14D (DEMON) (BEHIND FRONT OF LEFT REAR QUARTERPANEL, IN BODY HARNESS)
SN13D (DEMON) SN13B (EXCEPT DEMON) (BEHIND FRONT OF LEFT REAR QUARTERPANEL, IN BODY HARNESS)
(OR 214)
(OR N213)
G924A (RIGHT REAR OF LUGGAGE COMPT)
(OR N15)
(OR VIO/RED)
(OR GRY/BLK)
(OR GRY/ORG)
I250
DEMON
EXCEPT DEMON
FUEL PUMP CTRL O/P
FPCM PWM CTRL
FUEL PUMP PWM CTRL
FPCM PWM FDBCK
FUEL PUMP RTN
FUEL PUMP CONTROL MODULE (RIGHT SIDE OF LUGGAGE COMPT)
FUEL LVL SENS SIG
FUEL LVL SENSE RTN
FUEL PUMP PWM CTRL
FUEL LVL SIG 2
FUEL PUMP MODULE (CON C1: TOP LEFT SIDE OF FUEL TANK) (CON C2: TOP RIGHT SIDE OF FUEL TANK)
585223


(TOP LEFT FRONT OF ENGINE) THROTTLE BODY
5V SPLY
ETC MTR (+)
ETC MTR (-)
TP 2 SIG
TP 1 SIG
TP SENS RTN
(DEMON) FUEL PUMP CONTROL MODULE 2
FUEL PUMP CTRL O/P
FPCM PWM CTRL
FUEL PUMP PWM CTRL
FUEL PUMP GND
FPCM PWM FDBCK
FUEL PUMP GND
FUEL PUMP RTN
(RIGHT REAR OF ENGINE, IN ENGINE HARNESS) SF855B
(RIGHT REAR OF LUGGAGE COMPT) G924C
(RIGHT REAR OF ENGINE, IN ENGINE HARNESS) SF343L
SN213A
SZ31B
SN214A
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
COIL CTRL 1
FPCM PWM CTRL
SCB VLV CTRL (+)
SCB VLV CTRL (-)
SCB VLV SIG 2
BANK 1 MAP SIG
FPCM PWM FDBCK
TP SENS RTN
SENS GND
5V SPLY
SENS GND
CRANKCASE PRESS SIG
BANK 2 MAP SIG
O2 1/2 HTR CTRL
COIL CTRL 4
COIL CTRL 5
COIL CTRL 6
COIL CTRL 7
COIL CTRL 8
INJ CTRL 5
INJ CTRL 6
INJ CTRL 7
INJ CTRL 8
CMP SIG
CKP SIG
5V SPLY
CKP GND
TP 1 SIG
TP 2 SIG
CHILLER SOLENOID CTRL
O2 2/2 HTR CTRL
IGNITION COIL 5
IGNITION COIL 1
IGNITION COIL 3
IGNITION COIL 7
IGNITION COIL 2
IGNITION COIL 6
IGNITION COIL 4
IGNITION COIL 8
(TOP OF IGNITION COIL LEFT BANK CYLINDER)
(TOP OF IGNITION COIL RIGHT BANK CYLINDER)
IGNITION CAPACITOR (REAR OF LEFT CYLINDER BANK)
ENGINE COOLING SOLENOID (DEMON)
G901A (LEFT FRONT CORNER OF ENGINE COMPT)
585224