


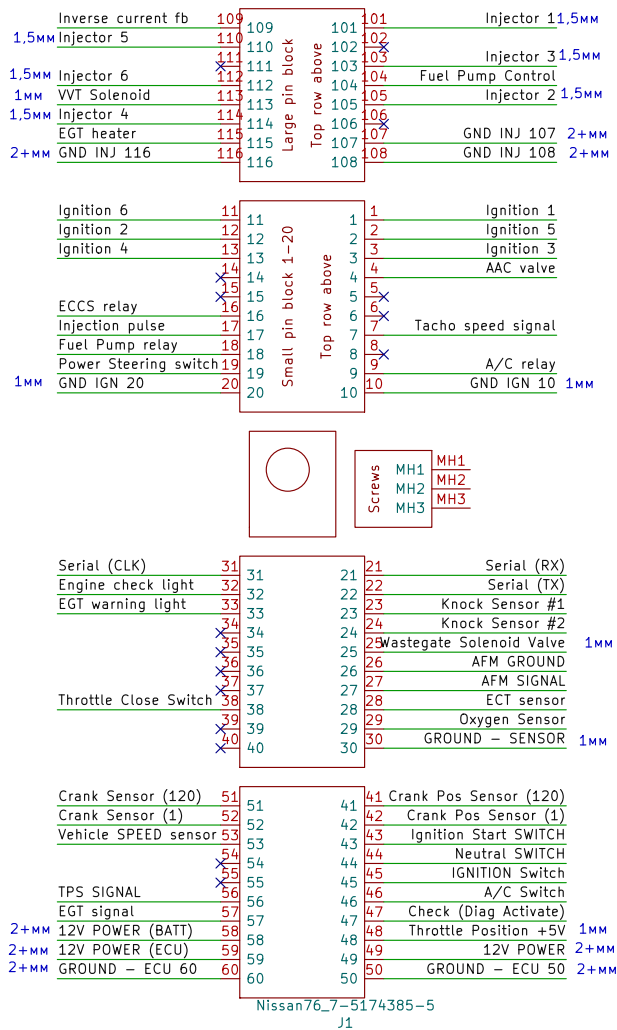

J2A	
6437288-3	
GROUND - ECU 50	1
Throttle Position +5V	2
EGT signal	3
TPS SIGNAL	4
Neutral SWITCH	5
Ignition Start SWITCH	6
Crank Pos Sensor (1)	7
Crank Pos Sensor (120)	8
Wastegate Solenoid Valve	9
12V POWER	10
Check (Diag Activate)	11
A/C Switch	12
IGNITION Switch	13
Vehicle SPEED sensor	14
Crank Sensor (1)	15
Crank Sensor (120)	16
Knock Sensor #2	17
12V POWER (ECU)	18
GROUND - SENSOR	19
Oxygen Sensor	20
Throttle Close Switch	21
ECT sensor	22
AFM SIGNAL	23
AFM GROUND	24
GND IGN 20	25
GROUND - ECU 60	26
12V POWER (BATT)	27
Serial (RX)	28
Serial (CLK)	29
Serial (TX)	30
Engine check light	31
Knock Sensor #1	32
EGT warning light	33
GND IGN 10	34

J2B	
6437288-3	
GND INJ 108	35
GND INJ 107	36
Injector 4	37
Injector 2	38
VVT Solenoid	39
Fuel Pump Control	40
Injector 6	41
A/C relay	42
Fuel Pump relay	43
Injection pulse	44
Tacho speed signal	45
ECCS relay	46
Injector 3	47
EGT heater	48
Ignition 1	49
Ignition 5	50
Ignition 3	51
AAC valve	52
Injector 5	53
GND INJ 116	54
Power Steering switch	55
Ignition 6	56
Ignition 2	57
Ignition 4	58
Inverse current fb	59
Injector 1	60