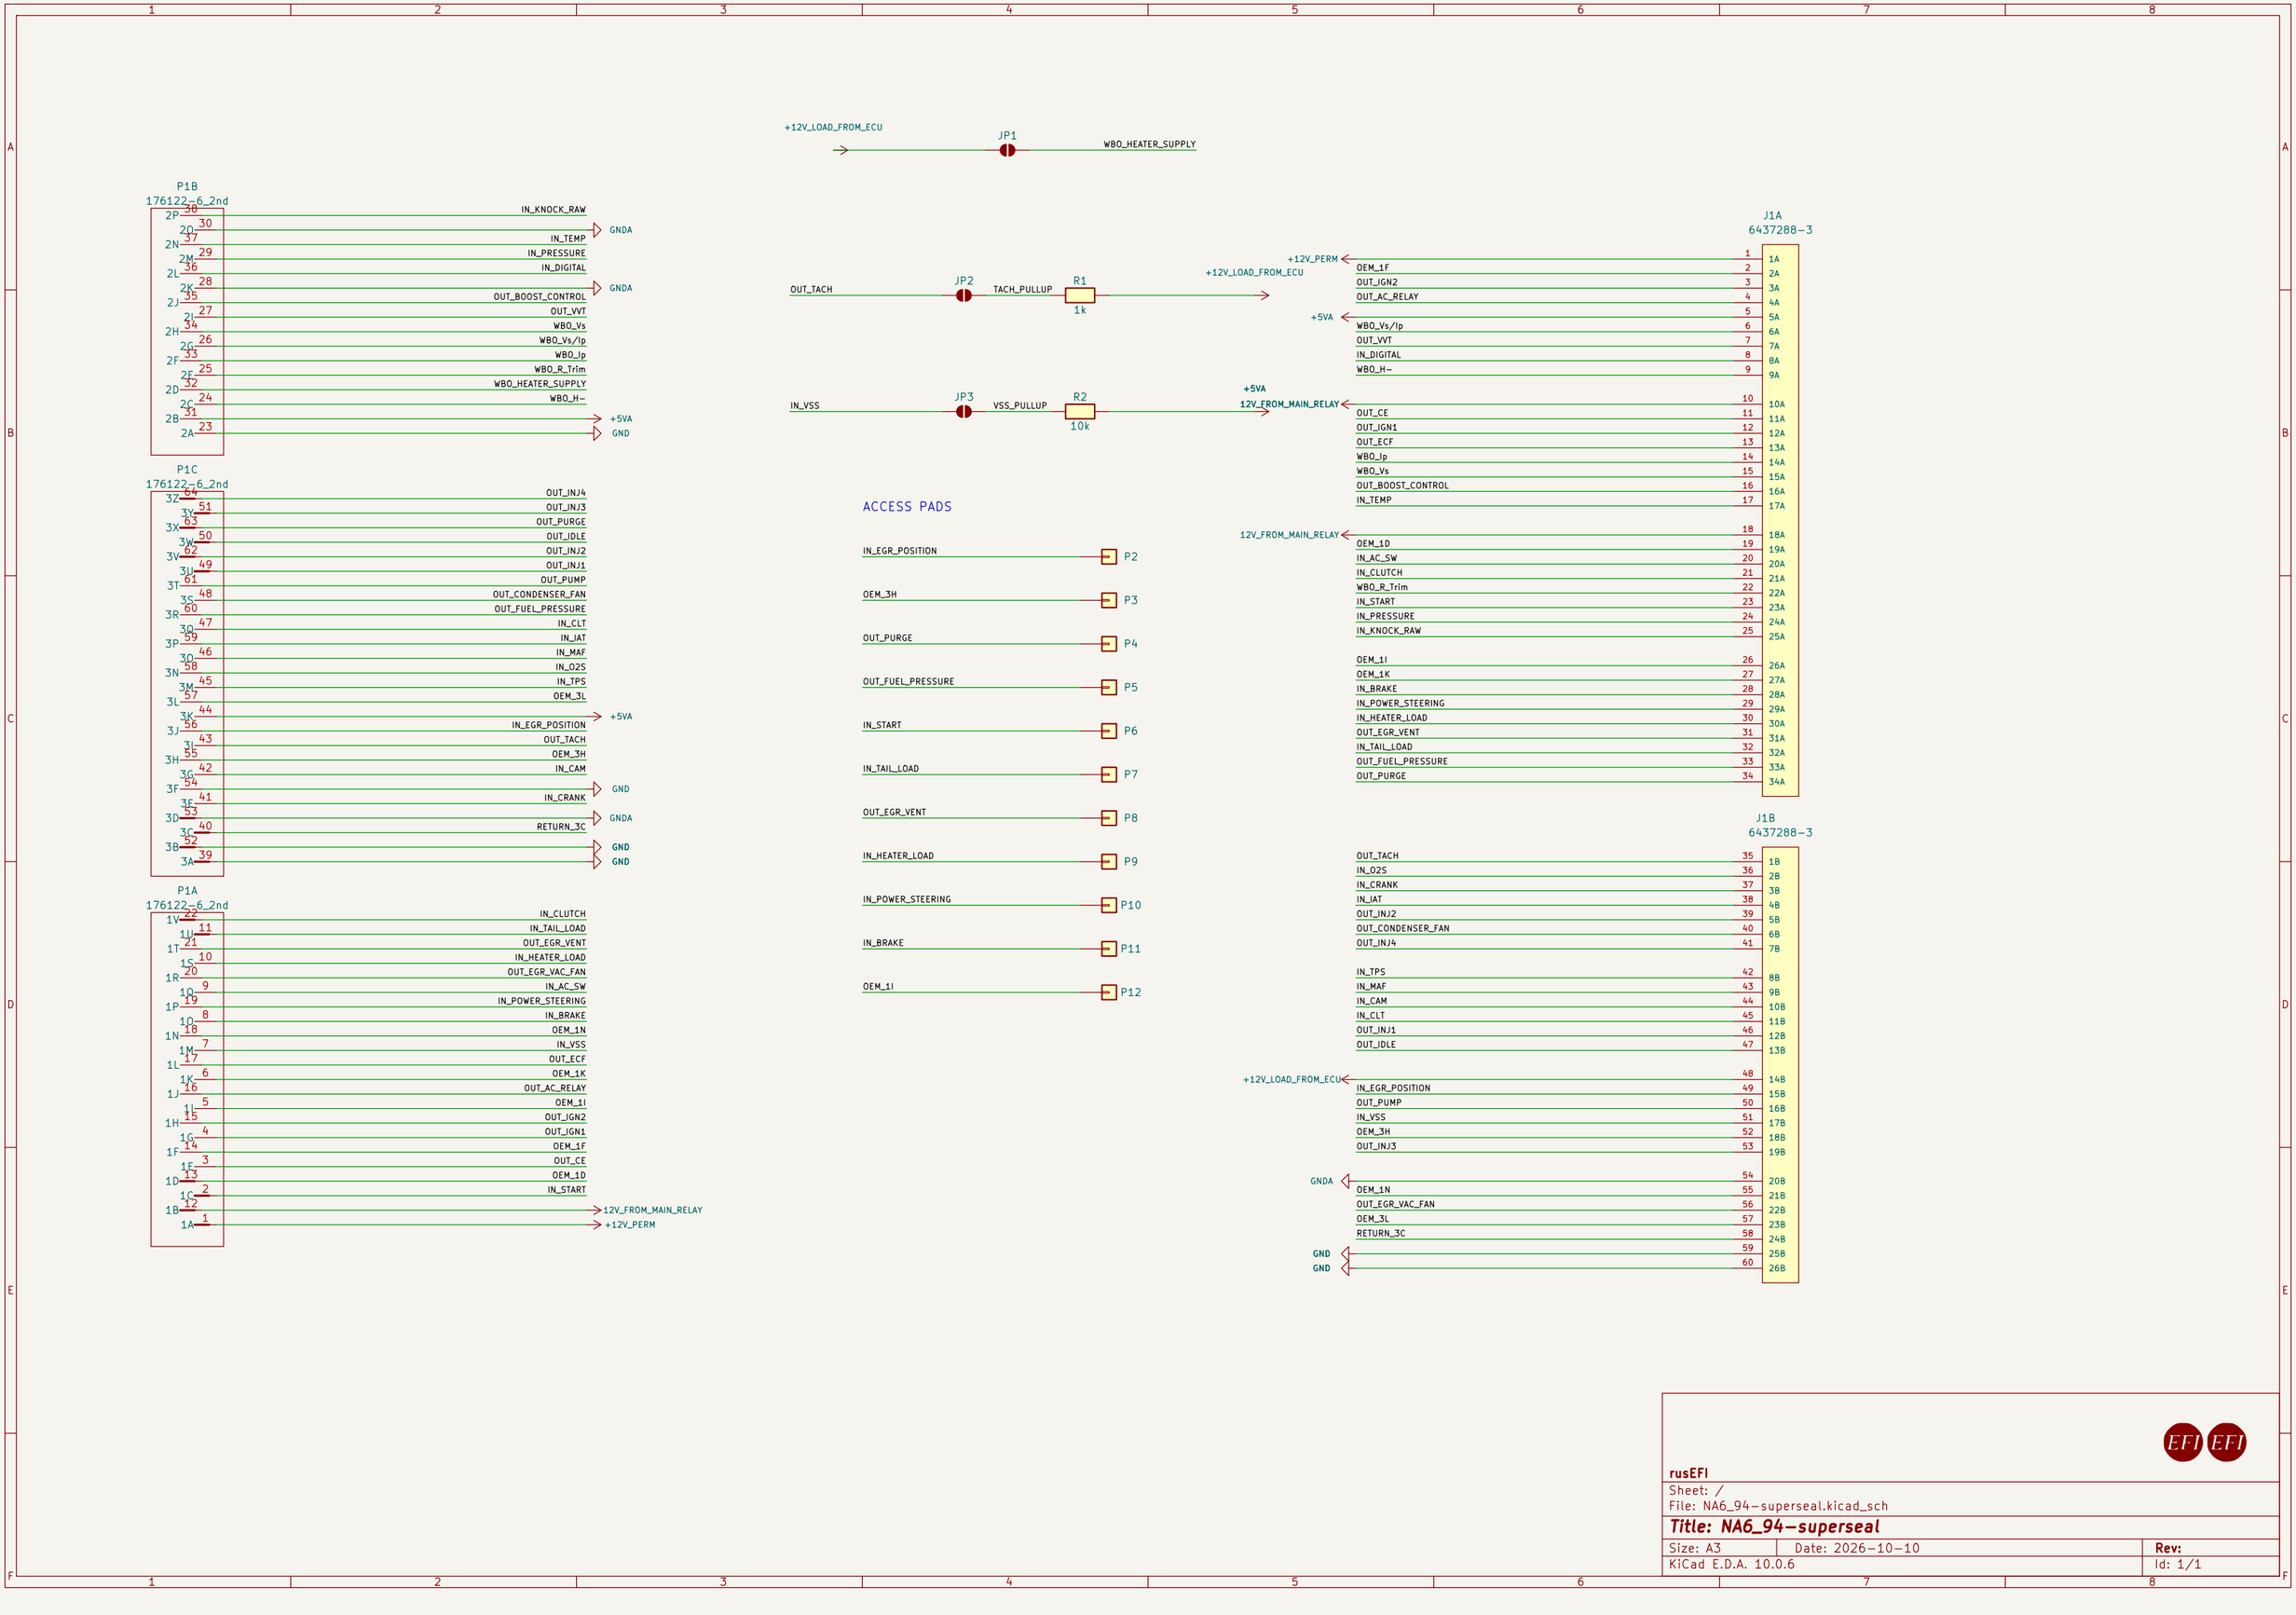

+12V_LOAD_FROM_ECU
JP1
WBO_HEATER_SUPPLY
P1B
176122-6_2nd
IN_KNOCK_RAW
GNDA
IN_TEMP
IN_PRESSURE
IN_DIGITAL
GNDA
OUT_BOOST_CONTROL
OUT_VVT
WBO_Vs
WBO_Vs/Ip
WBO_Ip
WBO_R_Trim
WBO_HEATER_SUPPLY
WBO_H-
+5VA
GND
P1C
176122-6_2nd
OUT_INJ4
OUT_INJ3
OUT_PURGE
OUT_IDLE
OUT_INJ2
OUT_INJ1
OUT_PUMP
OUT_CONDENSER_FAN
OUT_FUEL_PRESSURE
IN_CLT
IN_IAT
IN_MAF
IN_O2S
IN_TPS
OEM_3L
+5VA
IN_EGR_POSITION
OUT_TACH
OEM_3H
IN_CAM
GND
IN_CRANK
GNDA
RETURN_3C
GND
GND
P1A
176122-6_2nd
IN_CLUTCH
IN_TAIL_LOAD
OUT_EGR_VENT
IN_HEATER_LOAD
OUT_EGR_VAC_FAN
IN_AC_SW
IN_POWER_STEERING
IN_BRAKE
OEM_1N
IN_VSS
OUT_ECF
OEM_1K
OUT_AC_RELAY
OEM_1I
OUT_IGN2
OUT_IGN1
OEM_1F
OUT_CE
OEM_1D
IN_START
12V_FROM_MAIN_RELAY
+12V_PERM
OUT_TACH
JP2
TACH_PULLUP
R1
1k
+12V_LOAD_FROM_ECU
IN_VSS
JP3
VSS_PULLUP
R2
10k
+5VA
12V_FROM_MAIN_RELAY
ACCESS PADS
IN_EGR_POSITION
P2
OEM_3H
P3
OUT_PURGE
P4
OUT_FUEL_PRESSURE
P5
IN_START
P6
IN_TAIL_LOAD
P7
OUT_EGR_VENT
P8
IN_HEATER_LOAD
P9
IN_POWER_STEERING
P10
IN_BRAKE
P11
OEM_1I
P12
J1A
6437288-3
+12V_PERM
OEM_1F
OUT_IGN2
OUT_AC_RELAY
+5VA
WBO_Vs/Ip
OUT_VVT
IN_DIGITAL
WBO_H-
OUT_CE
OUT_IGN1
OUT_ECF
WBO_Ip
WBO_Vs
OUT_BOOST_CONTROL
IN_TEMP
12V_FROM_MAIN_RELAY
OEM_1D
IN_AC_SW
IN_CLUTCH
WBO_R_Trim
IN_START
IN_PRESSURE
IN_KNOCK_RAW
OEM_1I
OEM_1K
IN_BRAKE
IN_POWER_STEERING
IN_HEATER_LOAD
OUT_EGR_VENT
IN_TAIL_LOAD
OUT_FUEL_PRESSURE
OUT_PURGE
J1B
6437288-3
OUT_TACH
IN_O2S
IN_CRANK
IN_IAT
OUT_INJ2
OUT_CONDENSER_FAN
OUT_INJ4
IN_TPS
IN_MAF
IN_CAM
IN_CLT
OUT_INJ1
OUT_IDLE
+12V_LOAD_FROM_ECU
IN_EGR_POSITION
OUT_PUMP
IN_VSS
OEM_3H
OUT_INJ3
GNDA
OEM_1N
OUT_EGR_VAC_FAN
OEM_3L
RETURN_3C
GND
GND
rusEFI
Sheet: /
File: NA6_94-superseal.kicad_sch
Title: NA6_94-superseal
Size: A3
Date: 2026-10-10
Rev:
KiCad E.D.A. 10.0.6
Id: 1/1